

March 2008

DesignBuilder 1.5

User Manual



© 2008 DesignBuilder Software, Ltd.

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Table of Contents

Section 1 Getting Started	14
1.1 DesignBuilder Tips	15
1.2 Capabilities	15
1.3 Recent Files (Opening Screen)	16
1.4 User Interface	16
1.5 Edit Screen	17
Section 2 Core Concepts	21
2.1 Model Data Hierarchy & Data Inheritance	21
2.2 Templates and Components	23
2.3 Blocks	23
2.4 Navigating Building Models	27
2.5 Customising Model Detail	28
Section 3 Building Models	30
3.1 Create New Site	30
3.1.1 Location.....	30
3.1.2 Template.....	30
3.2 Building Geometry	30
3.2.1 View Controls.....	31
3.2.1.1 View Rotation	33
3.2.1.2 Orbit	34
3.2.1.3 Zoom Dynamic	34
3.2.1.4 Zoom Window	34
3.2.1.5 Fit view	34
3.2.1.6 Pan view	34
3.2.1.7 Normal View	35
3.2.2 Perimeters.....	35
3.2.2.1 Shape	36
3.2.2.2 Line Type	38
3.2.3 Snaps, Drawing Guides & Protractor.....	40
3.2.3.1 Direction snaps	41
3.2.3.1.1 Axis snap	41
3.2.3.1.2 Parallel snap	45
3.2.3.1.3 Normal snap	46
3.2.3.1.4 Offset Snap	51
3.2.3.2 Point Snaps	55

.....3.2.3.2.1 End-point Snap	55
.....3.2.3.2.2 Mid-point Snap	56
.....3.2.3.2.3 Edge Snap	57
.....3.2.3.2.4 DXF Snap	59
.....3.2.3.2.5 Increment Snap	59
3.2.3.3 Drawing Guides	61
3.2.3.4 Protractor Tool	64
3.2.4 Construction Lines.....	67
3.2.4.1 Drawing Construction Lines	67
3.2.4.2 Removing Construction Lines	72
3.2.5 General Operations.....	72
3.2.5.1 Select	72
3.2.5.2 Move	72
3.2.5.3 Copy (Clone)	75
3.2.5.4 Rotate	75
3.2.5.5 Stretch	77
3.2.5.6 Delete	79
3.2.5.7 Measure	79
3.2.6 Importing Geometric Data.....	79
3.2.6.1 Importing DXF	79
3.2.7 Exporting Geometric Data.....	84
3.2.7.1 Exporting 3-D DXF	84
3.2.8 Working with Buildings (Site Level).....	86
3.2.8.1 Create New Building	86
.....3.2.8.1.1 Create New Building - Model	87
.....3.2.8.1.2 Create New Building - Default Data	87
3.2.9 Working with Blocks (Building Level).....	88
3.2.9.1 Adding Blocks	89
.....3.2.9.1.1 Block Creation Options	97
.....Block and Zone Dimensions.....	98
.....Block Types.....	100
.....Building Block.....	100
.....Outline Block.....	104
.....Component Block.....	111
.....Block Form.....	115
.....General Extrusion.....	115
.....Sloped Wall.....	116
.....Pitched Roof.....	118
.....Dome.....	119
.....Height.....	119
.....Auto-Complete Block	120
3.2.9.2 Editing blocks	120
.....3.2.9.2.1 Drag Block Face	120
.....3.2.9.2.2 Divide Block using Cutting Tool	122
.....3.2.9.2.3 Edit Block Geometry Dialog	140
.....3.2.9.2.4 Wall Thickness	141

.....3.2.9.2.5 Convert Outline Block	144
.....3.2.9.2.6 Transfer Blocks	145
3.2.10 Working within Blocks.....	146
3.2.10.1 Zone Block by Drawing Partitions	147
3.2.10.2 Hanging and Outline Partitions	156
3.2.10.3 Virtual Partitions	157
3.2.10.4 Creating Voids (Courtyard Spaces) Within Blocks	158
3.2.10.5 Edit Block Options	159
3.2.11 Working within Zones.....	160
3.2.11.1 Placing Light Sensors	162
3.2.12 Working with Surfaces (Surface Level).....	163
3.2.12.1 Draw Window	166
3.2.12.2 Draw Sub-Surface	170
3.2.12.3 Draw Door	170
3.2.12.4 Draw Hole	170
3.2.12.5 Draw Vent	171
3.2.12.6 Edit Surfaces	171
3.2.13 Editing Openings at the Building Level.....	171
3.2.14 Undo/Redo.....	175
3.2.15 Rebuild.....	175
3.2.16 Rezone Block.....	176
3.3 Model Data	176
3.3.1 Site Data.....	176
3.3.1.1 Location	177
.....3.3.1.1.1 Site Location	178
.....3.3.1.1.2 Site Details	178
.....3.3.1.1.3 Time and Daylight Saving	181
.....3.3.1.1.4 Simulation Weather Data	181
.....3.3.1.1.5 Winter Design Weather Data	182
.....3.3.1.1.6 Summer Design Weather Data	182
3.3.1.2 Legislative Region and Insulation Standards	182
.....3.3.1.2.1 Energy codes/insulation standards	183
3.3.2 Building Model Data.....	183
3.3.2.1 Activity Data	184
.....3.3.2.1.1 Zone Type	184
.....3.3.2.1.2 Occupancy	186
.....3.3.2.1.3 Metabolic	187
.....3.3.2.1.4 Holidays	188
.....3.3.2.1.5 Environmental Control	189
.....3.3.2.1.6 Domestic Hot Water (DHW)	193
.....3.3.2.1.7 Computer Gains	193
.....3.3.2.1.8 Office Equipment Gains	194
.....3.3.2.1.9 Miscellaneous Gains	194
.....3.3.2.1.10 Catering Gains	195
.....3.3.2.1.11 Process Gains	196
3.3.2.2 Construction Data	198

.....3.3.2.2.1 Constructions	199	
.....Combined Constructions.....		200
.....Separate Constructions.....		203
.....Sub-Surface Construction.....		206
.....Internal Thermal Mass.....		207
.....Adjacency.....		208
.....Surface Convection.....		209
.....Component Block.....		210
.....3.3.2.2.2 Airtightness	213	
.....'Scheduled' Ventilation Data Detail.....		213
.....'Calculated' Ventilation Data Detail.....		213
3.3.2.3 Openings Data (Windows, Doors, Vents, Holes, Sub-surfaces)	214	
.....3.3.2.3.1 External Glazing	215	
.....Dimensions.....		215
.....Frame.....		216
.....Shading.....		219
.....Window Shading.....		220
.....Local Shading.....		222
.....Operation.....		223
.....3.3.2.3.2 Internal Glazing	223	
.....Dimensions.....		223
.....Frame.....		224
.....Operation.....		227
.....3.3.2.3.3 Roof Glazing	228	
.....Dimensions.....		228
.....Roof Shading.....		229
.....Frame.....		229
.....Window Shading.....		232
.....Operation.....		235
.....3.3.2.3.4 Doors	235	
.....Door Placement.....		236
.....Door Operation.....		236
.....3.3.2.3.5 Vents and Holes	237	
.....Vent Placement.....		238
.....Vent Operation.....		238
.....3.3.2.3.6 Wind Pressure Coefficients	239	
3.3.2.4 Lighting Data	239	
.....3.3.2.4.1 General Lighting	240	
.....3.3.2.4.2 Task and Display Lighting	242	
.....3.3.2.4.3 Lighting Control	242	
3.3.2.5 HVAC Data	246	
.....3.3.2.5.1 Compact HVAC System Types	248	
.....Unitary Single Zone.....		248
.....Fan Coil Units.....		249
.....Unitary Multizone.....		250
.....VAV.....		251

.....CAV.....	252
.....3.3.2.5.2 Mechanical Ventilation and Air Distribution	253
.....Outside Air.....	254
.....Fans.....	257
.....Economisers.....	259
.....Heat Recovery.....	260
.....Zone Terminal Units.....	261
.....Plenums.....	263
.....3.3.2.5.3 Cooling	265
.....3.3.2.5.4 Heating	268
.....3.3.2.5.5 Natural Ventilation	273
.....3.3.2.5.6 Air Temperature Distribution	276
.....3.3.2.5.7 Domestic Hot Water (DHW)	277
3.3.2.6 Detailed Equipment	278
.....3.3.2.6.1 Edit Detailed Equipment	279
3.3.3 Model Data Management.....	280
3.3.3.1 Load Data from Template	280
3.3.3.2 Clear Data to Default	281
3.4 Model Options	282
3.4.1 Model Data Options.....	283
3.4.1.1 Model scope	284
3.4.1.2 Construction and glazing	285
3.4.1.3 Gains	285
3.4.1.4 Timing	286
3.4.1.5 Natural Ventilation	287
3.4.1.6 HVAC	287
3.4.2 Advanced Concepts.....	289
3.4.2.1 Simplification	289
3.4.2.2 Natural Ventilation	292
3.4.2.3 Miscellaneous Edit	294
3.4.2.4 Lighting	295
3.4.2.5 Filters	295
3.4.2.6 Component Blocks	295
3.4.3 Heating Design Calculation Options.....	296
3.4.3.1 Winter Design Day	296
3.4.3.2 Calculation Options	296
3.4.3.3 Heating System Sizing	298
3.4.3.4 Advanced Calculation Options	299
3.4.3.5 Output Options	301
3.4.4 Cooling Design Calculation Options.....	301
3.4.4.1 Summer Design Day	301
3.4.4.2 Calculation Options	302
3.4.4.3 Cooling System Sizing	304
.....3.4.4.3.1 ASHRAE Cooling Sizing	304
.....3.4.4.3.2 Unitary DX Cooling Sizing	305
.....3.4.4.3.3 VAV Cooling Sizing	305

.....3.4.4.3.4 Fan Coil Cooling Sizing	306
3.4.4.4 Solar Options	307
3.4.4.5 Advanced Calculation Options	310
3.4.4.6 Output Options	312
3.4.5 Simulation Calculation Options.....	312
3.4.5.1 Simulation Period	313
3.4.5.2 Calculation Options	313
3.4.5.3 Advanced Calculation Options	315
3.4.5.4 Output Options	317
3.4.6 Drawing Tools.....	320
3.4.6.1 Solar Options	320
3.4.6.2 Draw Block	324
3.4.6.3 Direction Snaps	324
3.4.6.4 Point Snaps	324
3.4.6.5 Drawing Guides	324
3.4.6.6 Object Rotation	325
3.4.6.7 Protractor Tool	325
3.4.7 Display	325
3.4.7.1 Show Data for Calculations	325
3.4.7.2 Edit Screen	326
3.4.7.3 Visualisation Display	327
3.4.8 Block Options.....	328
3.4.8.1 Block Geometry	328
3.4.8.2 Roof-Wall Transition	329
3.4.9 Project Details and Notes.....	329
3.4.9.1 Project Details	330
3.4.9.2 Owner Details	330
3.4.9.3 Analyst Details	330
3.4.9.4 Notes	330
Section 4 Library management	332
4.1 Opening Screen - Component Libraries	332
4.2 Opening Screen - Template Libraries	334
4.3 Import Components/Templates	335
4.4 Export Components/Templates	335
4.5 Backup Component/Template Libraries	337
4.6 Restore Component/Template Libraries	338
Section 5 Component Data	340
5.1 Constructions	341
5.1.1 Layer Data.....	341
5.1.2 Image	342
5.1.3 Calculated Data.....	342

5.2 Glazing	344
5.2.1 Layers	344
5.2.2 Calculated.....	345
5.3 Materials	346
5.3.1 Material Properties.....	346
5.4 Panes	349
5.4.1 General.....	349
5.4.2 Thermal Data.....	350
5.4.3 Solar Data.....	350
5.4.4 Visible Data.....	350
5.4.5 Infra-red Data.....	351
5.5 Schedules	351
5.5.1 7/12 Schedules - Defined Using Profiles.....	352
5.5.2 Compact Schedules.....	353
5.6 Profiles	356
5.7 Defining setpoint temperature schedules	357
5.8 Textures	359
5.9 Window Gas	360
5.10 Local Shading	361
5.10.1 General.....	361
5.10.2 Louvres.....	362
5.10.3 Sidesfins.....	363
5.10.4 Overhangs.....	364
5.11 Window Blinds	366
5.11.1 General.....	367
5.11.2 Slat Data.....	367
5.11.3 Shade/Transparent Insulation Data.....	368
5.11.4 Electrochromic Switching.....	368
5.12 Vents	368
5.12.1 General.....	369
5.12.2 Airflow.....	369
5.13 Holidays	369
5.13.1 General.....	370
5.13.2 Holiday List.....	370
 Section 6 Template Data	 372
6.1 Activity Templates	374
6.1.1 Activity Templates - General.....	375
6.1.2 Activity Templates - All Gains.....	375
6.1.3 Activity Templates - Occupancy.....	375
6.1.4 Activity Templates - Other Gains.....	376
6.1.5 Activity Templates - DHW.....	376

6.1.6 Activity Templates - Environmental.....	376
6.2 Construction Templates	377
6.2.1 Construction Templates - General.....	378
6.2.2 Construction Templates - Simple.....	378
6.2.3 Construction Templates - Walls.....	378
6.2.4 Construction Templates - Roofs/Floors/Slabs/Ceilings.....	378
6.2.5 Construction Templates - Doors.....	379
6.2.6 Construction Templates - Airtightness.....	379
6.2.7 Construction Templates - Thermal mass.....	379
6.3 Glazing Templates	380
6.3.1 Glazing Templates - General.....	380
6.3.2 Glazing Templates - Glazing.....	381
6.3.3 Glazing Templates - Shading.....	381
6.4 Facade Templates	381
6.4.1 Facade Templates - General.....	382
6.4.2 Facade Templates - Openings.....	382
6.5 Lighting Templates	383
6.5.1 Lighting Templates - General.....	383
6.5.2 Lighting Templates - Output.....	384
6.5.3 Lighting Templates - Control.....	384
6.6 HVAC Templates	386
6.6.1 HVAC Templates - General.....	387
6.6.2 HVAC Templates - Ventilation.....	387
6.6.3 HVAC Templates - System.....	387
6.6.4 HVAC Templates - Air Temperature Distribution.....	388
6.7 Location Templates	389
6.7.1 Location Templates - Location.....	390
6.7.2 Location Templates - Winter Design Weather.....	390
6.7.3 Location Templates - Summer Design Weather.....	390
6.7.4 Location Templates - Simulation Weather.....	391
6.8 Hourly Weather Data	391
6.8.1 Hourly Weather Data - General.....	392
6.8.2 Hourly Weather Data - Statistics.....	392
6.9 Crack Templates	394
6.9.1 Crack Templates - General.....	395
6.9.2 Crack Templates - Openings.....	395
6.9.3 Crack Templates - Walls.....	395
6.9.4 Crack Templates - Floors/Ceilings.....	395
6.9.5 Crack Templates - Roofs.....	395
6.10 Legislative Region Templates	396
6.10.1 Legislative Region Templates - General.....	396
6.10.2 Legislative Region Templates - Standard Insulation.....	397
6.10.3 Legislative Region Templates - Emissions.....	397

6.11 Energy Code Templates	398
6.11.1 Energy Code Templates - General.....	399
6.11.2 Energy Code Templates - Envelope (component).....	399
6.11.3 Energy Code Templates - Envelope (building).....	399
6.11.4 Energy Code Templates - Energy Performance.....	399
6.12 Sector Templates	399
6.13 Times Zone Templates	400
6.14 Wind Pressure Coefficient Templates	400
6.15 Metabolic Rate Templates	401
Section 7 Calculations	403
7.1 Heating Design	403
7.1.1 Calculation Options	404
7.1.2 Display Options.....	404
7.1.3 Summary table.....	407
7.1.4 Heat loss breakdown results.....	407
7.2 Cooling Design	410
7.2.1 Calculation Options.....	410
7.2.2 Detailed results.....	411
7.2.3 Display Options.....	415
7.2.4 Summary table.....	417
7.3 Simulation	418
7.3.1 Calculation Options.....	418
7.3.2 Display Options.....	420
7.3.3 Detailed Results.....	423
7.3.4 Comfort Analysis.....	427
Section 8 Visualisation	434
8.1 Controls	435
8.1.1 Show Shadows, Time, Day, Month.....	436
8.1.2 Show North Arrow.....	439
8.1.3 Antialiasing.....	439
8.1.4 Dynamics.....	440
8.2 Creating Movies	440
Section 9 Reporting	443
9.1 Export Data	443
9.2 Report Topics	444
9.3 Compile Reports	444

Section 10 Program Options	446
10.1 Dialogs	446
10.2 Files	446
10.3 User Interface	447
10.4 EnergyPlus	449
10.5 Limits	453
10.6 International	453
Section 11 Menu	456
11.1 File Menu	456
11.2 Edit Menu	457
11.3 Go Menu	458
11.4 View Menu	458
11.5 Tools Menu	458
11.6 Help Menu	459
Section 12 Modelling Advice	461
12.1 Natural Ventilation Modelling	461
12.2 Operative Temperature Control	464
12.3 Working with Large Models	464
12.4 Ground Modelling	465
12.5 Adjacent Buildings	469
12.6 Electrochromic Glazing	470
12.7 Trombe Walls	471
12.8 Autosizing Heating and Cooling Equipment	472
12.9 Daylight Saving and Local Time	473
12.10 Mixed mode	473
12.11 Double Facades	474
12.12 Solar Radiation Distribution	476
Section 13 Simulation Hourly Weather Data	484
13.1 Add new hourly weather data	484
13.2 Edit/Translate hourly weather data	486
Section 14 Reference	489

14.1 DesignBuilder Files, Location and Extensions	489
14.2 Licensing & Activation	491
14.3 Hardware Requirements	492
14.4 Surface Types	494
14.5 Calculation of Air Density	500
14.6 Pitched Roof Geometry - Technical Description	501
14.7 Triangulation	504
14.8 Calculation of HVAC Energy Consumption	506
Section 15 EnergyPlus Background Information	508
15.1 Exporting EnergyPlus IDF Files	508
15.2 EnergyPlus Version Compatibility	509
15.3 EnergyPlus IDF Window Dimensions	510
15.4 Calculation of DesignBuilder Output from EnergyPlus Report Variables	510
15.5 EnergyPlus Errors and Warnings	517
15.6 EnergyPlus Daylight Calculations	520
15.7 EnergyPlus Thermal Comfort	521
15.8 EnergyPlus Date Definition	525
15.9 EnergyPlus Documentation	525
Section 16 Support - Getting Help	528
16.1 Frequently Asked Questions	528
Index	529

Section



1

Getting Started

Learning about DesignBuilder

If you're new to DesignBuilder you are probably keen to start using the program right away, but there's a few things you should do before you dive in:

- Watch the [Getting Started Tutorials](#).
- Read [Important tips about software use](#).

A few minutes spent with these resources will be time well spent.

Go to [Building model data](#)

Keeping up-to-date


Visit www.designbuilder.co.uk for upgrades, new products and news about DesignBuilder.

Welcome to DesignBuilder 1.4

DesignBuilder is a user-friendly modelling environment where you can work (and play) with virtual building models. It provides a range of environmental performance data such as: annual energy consumption, maximum summertime temperatures and HVAC component sizes.

Some typical uses are:

- Calculating building energy consumption.
- Evaluating façade options for overheating and visual appearance.
- Thermal simulation of naturally ventilated buildings.
- Daylighting - models lighting control systems and calculates savings in electric lighting.
- Visualisation of site layouts and solar shading.
- Calculating heating and cooling equipment sizes.
- Communication aid at design meetings.
- An educational tool.

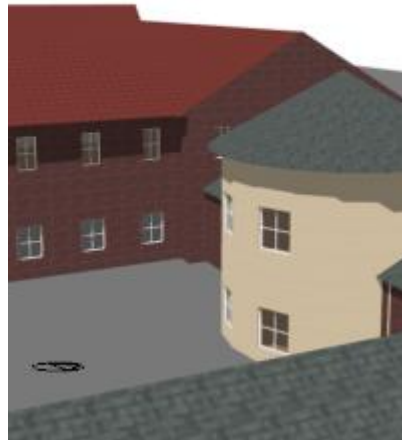

DesignBuilder uses the [EnergyPlus](#) dynamic simulation engine to generate performance data.

1.1 DesignBuilder Tips

Miscellaneous information you should know before starting 'serious work' with DesignBuilder:

1. Buildings are put together by assembling blocks. Block creation and edit operations take place at the building level.
2. Blocks can be subdivided into more than one zone by drawing partitions. Partitioning takes place at the block level.
3. Default data is [inherited](#) from the level above, so blocks inherit their data from the building level, zones inherit their data from blocks, surfaces from zones and openings from surfaces. It is therefore possible to make global changes to the model by changing data at building level. It is possible to override default by editing the data. So for example, you could change the external wall construction for a whole block.
4. [Data templates](#) are the source of default data in DesignBuilder. They can also be used for [loading data](#) to the model en masse. For example you can load the 'Energy code - heavyweight' construction template at the building level to change the construction of the entire building to thermally heavyweight elements which comply with local energy codes/building regulations.
5. You can clear non-default data (i.e. data that has been explicitly entered) to its default state by using the [Clear to default](#) command.
6. When drawing a block which touches another block, you should use the shift key to lock the base perimeter to the correct plane before drawing. You can release the shift key once you have placed the first point of the perimeter.
7. Use the snap points - DesignBuilder block geometry is quite easy to work with but you must use the positioning tools provided to ensure that blocks connect exactly. The only way to do this is to use snaps - do not position blocks and partitions relative to each other 'by eye'.
8. Large building models can take a long time to simulate. You should familiarise yourself with the [Working with Large Models](#) help topic before creating a large/complex DesignBuilder model.
9. [DesignBuilder dsb files](#) are already compressed so there is no need to 'Zip' them when attaching to e-mails or support forums.
10. Understand DesignBuilder [constructions](#), in particular the way floors and ceilings are defined.
11. Name your zones. Do this by clicking twice (not double-clicking) on the name in the Navigator and typing the name. This is especially useful when [merging](#) zones and when checking adjacencies of individual surfaces in the Navigator.
12. If you are exporting IDF data for use outside DesignBuilder please read the [Exporting EnergyPlus IDF Files](#) topic.


1.2 Capabilities

- Environmental performance data is displayed without needing to run external modules and import data and any simulations required to generate the data are started automatically.
- EnergyPlus 'Compact HVAC' descriptions provide an easy way into detailed analysis of commonly used heating and cooling systems.
- Natural ventilation can be modelled with the option for windows to open based on a ventilation set point temperature.
- Daylighting - models lighting control systems and calculates savings in electric lighting.
- Shading by louvres, overhangs and sidefins as well as internal and mid pane blinds.
- A comprehensive range of simulation data can be shown in annual, monthly, daily, hourly or sub-hourly intervals:
 - Energy consumption broken down by fuel and end-use.
 - Internal temperatures
 - Weather data
 - Heat transmission through building fabric including walls, roofs, infiltration, ventilation etc.

- Heating and cooling loads.
- CO2 generation.
- Heating and cooling plant sizes can be calculated using design weather data.
- Parametric analysis screens allow you to investigate the effect of variations in design parameters on a range of performance criteria.
- Generate EnergyPlus IDF files and work with these outside DesignBuilder to access EnergyPlus system functionality not provided by DesignBuilder.

1.3 Recent Files (Opening Screen)

The Recent Files Opening Screen has a list of the files used in your previous DesignBuilder modelling sessions. To access one of these files again you can double-click on it in the grid, or single click in the grid to select it and then 'Open selected site' from the Info Panel on the Toolbar.

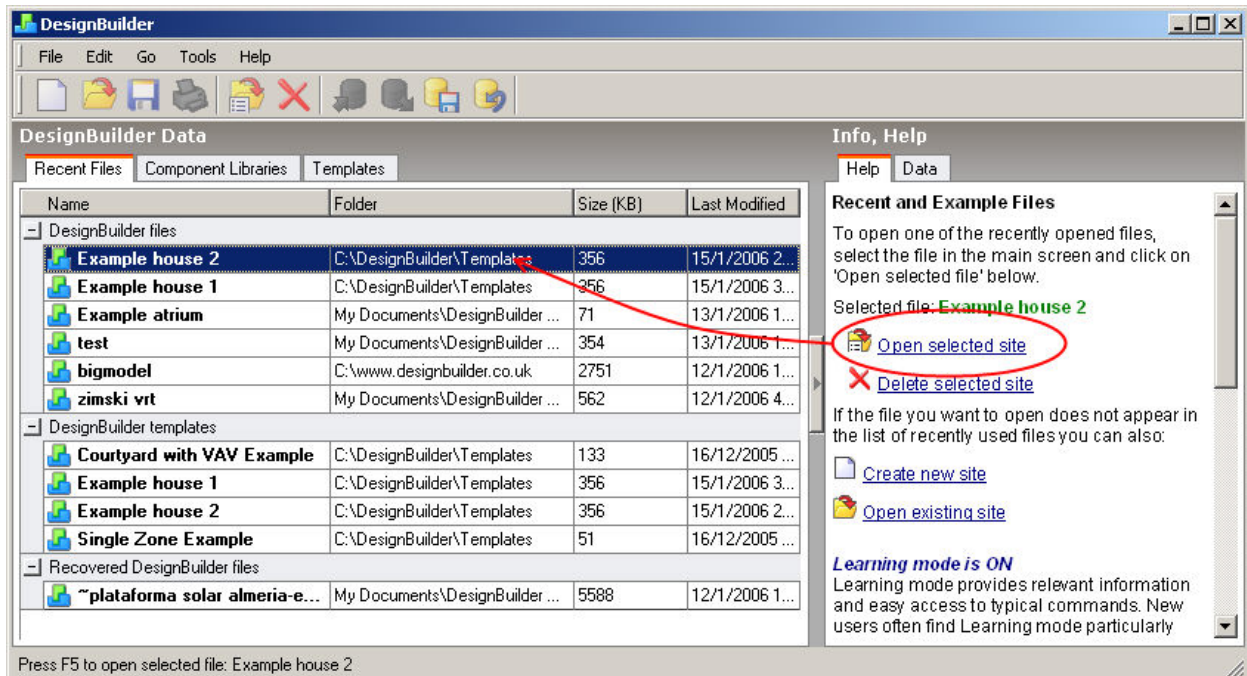

You can also:

- [Create a new file \(site\)](#) from this screen.
- Open existing dsb file from the 'My Documents\DesignBuilder Data' by default.



1.4 User Interface

The DesignBuilder user interface has been designed from first principles for ease of use. Each screen has a specific purpose which is described in the Info panel on the right of the screen along with context

sensitive commands and other relevant information.

The Info panel is only displayed in [Learning mode](#). If you would prefer to have simultaneous access to the Model Data and the Edit View you can switch Learning mode off from the [Program Options](#) dialog from the Tools menu.


The user interface is described for each group of screens:

- [Opening Screen - Recent Files](#)
- [Opening Screen - Component Libraries](#)
- [Opening Screen - Template Libraries](#)
- [Edit Screen](#)
- [Visualisation Screen](#)

1.5 Edit Screen

The diagrams below illustrate the various components of the DesignBuilder Edit Screen with Learning Mode switched on and off.

Learning Mode On

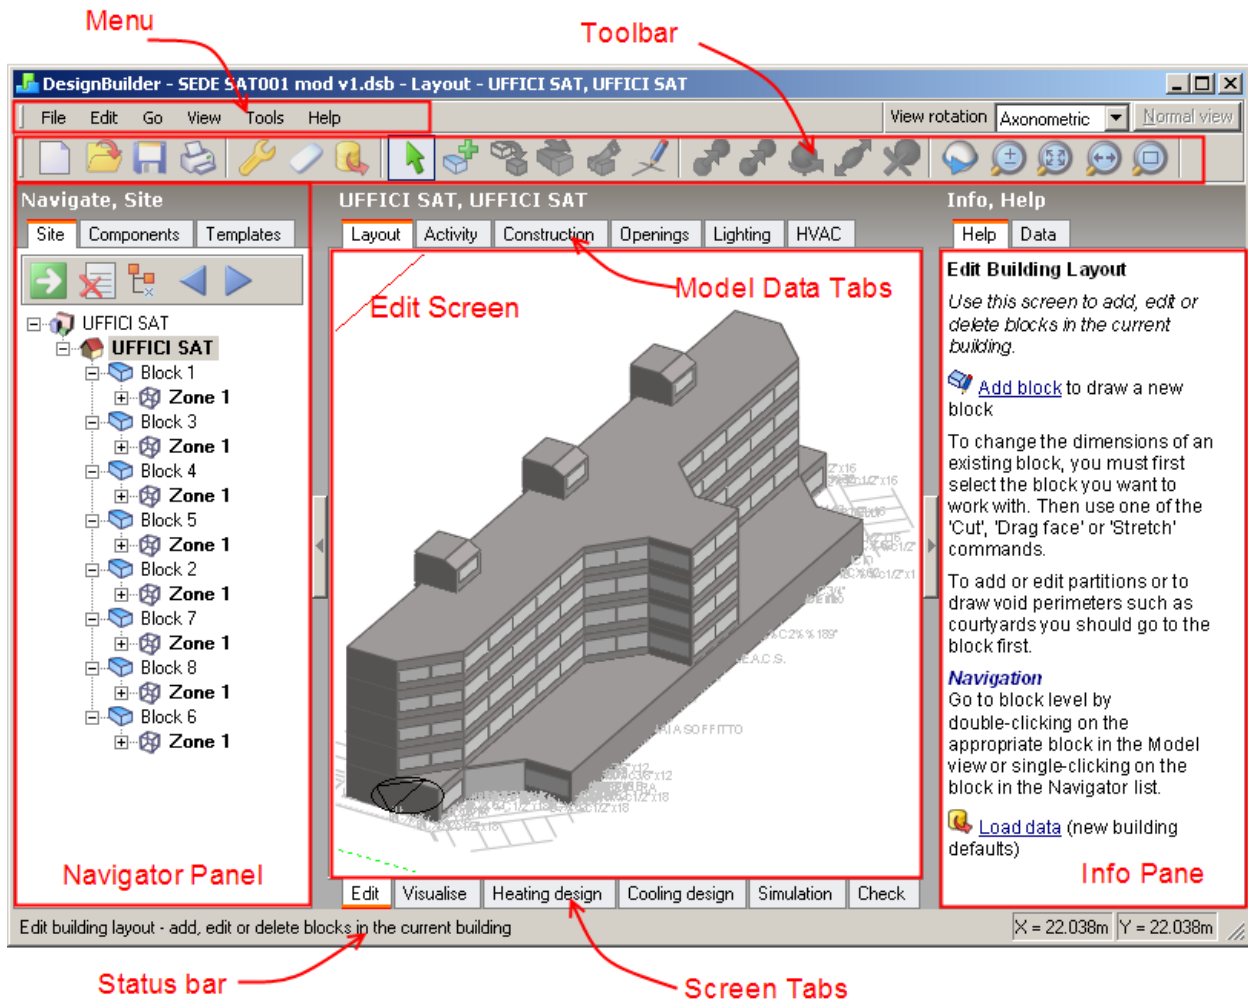


Use the Model data tabs to access Activity, Construction, Openings, Lighting and HVAC [model data](#).

You can find information on using the Info | Data tab to view component and template data in the [Opening Screen - Templates](#) help topic.

Learning Mode Off

Diagram below shows the same model but with Learning Mode Off. Edit Screen and Model Data are visible simultaneously and there is no Info Panel..

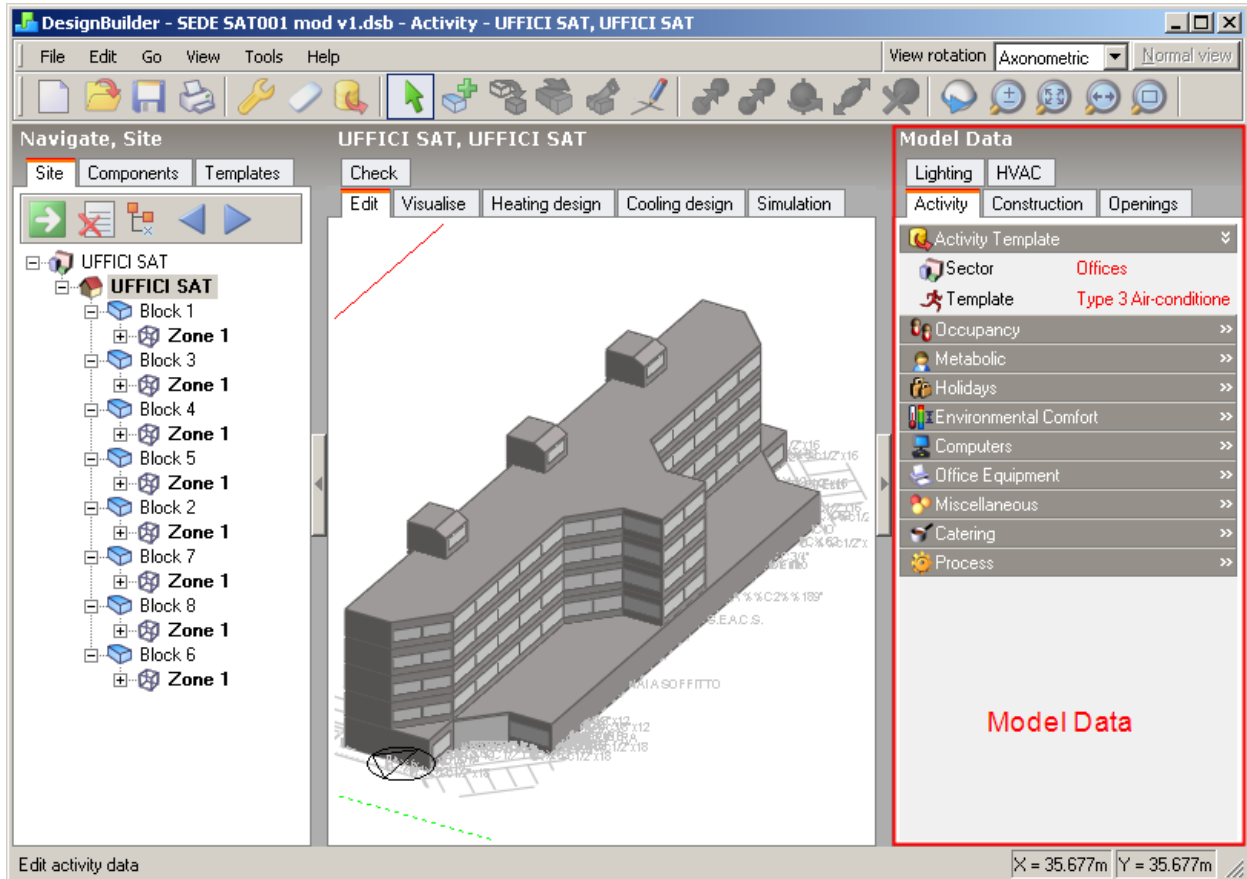

Section

2


**Core
Concepts**

Some core concepts you should be familiar with before attempting to use DesignBuilder on a real project are:

- [Model data hierarchy and data inheritance](#)
- [Templates and components](#)
- [Blocks](#)
- [Navigating building models](#)
- [Customising model detail](#)

2.1 Model Data Hierarchy & Data Inheritance

DesignBuilder models are organised in a hierarchy:

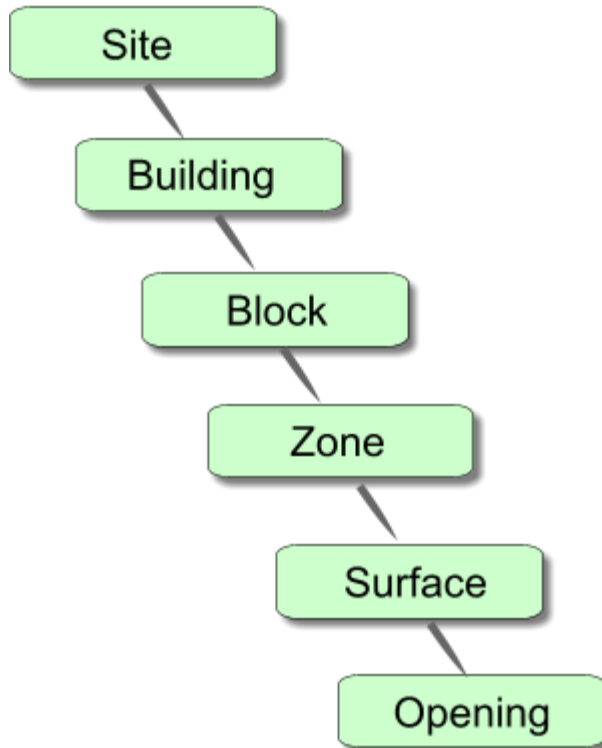


Default data is inherited from the level above in the hierarchy, so block data is inherited from building level, zone data is inherited from block data and surface data from zone data. This arrangement allows you to make settings at building level which can become active throughout the whole building; or make settings at block level to change data for all zones/surfaces in the block. So for example, if the External wall construction is set to 'Wall 1' at building level, then this will be the default External wall for all blocks in the building. It is possible to change the inherited defaults in any of these blocks by making an explicit selection (say 'Wall 2'). All the zones in the block whose external wall construction was set to 'Wall 2' have that default External wall construction.

The construction and opening defaults are inherited down to surface level where the data is actually used in the calculations. For example it is the External wall construction model data at the surface level that defines the actual construction used for that external wall. The External wall model data set at zone, block and building level has no effect on the model (other than by providing the default data for the level below

in the hierarchy).

Model data inherited from the level above is shown in blue and **user data** is shown in red (see below).

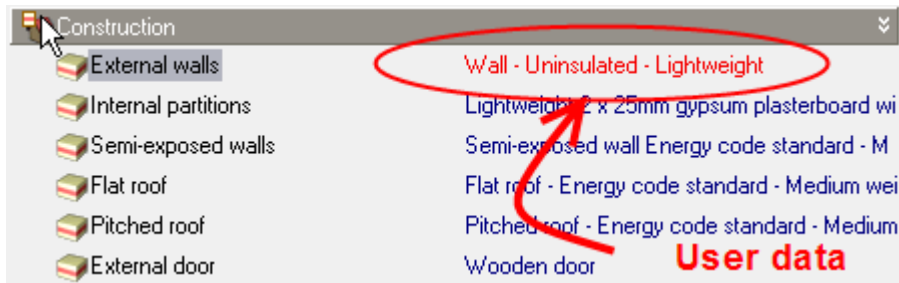

The DesignBuilder hierarchy mechanism is a fast way of setting data globally in a building model, but you must take care to enter the minimum amount of data to get the most from the inheritance system. For example if all zones in a particular block have the same activity called say 'Office work', you should set the activity at block level and not multiple times at zone level. Equally if all the blocks in the building have the same activity, you should set the data at the building level and allow the blocks to inherit the data from the building. By keeping the amount of user data to a minimum, you will find it quicker to make changes at a later date. Clearly it is much faster to change a few Model data items at building and block level than it is to make multiple changes at zone or surface levels.

When entering construction data, you could set the construction for each surface in the model but in practice this would be an extremely inefficient process. It is faster and less error-prone to set the construction as high up in the hierarchy as possible, possibly at building level (if all external walls in the building have that external wall construction), or at block level if all walls in that block have the construction (and other blocks don't).

Most data at the building level is 'user data' as buildings do not inherit their data from the site level.

Defaults

In short the rules are:

- [Construction](#) and [Openings](#) data is used at the *surface* level, i.e. all construction and opening data at building, block and zone level is default data and only data at surface level is actually used to define the model.
- [Activity](#), [Lighting](#), [HVAC](#), [Equipment](#) data is used at the *zone* level, i.e. all Activity, Lighting, HVAC, Equipment data at building and block level is default data. The exception is AHU data for Compact HVAC systems which is set at building level.

A common question is "*Why do I see Pitched roof constructions at building level on the Constructions tab when my building doesn't have a pitched roof?*"

The answer is that the Pitched roof construction setting at building, block and zone levels should be thought of as the default setting for any pitched roofs that may (or may not) exist in the model further down in the hierarchy. If there are no pitched roofs in the model then the data is simply not used.

Custom openings

When [custom](#) openings have been created at surface level these override the [facade](#) layout Model data for the surface.

Openings

Although openings (windows, vents, doors etc) appear in the DesignBuilder hierarchy, there is no way in

version 1 to change data at the opening level. All openings inherit their data from the surface level. It is therefore not possible to have different glazing types on a particular surface. If you click on an opening in the Navigator you are actually taken to the surface containing the openings.

Component blocks

[Component blocks](#) inherit their data from building level.

2.2 Templates and Components


- [Templates](#) are databases of typical generic data.
- [Components](#) are databases of individual data items (e.g. a construction type, material, window pane) .

DesignBuilder allows you to build up your own [libraries of templates and components](#). Note that each user on a computer maintains their own database of templates and components.


Template and component libraries are loaded into your model at the time it is created and new custom data from other computers can be [imported](#) at any time.

2.3 Blocks


[Blocks](#) are the basic geometric shapes that you use to assemble a DesignBuilder model. The idea of blocks is to provide fairly simple objects that you can easily move around in 3-D space in a similar fashion to that of building a physical model using bricks from a construction set. [Blocks are created](#) by drawing 2-D perimeters on horizontal or vertical planes and then extruding these perimeters to form 3-D shapes:

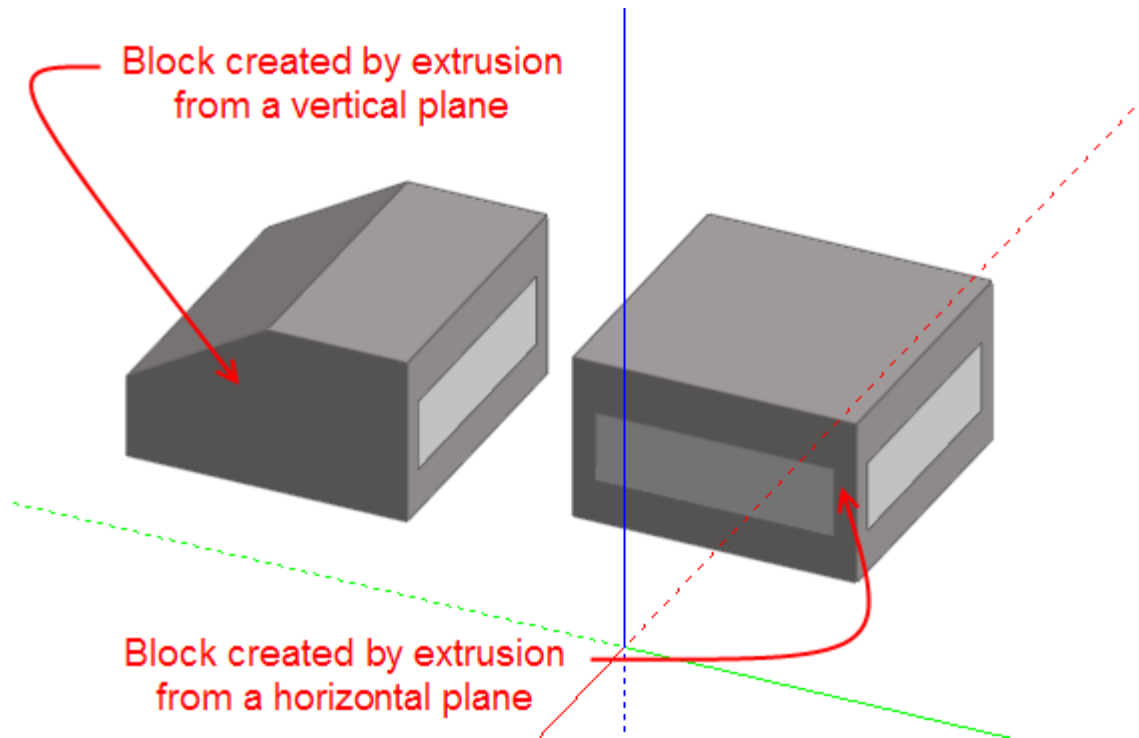


Blocks are versatile objects and once created can easily be modified by moving their surfaces, by [stretching](#) them and even by [cutting](#) them using arbitrary planes. Typically, you might use a block to represent an entire building storey:

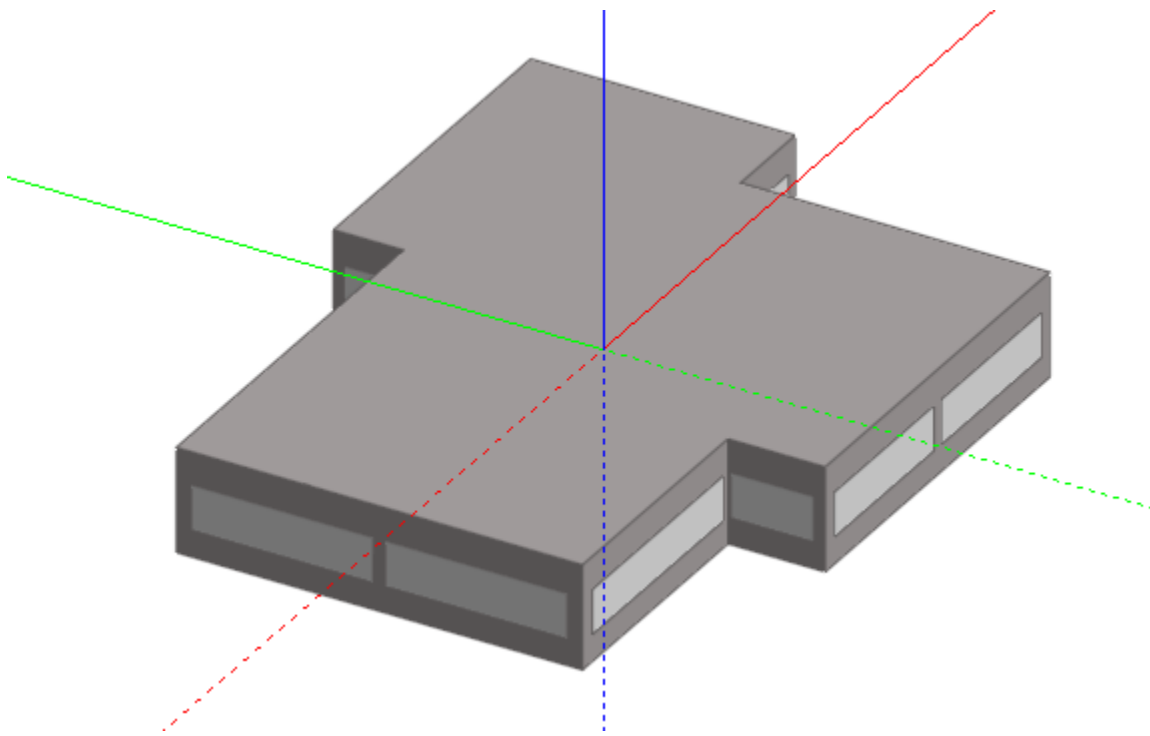


Or a particular building design might lend itself to an obvious division into blocks:

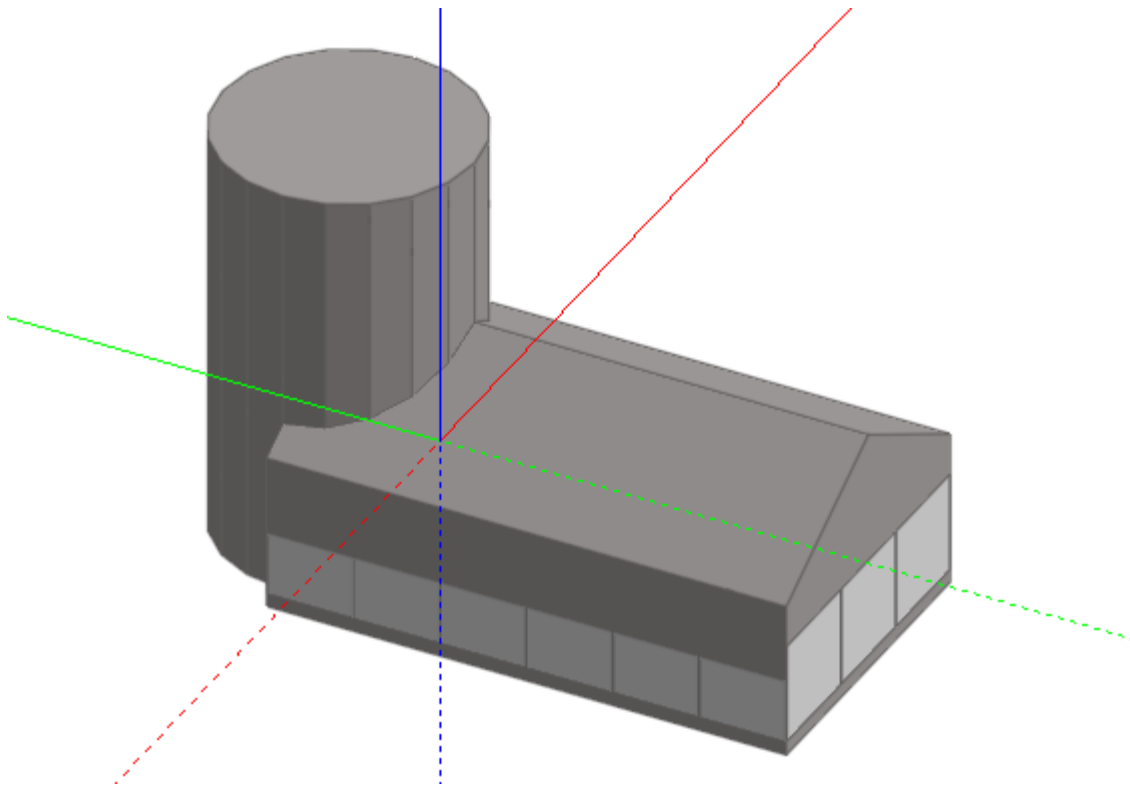

You can model an entire building as a single block:

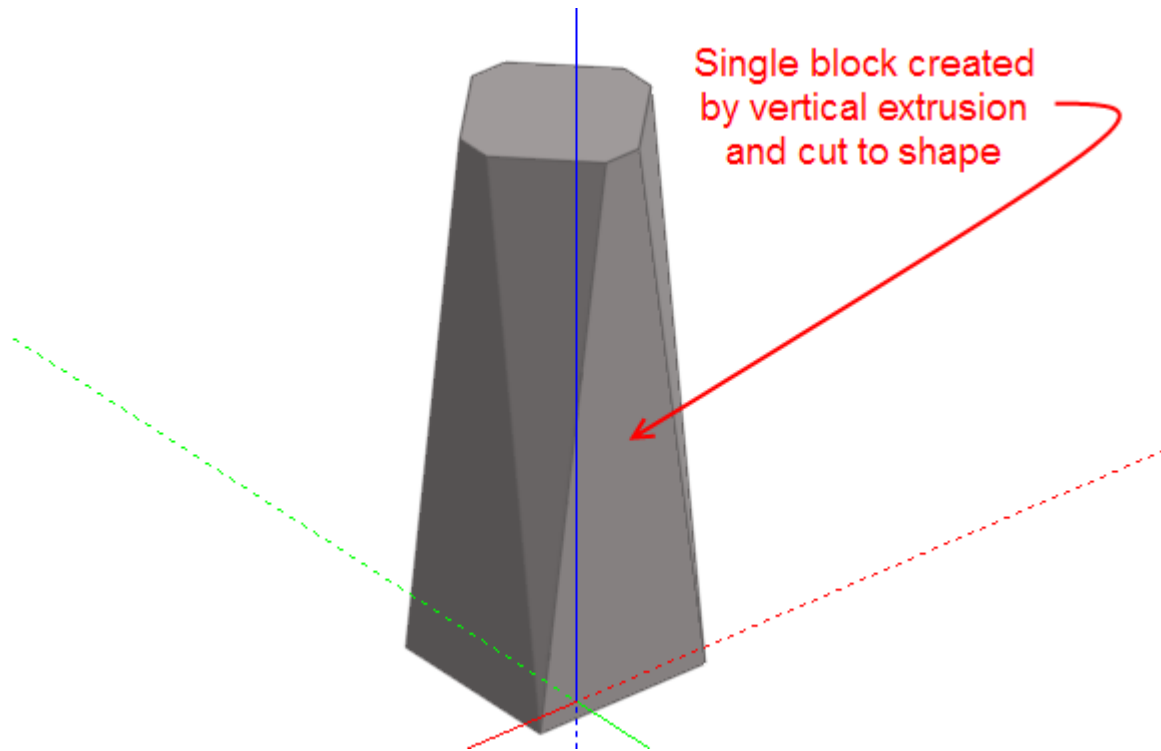


And then cut the block into storeys:

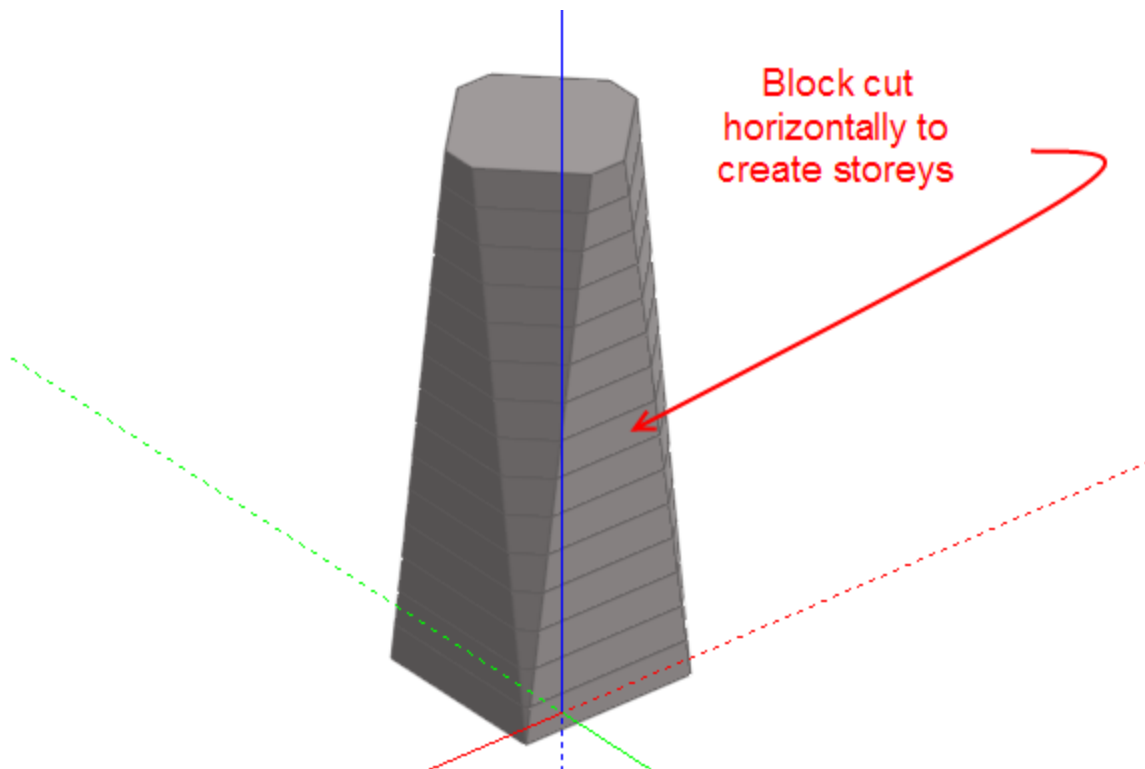

Once the overall geometry of a model has been established with blocks, you can go 'into' a block and sub-

divide it into a number of rooms or zones using partitions:

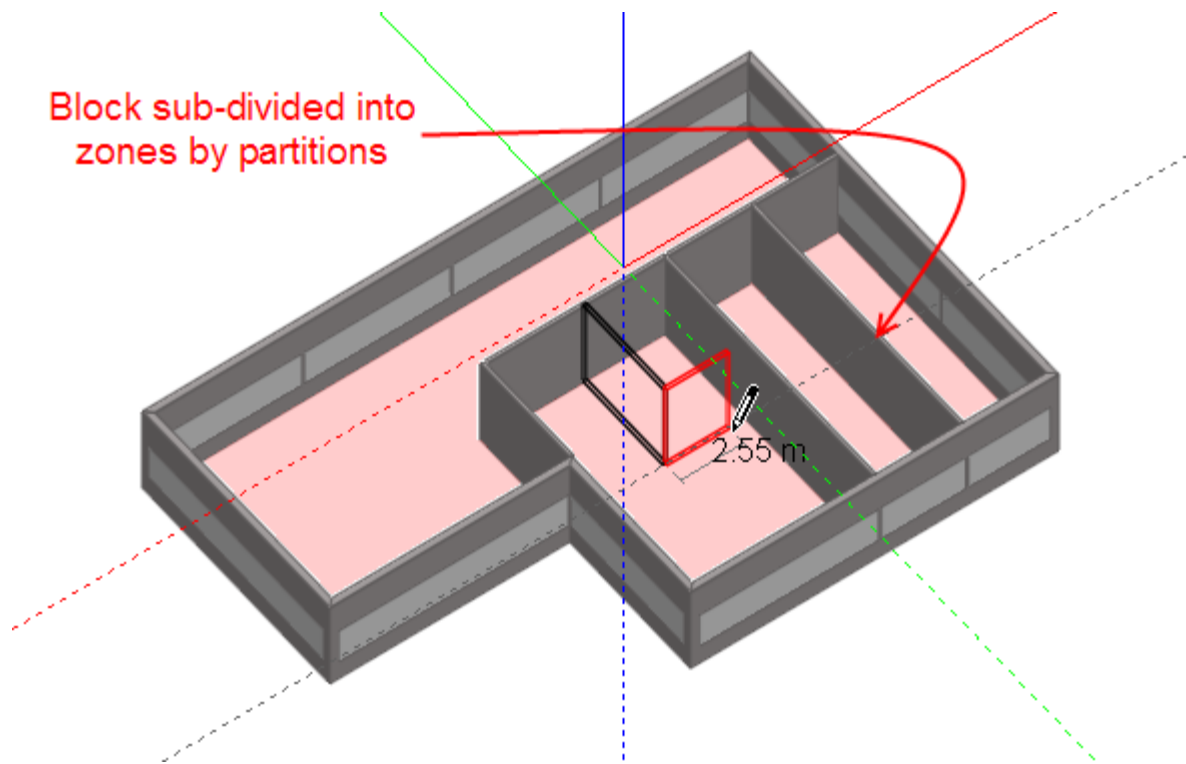


If you sub-divide a block internally using partitions, you can still modify the block by stretching, cutting, rotating, etc. and where possible the internal geometry will be kept.

2.4 Navigating Building Models

- There are various ways of navigating (moving around) DesignBuilder models:
- Single clicking the appropriate entry in the Navigator panel is the most versatile way because every object in the building has an entry in the Navigation panel.
- Double-clicking on the appropriate object in the Edit Screen takes you do it.
- Single-clicking on the appropriate object in the Edit Screen then mouse right mouse clicking on the object and selecting the 'Go to...' menu option at the top.
- Go to the level up in the hierarchy by pressing <F3> or by right mouse clicking in the Edit Screen and selecting the 'Go up...' menu option.
- The Next <F5> and Back <F4> Navigation buttons allows you to move sequentially through the model (avoiding surfaces). This approach can be slow but can be useful when it is necessary to methodically work through the model for any reason.

The Figure below shows how to either click on the Navigator entry or double-click on the Edit Screen to go to 'Zone 1' from 'Block 1'.

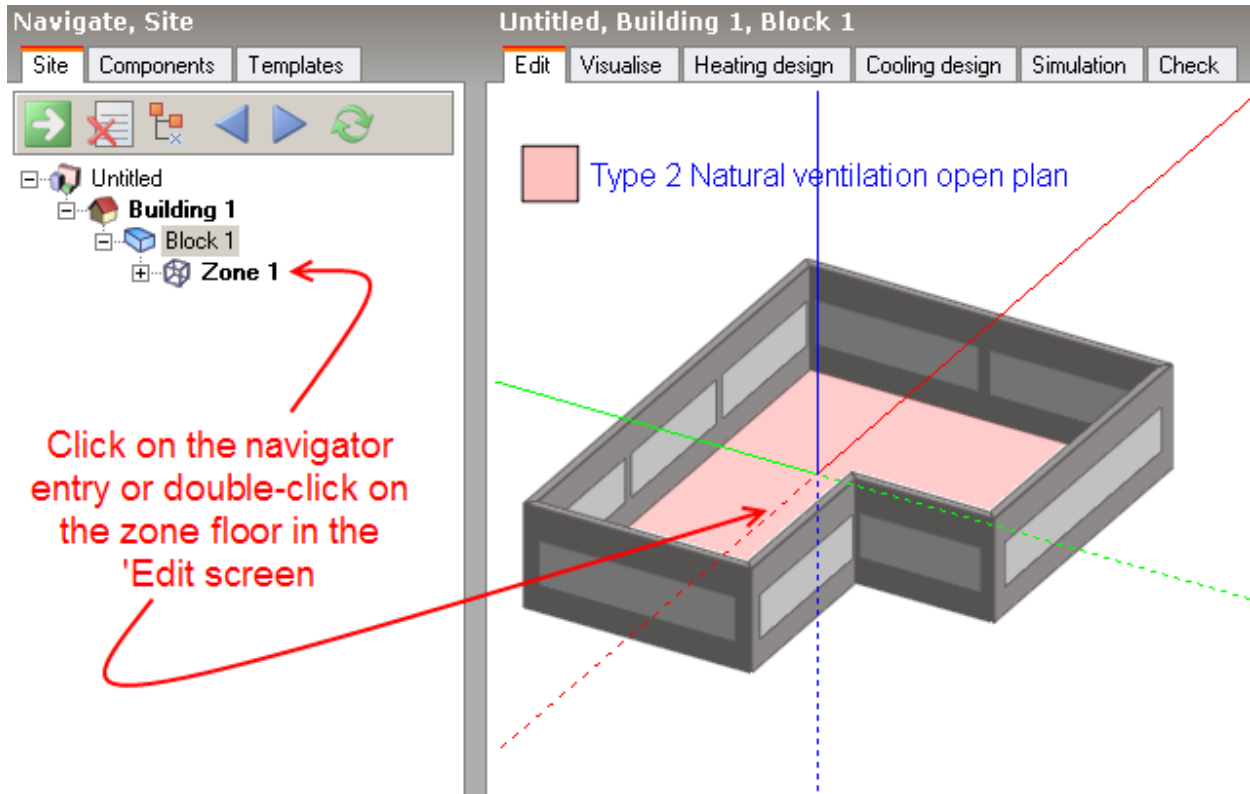

2.5 Customising Model Detail

DesignBuilder models can be customised to allow you to enter the level of detail which is appropriate to your building design or modelling project. In early-stage design work you will generally want to use generic selections for most Model Data and so would choose the corresponding 'low data requirement' model options.

As the building design firms up, more information becomes available and you can change the model options to use more specific data tailored to the project and less generic data.

The 'standard' Model Option set is loaded at the point the building is created and you should generally keep these options unless you have specific reason to change.

Model Options are set in the [Model Options dialog](#) from the Edit menu.

Section

3

**Building
Models**

The process for creating a new building model typically follows a sequence:

1. [Create new site.](#)
2. [Create new building.](#)
3. [Draw and manipulate building blocks to create building geometry.](#)
4. [Partition building into thermal zones.](#)
5. Set [Model Data](#).
6. [Add any 'custom openings'](#) (windows, doors etc) by drawing up the surface level.
7. Size heating and cooling systems.
8. Check design by carrying out summer and winter simulations displaying hourly data.
9. Once model has been checked over short periods, you can use it with confidence for annual simulations.

3.1 Create New Site



You can create a new site (dsb file) from the Opening Screen. In DesignBuilder, 'Site' is synonymous with the file because each file can only contain one site.

3.1.1 Location

Select the Location Template as a source of location and weather data for the site.

The Location defines the geographical location and weather data for all buildings on this site. You will be able to load data from other location templates or override the default data from the Location Model Data tab at Site level.

3.1.2 Template

You can either select 'Blank' to create a clean site, or select a template to base your site on an existing site.

If you have a DesignBuilder file you would like to use as a template for future sites save or copy it to the ['Templates'](#) folder (accessed from the **File | Folders | Template projects** menu command).

3.2 Building Geometry


This section describes the various facilities within DesignBuilder to create and edit model geometry.

3.2.1 View Controls


A number of view controls are provided to allow you to change the point of view for the model:

- [View Rotation](#)
- [Orbit](#)
- [Zoom](#)
- [Fit view](#)
- [Pan view](#)
- Zoom window


View tools can be activated at any time during operation of the drawing tools and control returned to the active drawing tool after completing the view process. For example to draw a block perimeter adjacent to an existing cylindrical block:

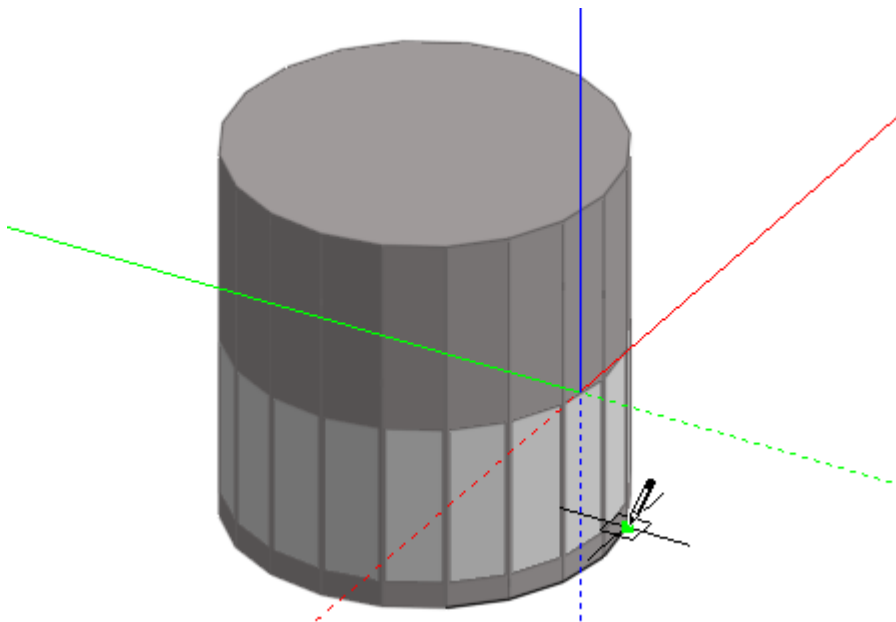

To continue drawing the perimeter around the other side of the cylindrical block, click on the 'Orbit' tool and [orbit](#) the model to reveal the other side and then [pan](#) to centre the model:

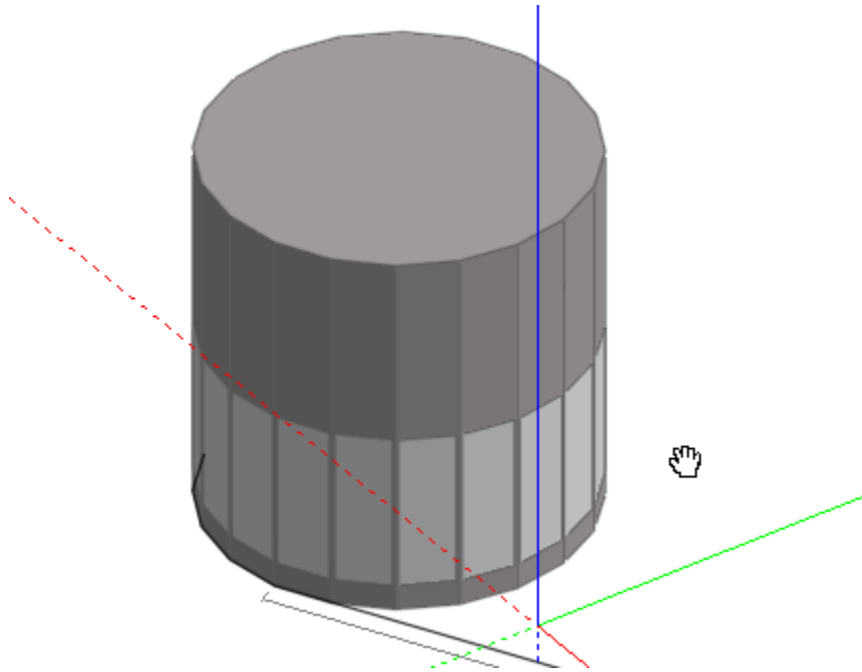


You can then return to the drawing process either by pressing the ESC key or selecting 'Cancel Pan' from the right-click menu:

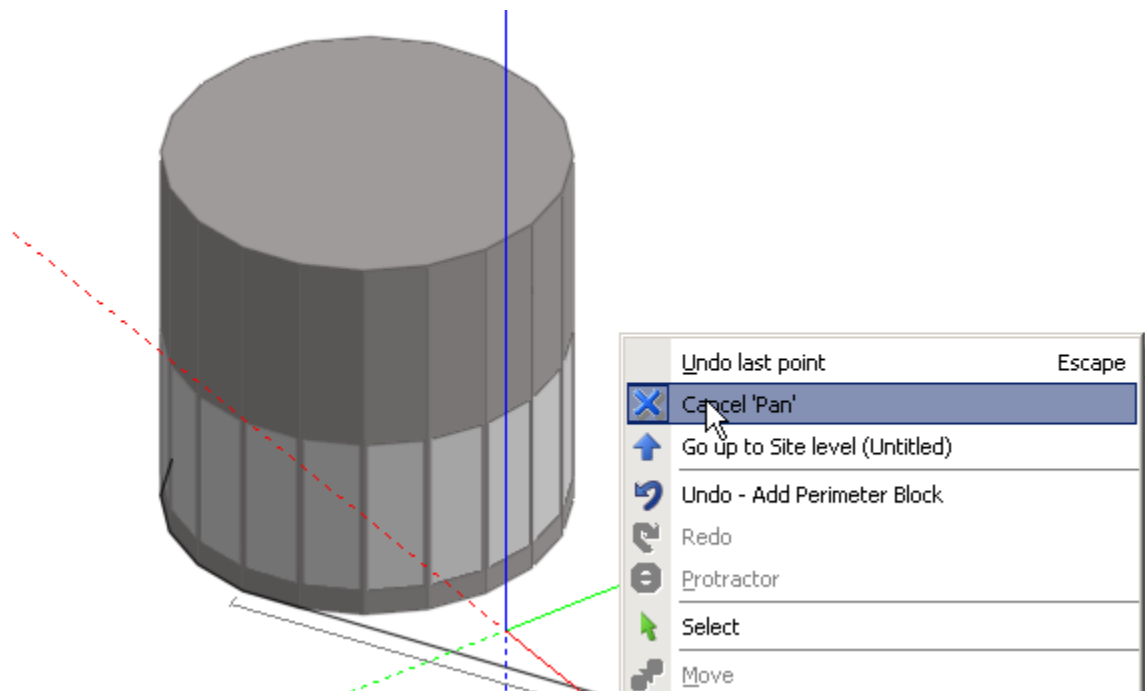


3.2.1.1 View Rotation

DesignBuilder provides several pre-defined standard view rotations:

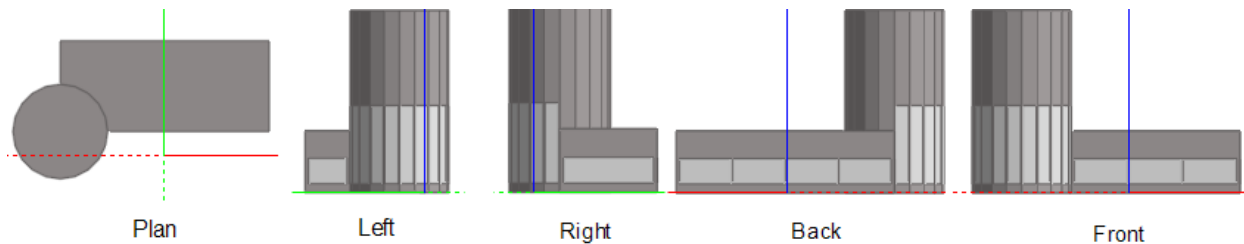

You can select one of these standard views from the view rotation drop list:

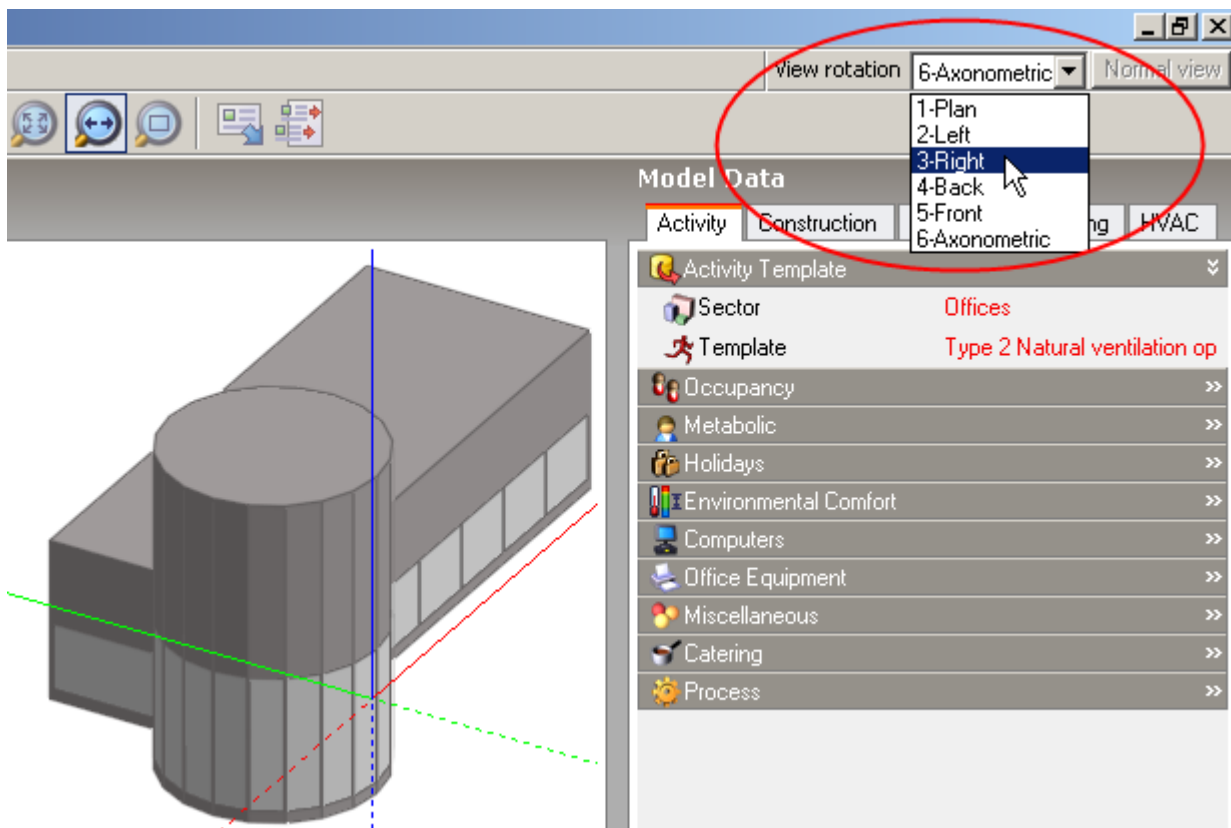

The default 'Axonometric' setting is designed to afford a good general axonometric view of the various components at each model level.

3.2.1.2 Orbit



The orbit tool is used to rotate the view around the model. To orbit the model click on the 'Orbit' tool and then press the left mouse button and keep the button pressed as you move the mouse cursor, the view will orbit around the model.

3.2.1.3 Zoom Dynamic



To zoom in and out from the current model point of view, click on the 'Zoom' tool, then press the left mouse button and keep the button pressed as you move the mouse cursor, the view will zoom in as you move the mouse cursor down and out as you move it up.

3.2.1.4 Zoom Window



The 'Zoom window' tool is used to zoom in on a specific area of your model. To create a window on an area of the model, click on the 'Zoom window' tool and move the mouse cursor to a corner of the window you want to create, then press the left mouse button and keep the mouse button pressed as you drag the window, when you release the mouse button, the view will zoom to the extents of the defined window.

3.2.1.5 Fit view



The 'Fit view' tool is used to zoom your view to a distance which will enable the whole model to be made visible and centred in the 'Edit' window.

 
3.2.1.6 Pan view



The 'Pan' tool is used to move the model point of view vertically and horizontally across the plane of the screen. To pan the view, click on the 'Pan' tool, then press the left mouse button and keep the button pressed as you move the mouse cursor, the point of view will pan horizontally as you move the mouse cursor left and right and vertically as you move it up and down.

3.2.1.7 Normal View


At the [surface level](#), The Normal button in the top right-hand corner of the screen can be used to rotate the point of view to be normal to the surface and to automatically zoom in so that the extents of the surface fill the view.



The [Default surface normal view](#) program option allows you to control the behaviour of this command.

3.2.2 Perimeters

Blocks, courtyards and surface openings are all created using perimeters. When any of these element drawing tools are activated, perimeter options can be accessed from the 'Drawing Options' data panel, for example when the [Draw window](#) tool is active at the surface level:

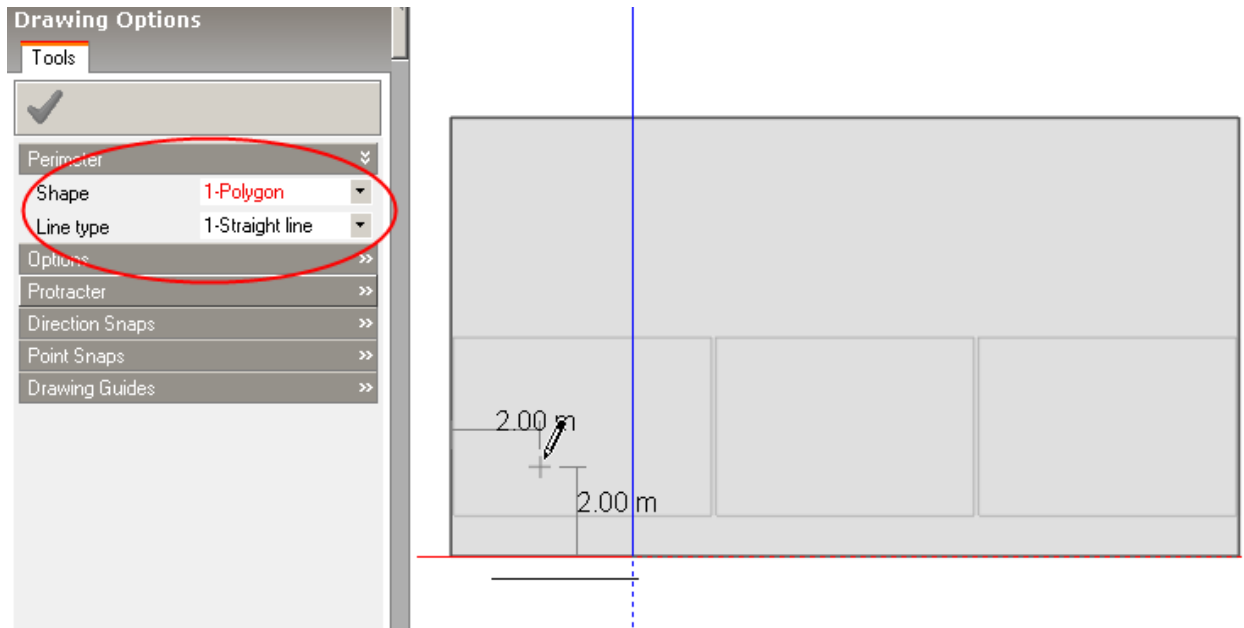


3.2.2.1 Shape


Three perimeter shapes are provided to enable specific perimeter topologies to be drawn efficiently:

- Polygon
- Rectangle
- Circle


The 'Polygon' is probably the most useful shape and can be used to draw perimeters of any topology. The 'Polygon' shape also allows you to change the line type from a straight line to an arc. To draw a perimeter using the 'Polygon' shape, start drawing the first line by clicking anywhere in the active drawing plane to place the starting point, then move the mouse cursor and click to place the line end-point, you can use the [snaps and the protractor](#) to help with alignment. Continue placing perimeter lines in the same way. If at any time you want to cancel the last line that you placed, you can press the ESC key or select 'Undo last point' from the right-click menu. If you want to incorporate an arc within the perimeter, you can change the [line type](#) to 'Arc' and then place the centre-point of the arc:

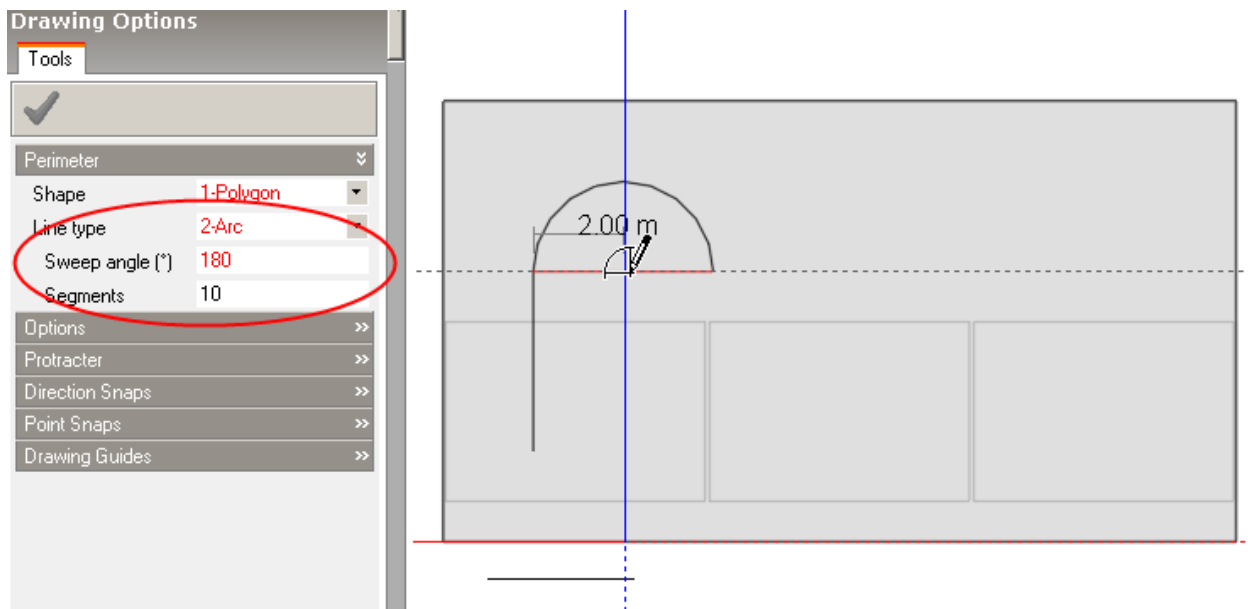


To complete the perimeter, move the mouse cursor to the beginning of the first perimeter line, which activates the [end-point](#) snap and click on it to connect the lines:

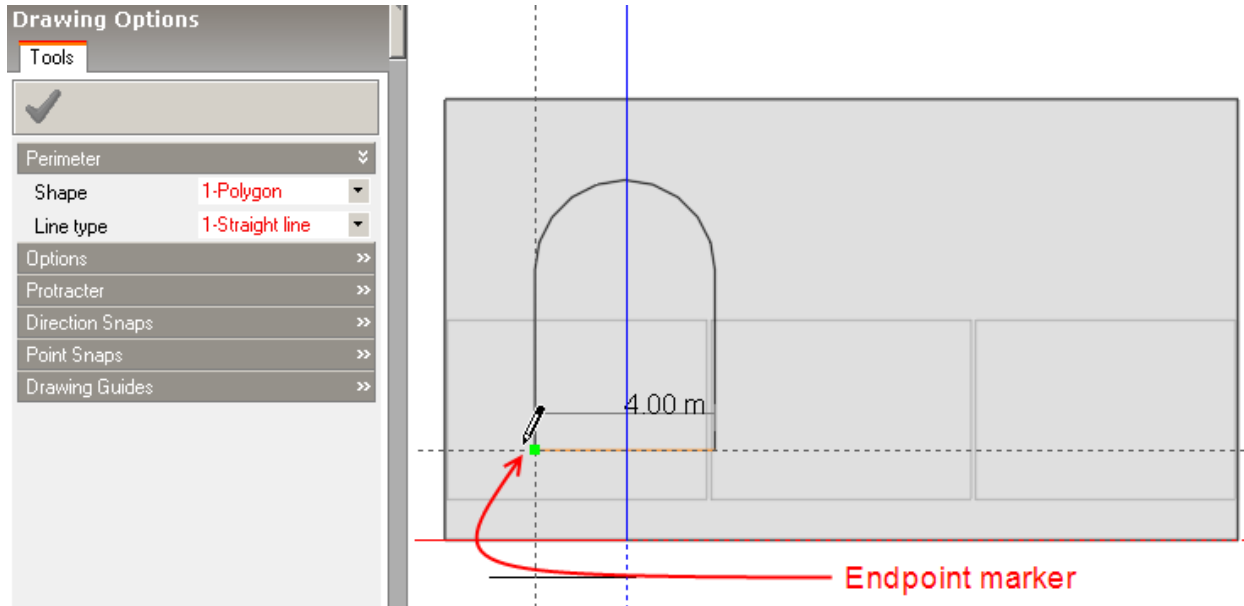

The 'Rectangle' shape allows you to draw perimeters by placing diagonally opposite corners of a rectangle:

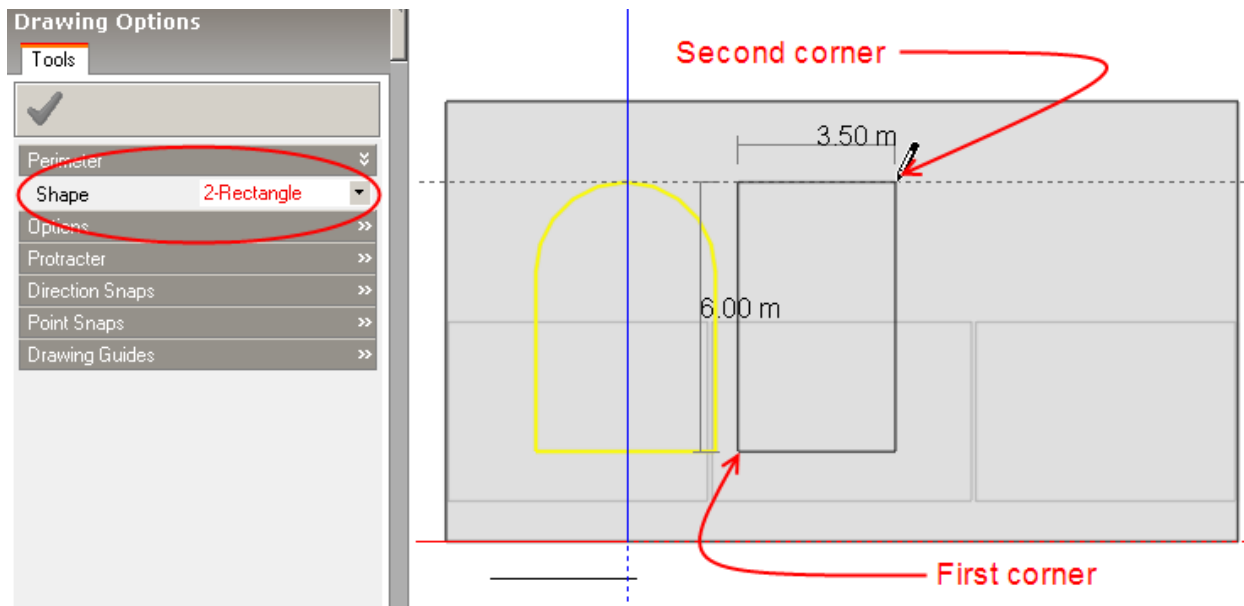


The 'Circle' shape is used to draw circular perimeters by placing the circle centre and then setting the radius by placing a second point:

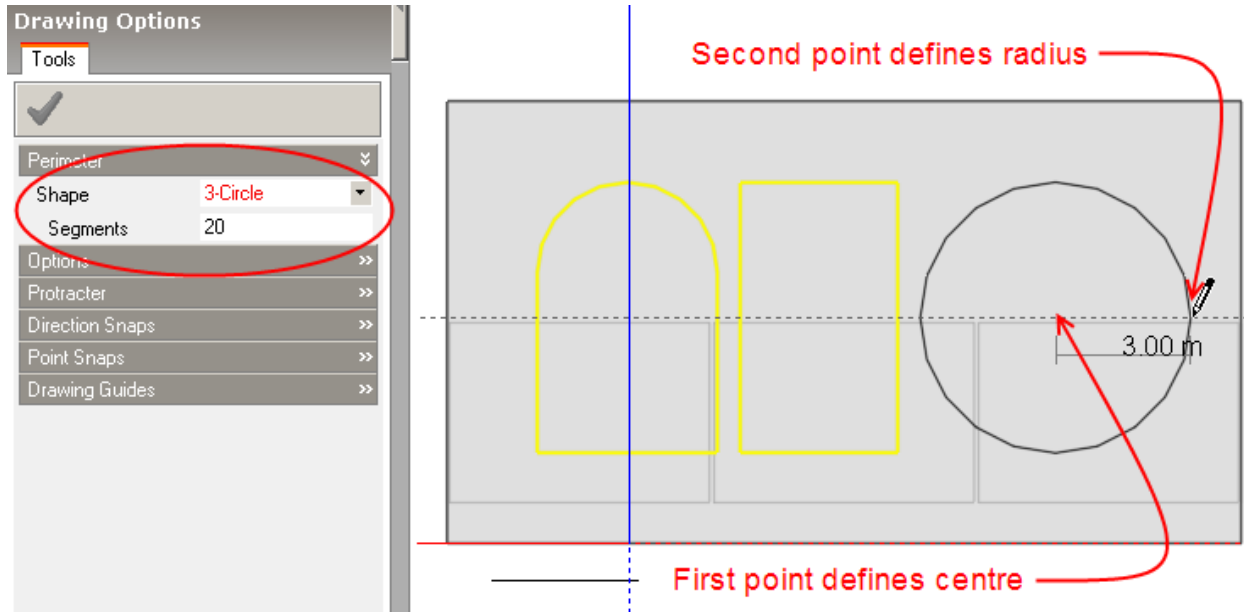


The associated 'Segments' option allows you to control the accuracy of the circle. In DesignBuilder geometry, circles are actually composed of polygons and the accuracy of the representation can be controlled by defining the number of segments (or lines) used in generating the polygon. Generally speaking, the greater the number of segments used will result in more memory usage and processing time and so, particularly in the case of blocks, it's advisable to use the default number of segments where possible.

3.2.2.2 Line Type

When the perimeter [shape](#) is set to 'Polygon', you can set the perimeter line type to 'Straight line' or 'Arc'. When the line type is set to 'Straight line', a perimeter is drawn by placing the origin and then a series of line end-points:

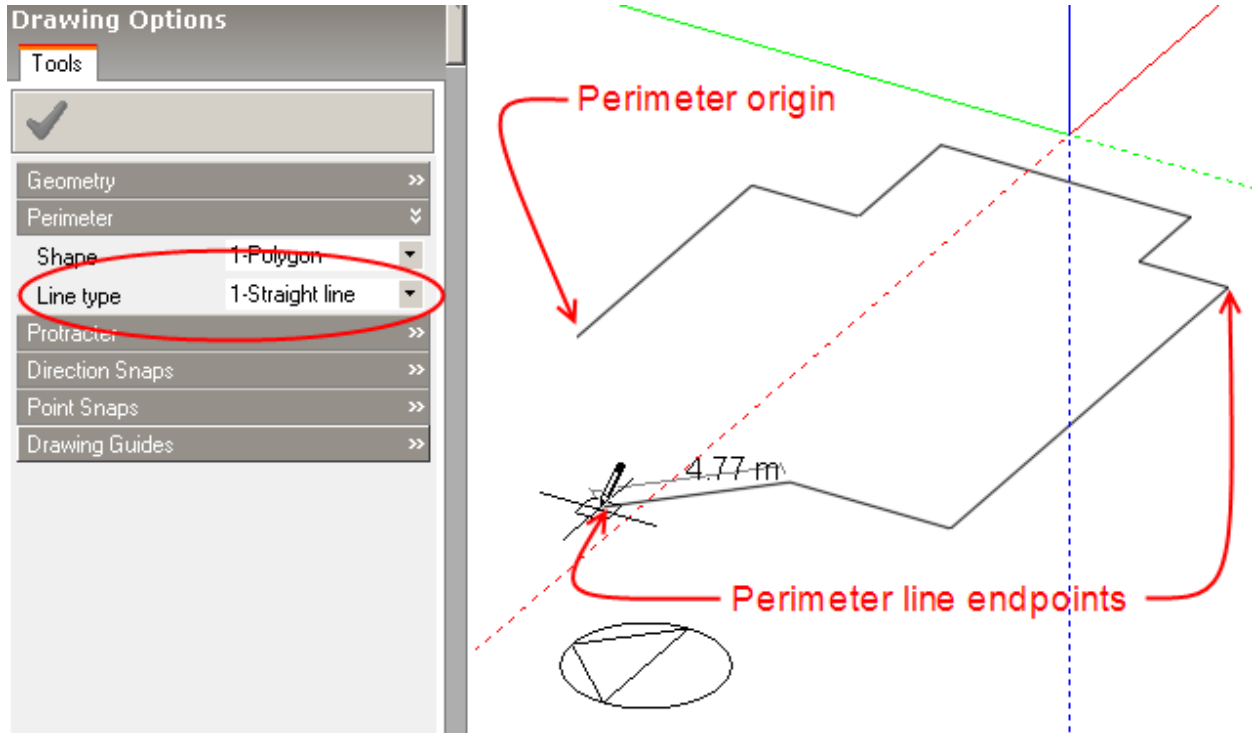


To incorporate an arc within a perimeter, set the line type to 'Arc'. An arc is defined using the sweep angle and number of segments:

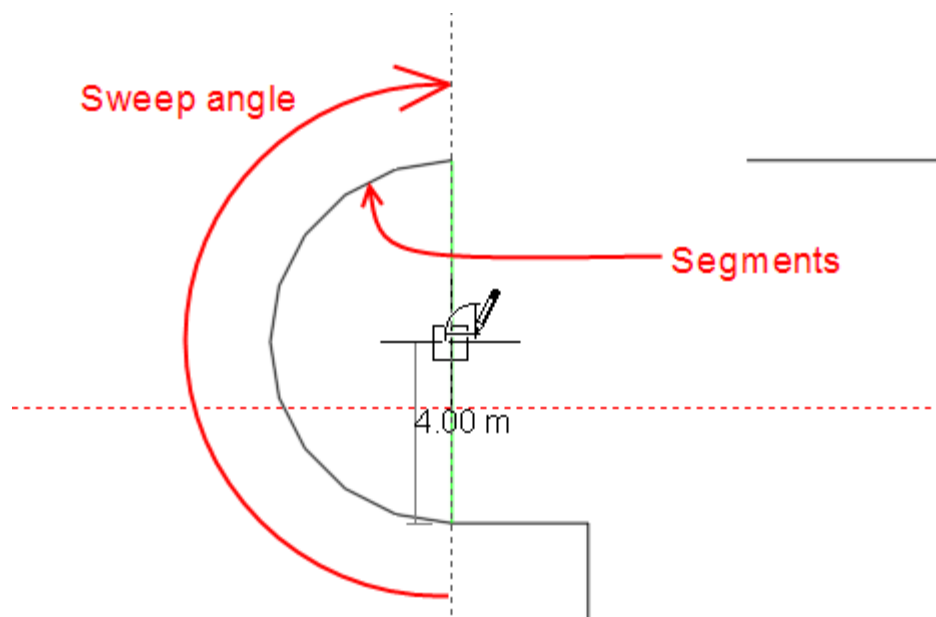

A negative sweep angle can be used to create an arc in an anti-clockwise direction. In DesignBuilder geometry, arcs are created using a number of segments or straight lines and the accuracy of the representation can be controlled by defining the number of segments. Generally speaking, the greater the number of segments used will result in more memory usage and processing time and so, particularly in the case of blocks, it's advisable to use the default number of segments where possible.

To draw the arc, place the arc centre:

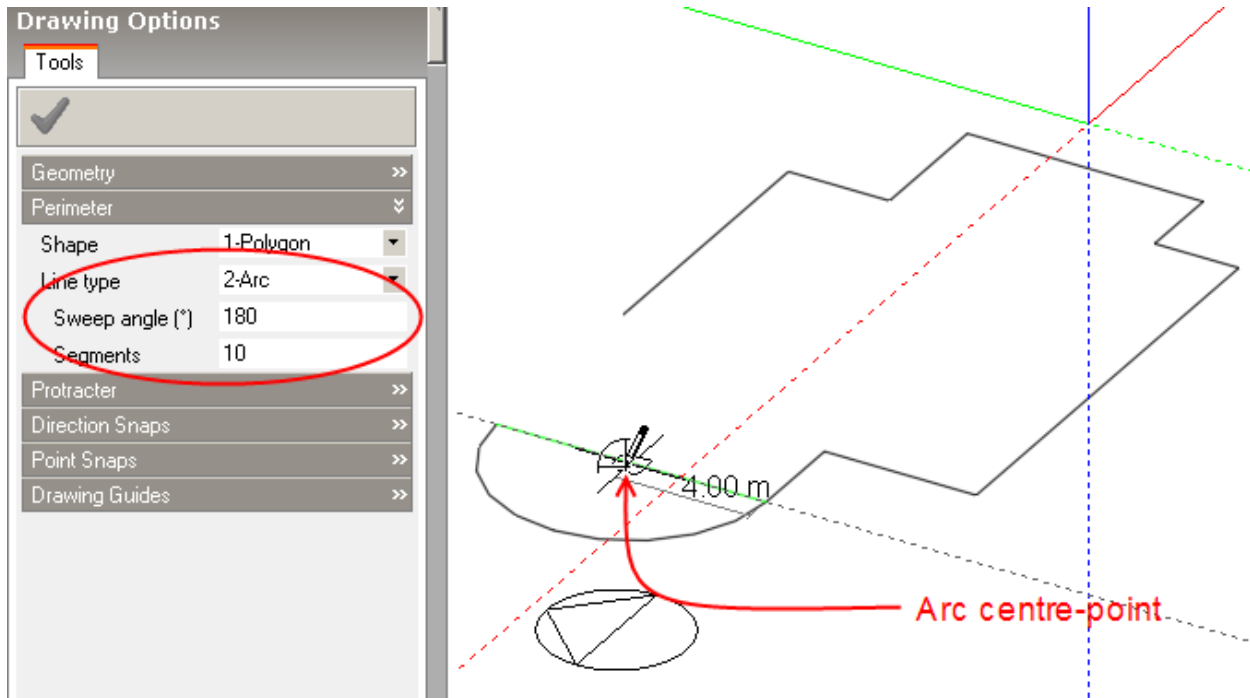


3.2.3 Snaps, Drawing Guides & Protractor

A number of drawing aids are provided to enable block perimeter lines, partitions, etc. to be drawn precisely:

- [Protractor](#)
- [Direction Snaps](#)
- [Point Snaps](#)
- [Drawing Guides](#)

These items are made available when the various drawing tools are used, such as the 'Draw window' tool at the zone surface:

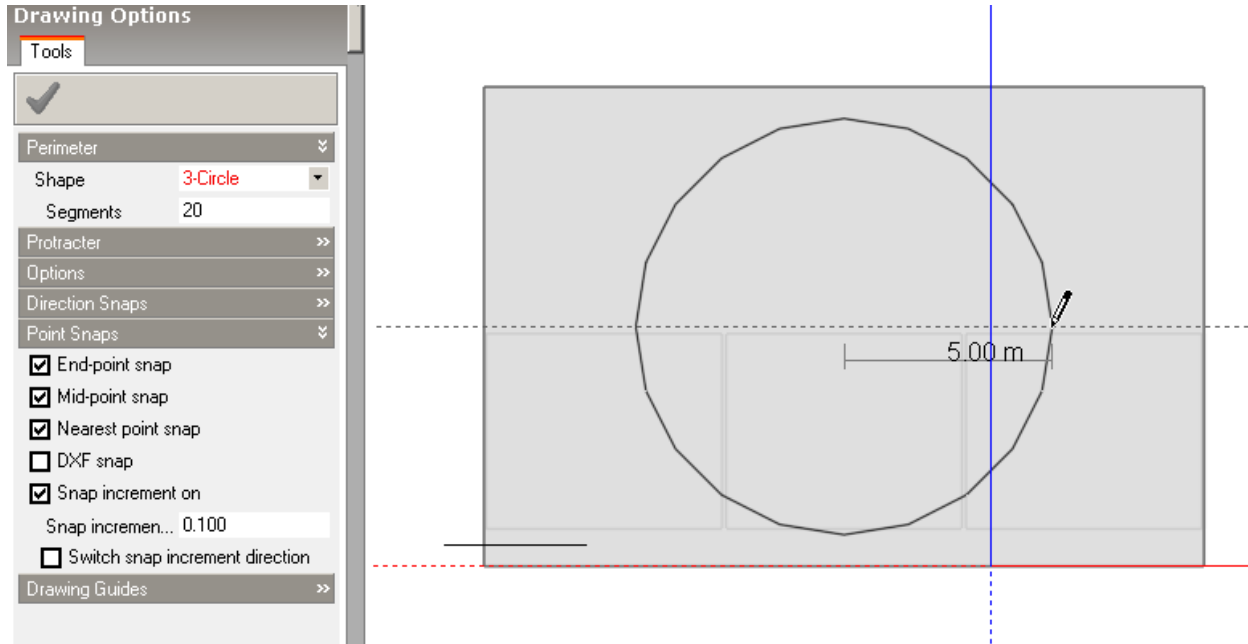

3.2.3.1 Direction snaps


When drawing perimeter lines, block partitions or surface openings direction snaps can be used to draw lines:

- [Parallel with the active drawing plane axes \(Axis snap\)](#),
- [Parallel with existing elements \(Parallel snap\)](#) or
- [Perpendicular to existing elements \(Normal snap\)](#).


3.2.3.1.1 Axis snap

The axis snap check boxes are displayed under 'Direction snaps' in the 'Drawing Options' data panel when the various drawing commands are active. The axis snap is used to draw lines parallel with the major axes of the active drawing plane.

As you move the cursor around to draw a line, the line will change colour and 'stick' slightly as it becomes parallel with one of the major axes:

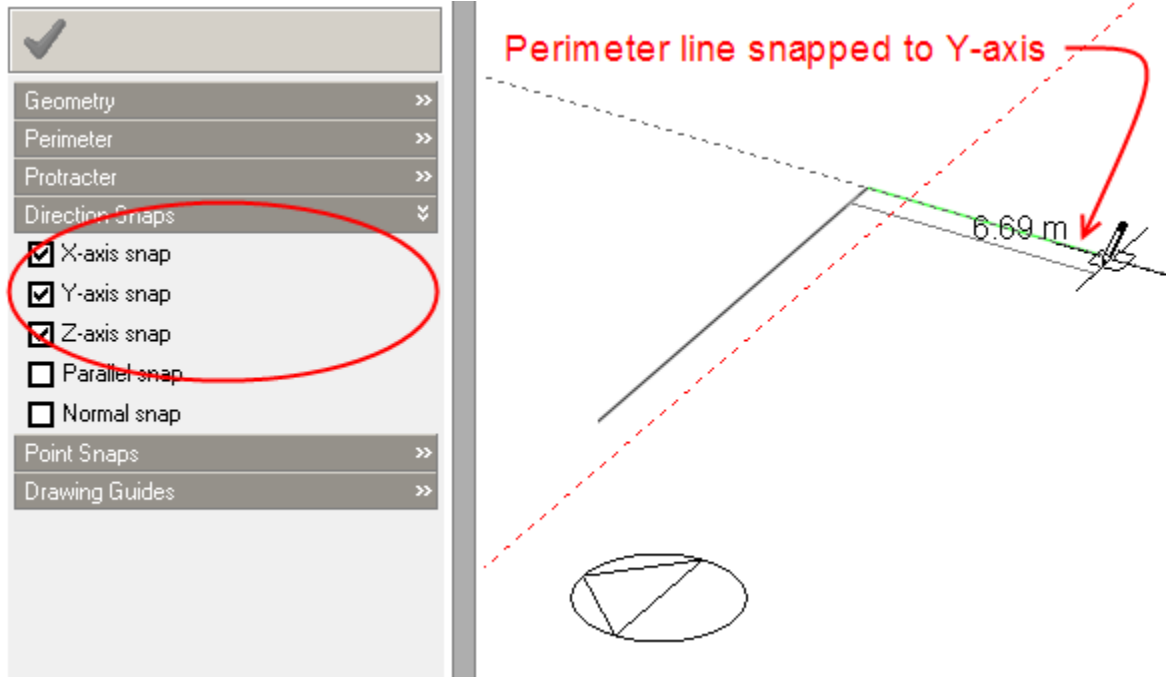


You can use axis snap to draw block perimeters on planes of any orientation. If the plane is non-horizontal, the axis snap applies to the local coordinate system of the plane as if it were rotated to the horizontal:

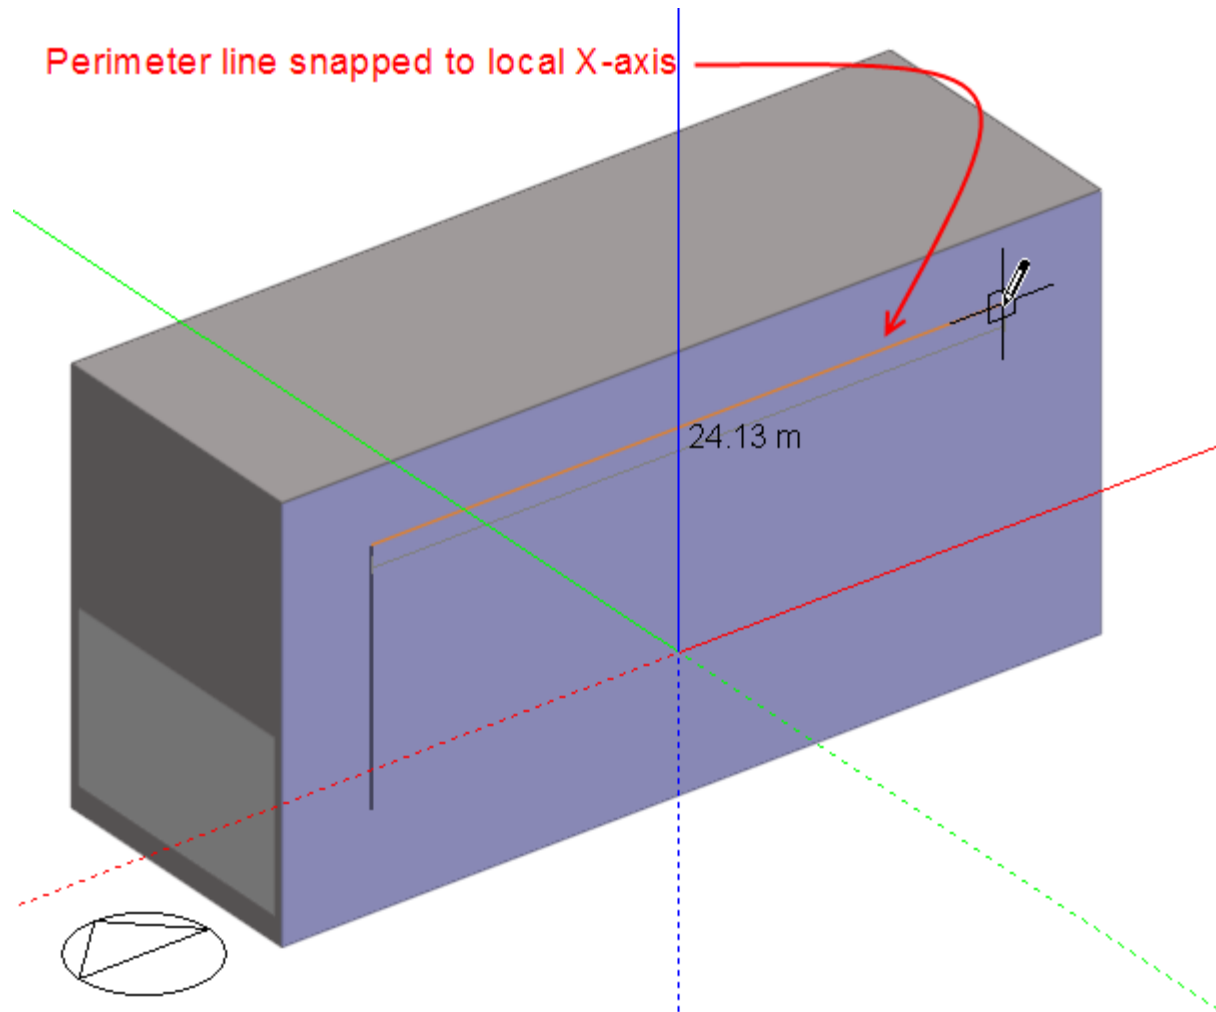


If the axis snap is operating on a horizontal plane, the perimeter line will change colour to red if the line is snapped to the X-axis or green if it's snapped to the Y-axis. However if the active drawing plane is not horizontal, the line will change colour to orange for the X-axis and purple for the Y-axis.

At the building level, when the active drawing plane is horizontal, you can also snap block perimeters and construction lines to the Z-axis:

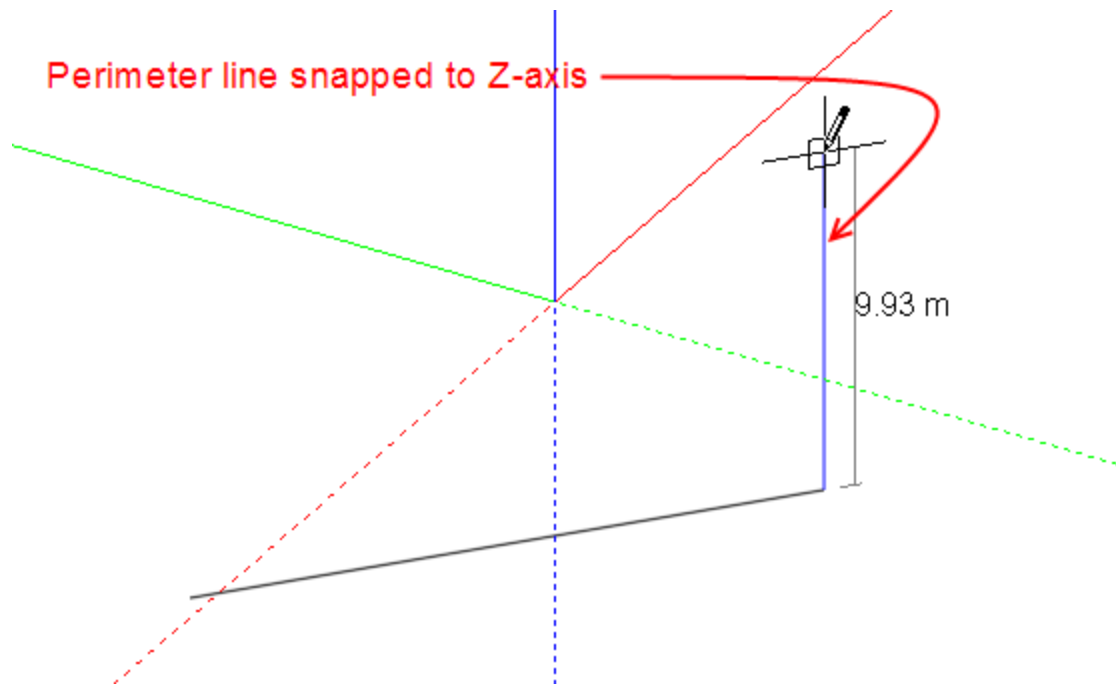


which allows you to draw horizontally extruded blocks, this process is explained under [Adding Blocks](#)

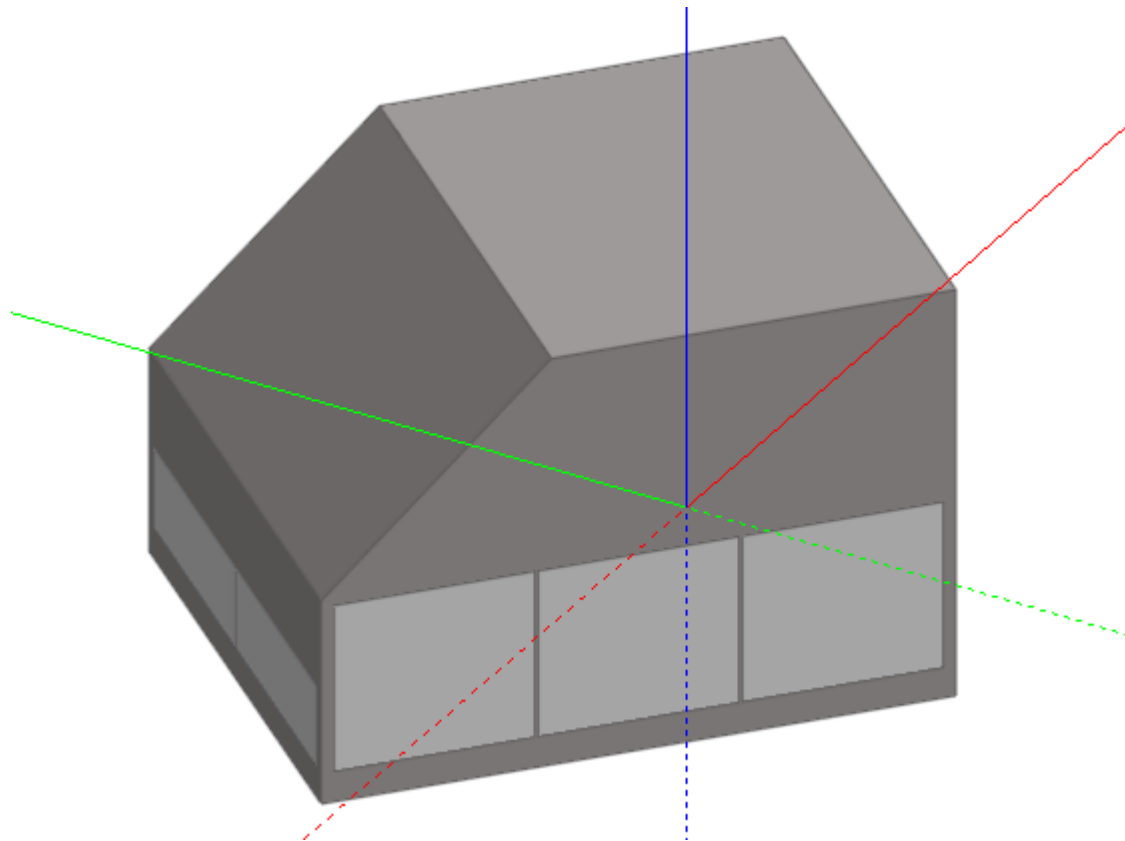


3.2.3.1.2 Parallel snap

The parallel snap is used draw lines parallel with the edges of existing objects. The parallel snap check box is displayed under 'Direction snaps' in the 'Drawing Options' data panel when the various drawing commands are active. To draw a block perimeter line to be parallel with an existing block edge, switch the parallel snap on and move the mouse cursor to touch the edge with which the current perimeter line is to be parallel:

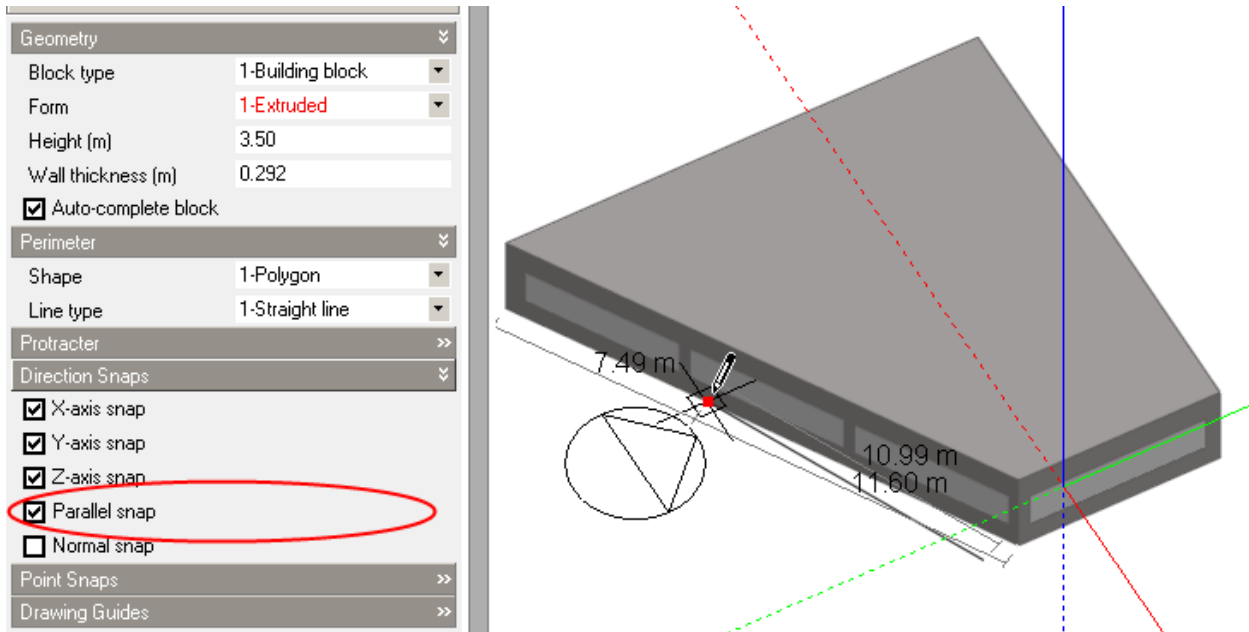


This will enable the active perimeter line to infer a direction from the selected edge and you can lock this inference by pressing the SHIFT key to prevent a parallel inference being picked up from an unwanted edge. So press the SHIFT key and move the mouse cursor to a position approximately parallel with the edge, the cursor will 'stick' when the parallel snap operates and the perimeter line will change colour to cyan:

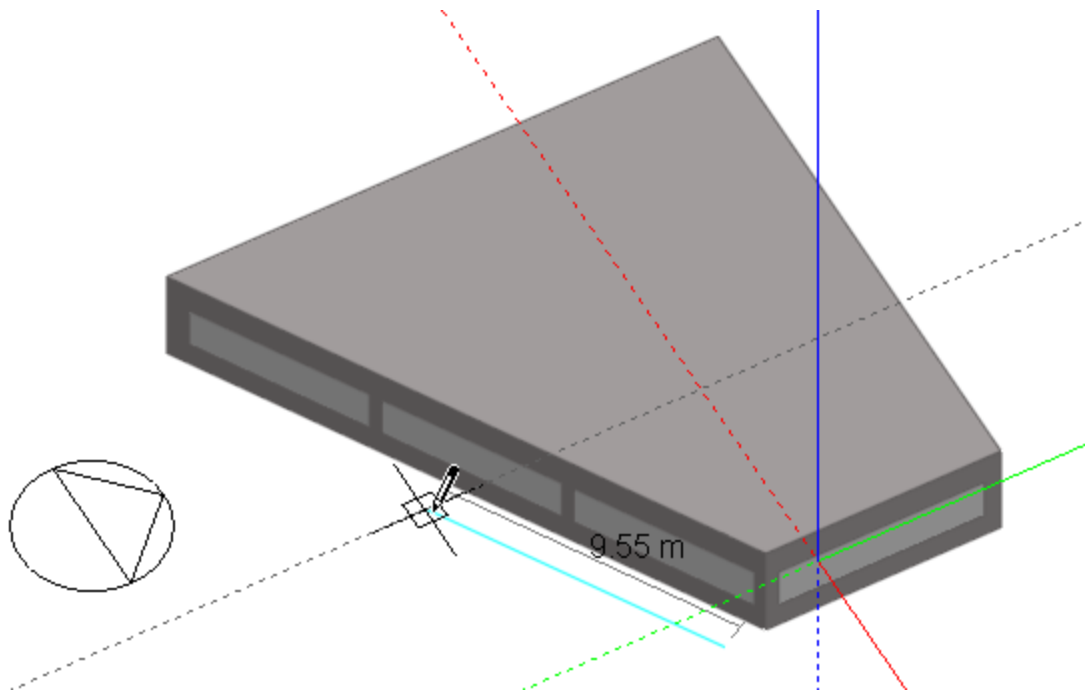


When the parallel snap is in operation, intersections are automatically calculated with [drawing guides](#) to allow the two to be combined, so you can snap to the intersection of the two.

3.2.3.1.3 Normal snap


The normal snap is used to draw lines perpendicular to the edges of existing objects. The normal snap check box is displayed under 'Direction snaps' in the 'Drawing Options' data panel when the various drawing commands are active. When the normal snap is switched on and you draw a line string, each line will automatically snap to be perpendicular with its predecessor if it exists:

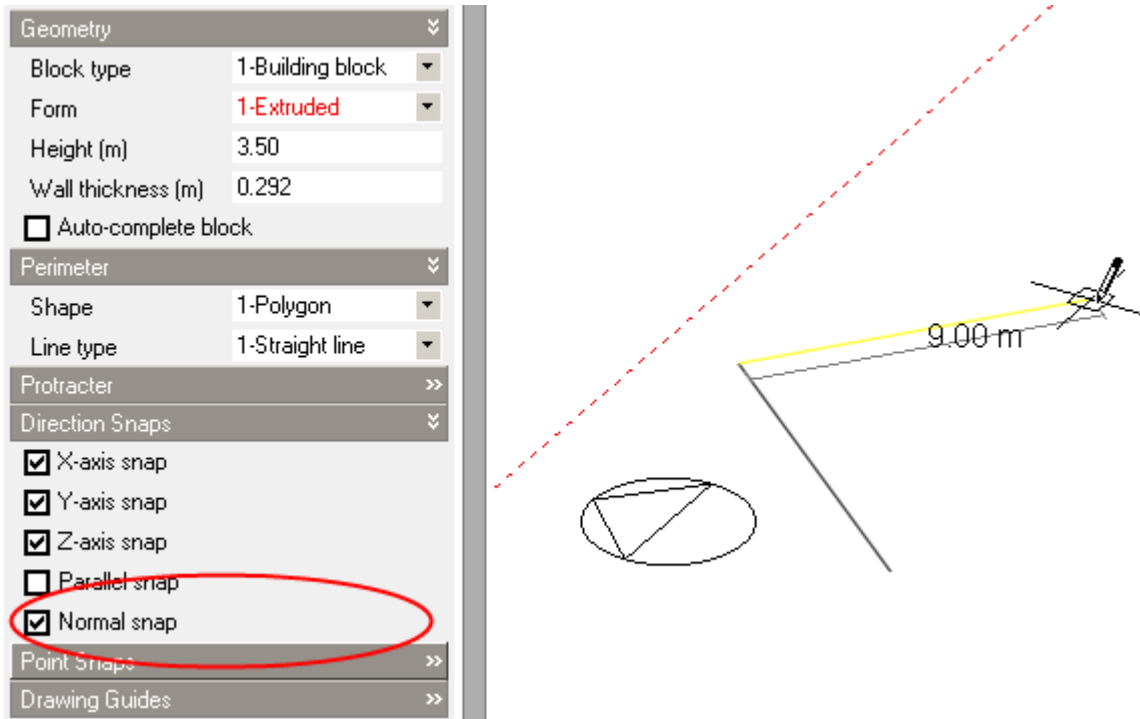


To draw a block perimeter line to be perpendicular with the edge of an existing block, move the mouse cursor to touch the edge and then move it to be approximately perpendicular to it, the cursor will automatically snap to a line which is exactly perpendicular.

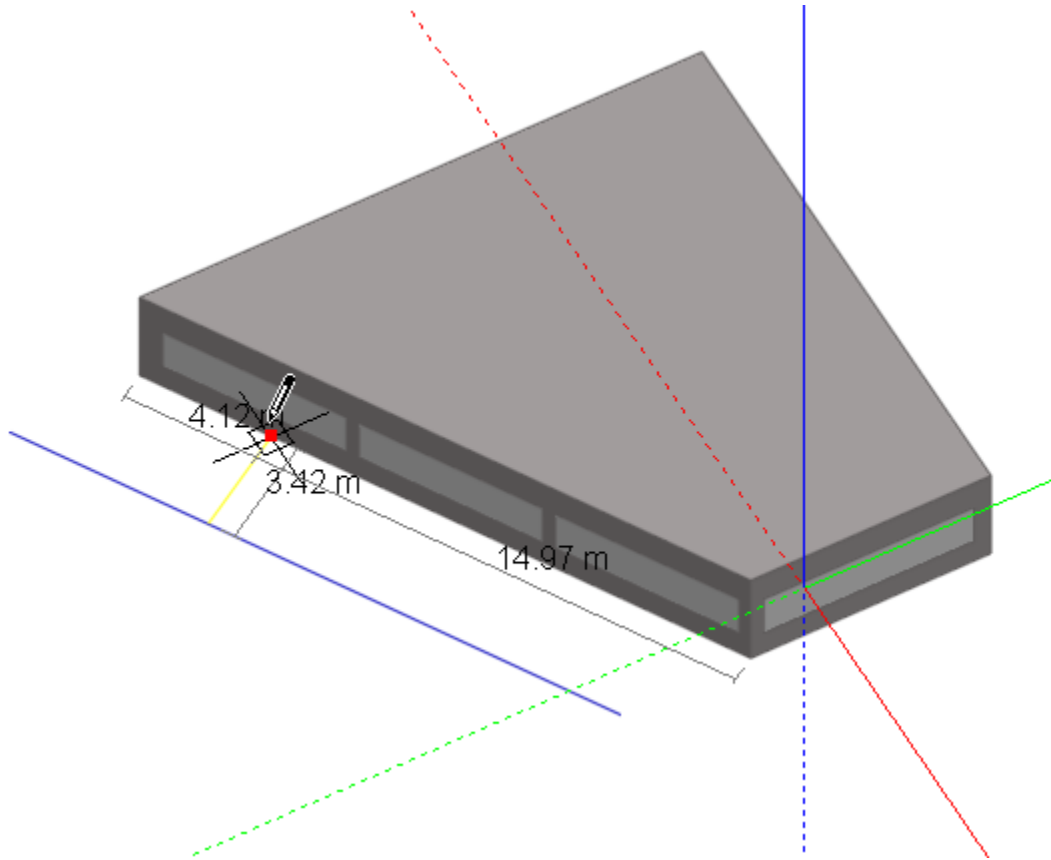


You can lock the perpendicular snap by pressing the SHIFT key which will prevent the cursor from picking up an unwanted direction inference. In this case, a construction line has been placed [parallel](#) with the block edge to help in positioning the new block. The perimeter line locks to a perpendicular from the construction line:

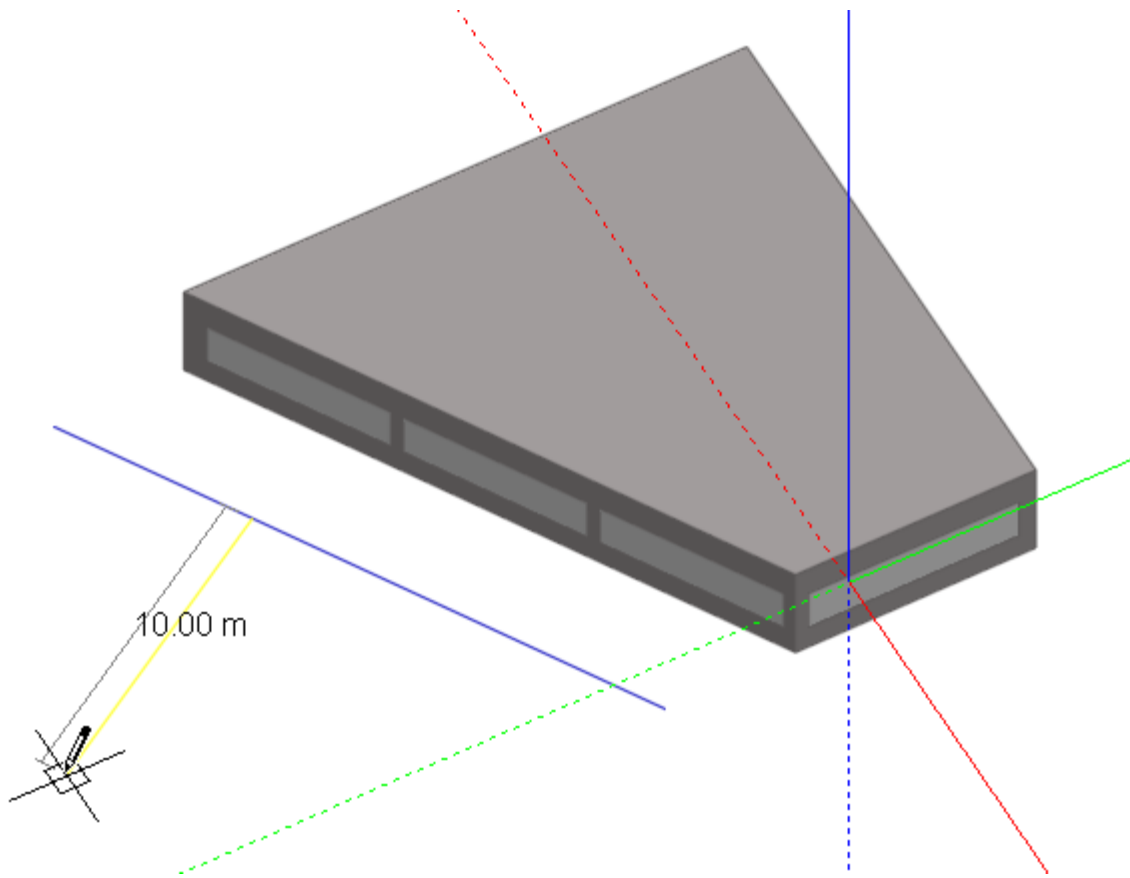

When the normal snap is in operation, intersections are automatically calculated with [drawing guides](#), allowing you to snap to the intersection:

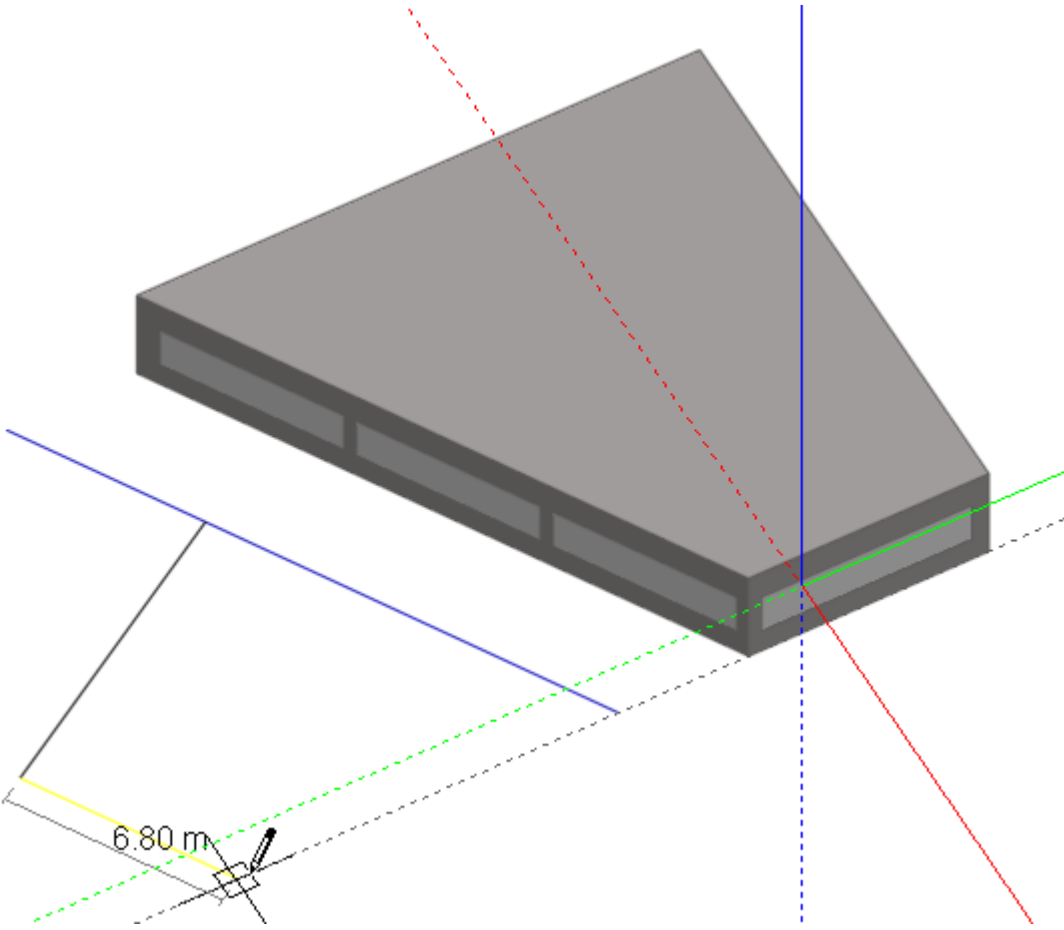

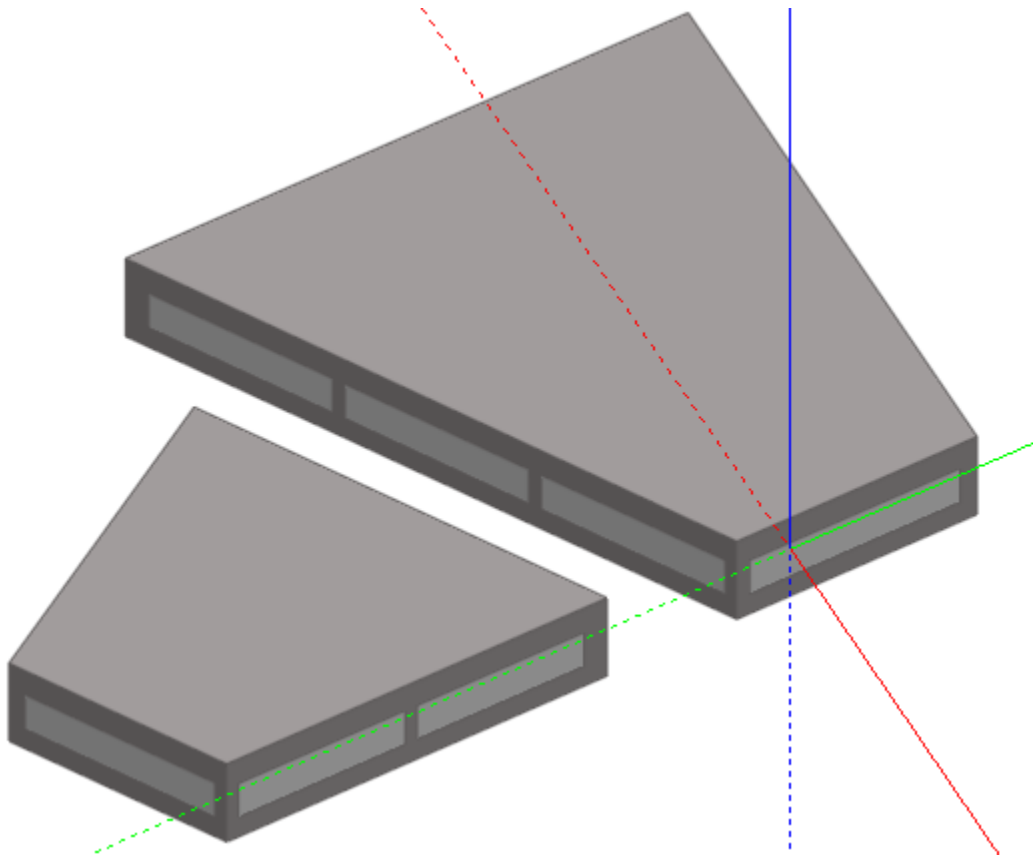


3.2.3.1.4 Offset Snap

The offset snap is used to draw [partitions](#) and [voids](#) parallel to existing walls and partitions at a fixed offset distance. This help topic describes the use of offset snap for drawing partitions, but the information is equally applicable to drawing voids at a fixed offset from the perimeter.


The offset snap check box is displayed under [Direction snaps](#) in the **Drawing Options** data panel when the [Draw partitions](#) command is active.

The offset snap can be used whenever a string of partitions is to be located at a fixed offset from a perimeter, but can be specifically applied to dividing large open plan spaces up into 'perimeter' and 'core' zones for thermal simulation.


When the offset snap is switched on, an additional **Distance** item will be displayed under the offset snap check box which allows you to define the offset distance. When you first switch on the offset snap, having clicked on the [Draw partition](#) icon, you will see offset snap indicators displayed as you move the cursor within the snap range of an existing wall or partition:

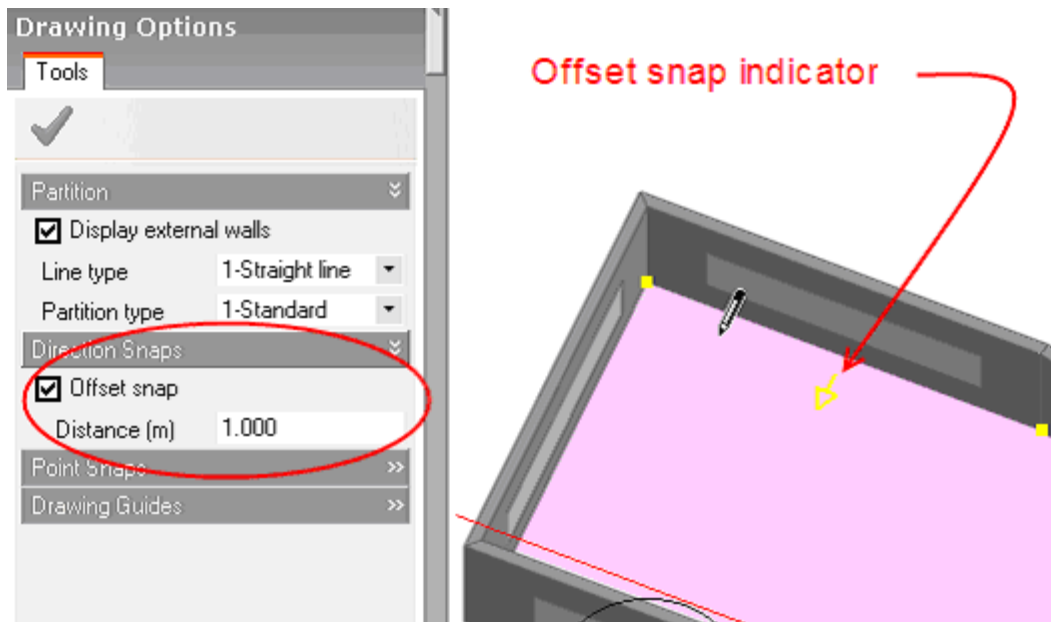


The offset snap works in conjunction with the other snaps and so, for example, you can start an offset partition at a fixed distance from the beginning of an existing wall using the [edge snap](#) in combination with the [increment snap](#):

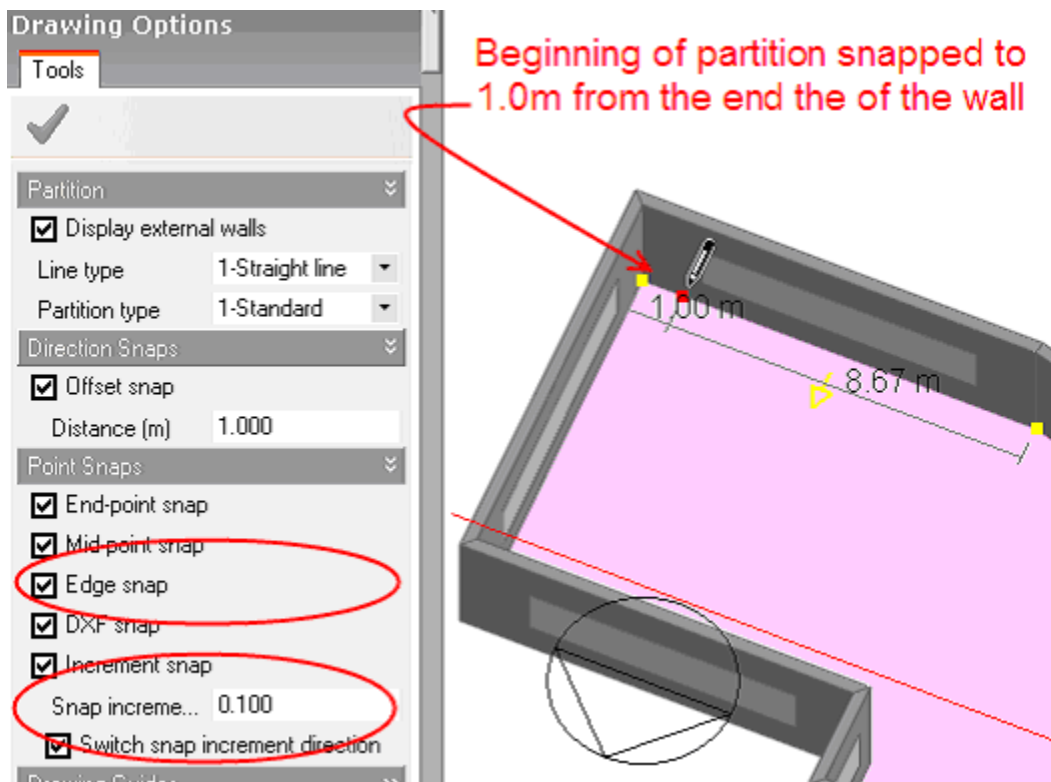


After placing the beginning of the partition, the 'rubber-banded' partition will be automatically snapped to the offset from the selected wall and as you move the cursor to the next connected wall segment, the offset snap indicator will appear again:

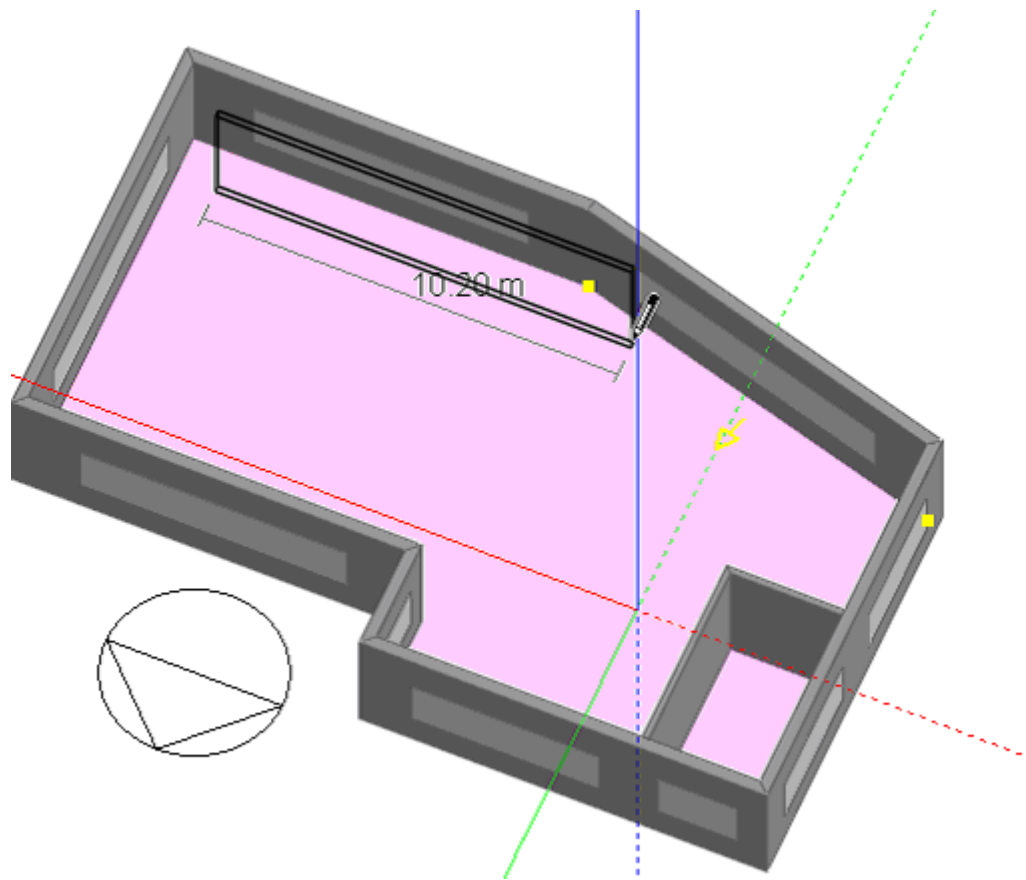

As you move the cursor, you will see that the offset snap interacts with other snaps allowing you to position partitions accurately. If you find that the other snaps are interfering with the offset snap, you can switch them off by pressing the SHIFT key.

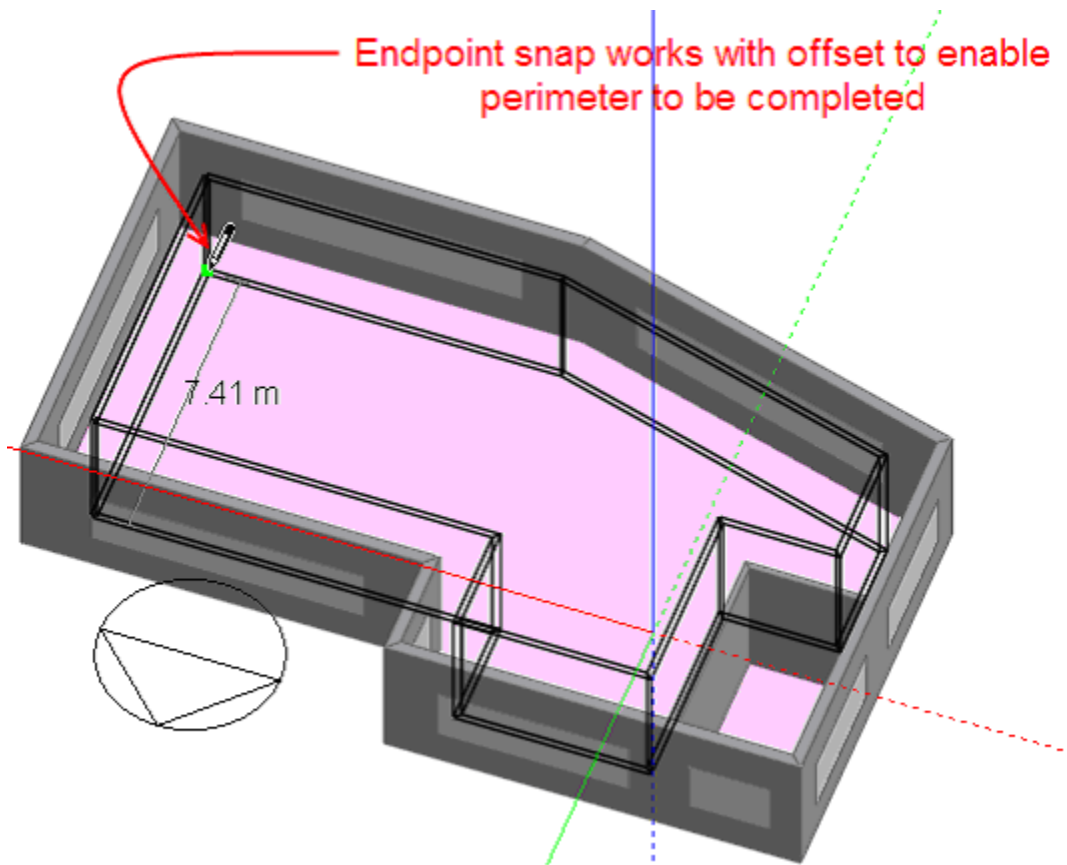

Completed perimeter:

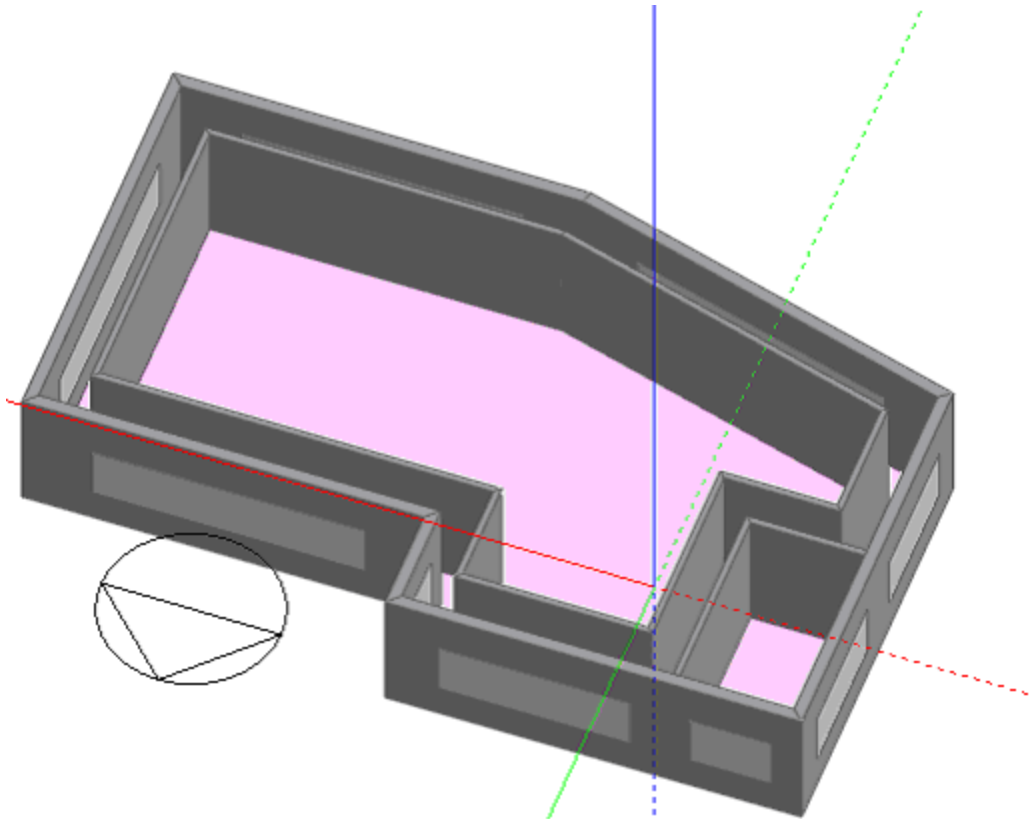

3.2.3.2 Point Snaps

When the various point snaps are switched on, a coloured indicator is displayed when the mouse cursor is close to a key-point on an existing element allowing a perimeter or partition line end-point to be positioned precisely at the selected key-point. The following point snaps are available:

- [end-point snap](#)
- [mid-point snap](#)
- [Edge snap](#)
- [DXF snap](#)
- [Increments snap](#)


Note: In some cases Snaps can interfere with attempts to draw to a particular point and in this case you can temporarily switch off the appropriate Snap(s) using the check boxes in the Drawing Options panel in the bottom left of the screen.

3.2.3.2.1 End-point Snap


This snap allows you to snap lines to the end-point of an existing edge. A green indicator is displayed when the mouse cursor is within the snap range of an end-point:

For example, to snap the starting point of a new block perimeter to the end-point of an existing block

edge, move the mouse cursor onto the background and press SHIFT to lock the drawing plane to the ground plane. Keep the SHIFT key pressed and move the mouse cursor close to the required edge marker to activate the end-point snap:

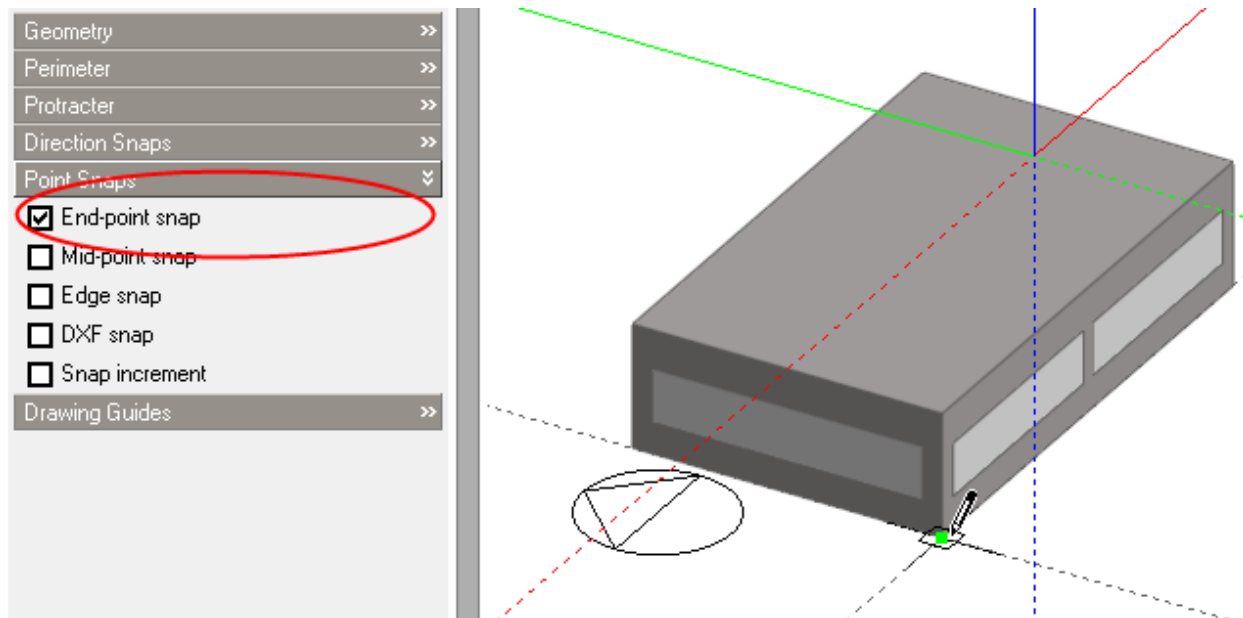

Similarly to snap the starting point of a new block partition to the end-point of an existing partition, make sure that the 'End-point' snap is switched on and move the mouse cursor close to the partition end-point to activate the snap:

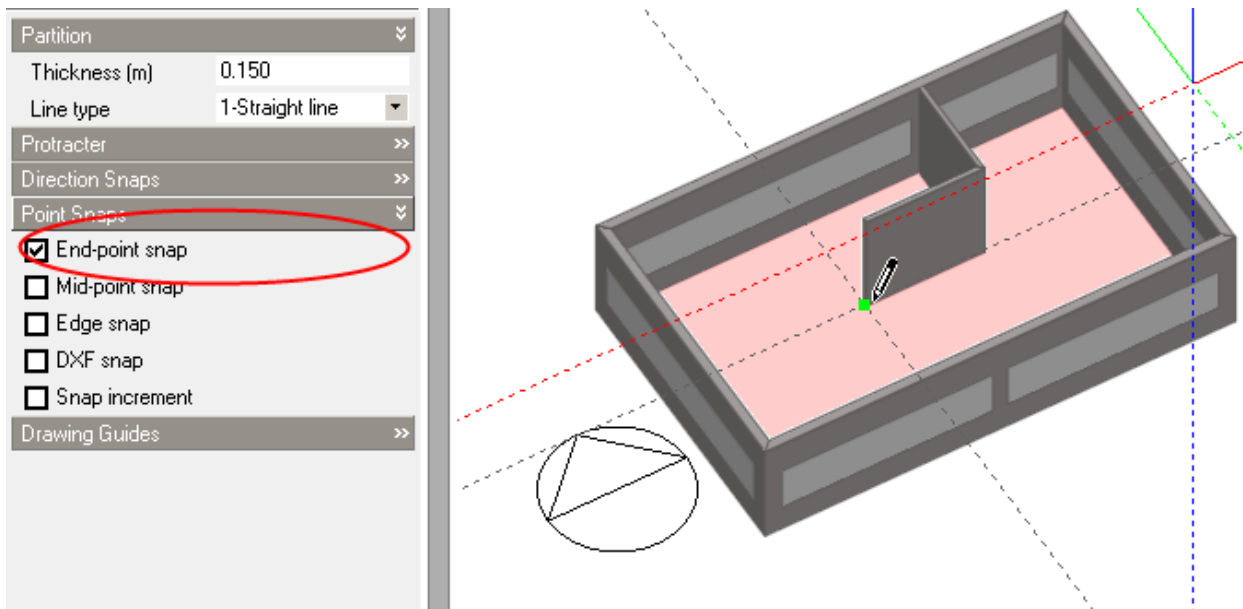


3.2.3.2.2 Mid-point Snap



For details of using the 'Mid-point' snap, please refer to the [End-point](#) snap.

3.2.3.2.3 Edge Snap



The edge snap allows you to snap to any point on the edge of an existing object. The edge snap can be used in conjunction with the increment snap to enable a point to be located along an edge by moving it in defined increments. A red indicator is displayed when the mouse cursor is within the snap range of an edge and distance indicators are also displayed to help in locating a point a specific distance from either end of the edge:

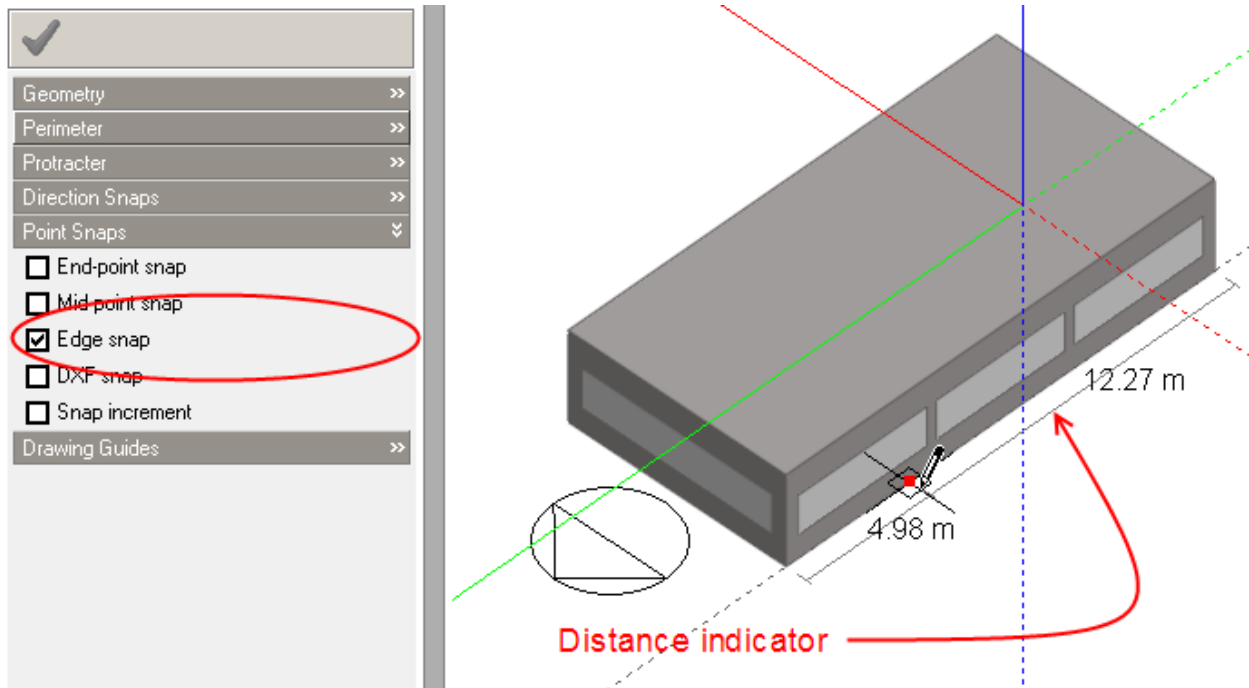

By switching the increment snap on, the point can be moved along the edge in defined increments. For example, if you wanted to start a block perimeter line at 6.0 metres from the end of the block, after switching on the increment snap, you could set the snap increment to say 0.5m and then move the mouse cursor to snap to the edge at a distance of 6.0 metres from the end-point:

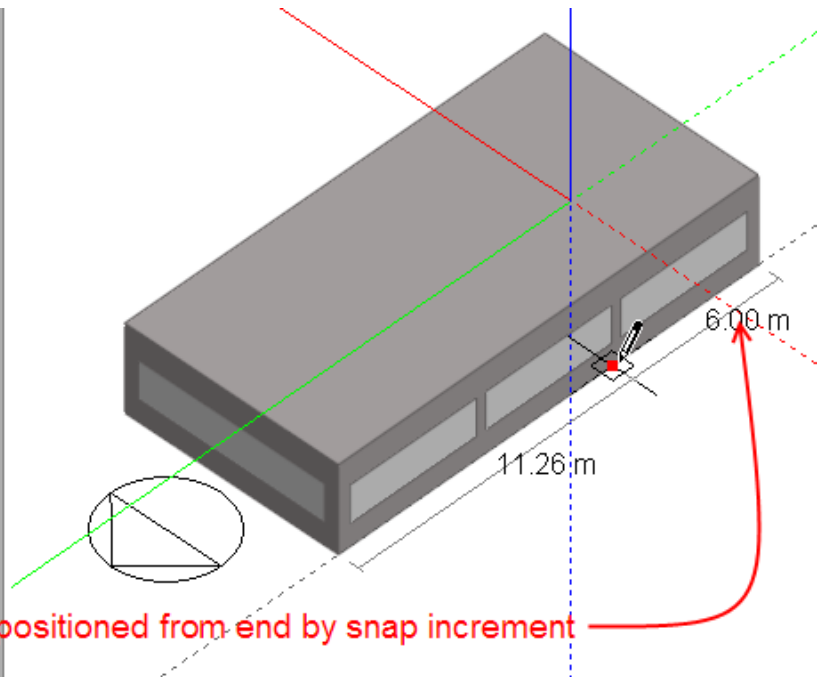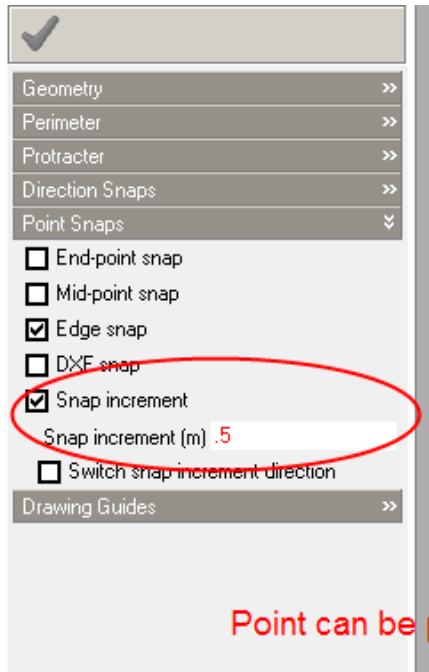


If you wanted to locate the beginning of the perimeter line at a specific distance from the other end of the edge, you can switch the end of the edge from which the increment snap operates by toggling the 'Switch snap increment direction' switch:

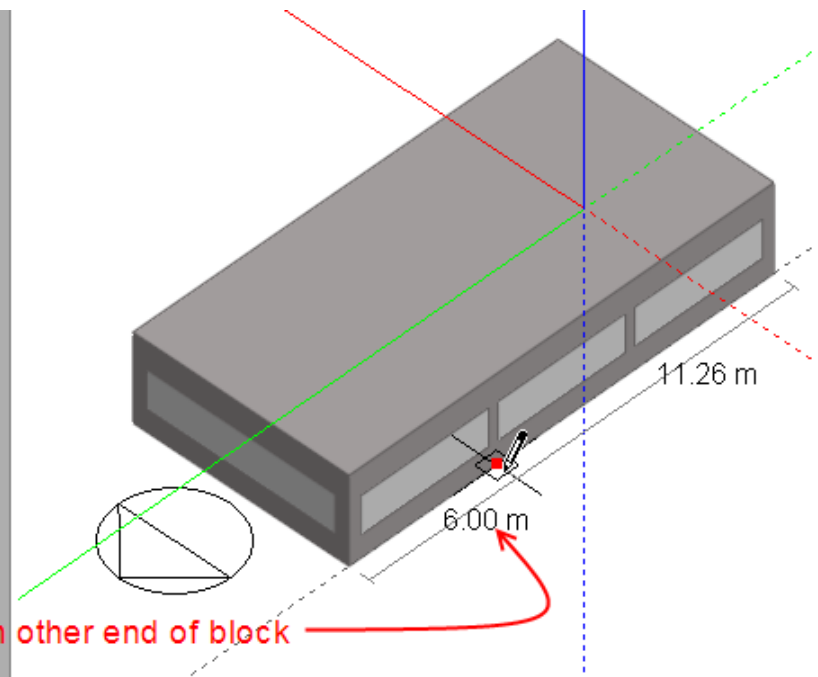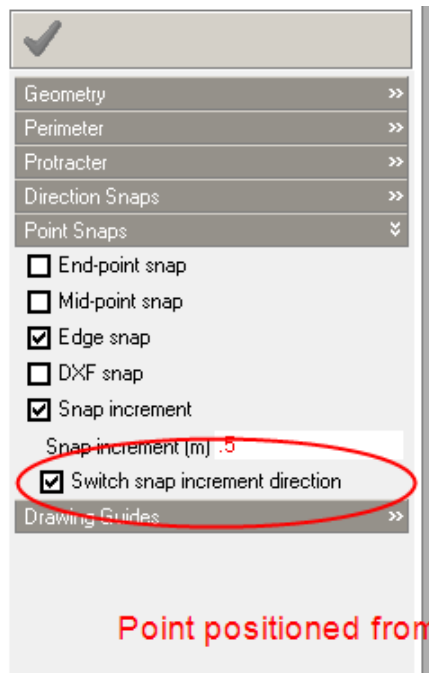

3.2.3.2.4 DXF Snap

The DXF snap only applies when [DXF data](#) has been imported from an external file. The DXF snap enables you to snap to the end-points of DXF lines:

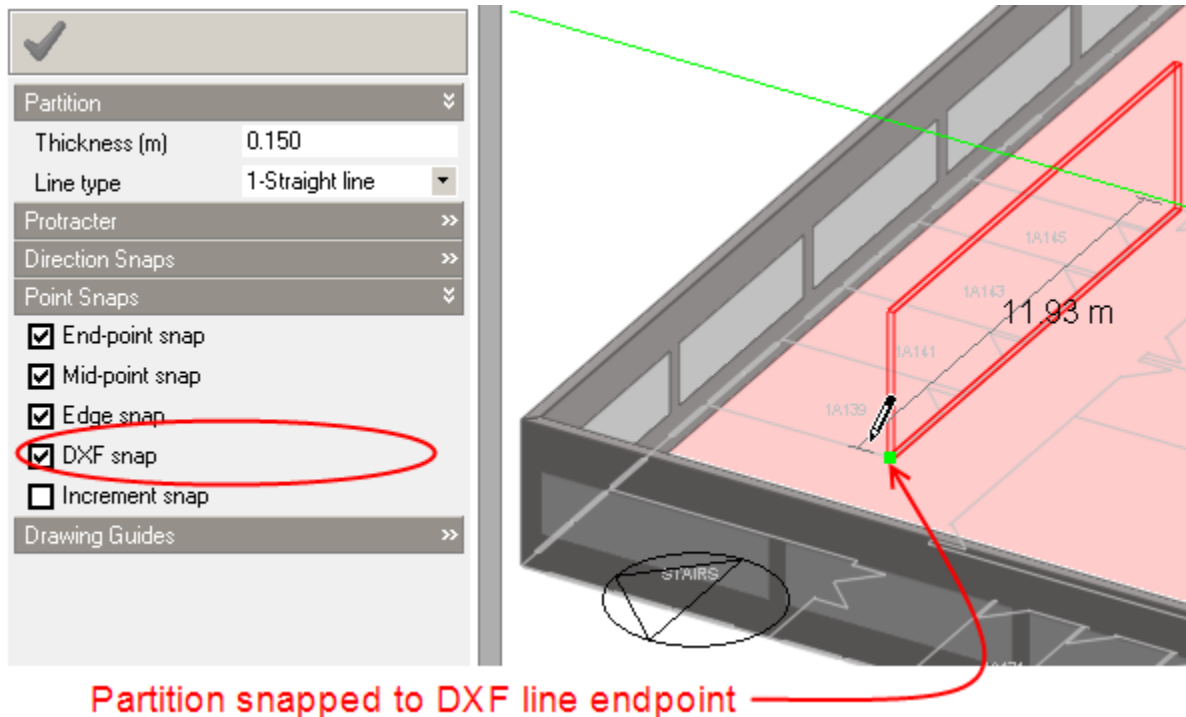


Note: You should generally switch DXF snap off when drawing partitions at block level and simply use the DXF lines as a visual guide. This ensures that partitions correctly snap to perimeters instead of snapping to DXF lines which may be very close to the perimeter but not actually touching.

3.2.3.2.5 Increment Snap


The increment snap applies to any process that involves moving a point or a surface in a particular direction. Such processes include drawing block partitions or perimeter lines which have an active [direction snap](#) or dragging the surface of a block normal to the original surface position. The increment snap allows you to move a point in a particular direction by defined increments. You can think of the increment snap acting in the same way as a conventional CAD drawing grid and in fact if you were just to use the axis snaps it would have the same effect, however the increment snap is more powerful in that it provides this type of incremental snap along any defined vector not just the axis vectors.

The increment snap may be particularly useful during early stage design when you want to place geometry with reasonable accuracy but don't want to be constantly keying-in distances.

Note: the increment snap will only come into operation when you are drawing a line or moving a surface along a defined vector. For example if you are drawing a block perimeter parallel with an existing block edge, the increment snap will operate when the parallel snap is active and in this case you would be able to move the mouse cursor along the parallel vector in increments of 0.5m:

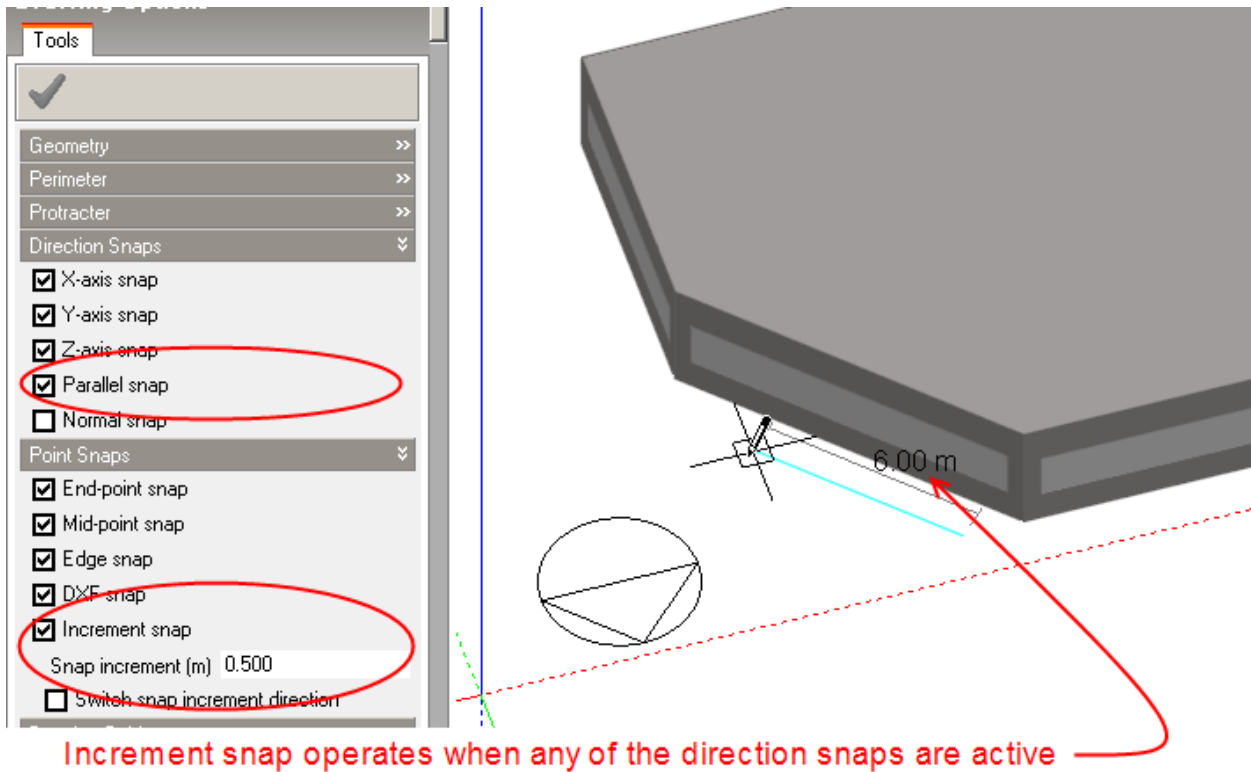


The increment snap also works in conjunction with the [Protractor](#):

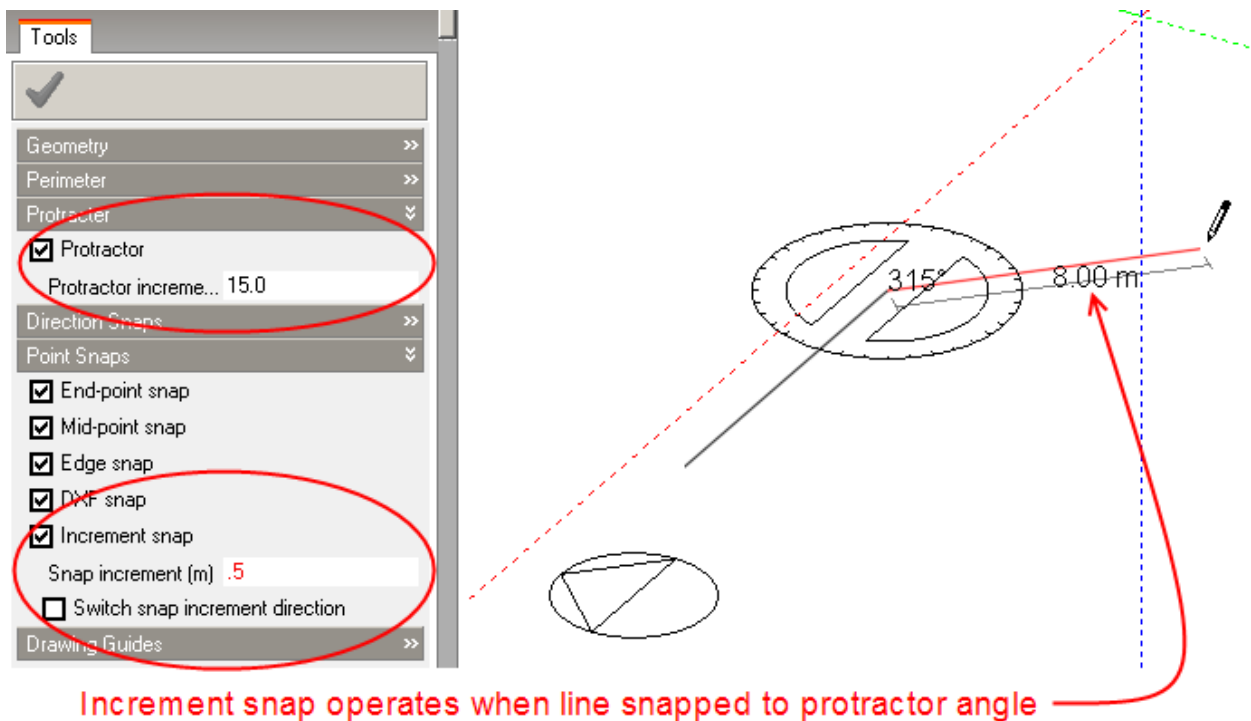

You can use the increment snap to control the location of block faces when you extrude a block on

creation or drag faces during an [edit](#) or [stretch](#) operation:

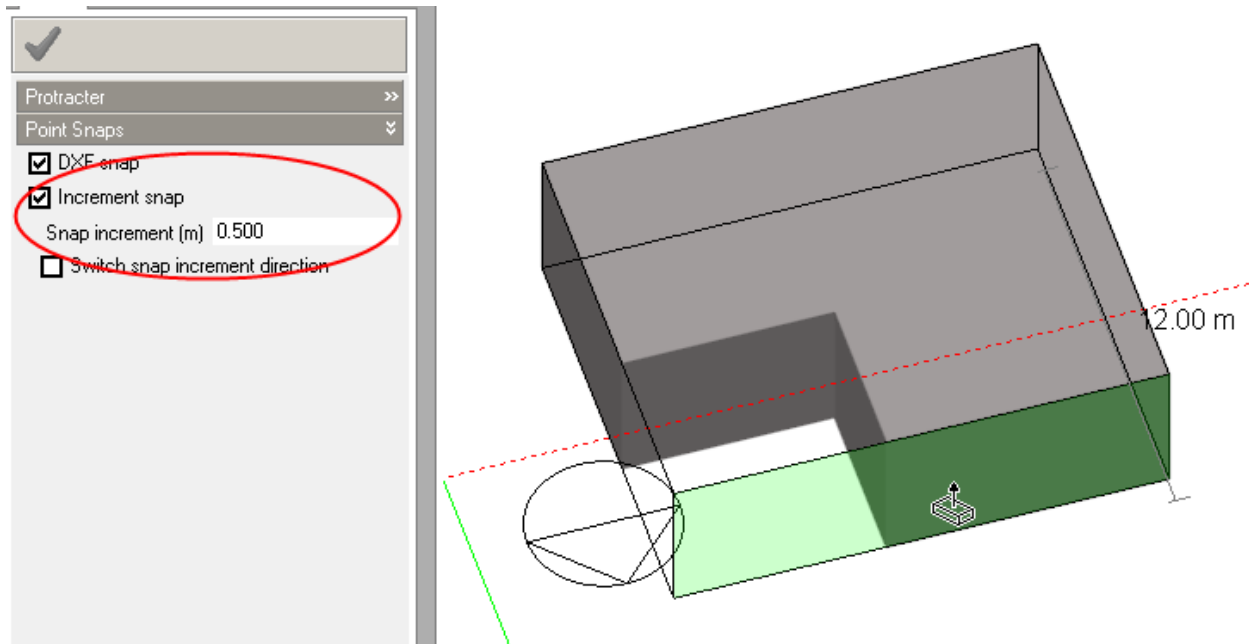

The increment snap also comes into operation when an edge snap is active, allowing you to snap to the edge by increments from either end, please see [edge snap](#) for details.


Switch snap increment direction

Increment snap provides increments between the 2 end points of the reference line and increments can only be generated from one end point at a time. You can reverse the direction so that increments are generated from the other end of the reference line by checking the **Switch snap increment direction** drawing option. This option is found immediately below the Increment snap option (screenshot above).


3.2.3.3 Drawing Guides

Drawing guides are invisible lines that are automatically generated as soon as a drawing plane becomes active during a drawing operation. Drawing guides are parallel with the active drawing plane X and Y axes and run through all end-points and mid-points of existing object edges, which lie in the same plane as the drawing plane. As you move the cursor in the vicinity of a drawing guide, it will become visible and you can then snap the cursor to any point on the guide. When drawing guides are used in conjunction with [Direction Snaps](#) or the [Protractor](#) they offer a powerful mechanism for locating perimeter lines in relation to existing object edges.


For example to create a triangular window in a surface with the same height as an existing opening, first click on the [Draw window](#) tool and check that the perimeter shape is set to 'Polygon', switch the protractor on and then move the cursor to align approximately with the lower edge of the existing window which will automatically snap the cursor to the required drawing guide:

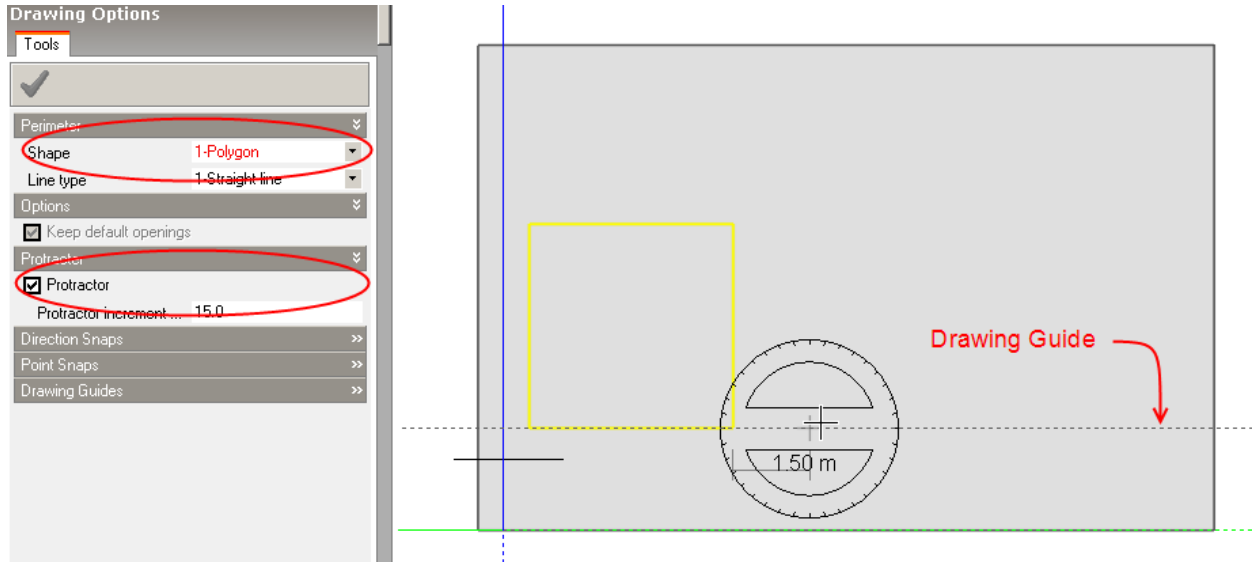


Click to place the window origin and move the cursor to snap to the drawing guide associated with the existing window upper edge, the protractor angle lock will automatically combine with the drawing guide:

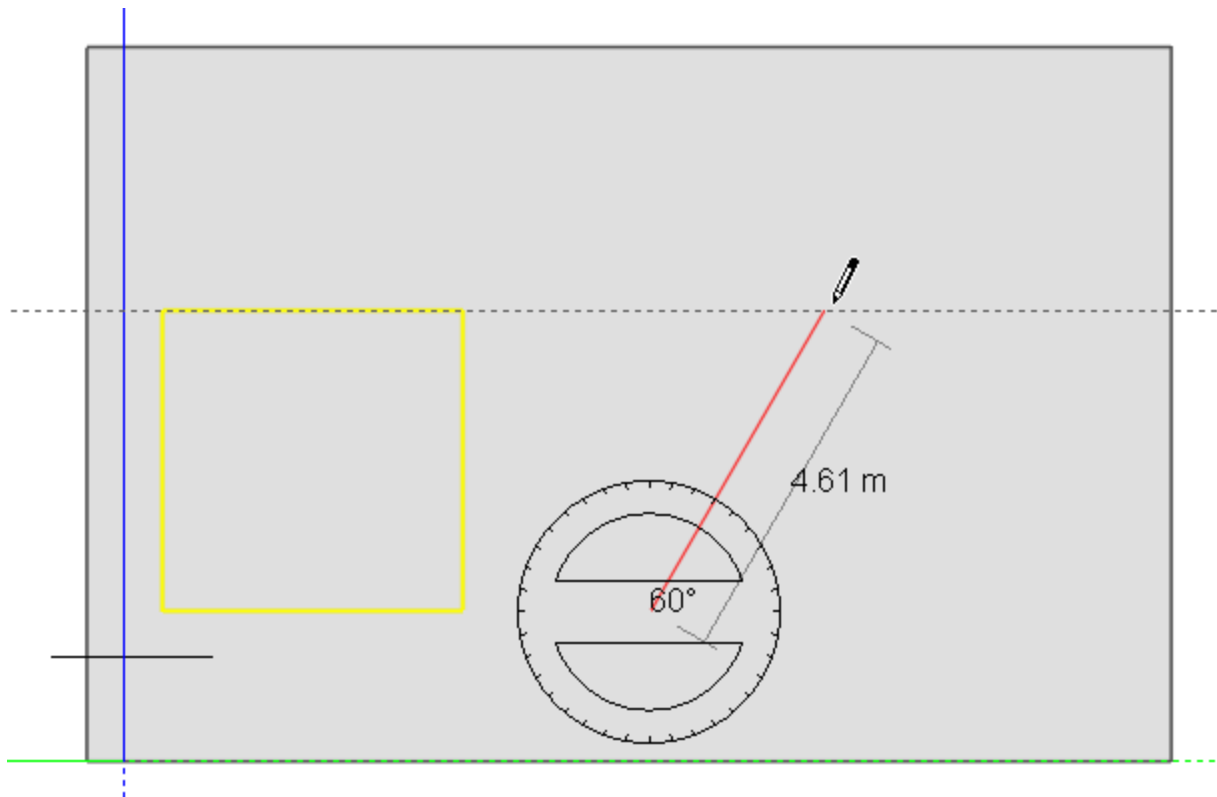

Click to place the apex of the window and then place the next point in a similar fashion:

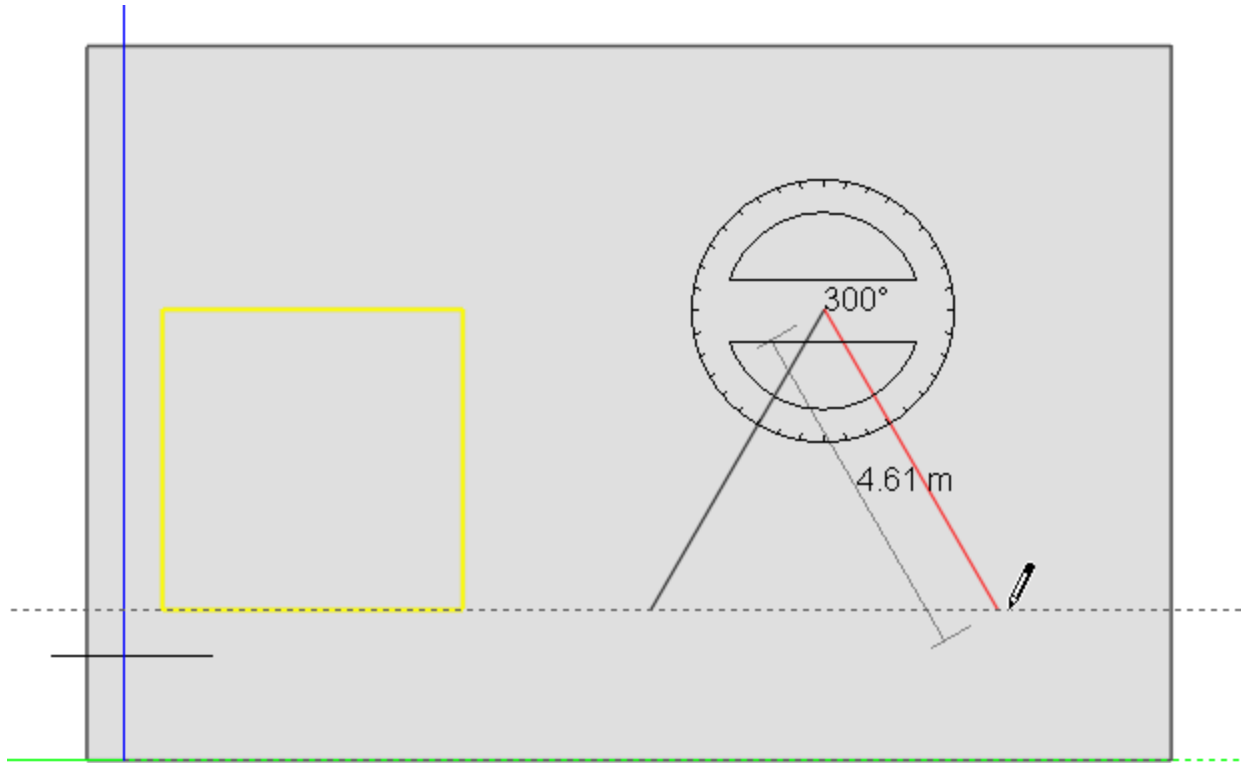

Completing the window perimeter:

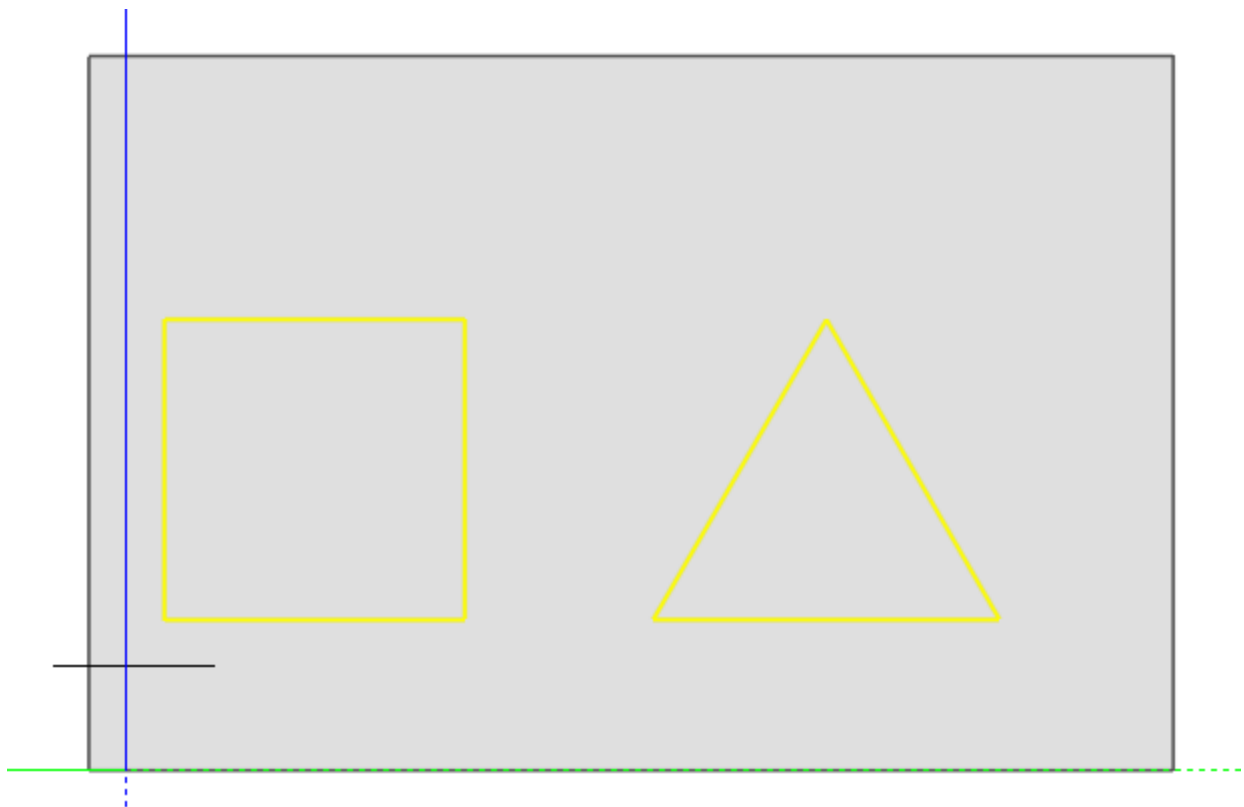


Note: In some cases Drawing guides can interfere with attempts to draw to a particular point and in this


case you can temporarily switch off Drawing guides using the check boxes in the Drawing Options panel in the bottom left of the screen.

3.2.3.4 Protractor Tool


The protractor tool is used to draw perimeter lines and partitions at specified angles in relation to the current drawing plane. The protractor can be activated from the 'Drawing options' data panel, which is displayed when any of the drawing tools are used. For example, to create an offshoot projecting from an existing block with a roof slope of 30°, move the cursor over the existing block surface, press the SHIFT key to lock the drawing plane and draw the first perimeter line, snapping to the base edge using [end-point snap](#):

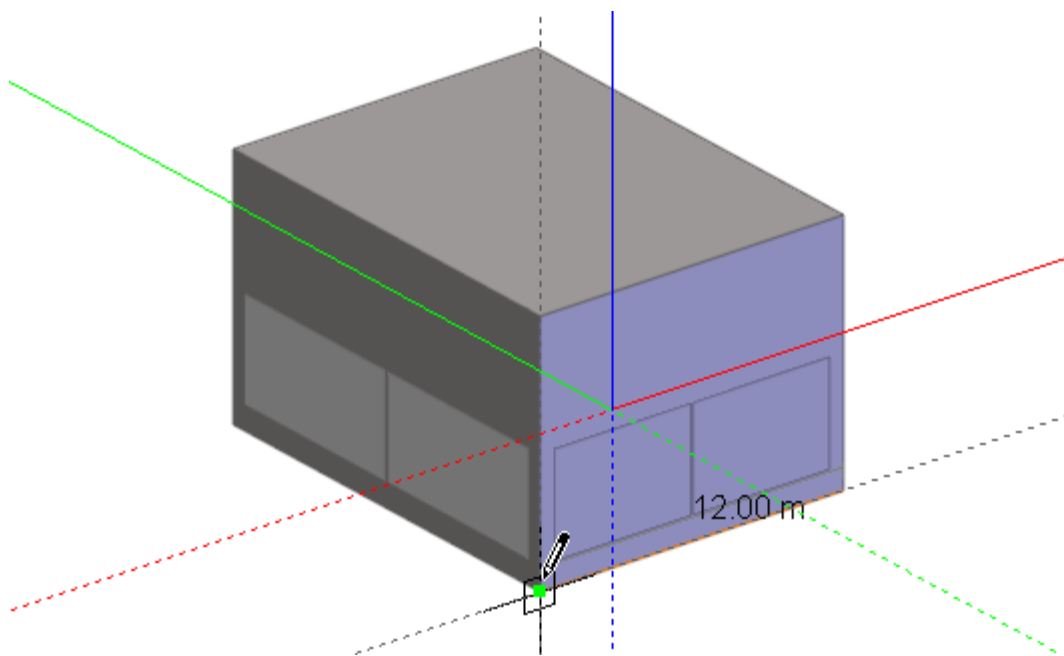


Draw the second perimeter line to connect to the mid-point of the block edge and then activate the protractor:

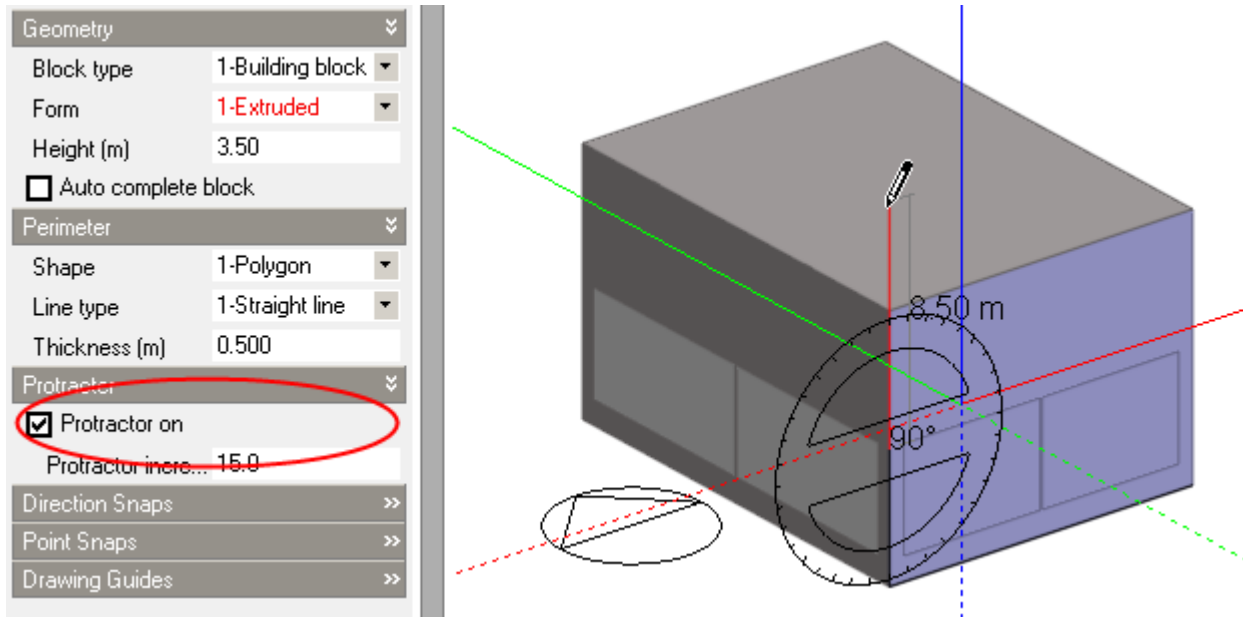


The protractor will automatically snap to the current drawing plane and as you move the mouse cursor, the perimeter line will snap to the protractor in angular increments, which can be set in the 'Drawing options' data panel. The rotation angle is displayed at the centre of the protractor. Move the cursor until the displayed angle is 30° and then move the snapped line towards the upper block edge. When the line end-point nears the edge, it will 'stick' to the edge and the [edge snap](#) marker will be displayed:

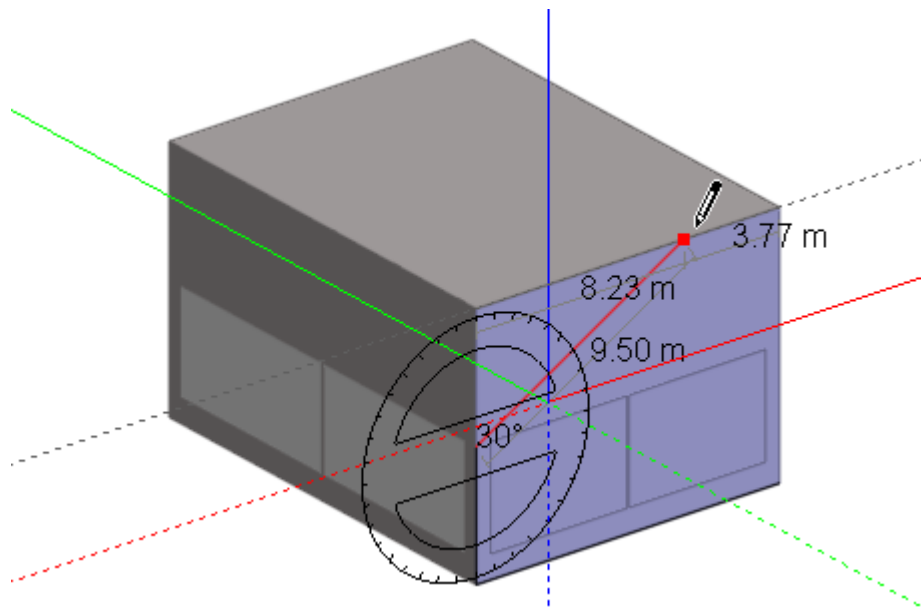

Click to accept the point and complete the perimeter by snapping to the block face vertices using the [end-point](#) snap:

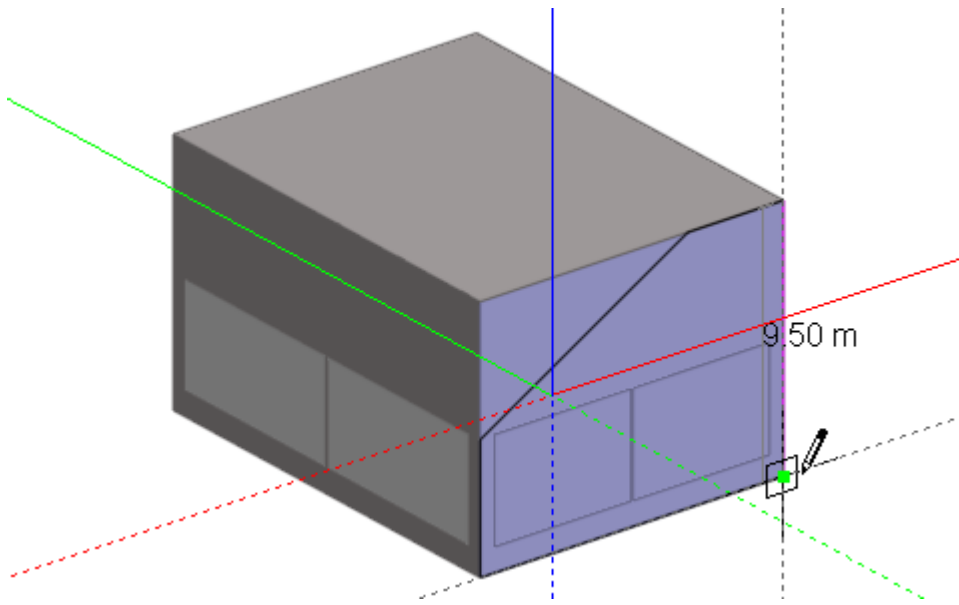

Drag the perimeter to complete the offshoot:

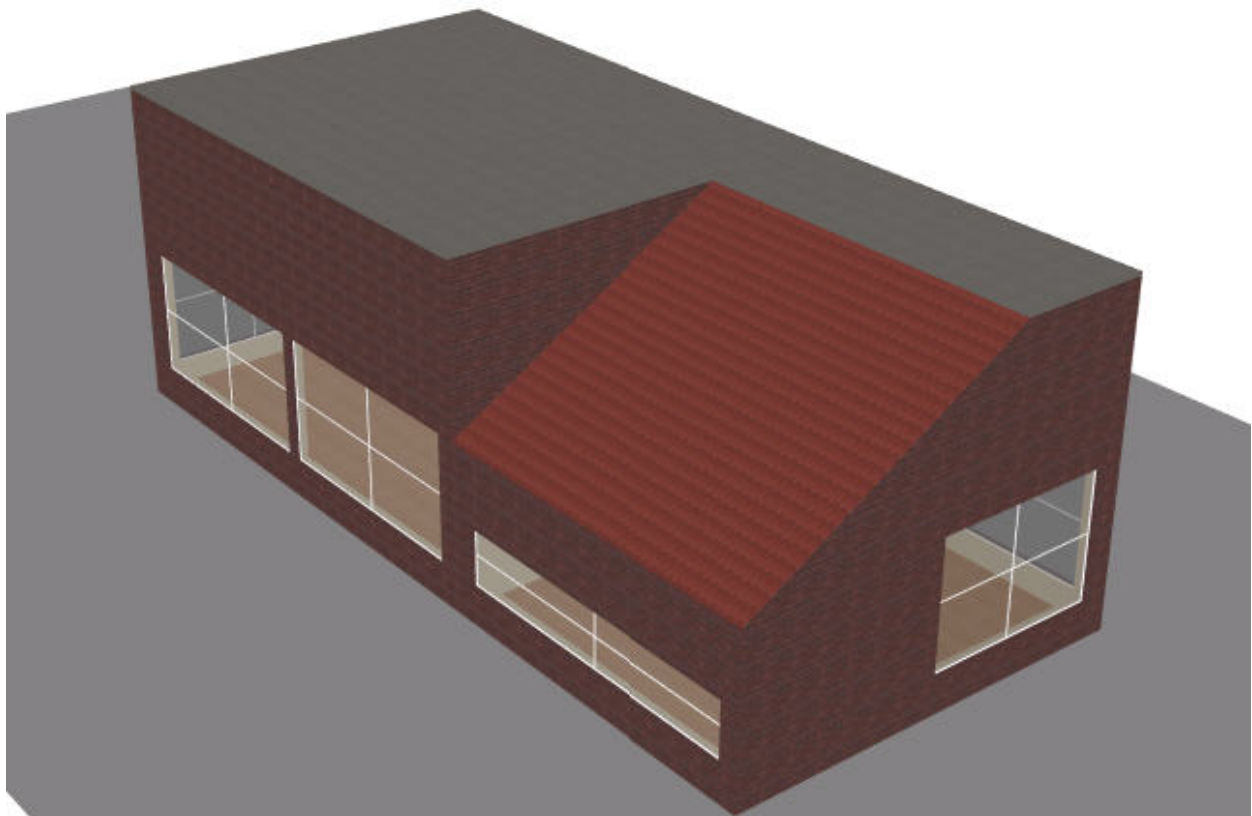


3.2.4 Construction Lines

Construction lines can be used to help in the creation of precise geometry. You can draw construction lines using the [snaps and the protractor](#) to lie at defined locations and then use these lines as a framework from which or to which various object geometries can be projected or attached. At the building level, construction lines can also be snapped to the Z-axis to form vertical planes from which block geometry can be extruded.


3.2.4.1 Drawing Construction Lines




Construction lines are drawn in the form of line strings. To draw a construction line, click on the 'Place construction line' tool and start drawing the first line by clicking anywhere in the active drawing plane then move the mouse cursor and click to place the line end-point, you can use [point](#) snaps, [direction](#) snaps, [drawing guides](#) and the [protractor](#) to help with alignment. Continue placing construction lines in this way. If at any time you want to cancel the last line that you placed, you can press the ESC key or select 'Undo last point' from the right-click menu.

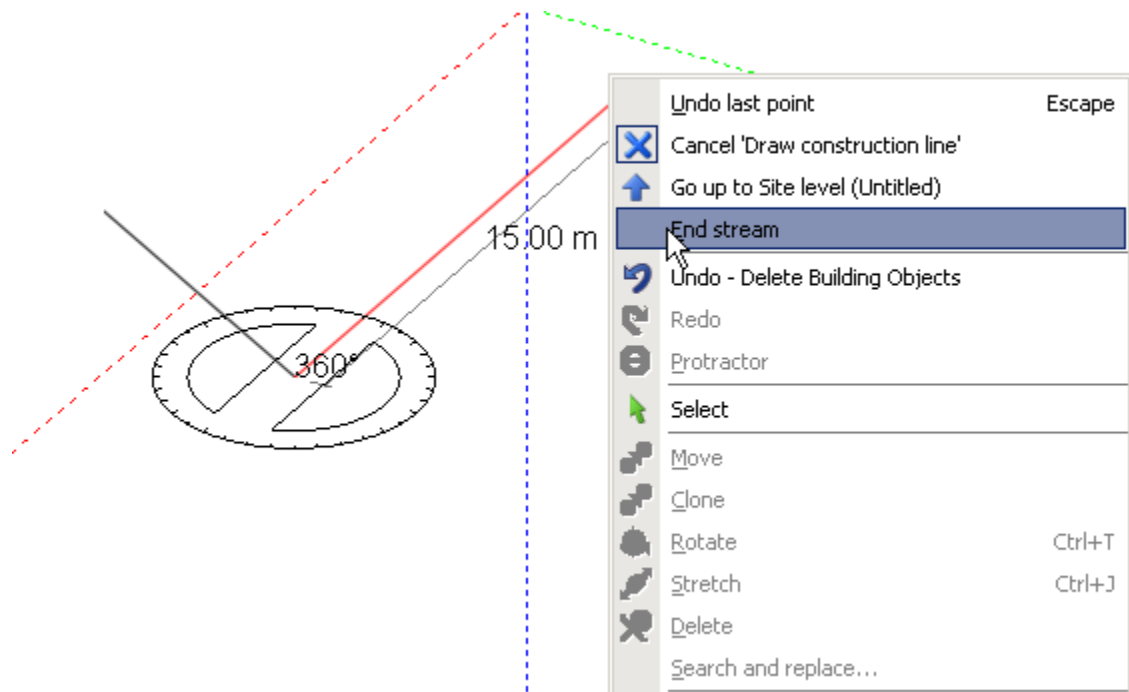


Construction lines have numerous applications in forming temporary attachment points during the creation of precise geometry. As a simple example, if you want to place a block at a precise distance from the angled wall of an existing block, you could switch the [Normal](#) snap on, click on the 'Place construction line' tool and draw a perpendicular line a precise distance from the wall. To draw the perpendicular line, place the first point at an end-point of the wall baseline, move the mouse cursor to touch the baseline and press SHIFT to lock the direction inference, then move the mouse cursor to activate the perpendicular lock and key-in the required distance:

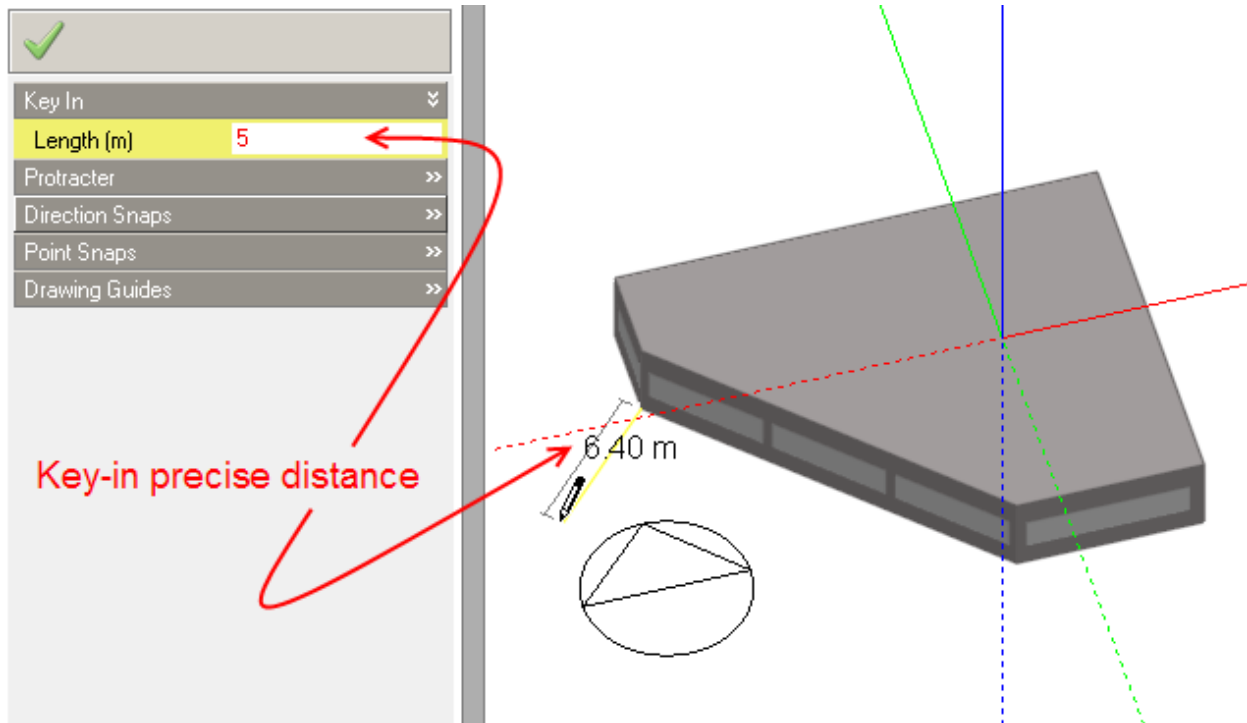


You could then place a second construction line normal to the first line and key-in the required length:

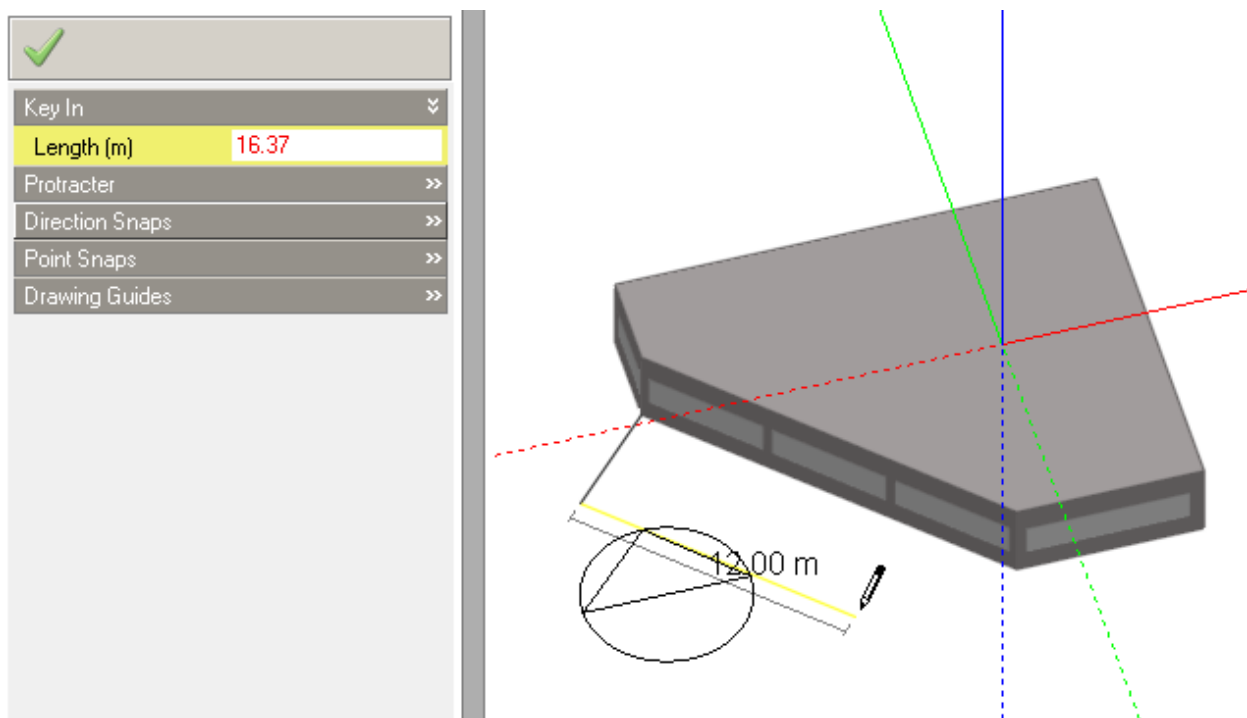


You can then snap to the construction line to draw the new block perimeter:

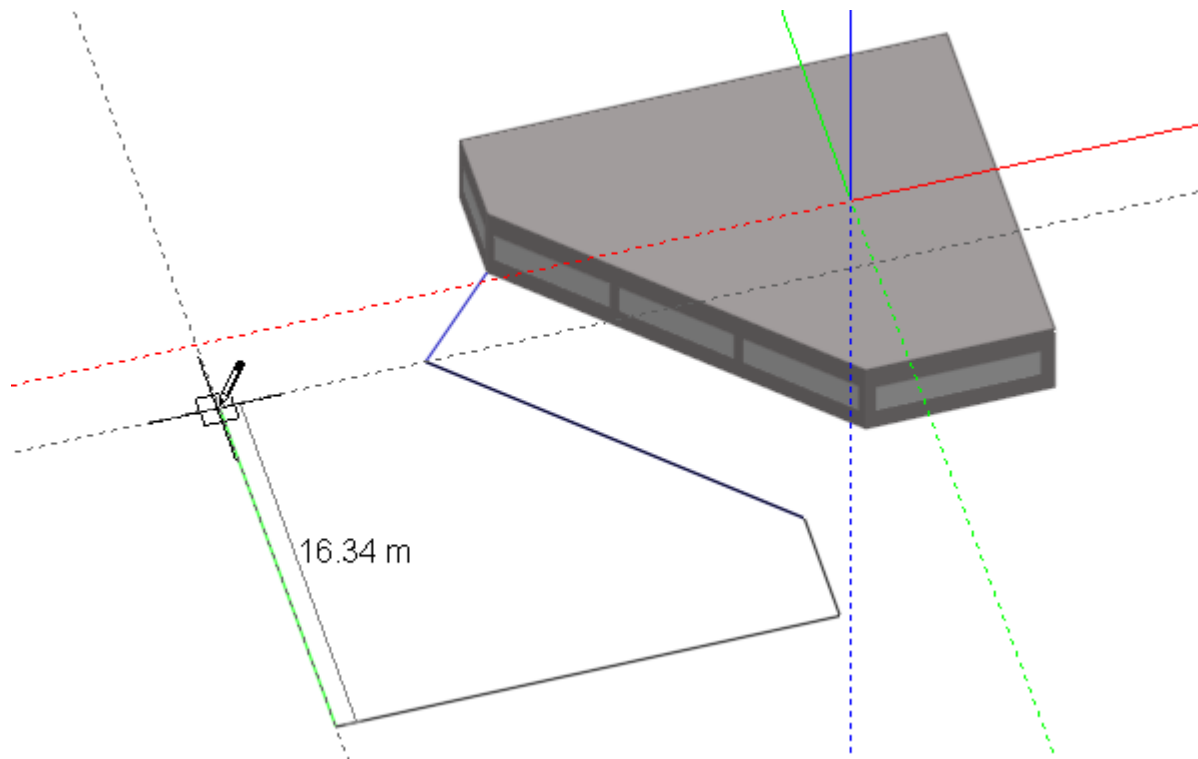


The finished block:

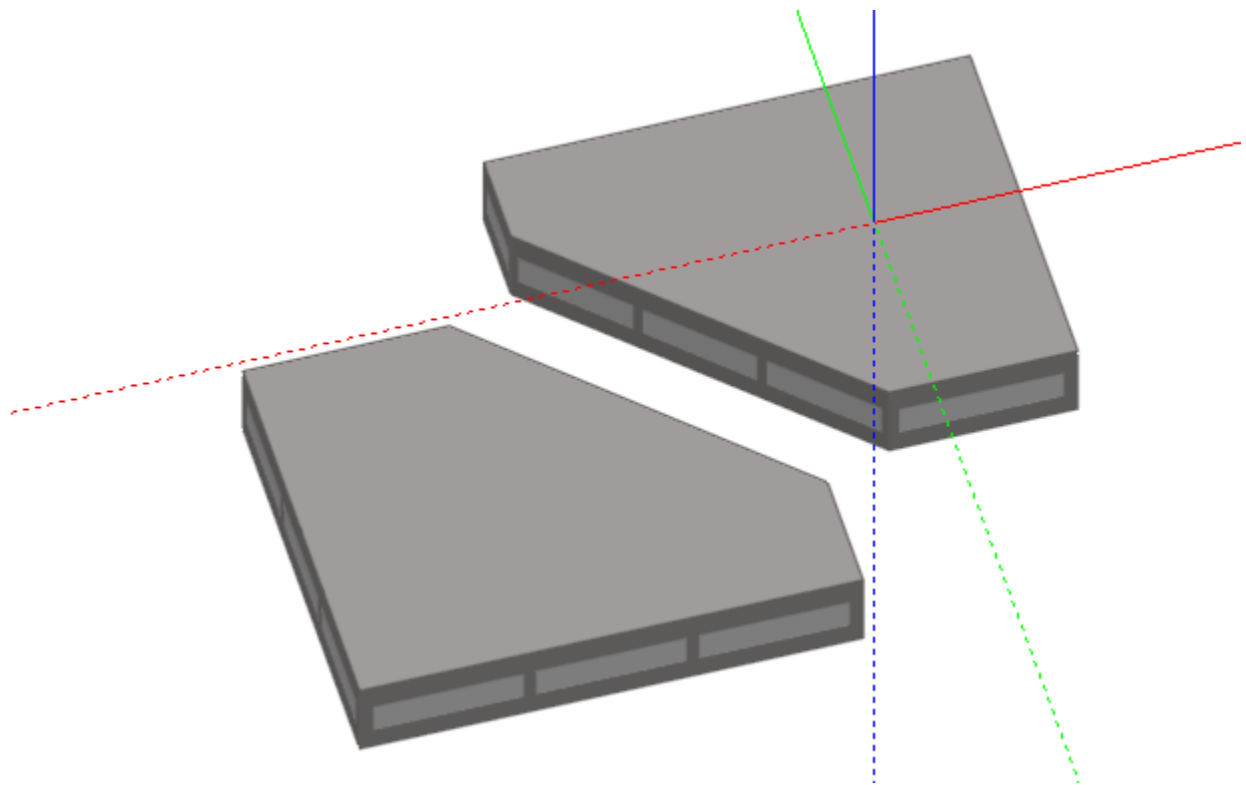


You can also snap to the intersection of construction lines:

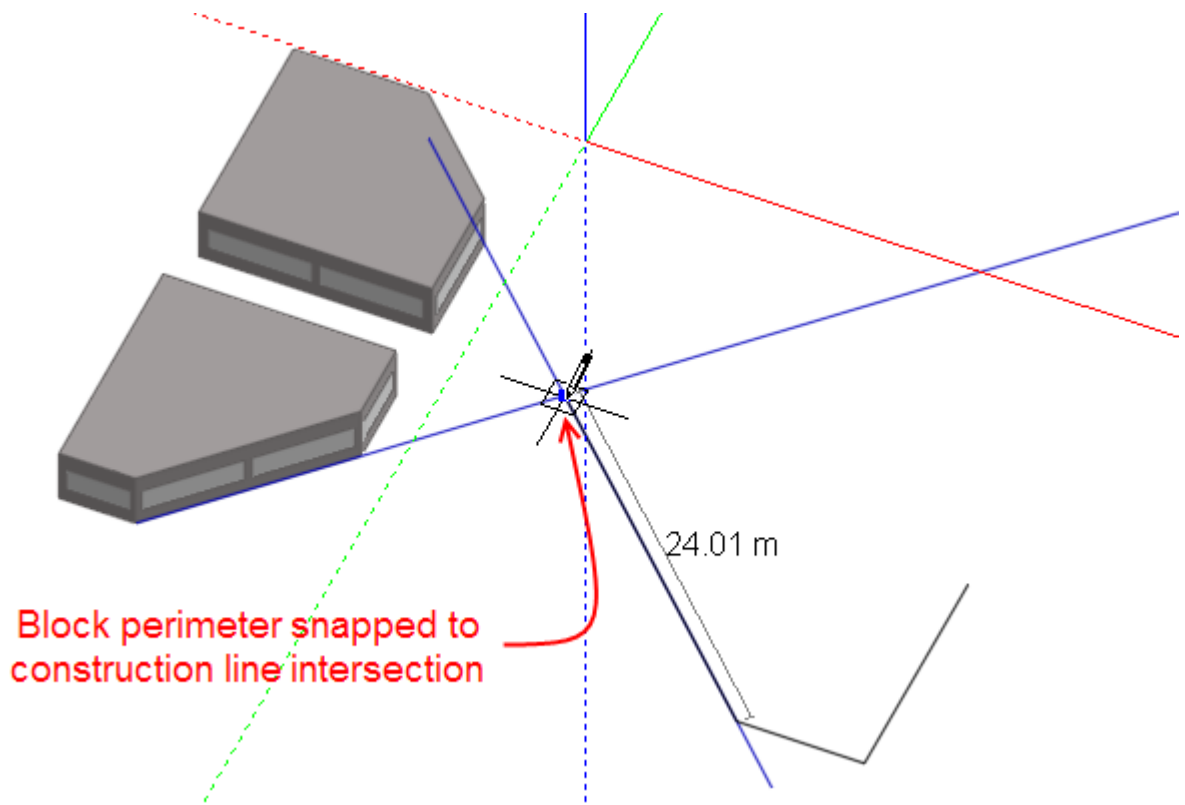


At the building level, construction lines can be snapped to the Z-axis in order to create vertical planes to which block geometry can be attached. To draw construction lines in a vertical plane, switch the Z-axis snap on, click on the 'Place construction line' tool and place the first point on the ground plane or any other horizontal plane. Move the mouse cursor to snap the current line to the Z-axis:

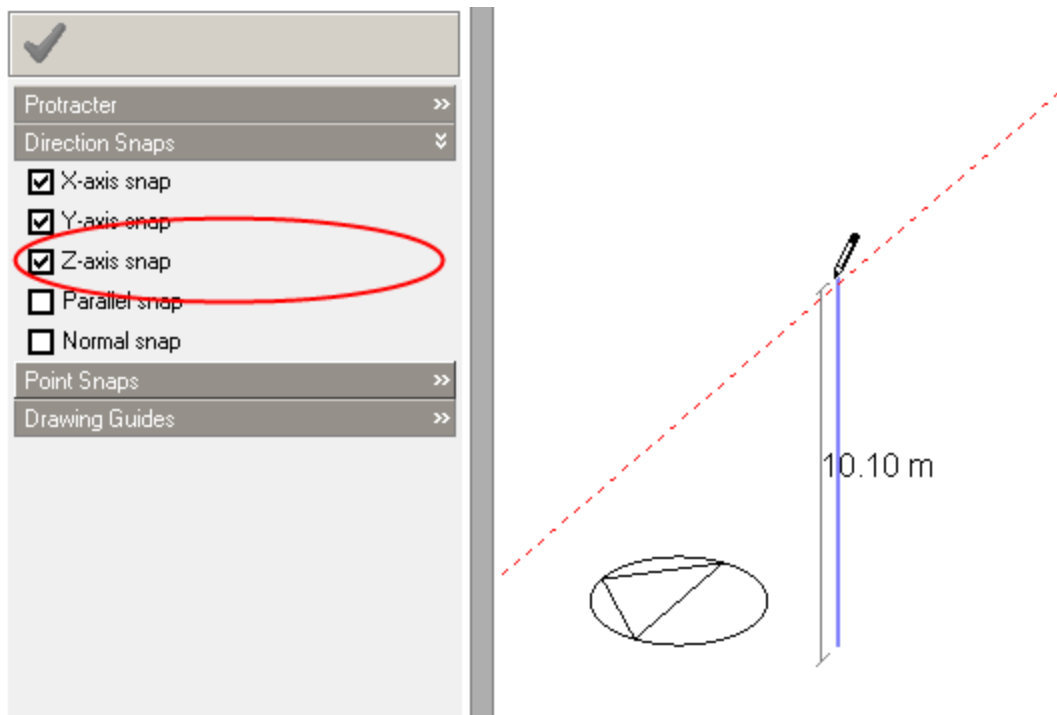

You can then use the protractor to place the next line in order to accurately define a plane:

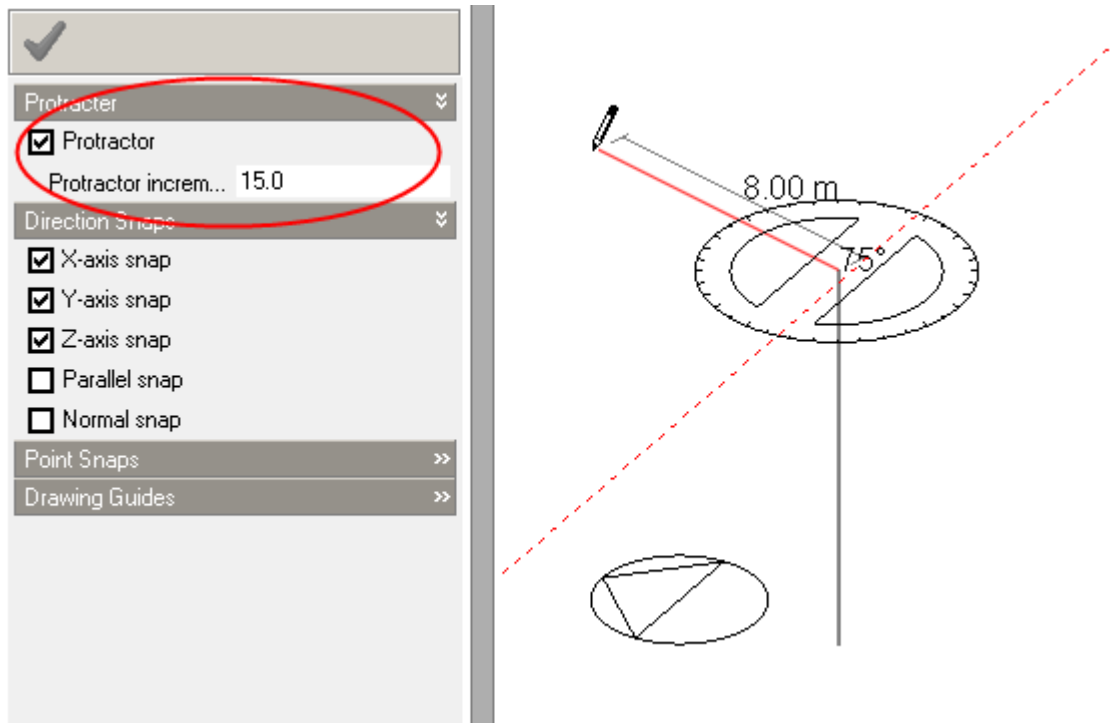

After placing the second line, the two construction lines form a vertical plane that can be used for extruding blocks or as a plane to be used as a cutting plane.

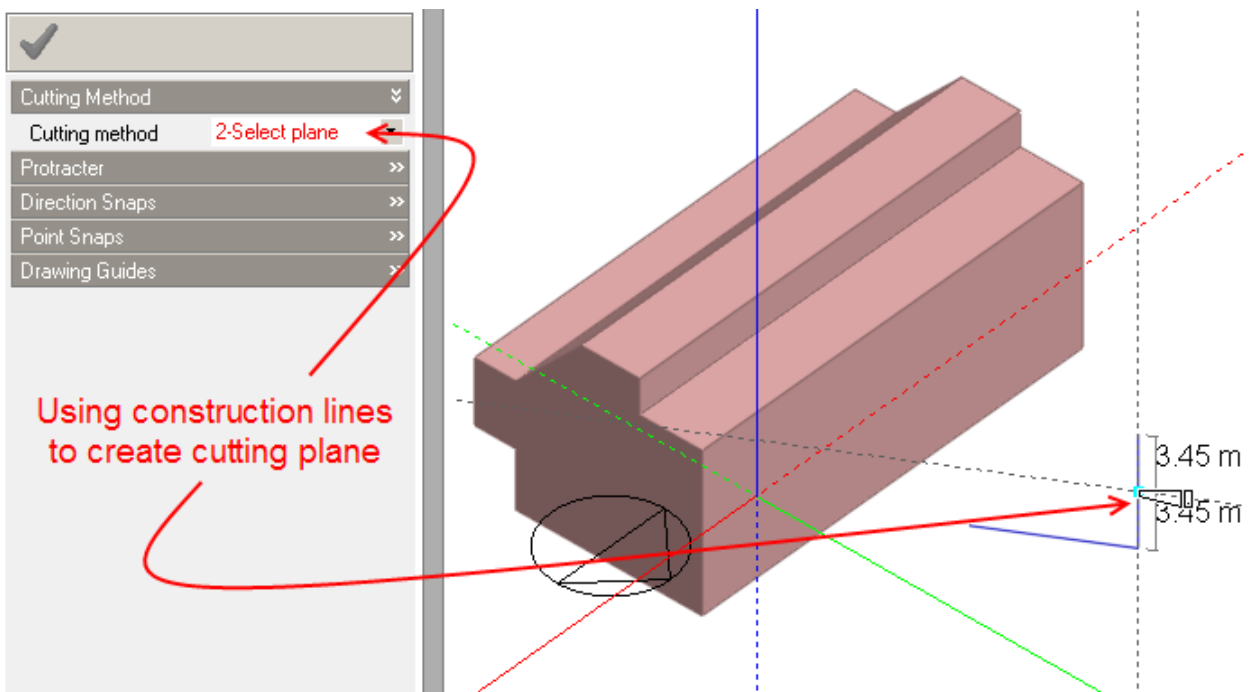

3.2.4.2 Removing Construction Lines

You can remove construction lines individually by [selecting](#) and [deleting](#) or you can remove all construction lines from the model by selecting 'Remove all construction lines' from the 'Edit' menu.

3.2.5 General Operations

This section describes general geometric operations:

- [Select](#)
- [Move](#)
- [Clone \(copy\)](#)
- [Rotate](#)
- [Stretch](#)
- [Delete](#)

3.2.5.1 Select




To select an object, click on the 'Select' tool or select 'Select' from the right-click menu, then move the mouse cursor to the object to be selected and click the mouse to select. To select multiple objects you can either press the CTRL key while clicking on objects or drag a selection rectangle by pressing the left mouse button and keeping it pressed as you drag a window across the required selection, when you release the mouse button, the objects inside the window will be selected.


3.2.5.2 Move



You can move blocks, partitions, courtyards and openings. To move an object, first select it and then click on the 'Move' tool or select 'Move' from the right-click menu. If you want, you can move several objects at the same time by doing a [multiple selection](#). You then need to define a 'handle point' for the move operation, the handle point can be any point on a model surface or ground plane but more usually will be a vertex on the object that you want to move, so make sure that the end-point snap is switched on, move the mouse cursor to the required object vertex and snap to it:

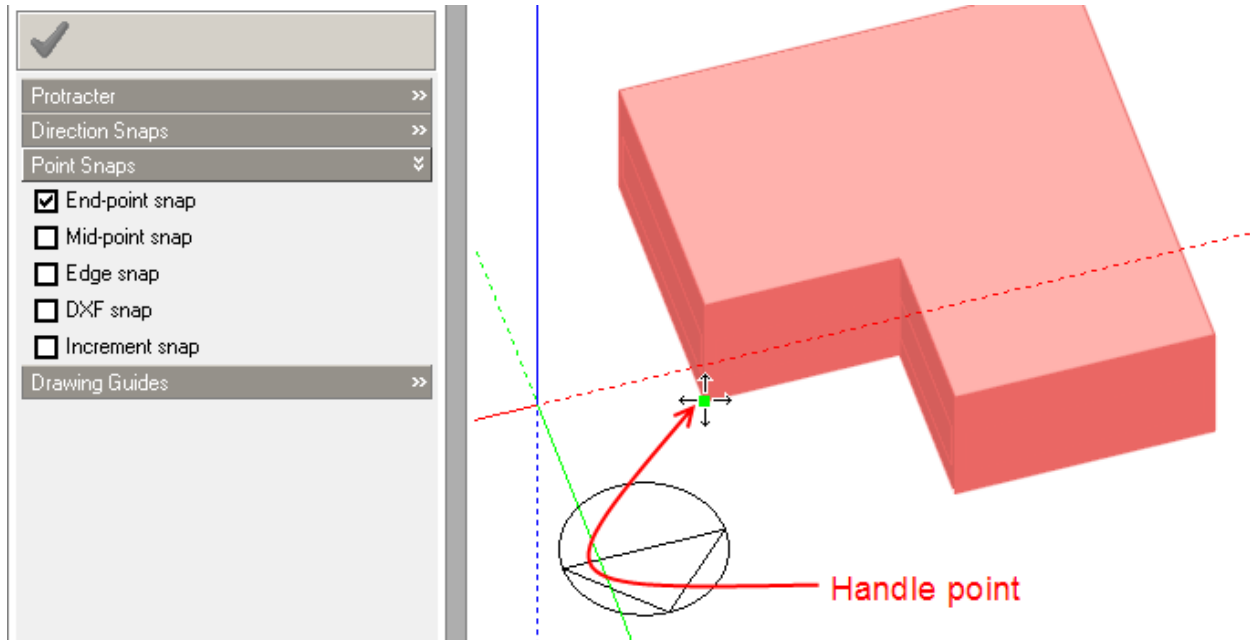


When you release the mouse button, you will be able to move the object to any required location. As you move the object, a displacement line is displayed to show how far the object has been moved, the displacement line can be snapped to the [axes](#) or the [Protractor](#). When a direction snap is active the [increment snap](#) can also be used:

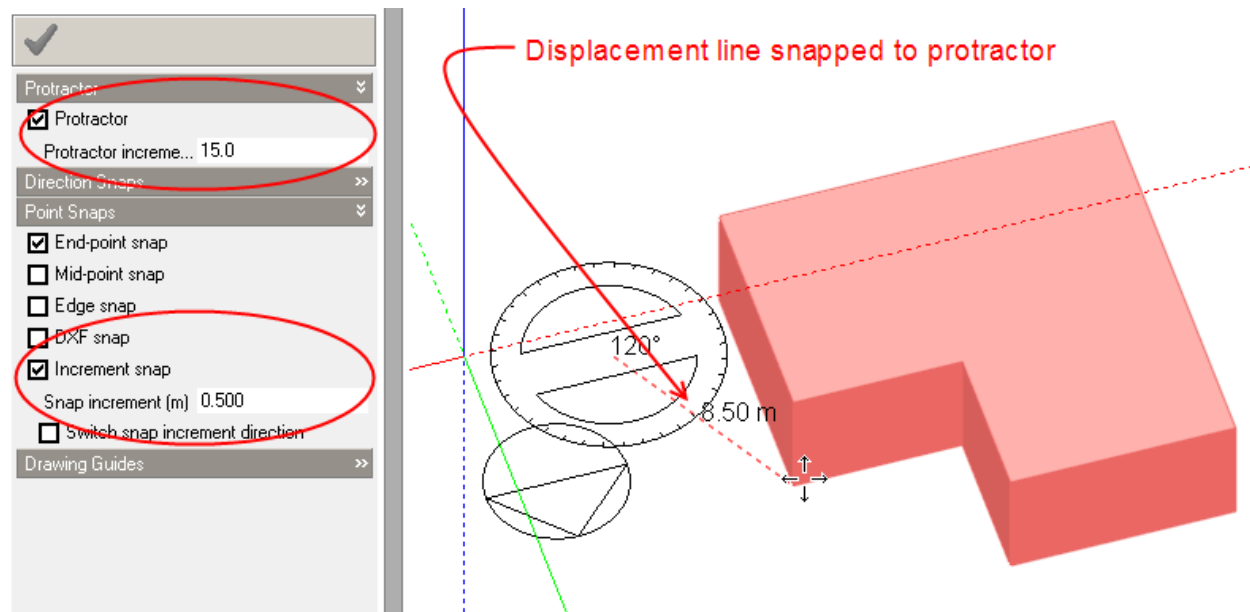


You can then click the mouse button to place the object.

At the building level, blocks can be moved in three dimensions onto any existing block face in the model. As you move the block around the model, each block face will highlight in blue as the block handle point is moved across it, indicating that the face has become the active drawing plane.

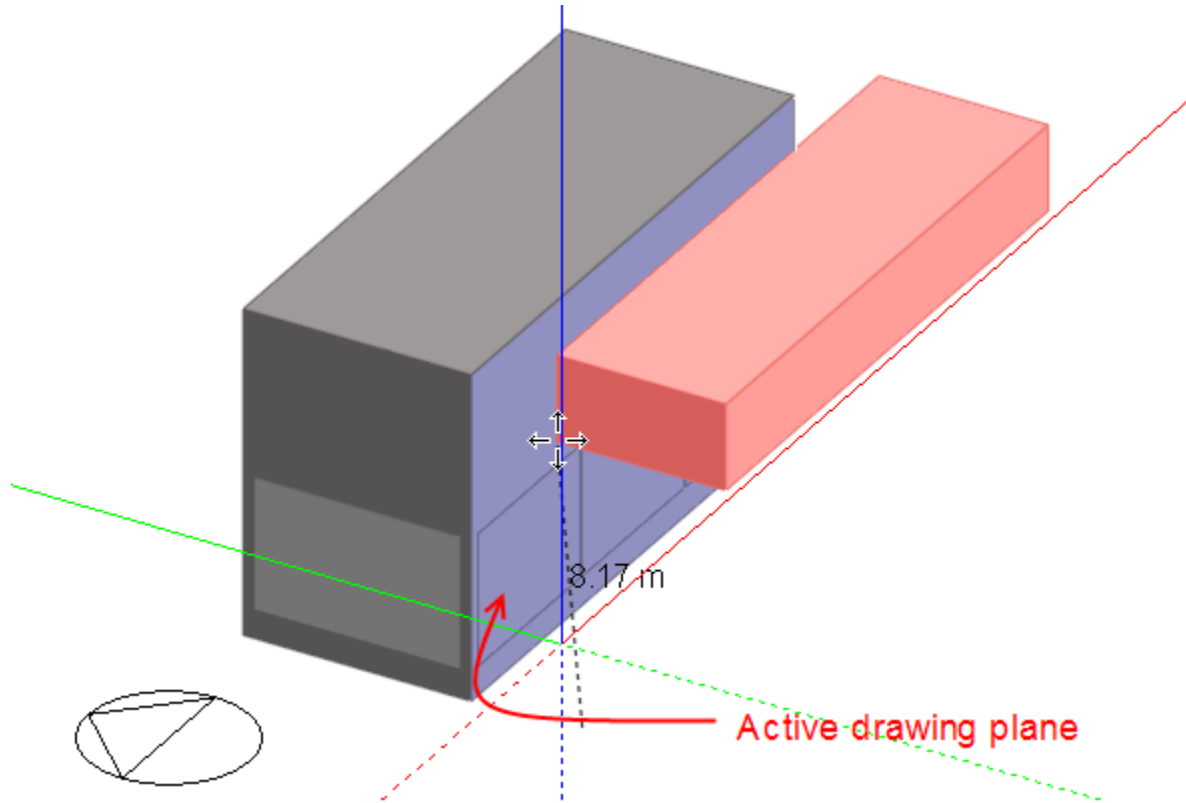

You can lock the active drawing plane by pressing the SHIFT key to position the block:

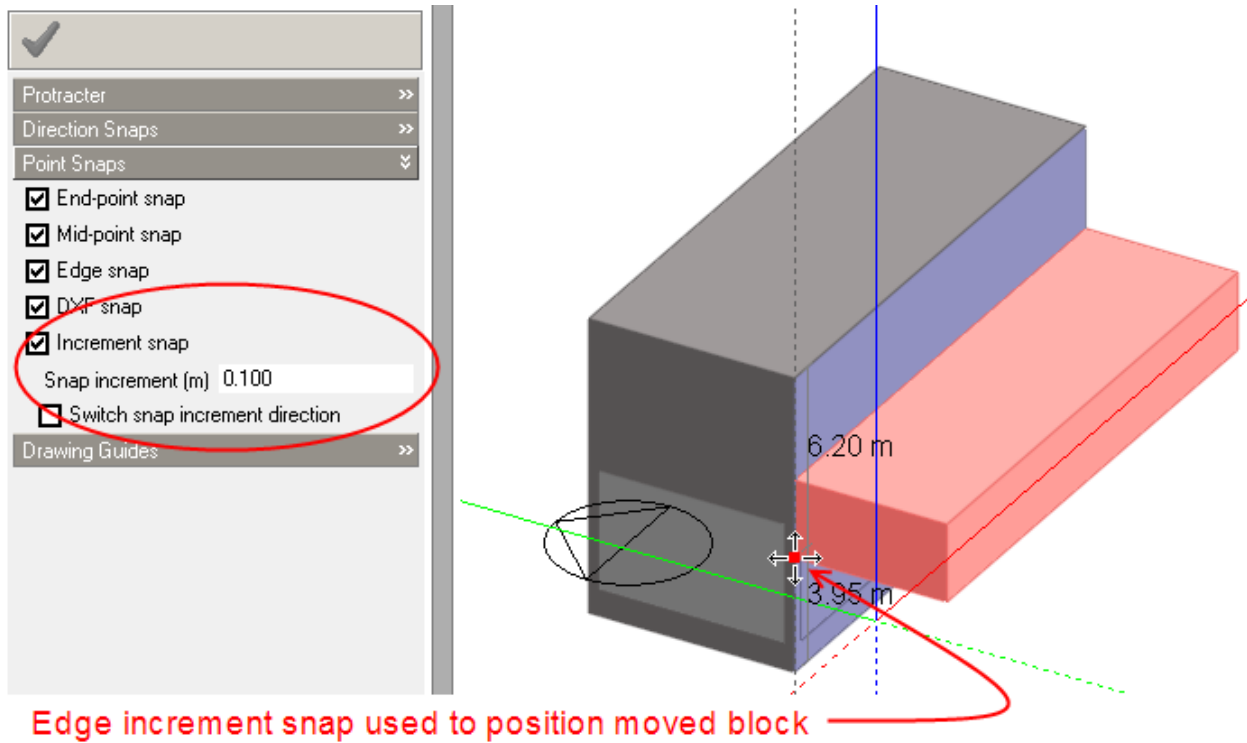

3.2.5.3 Copy (Clone)




For details of using the 'Clone' tool, please refer to the [Move](#) tool.


3.2.5.4 Rotate




You can rotate blocks, partitions, courtyards and openings. To rotate an object, first select it and then click on the 'Rotate' tool or select 'Rotate' from the right-click menu. If you want, you can rotate several objects at the same time by doing a [multiple selection](#). As you move the cursor back into the Edit screen, the Protractor will be displayed at the cursor position. At the building level, you can rotate a block around an axis point defined on any plane and as you move the cursor from surface to surface in the model, each surface will highlight in blue to show that it's the active drawing plane and the protractor will automatically rotate into the same plane:

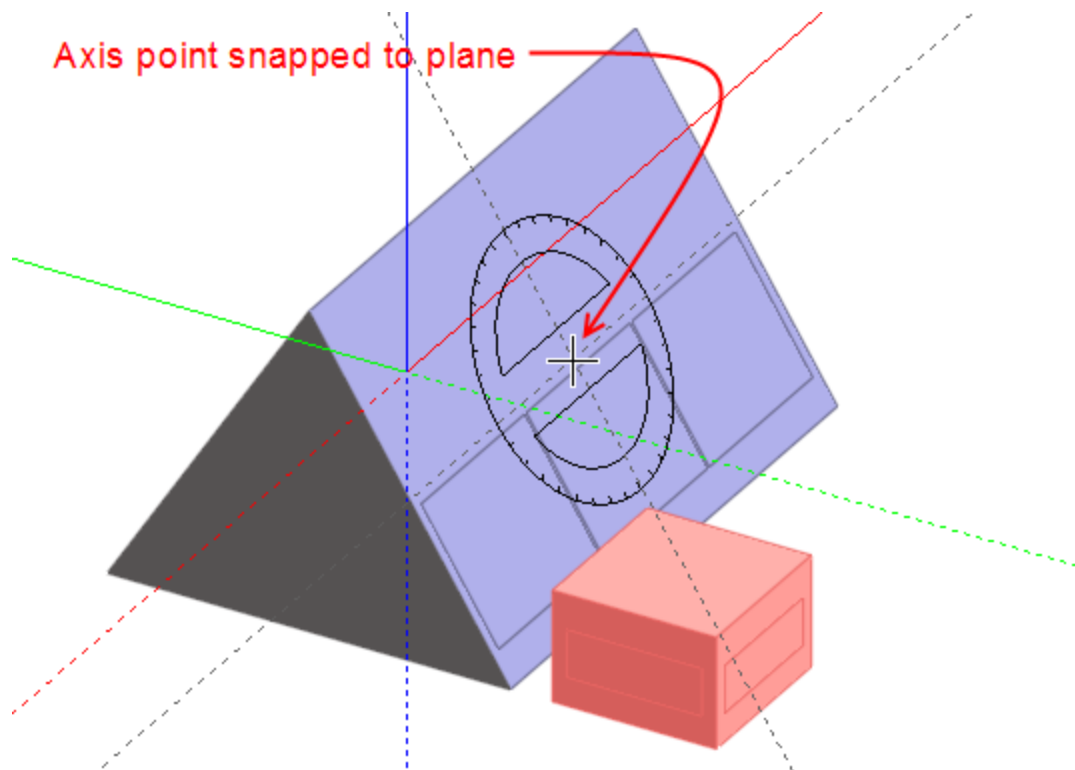

You define the rotation axis about which the object will be rotated by clicking the mouse when the mouse cursor is in the required location, you can use the various [snaps](#) and [drawing guides](#) to locate the axis point. After placing the axis point, you can then rotate the object around the axis:

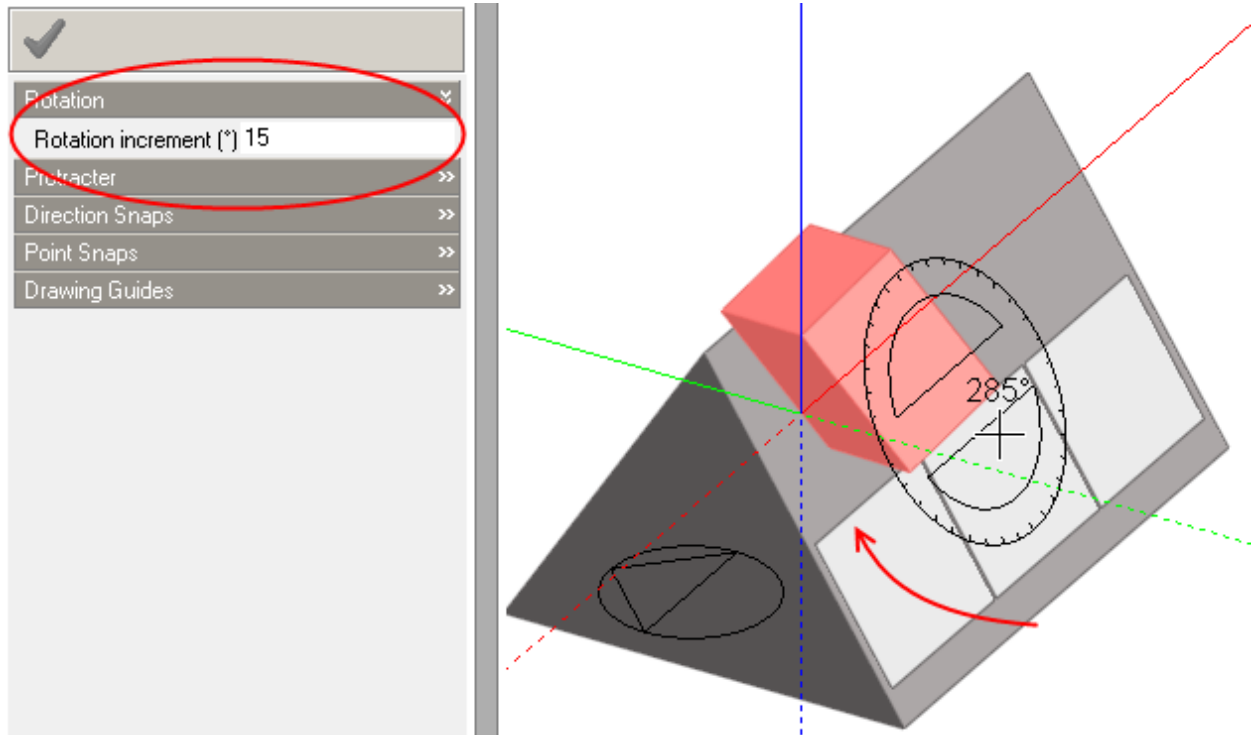


In the case of partitions and courtyards at the block level, the active drawing plane for rotation is always the plane of the block floor and in the case of surface openings, the active drawing plane is always the surface plane:

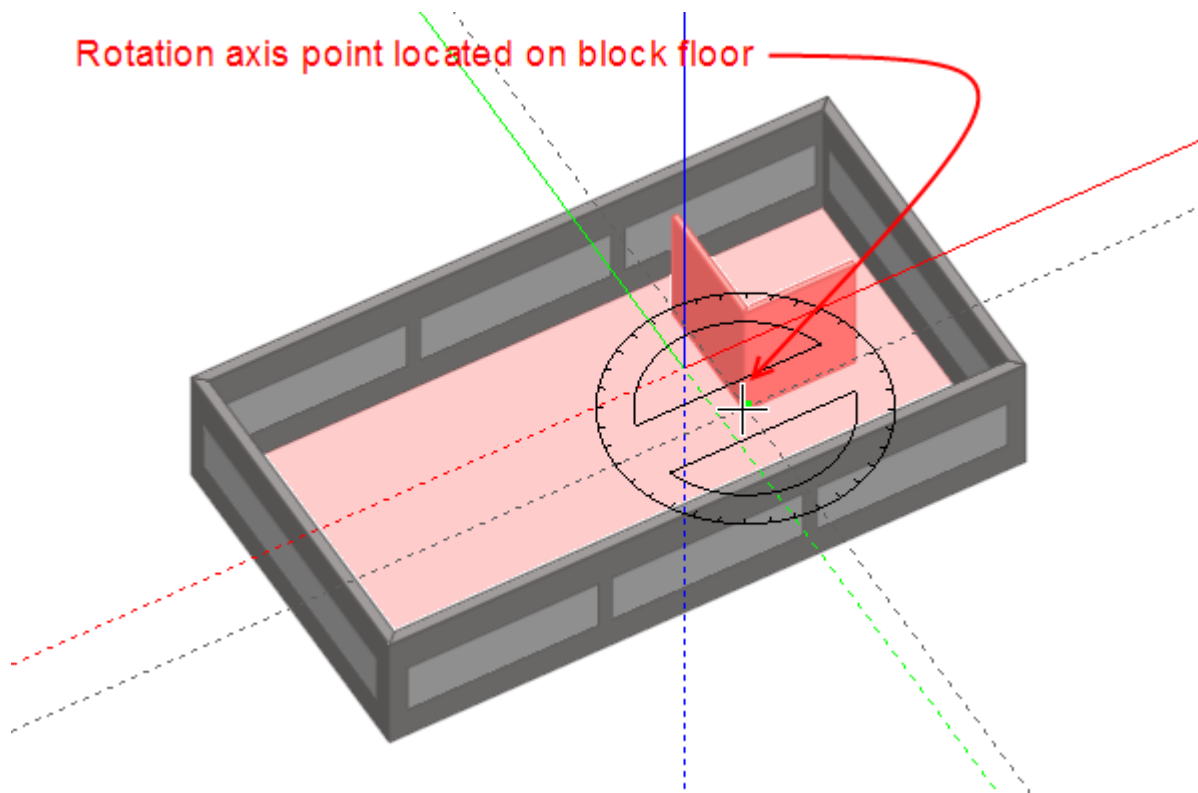


3.2.5.5 Stretch




Building and outline blocks can be stretched (or scaled) at the building level. To stretch a block, first select it and then click on the 'Stretch' tool or select 'Stretch' from the right-click menu. You can only stretch one block at a time. When you activate the 'Stretch' tool, a wire frame is displayed around the extent of the block and as you move the cursor across the faces of this frame, each face will highlight in the colour of the axis to which the face is normal:

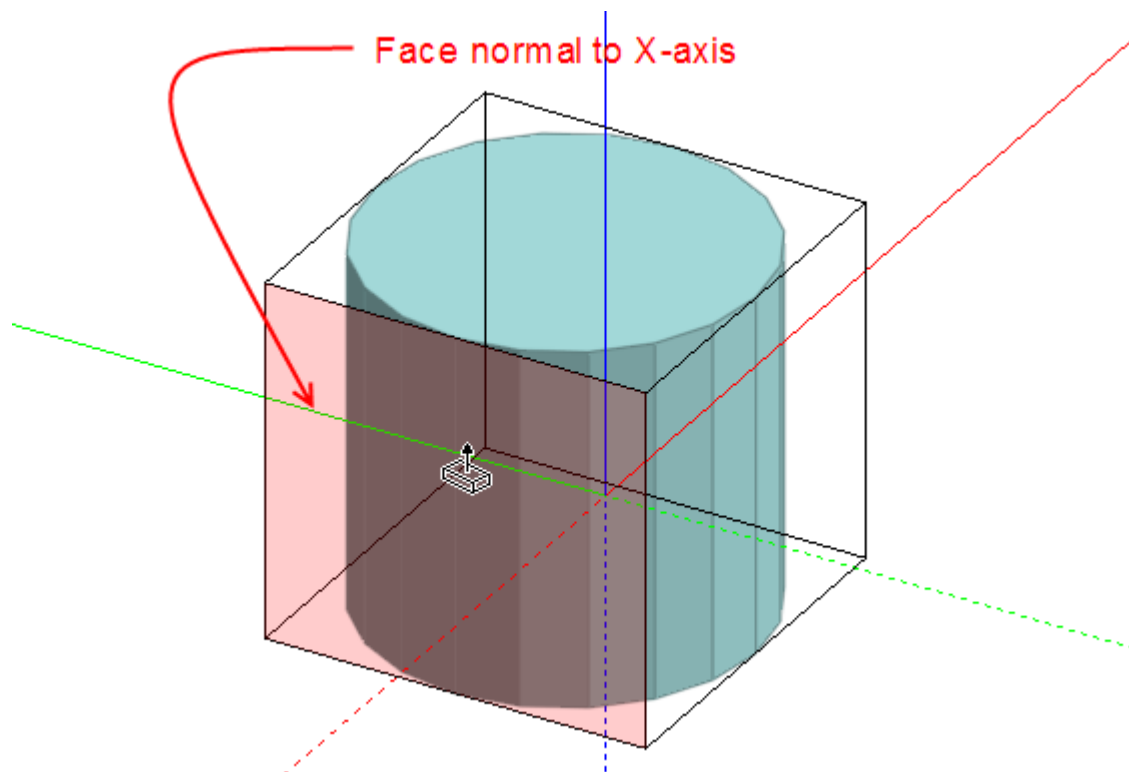

If you then click on one of these highlighted faces, you can then stretch the block along the axis normal to the face. If the increment snap is switched on, the block can be stretched in increments:

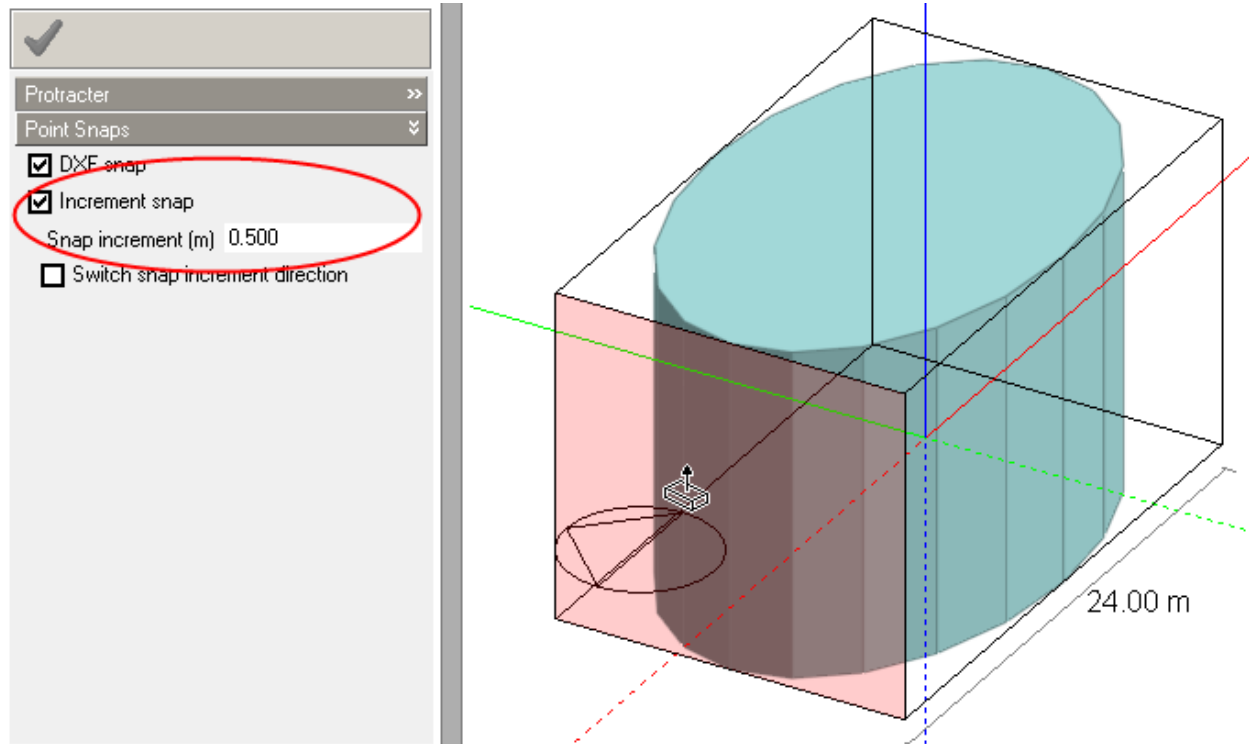

In the case of the Z-axis, the stretch operation will only operate along the positive Z-axis:

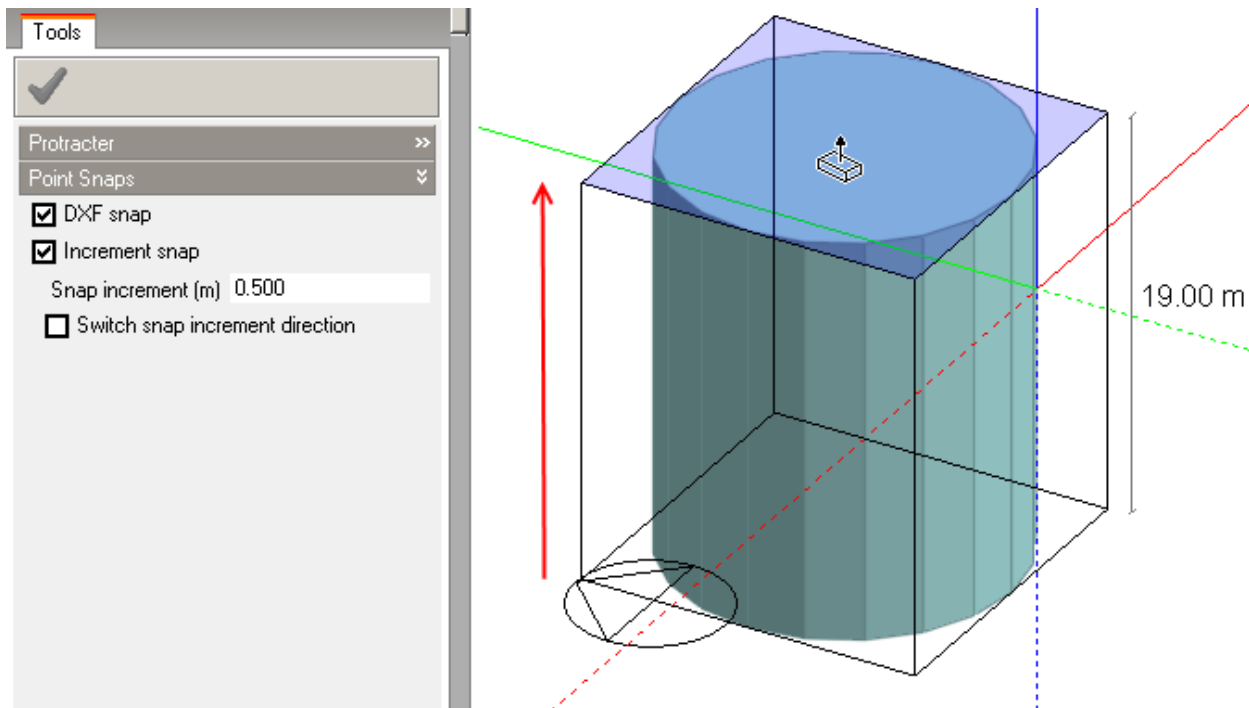

Tip: You can also key in the new dimension using the keyboard. Note the difference to the [Drag face](#) tool where the increment in the extrusion is keyed in.

3.2.5.6 Delete




To delete an object, first select the object you want to delete and then click on the 'Delete' tool or select 'Delete' from the right-click menu. If you want, you can delete several objects at the same time by doing a [multiple selection](#).

3.2.5.7 Measure

The measure tool allows you measure distance, angles and areas *on single planes* in the model:

- **Distance** - Click twice on a plane to define the length between the 2 points.
- **Angle** - Click three times on a plane to define the area between the 2 lines.
- **Distance** - Draw an enclosed polygon by clicking with the mouse on a single plane.

The requested data is displayed highlighted in the Drawing Options panel on the left of the screen.

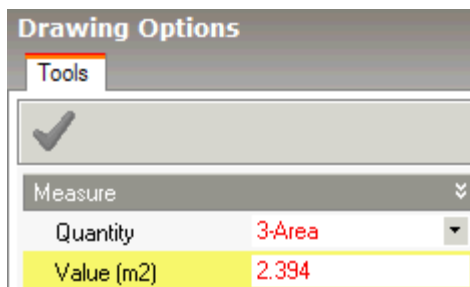

3.2.6 Importing Geometric Data

CAD data can be imported into DesignBuilder in order to trace blocks and block partitions.

- [Import DXF](#)

3.2.6.1 Importing DXF

If you are having trouble importing the DXF data you should:

- Check that you have specified the correct units. If the DXF data looks too small or too large you may have selected the wrong units. DXF data does not have units so you may need to find out the units used in the source CAD model before attempting to import the DXF file.
- Try 'cleaning up' the CAD data before exporting it to avoid non-geometric data, grids, fittings etc from being included in the DXF file.
- DesignBuilder requires floor plan DXF data to be saved in R-11 format. Other DXF formats may fail to

load.

DXF data can be imported in the form of 2-D floor plan layouts which can be used to trace block perimeters and partitions. You can import 2-D DXF floor plan files created in AutoCAD or other CAD programs using the **Files > Import > Import DXF data** menu command. This starts a the DXF Import Wizard (below) which prompts you for the name of the file, the units of your DXF data and the attachment height.


Troubleshooting

Once the DXF data is imported and correctly positioned you can use it to define the position of blocks and partitions. A typical process might go like this:


1. Create new dsb site file
2. Select location
3. Import DXF data
4. Draw blocks by snapping to the [external perimeter](#) corners of the DXF floor plan (requires [DXF snap](#) to be switched on).
5. Go to block level and draw partitions using the DXF partition data. You should take care to connect partitions to the external perimeters. A common mistake is to snap partitions to DXF data lying very close to the external perimeter but not close enough to create a connection with the external perimeter. **It is recommended that you switch of [DXF snap](#) in the Drawing options panel when drawing partitions at block level to avoid this problem.** Be sure to switch it back on again when you have finished drawing partitions.
6. Import other DXF floor plans for other stories if necessary. Note that only one set of DXF data can be imported at a time. Once the CAD data has been imported into the model, the source DXF file is no longer needed by DesignBuilder and can be moved or deleted.

IMPORT DXF WIZARD


To import DXF data, select **Import DXF drawing file** from the File menu which opens the **Import DXF** dialog:

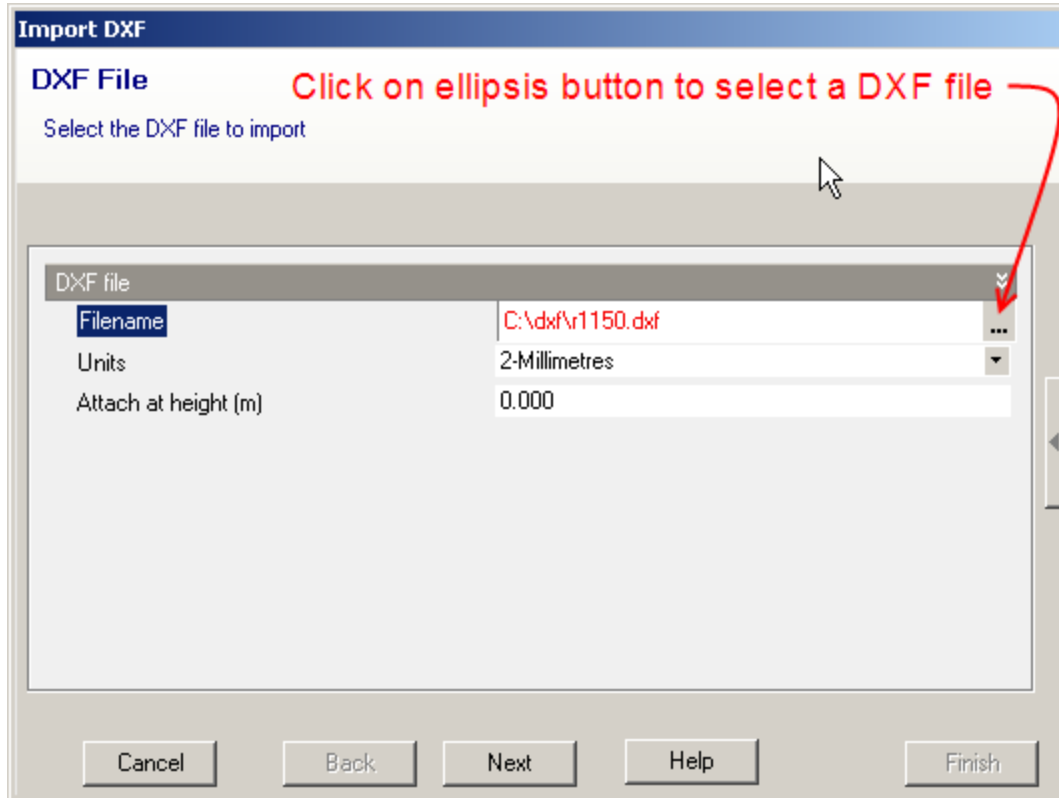


To browse for a DXF file, click into the 'Filename' control which will display an ellipsis button and then click on this button to open the file browser dialogue box. After selecting the required DXF file, you need to set the units used in the DXF file from the 'Units' drop list and set the attachment height at which the 2-D DXF data will be attached. The DXF data can be moved around the model once it is imported, so you do not need to know the exact attachment height - you can import the DXF data at zero height and move it to the correct location using the [Move](#) command. Click on the 'Next' button to set up layer visibility:

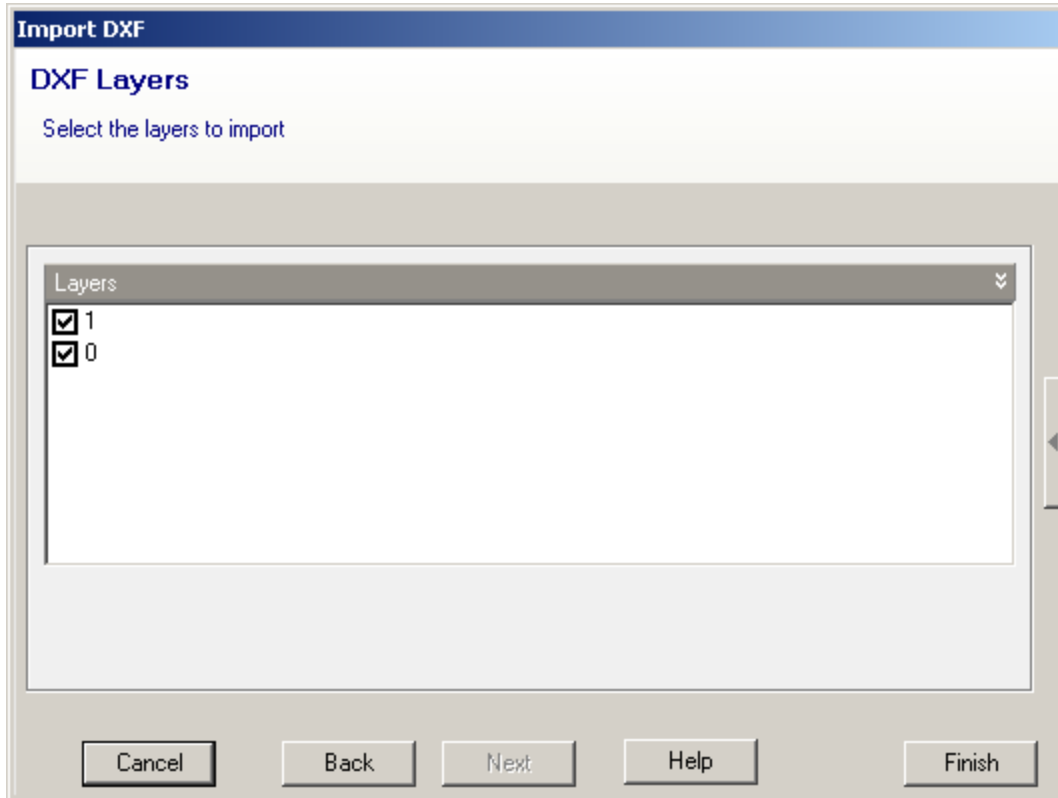


You can use these controls to switch off unnecessary layers in the DXF data. As you check/uncheck the checkboxes you will see the effect of the change in the Edit view under the Wizard. Click on the 'Finish' button to import the data:

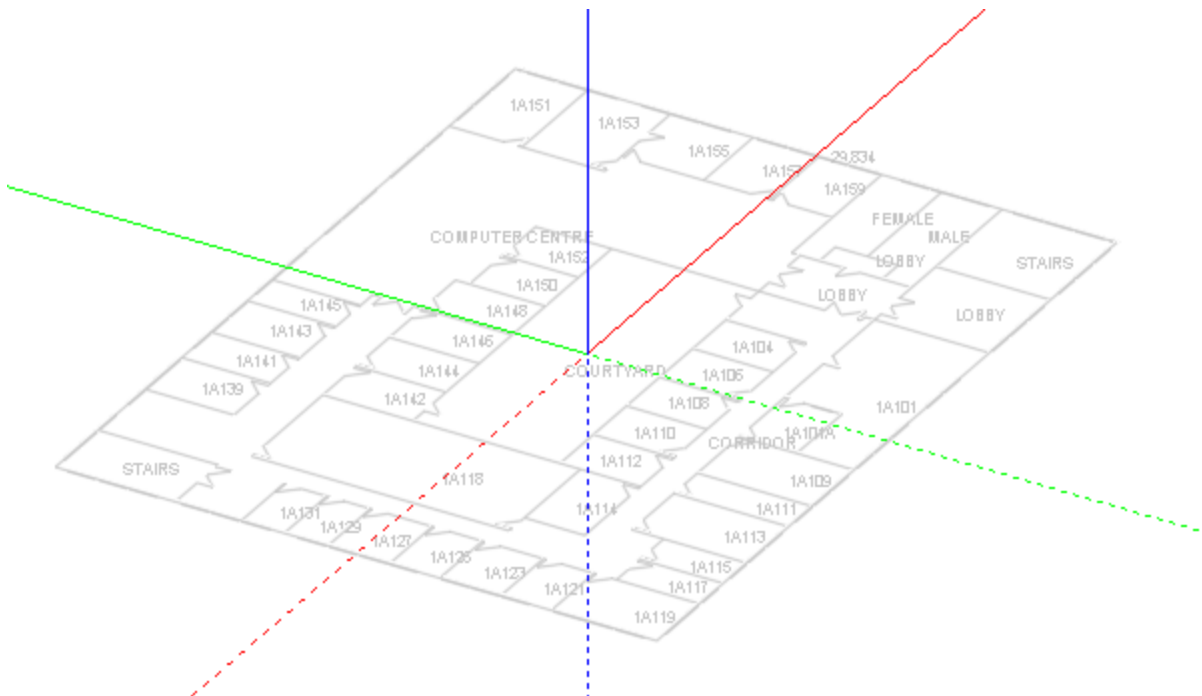

At the **building level**, you can [select](#), [move](#) and [delete](#) DXF data. When you select DXF data, you may need to zoom in to make the selection. You can move DXF file in 3-D and snap the data to the edges of blocks:

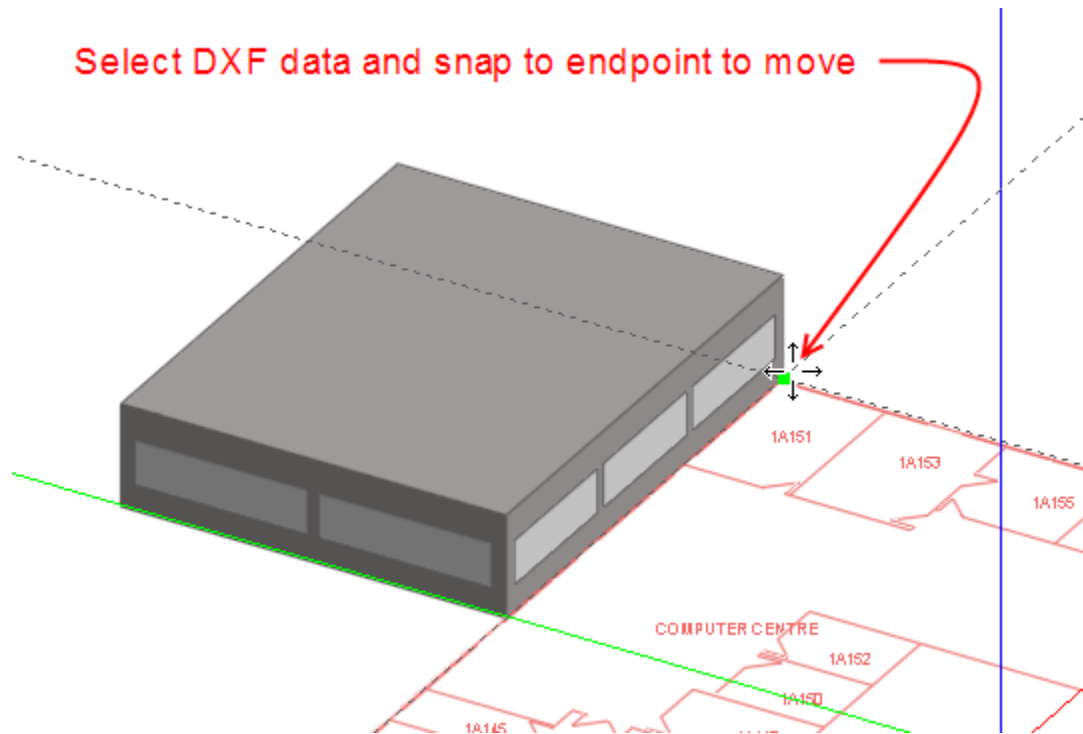

Move the DXF data on top of the existing block and snap to an edge end-point:

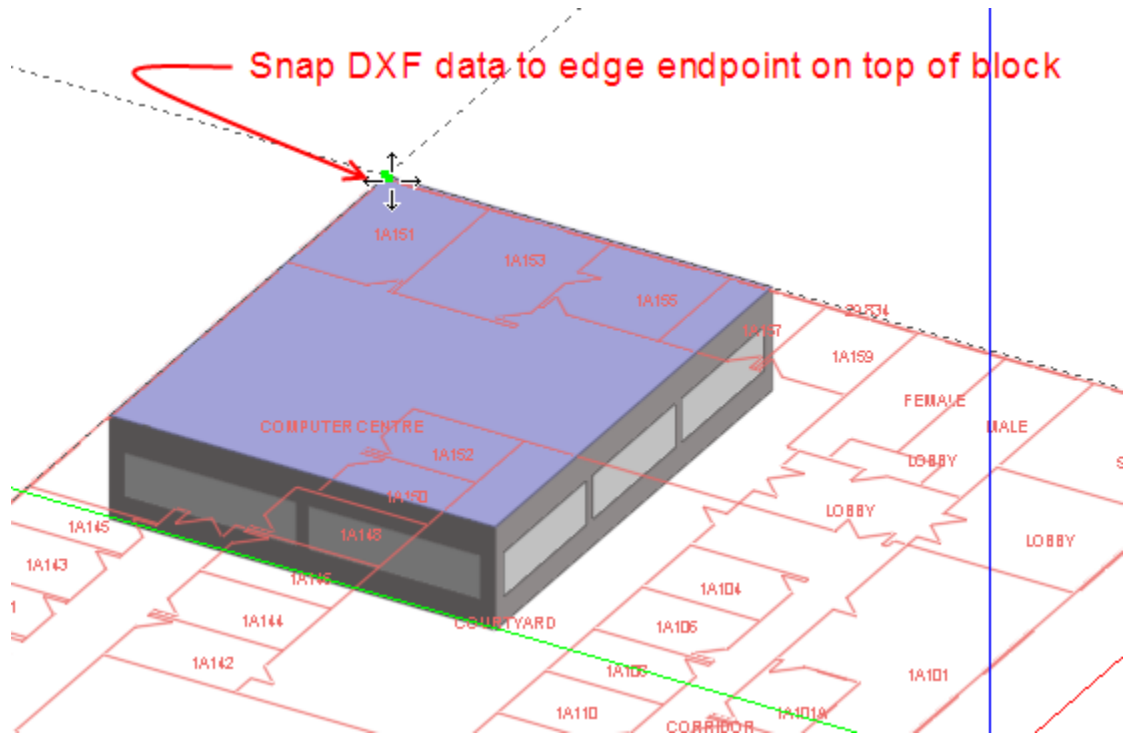

When you have imported the DXF data you can use the Measure tool to check that the dimensions are correct.


3.2.7 Exporting Geometric Data

The model geometric data can be exported in formats:

- [3-D DXF](#)

3.2.7.1 Exporting 3-D DXF

You can export the geometry of the current building model in 3-D DXF format using the Export 3-D DXF model command from the [File](#) > Export menu. This opens the 3-D DXF Export dialog:

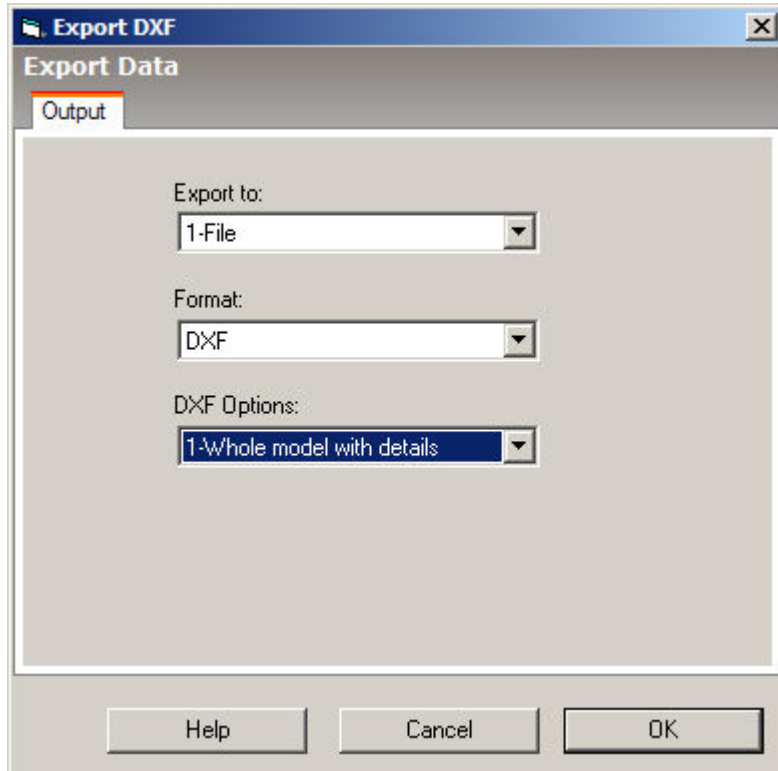

Choose one of two options:

- **1-Whole model with details** - The entire building model is exported including 3-D details such as window frames, 3-D building elements etc. This option can be useful for exporting for visualisation and further processing in other software such as SketchUp (image below)
- **2-Zones** - The building model is exported showing only zones. This option can be useful for visualising the geometry of the model used in simulations.



Example 3-D DXF Output - Whole model with details

The above model was created in DesignBuilder, exported in DXF format using the **Whole model with details** option and Imported into SketchUp where details such as textures, trees and people were added.

Note: when importing DXF files into SketchUp be sure to set the scale options on the Open dialog.

3.2.8 Working with Buildings (Site Level)

At the site level you can:

- [Add new buildings](#),
- [Copy, delete and change the position](#) of existing buildings.
- Change the [site orientation](#).
- Enter [site Model Data](#) including information on the site location, weather data etc.

3.2.8.1 Create New Building



You can add one or more new buildings from the site level.

Note that each building has its' own set of [Model Options](#) and is simulated separately but shares [site Model Data](#) with the other buildings on the site.

3.2.8.1.1 Create New Building - Model

Select the type of building model you wish to create from the list of options. Your selection will depend on what you want to do with the building model and the amount of data available. Some typical options are:

- Draw building + standard data - Recommended for general-purpose modelling.
- Single zone + simplified data - Early design stage analysis of building components, facade and cooling options.
- Parametric building + standard data - Buildings of standard form (rectangular, L-shaped or courtyard).

You can adjust the Model Options later if necessary using the [Model Options dialog](#).

3.2.8.1.2 Create New Building - Default Data

This tab allows you to define the templates used to populate the new building:with default Model Data.

Construction

Select the construction template to use as a source of default fabric data for the building.

Activity

Select the activity template to use as a source of default activity-related data for the building. This will set the following default data:

- Occupancy levels and timing, holidays etc
- Metabolic rates
- Levels of equipment use
- Heating and cooling temperature setpoints
- Illuminance requirements
- Fresh air requirements

Glazing

The glazing template is used as a source of default window, shading and percentage glazing data for the building.

Lighting

The lighting template is used as a source of default lighting and lighting control data for the building.

HVAC

The HVAC template is used as a source of default data for the HVAC equipment to heat and cool the building.

3.2.9 Working with Blocks (Building Level)


Blocks are the basic elements used to create a DesignBuilder model. Three types of block can be added to the building:

- [Building Blocks](#) are composed of building elements such as walls, floor slabs and roofs and may be partitioned internally to form a number of zones.
- [Outline Blocks](#) are used to help in the creation of more complex building block geometry.
- [Component Blocks](#) are used to create visual, ground and shading structures which do not contain zones.


All block types are created at the Building Level in the same way and are drawn using [perimeters](#) which can be extruded either horizontally or vertically.

This section describes the various operations involved in [creating](#) and [editing blocks](#) at the building level. To create or edit a block you must first go to the building level and you can do this by clicking on the building entry in the navigator or if you're at the site level and you want to edit an existing building, you can double-click on the building in the 'Edit' screen.

Go to building level

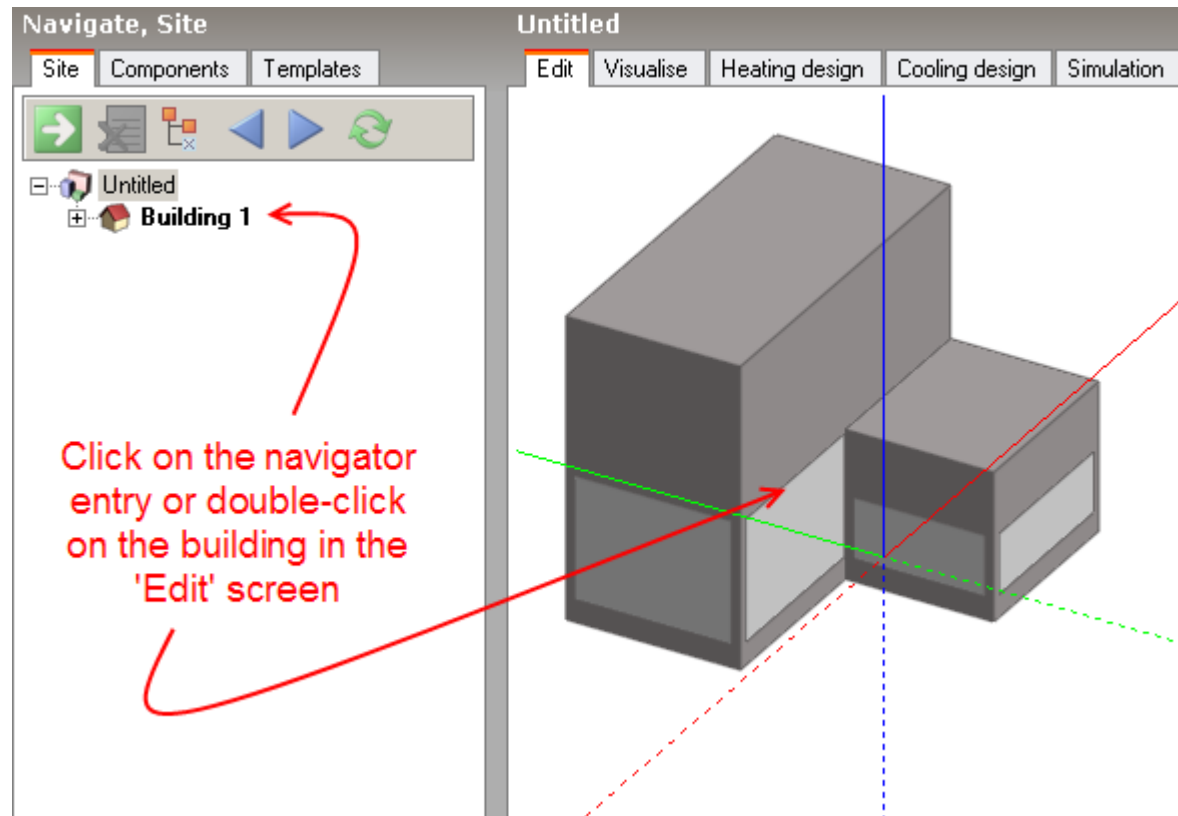


Either operation will take you to the building level:

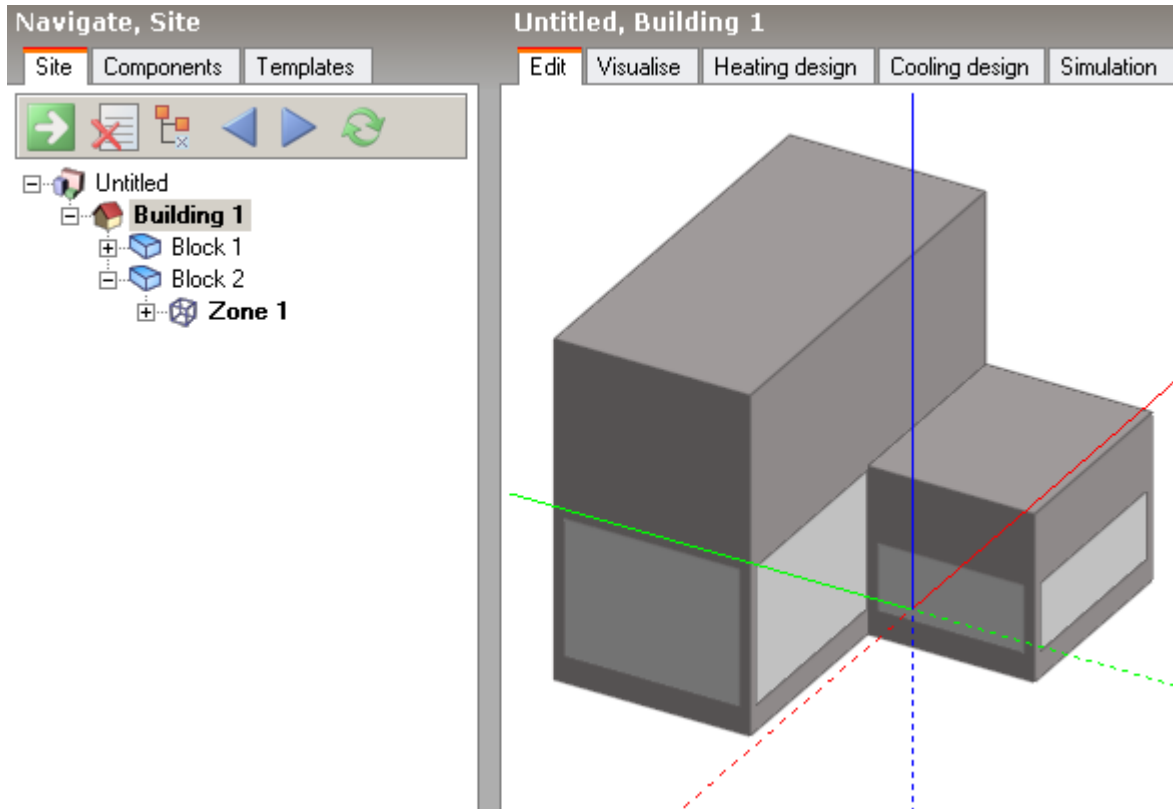


3.2.9.1 Adding Blocks



To add or create a new block, first go to the building level (if you are not already there) and click on the **Add new block** tool. If you've just created a new building, the Add new block tool is automatically activated. A block is created by drawing the base perimeter of the block using one of the perimeter shapes such as a polygon. The [dimensions of the block](#) are those measured from the outside, the height of the block is the floor-floor height.

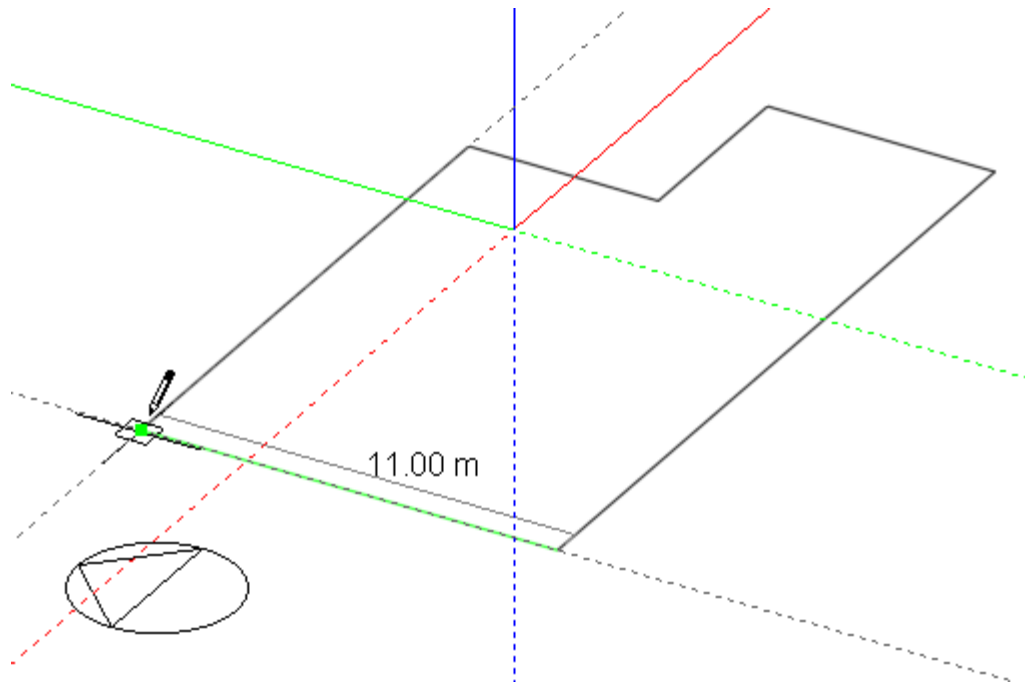


Please refer to [perimeter shapes](#) for details of drawing perimeters. After drawing a perimeter, a block will be automatically extruded by the [Height](#) entry in the 'Drawing options' settings or if the [Auto-complete block](#) setting is switched off, the perimeter can be dragged to form the extrusion. To help in setting the correct extrusion height, the [increment snap](#) setting can be used which enables the drag movement to jump by any defined increment. Alternatively, you can simply type in an extrusion height and press the enter key:

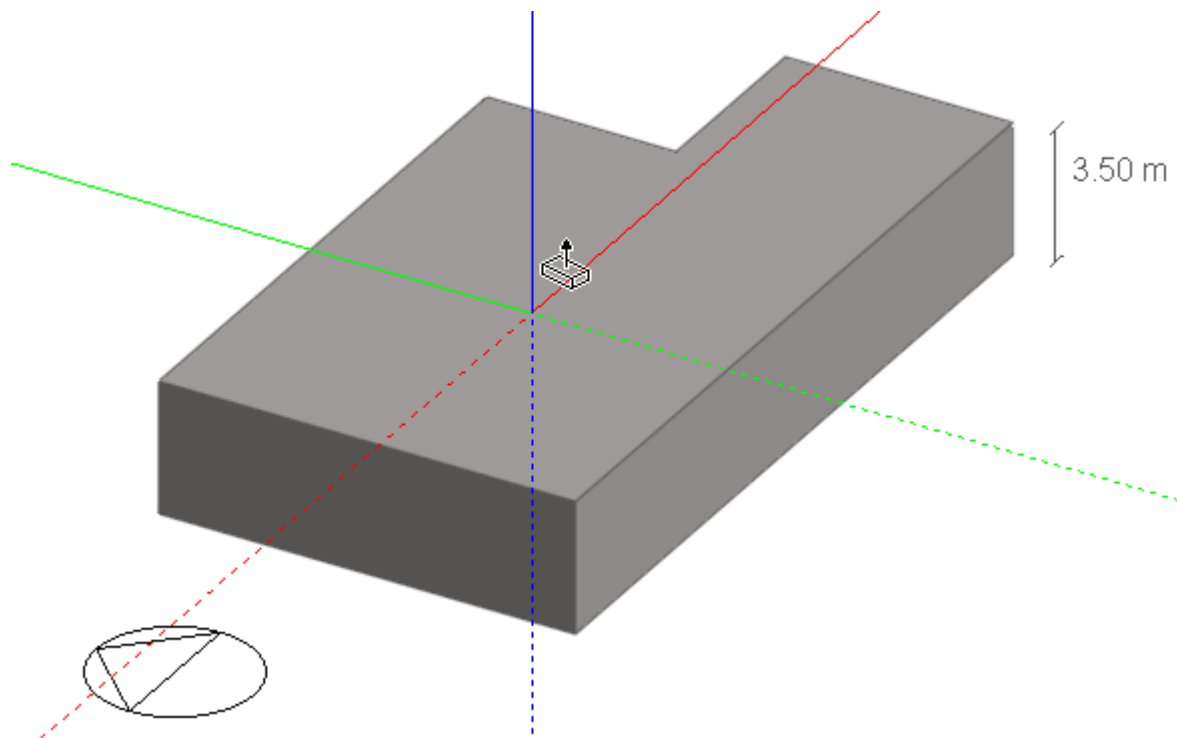


When a block has been placed, additional blocks can be drawn onto any surface of the block to form


more complex aggregate blocks. As you move the mouse cursor across the faces of an existing block, each face will change colour from grey to blue to indicate the active drawing plane. You can lock the active drawing plane by pressing the SHIFT key, which allows you to move the cursor off the current face while keeping the plane active. You can also lock the active drawing plane to the ground plane by moving the cursor over the background area and pressing the SHIFT key, this is particularly helpful in avoiding the selection of the wrong plane when drawing a vertically extruded block adjacent to an existing block. Once you've clicked the first data point into the active drawing plane, it becomes locked regardless of whether or not the SHIFT key is pressed until the perimeter has been completed or the tool is cancelled. In the example below the vertical plane shown in blue has been selected, the shape of the block will be drawn in this plane and the volume created by extruding normal to it.

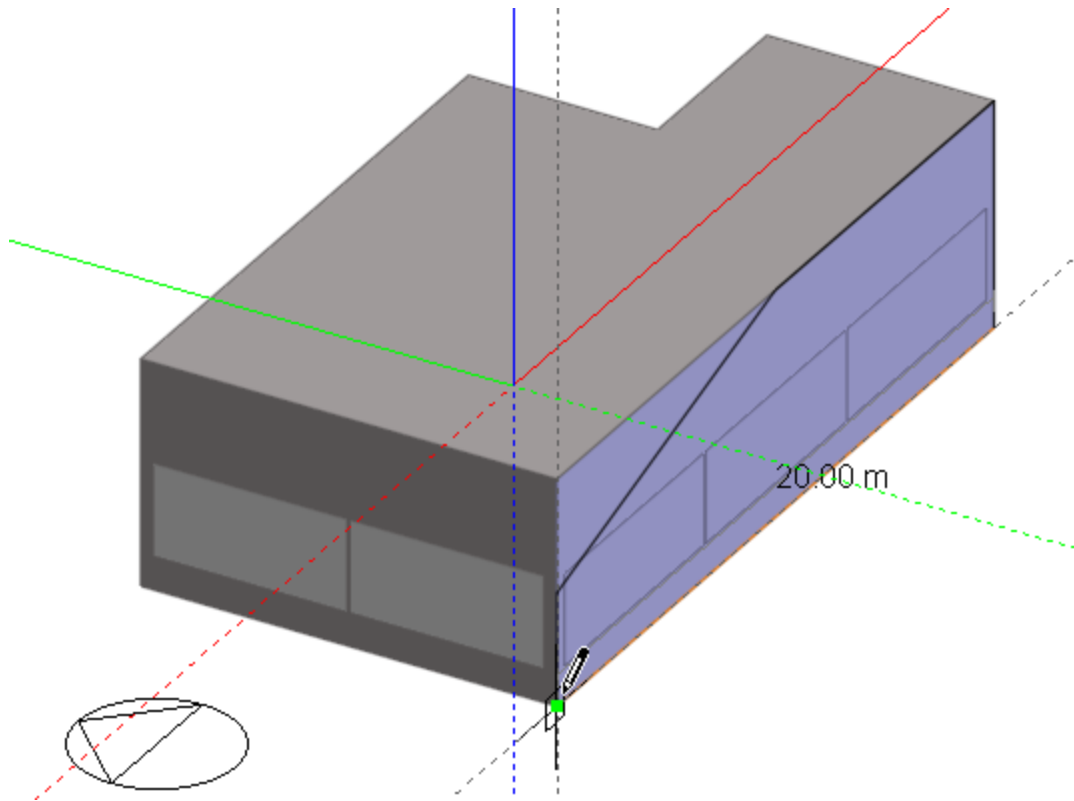

When a block is added to the surface of another block, a geometric [link](#) is automatically created between the two blocks:

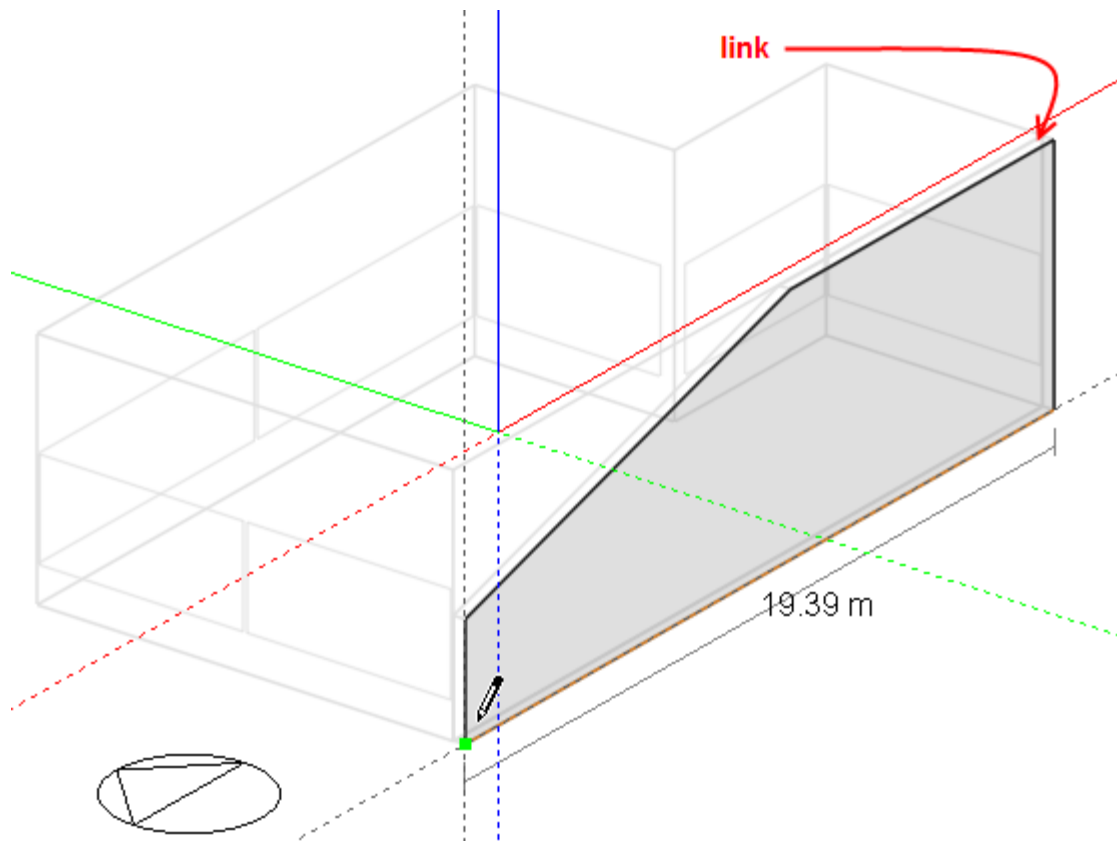

A [hole](#) can be added to the mating surface of this link (the [inter-block partition](#)) in order to form one contiguous space:

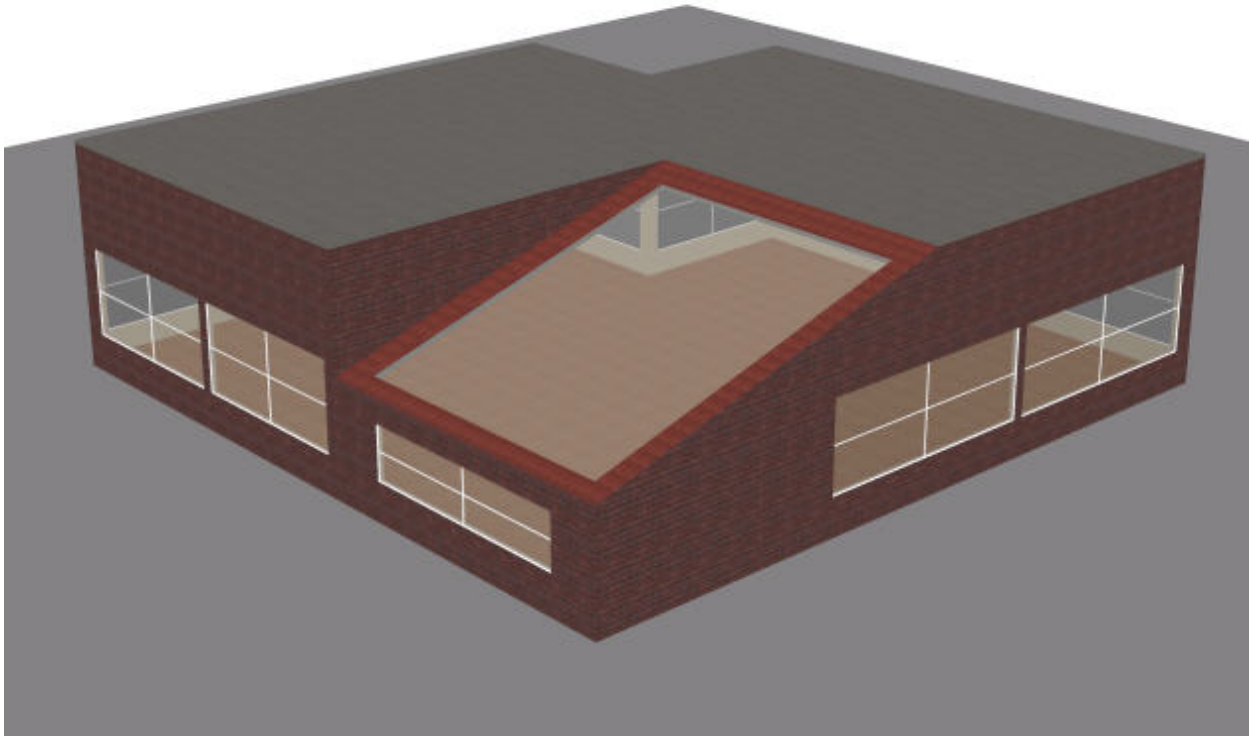


Note: the [Merge zones connected by holes](#) Model option must be set if you wish the two zones in the 2 blocks to be treated as one zone in the thermal calculations.


As already illustrated, a block perimeter can be drawn on the ground plane or onto the surface of an existing block in which case the perimeter is extruded normal to the surface on which it is drawn.

Drawing in a vertical plane without reference to an existing block


To create horizontal extrusions from a vertical plane, the first perimeter line can be aligned with the Z-axis using the [axis snap](#):

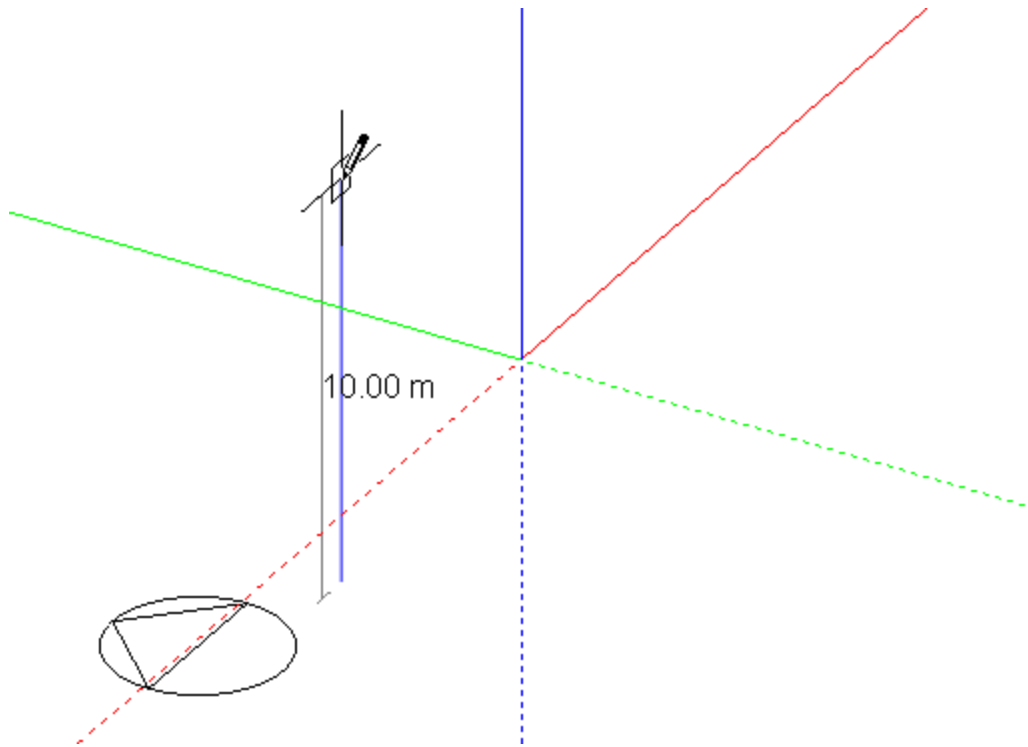


The [protractor](#) can be used to place the second line in order to accurately define the orientation of the plane relative to the base or ground plane:

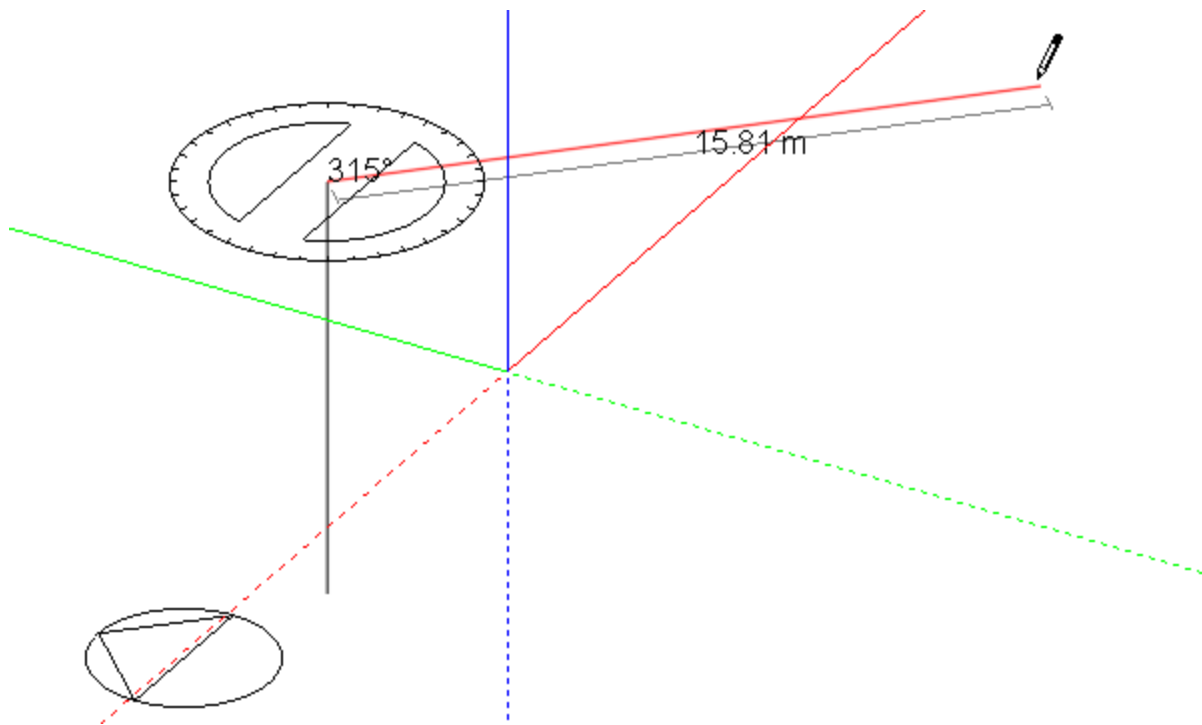

Alternatively, the orientation of the plane can be defined using the first line:

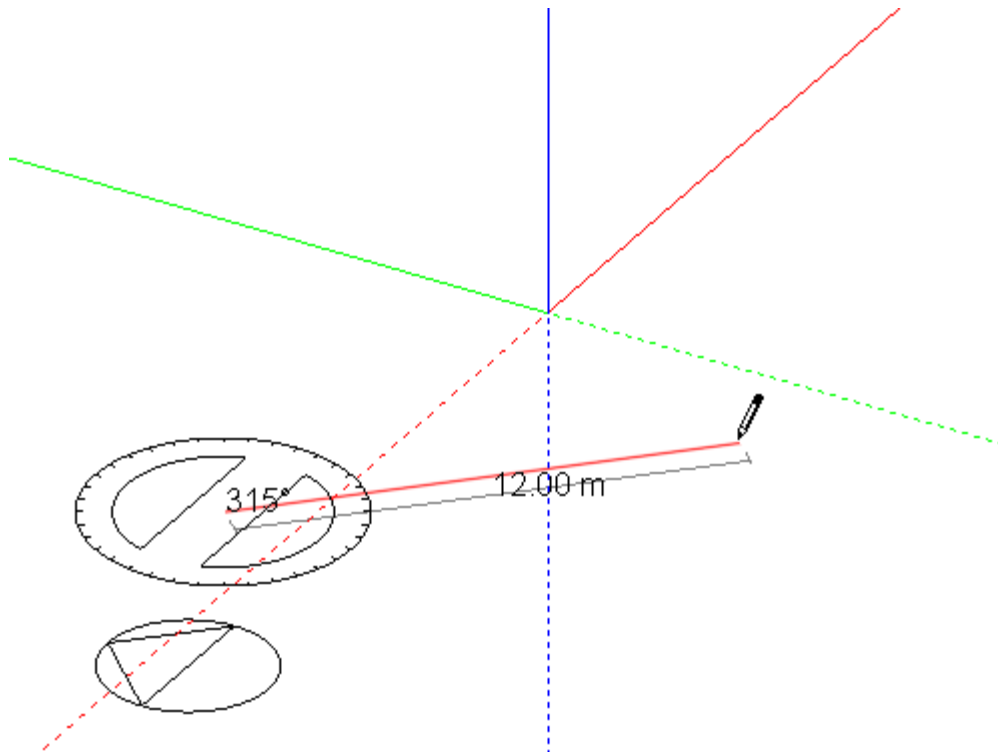


Snapping the second line to the Z-axis then forms the horizontal extrusion:

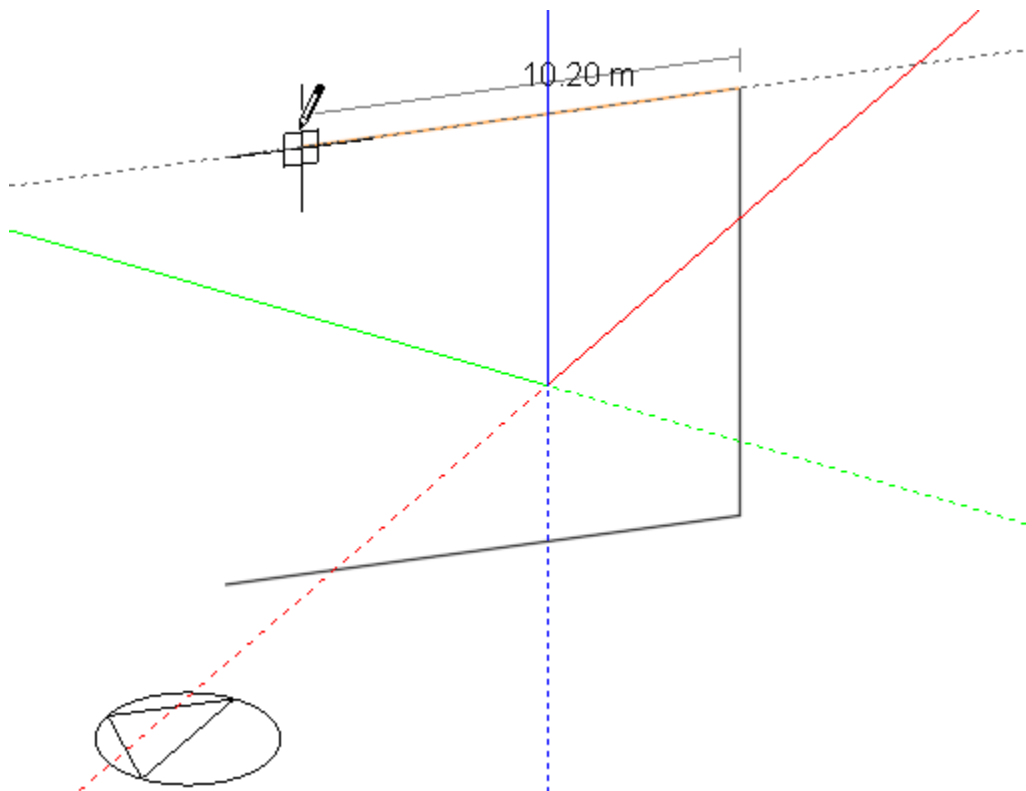


Once a vertical plane has been defined it will be 'remembered' until the 'Add new block' command is cancelled, so the perimeter can be 'unwound' using the ESC key or the right-click menu 'Undo last point'

entry and any perimeter shape drawn into the stored plane:

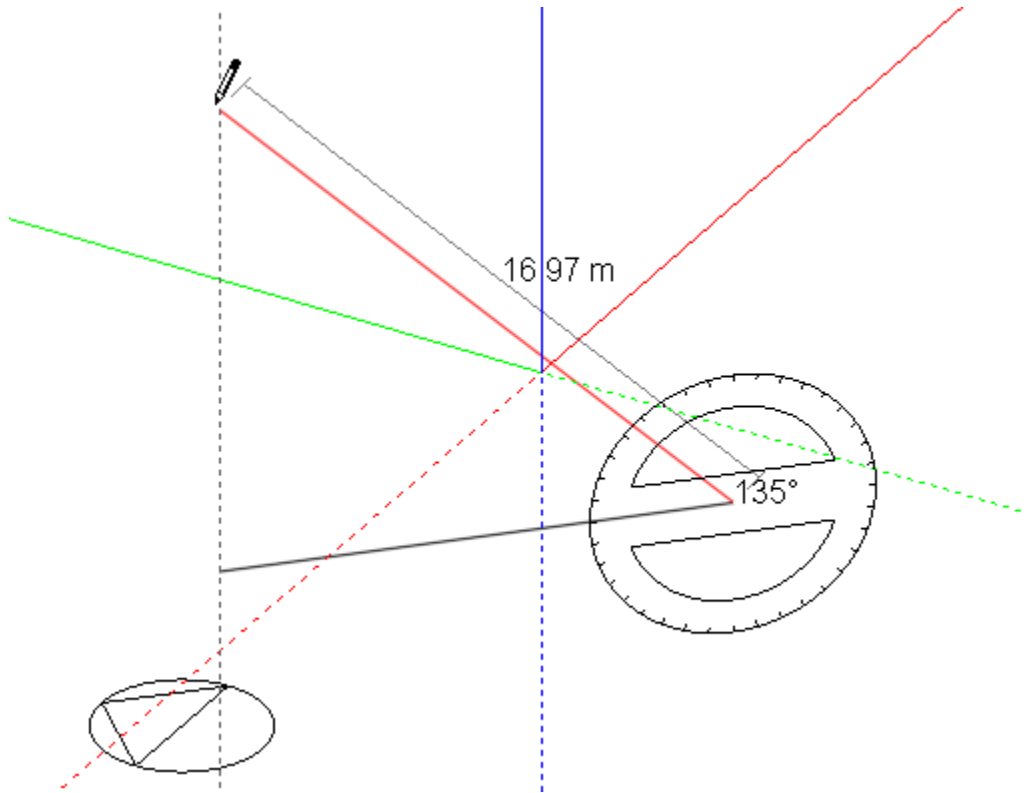

After drawing the last perimeter line to connect to the perimeter start point, the perimeter can then be dragged to create a horizontally extruded block:

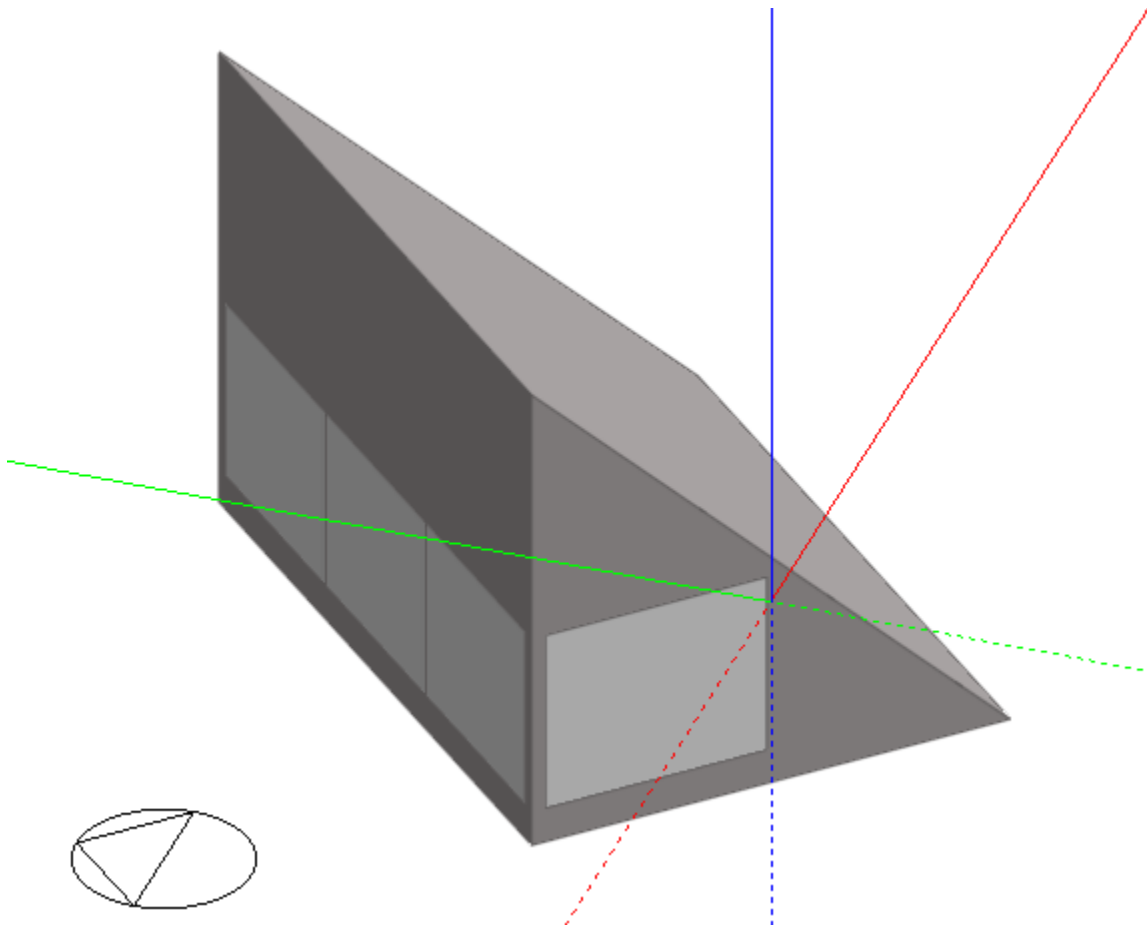

3.2.9.1.1 Block Creation Options

The block creation options enable you to control the way a block is drawn:

- [Block type](#)
- [Form](#)
- [Height](#)
- [Wall Thickness](#)
- [Auto-complete block](#)

These options are accessed through the 'Drawing options' data panel, which is displayed when you click on the [Add new block](#) tool:

Drawing Options

Tools

✓

Geometry

Block type 1-Building block

Form 1-Extruded

Height (m) 3.50

Auto complete block

Perimeter

Shape 1-Polygon

Line type 1-Straight line

Thickness (m) 0.292

Protractor >>

Direction Snaps >>


Point Snaps >>

Drawing Guides >>

Under development

COMBINED CONSTRUCTIONS

The diagram below illustrates how blocks should be defined and how zone volumes and surface dimensions are derived from the parent block when using [Combined](#) constructions.

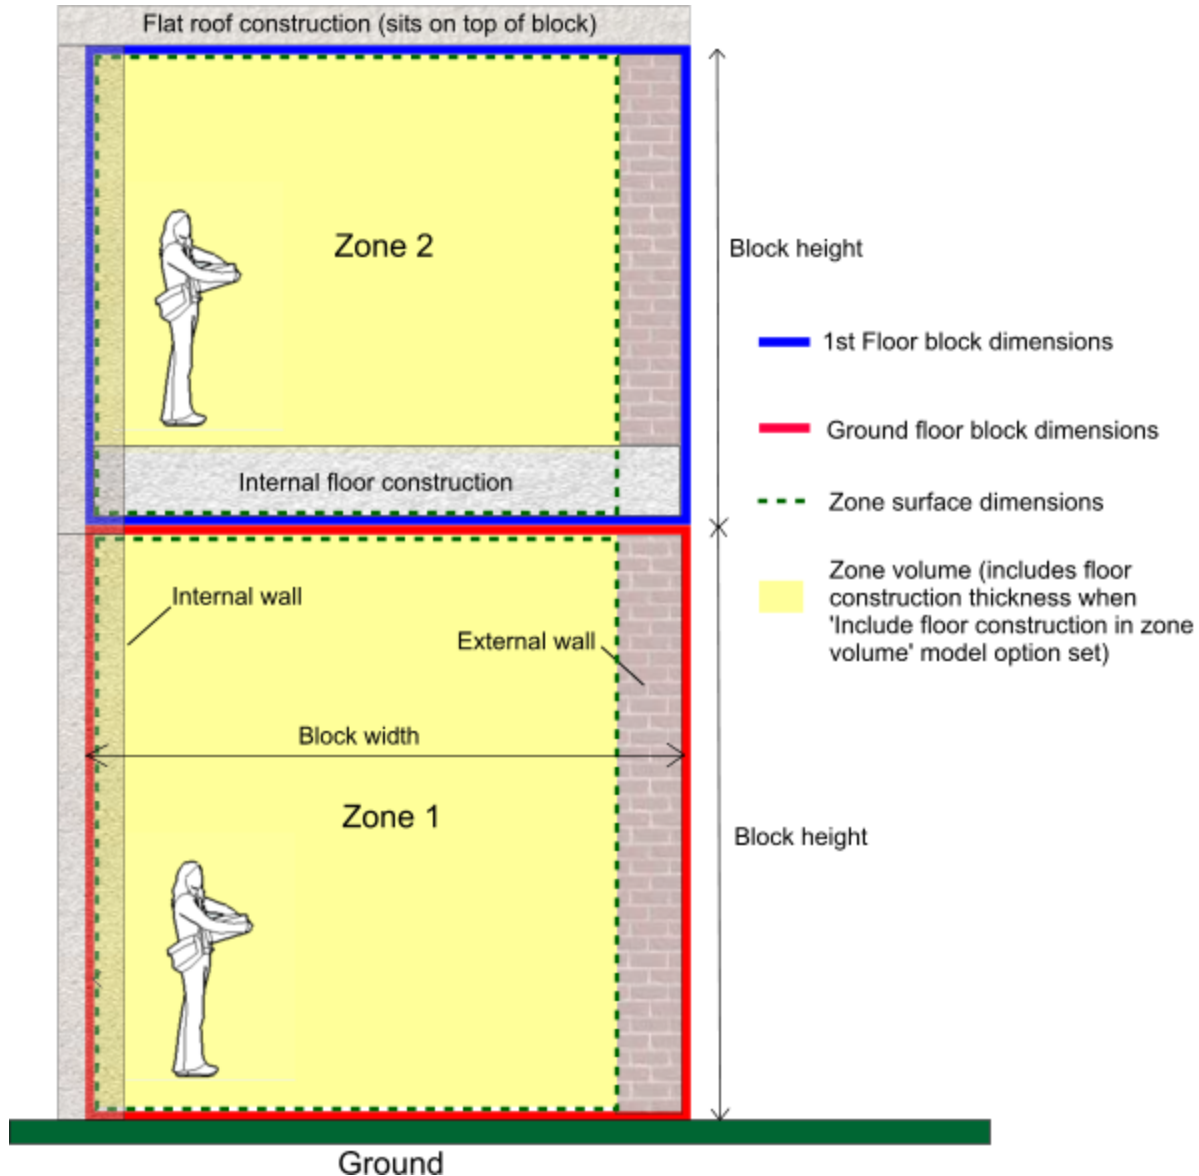


The important things to note are:

1. The dimensions of the block are measured from the outside of external walls..
2. The height of the block is the floor-floor height.
3. Blocks include their own floor slab but not the floor slab of any block above. So the block height is measured from the bottom of the block floor slab to the bottom of the floor slab of the block above.
4. Flat roofs are placed on top of the block - so when drawing a block with a flat roof you should exclude the [roof](#) construction in the height.
5. External floors are placed under the block, so when drawing a block with an external floor you should exclude the [external floor](#) construction thickness in the height.
6. Surfaces extend the full height of the block.
7. Surfaces extend horizontally to the inner surface of external walls and to the centre line of partitions. See below for more on zone/surface dimensions.
8. Zone surface dimensions (shown in green dotted lines above) are measured from inner edges of outer walls and the centre line of partitions.

Show diagram for Separate Constructions

The zone volume used in ventilation calculations is the actual inside volume (shown in yellow in the diagram above). These inside zone surface dimensions are used to define surface heat transfer areas in simulations and other calculations.

Zone perimeter (plan view)

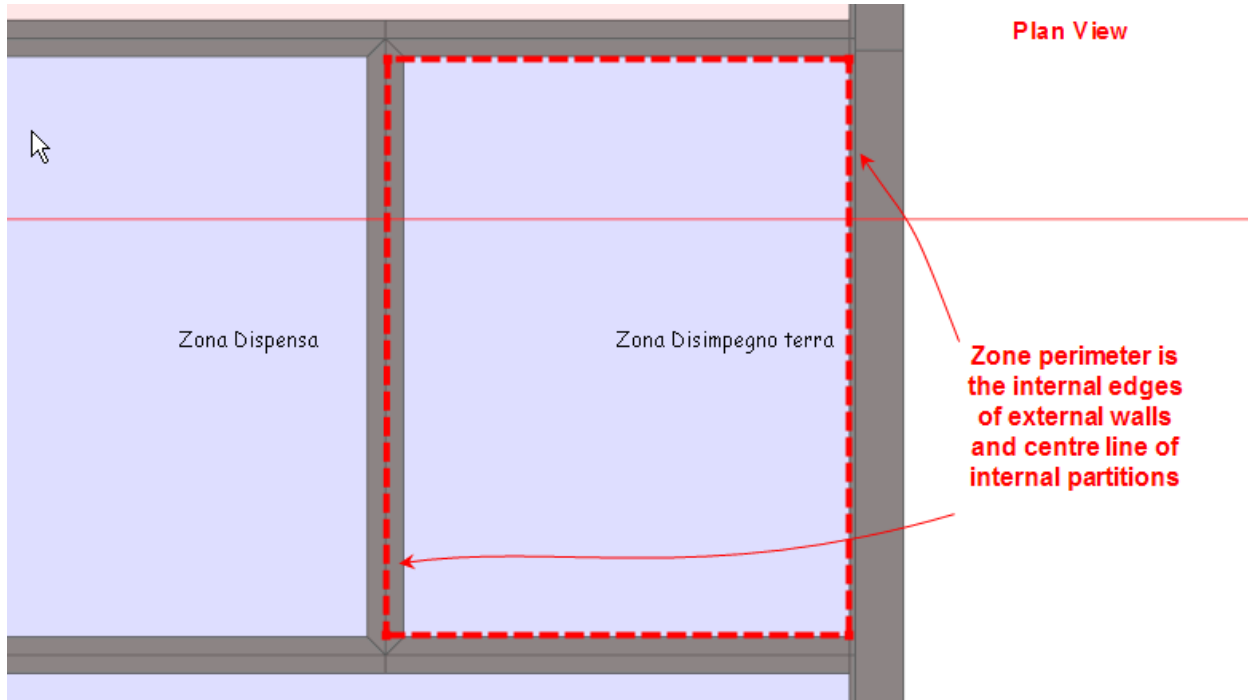


See Construction Location for information on the meaning of the [Construction Model data](#).

Also see [Constructions](#) for how to edit the construction configuration.


Three types of block are available:

- [Building Blocks](#) are used to draw the model or a section of the model.
- [Outline Blocks](#) are used to help in the creation of building block geometry and do not affect the model.
- [Component Blocks](#) are used to create visual and shading structures which do not contain zones.


A building block represents the outer shell of the model or part of the model. A finished block comprises a set of building elements, which may include external walls, roofs and floor slabs, the constructions of which are determined from the current building [construction model data](#). Similarly, using [opening model data](#), block facades are automatically created with the required configuration of windows, doors, vents and solar shading devices:

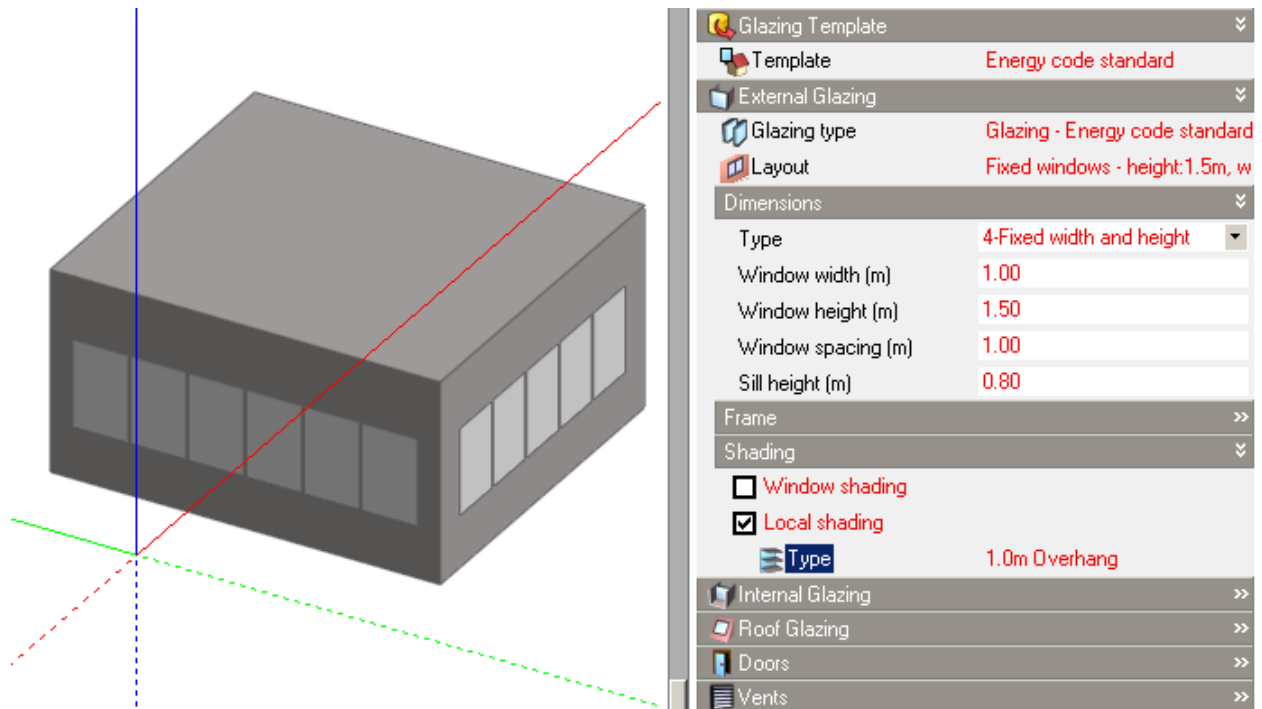


Solar shading devices are displayed in the [visualisation](#) screen:

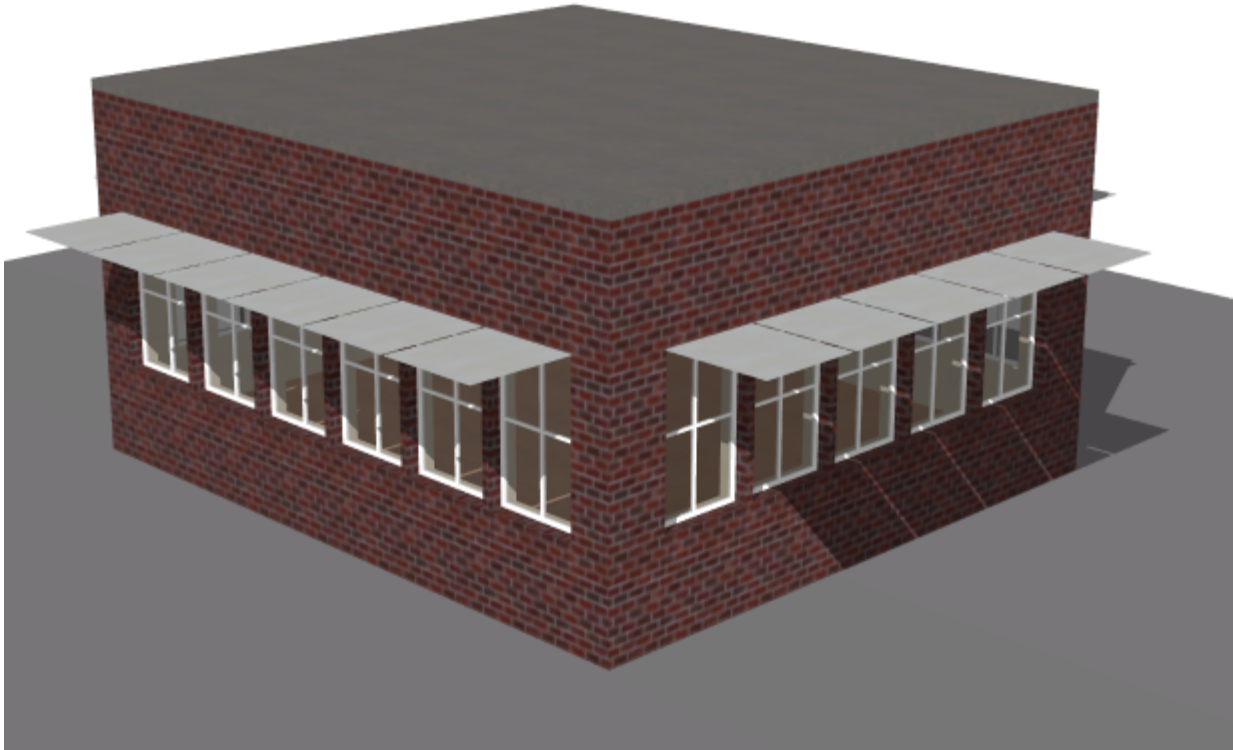

A block may be divided internally into any number of zones by drawing [partitions](#) and where needed, voids or [courtyards](#) can also be incorporated:

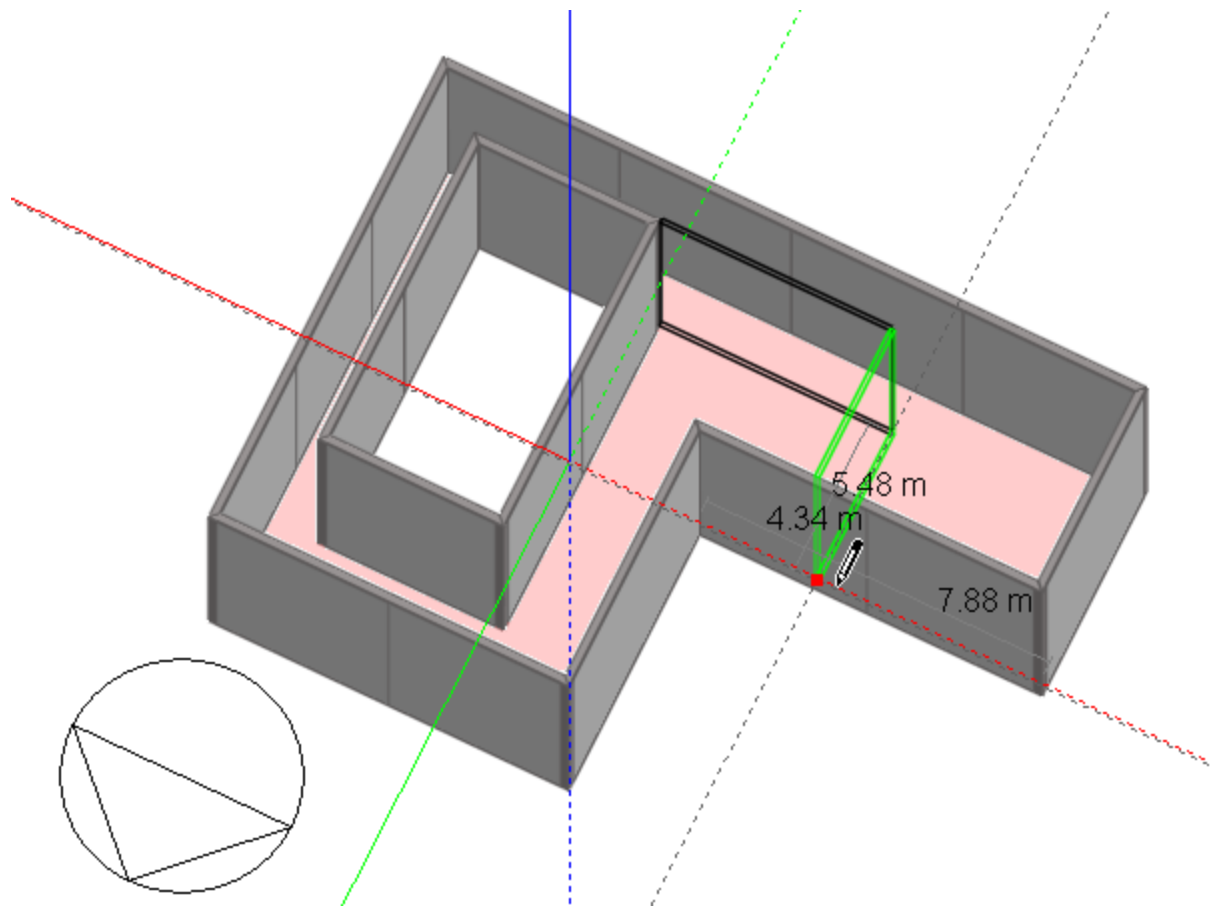

Custom [openings](#) (windows, doors, etc.) can be added to block facades by going to the surface level and using the 'Draw window' family of commands.:

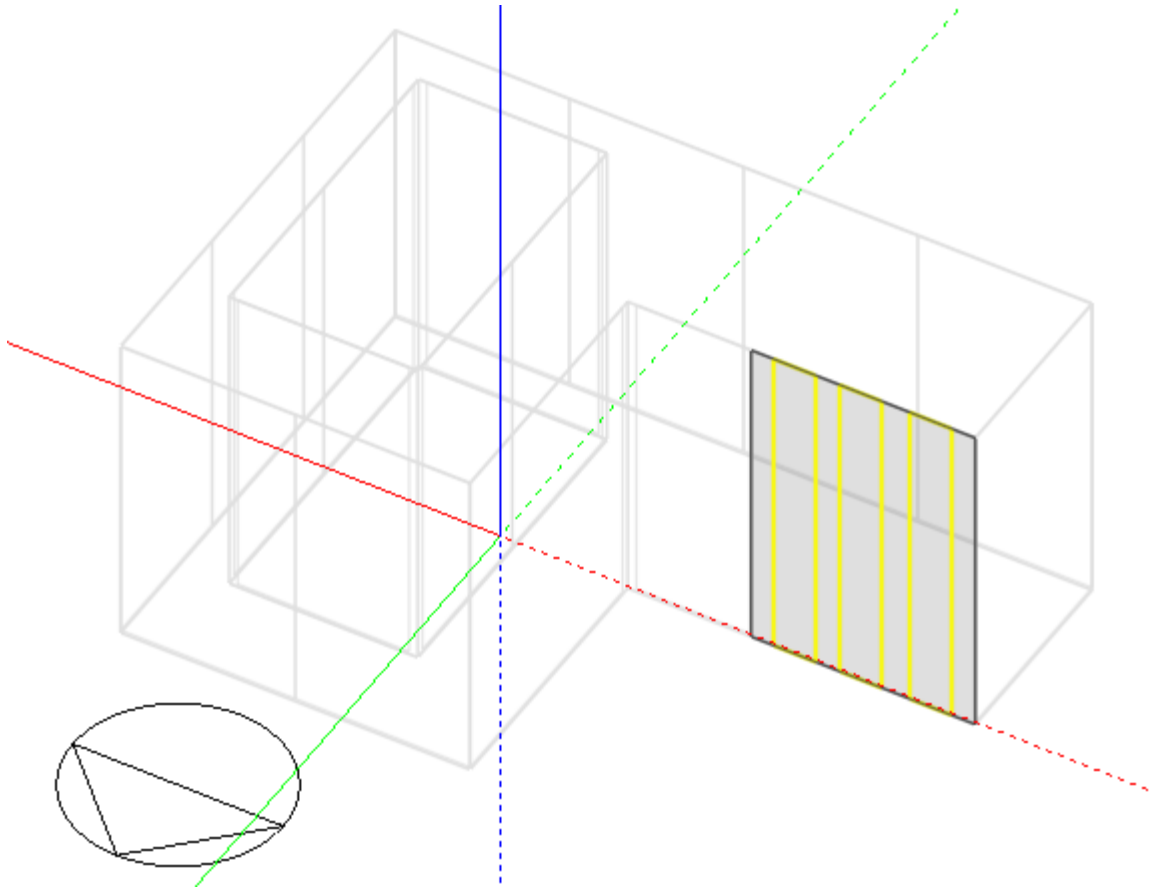


Blocks can be [moved](#), [copied](#) and [rotated](#). Blocks can also be [cut](#) or [stretched](#) and block faces can be [dragged](#) to different positions.

An outline block is created and edited in exactly the same way as a building block but is just a 3-D shape without associated building elements such as walls, floors, roofs, etc.



Because Outline blocks are not part of the model they do not appear in the Navigator panel.

Outline blocks are very useful in the creation of more complicated models. Because they are relatively simple objects, they are much faster to create, copy, move, etc. than conventional building blocks and can be manipulated freely without worrying about intersections. Once the required geometry has been established, outline blocks can be converted to conventional blocks. Outline blocks can also be used as a temporary device to create drawing planes from which building blocks or other outline blocks can be extruded. You can remove all outline blocks from a model by selecting **Remove all outlines** from the [Edit](#) menu.


For example, to create a dormer window:

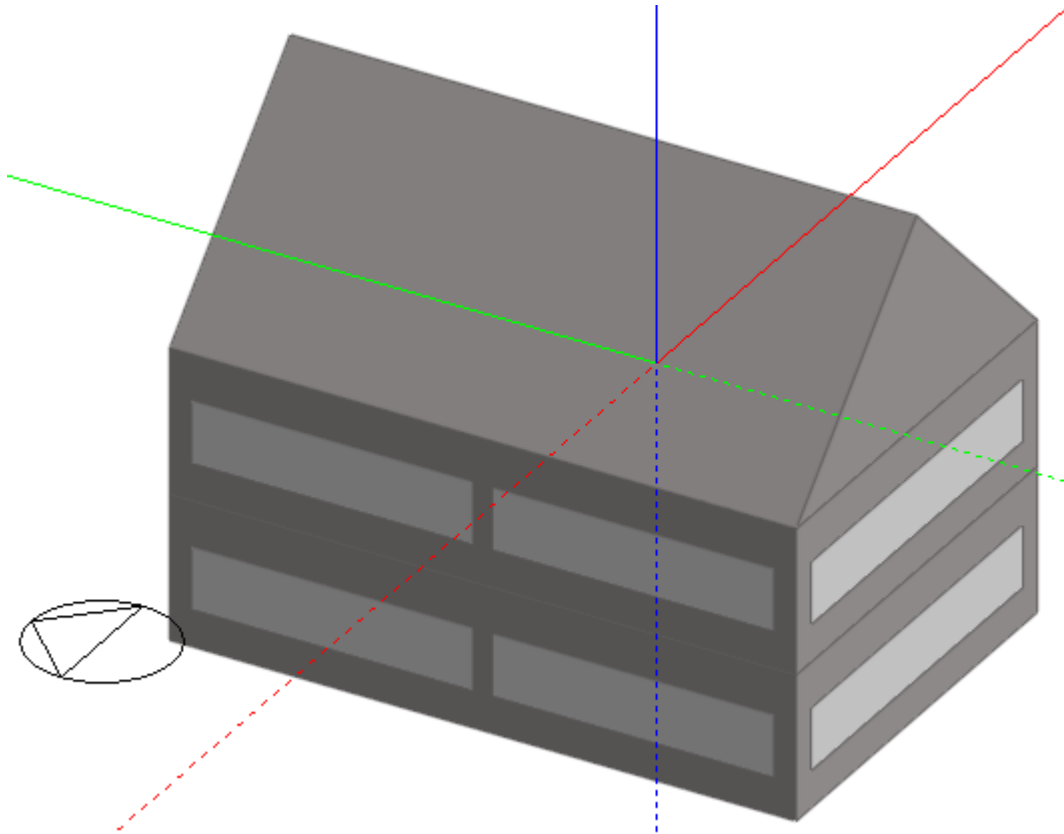


First set the Block type to 'Outline block' and lock the active drawing plane to the front surface of the first floor block by selecting it and pressing the SHIFT key, then draw the base line of the dormer face perimeter:

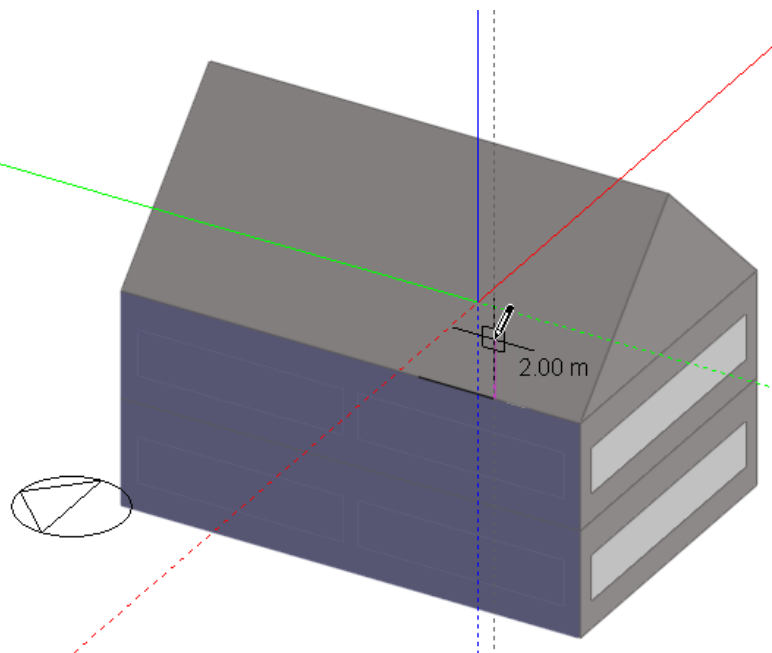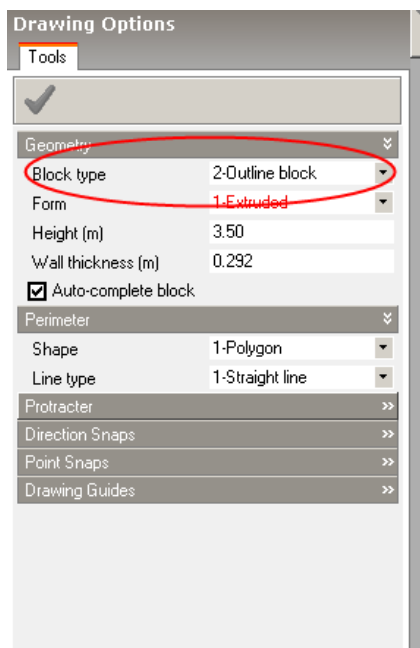


Create the angle of the dormer pitch using the Protractor:

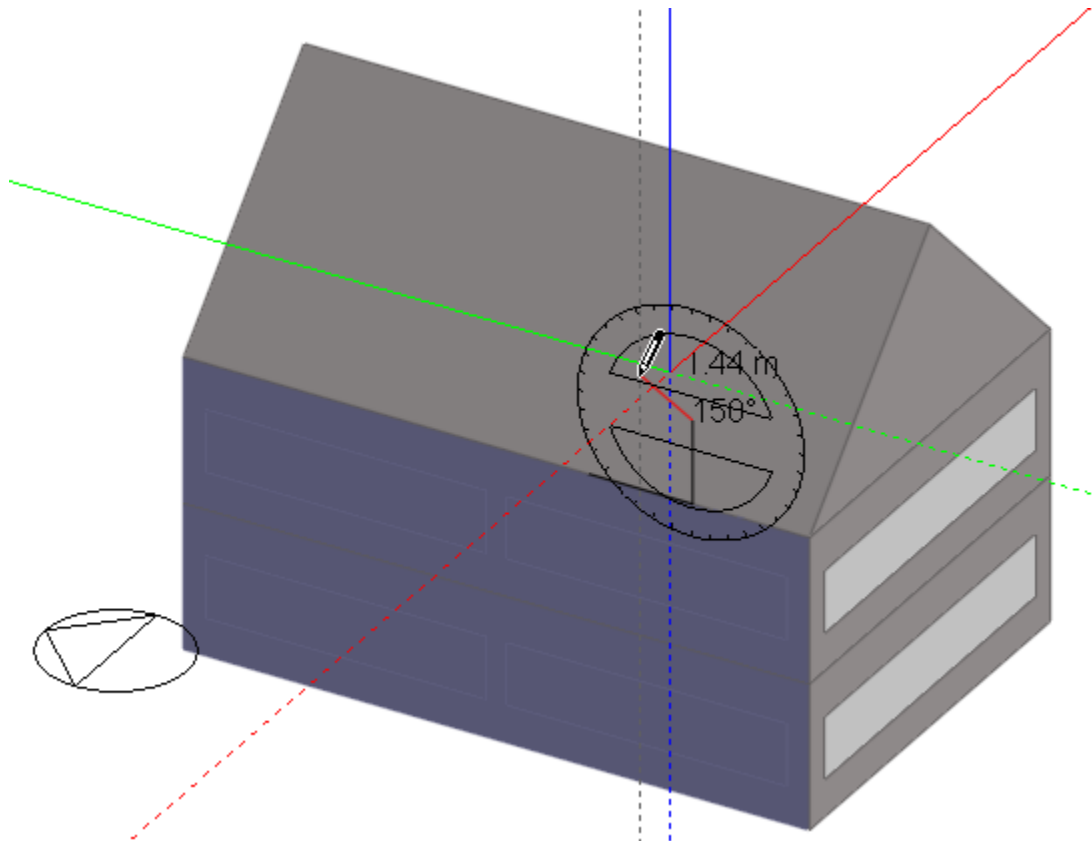


and then complete the perimeter:

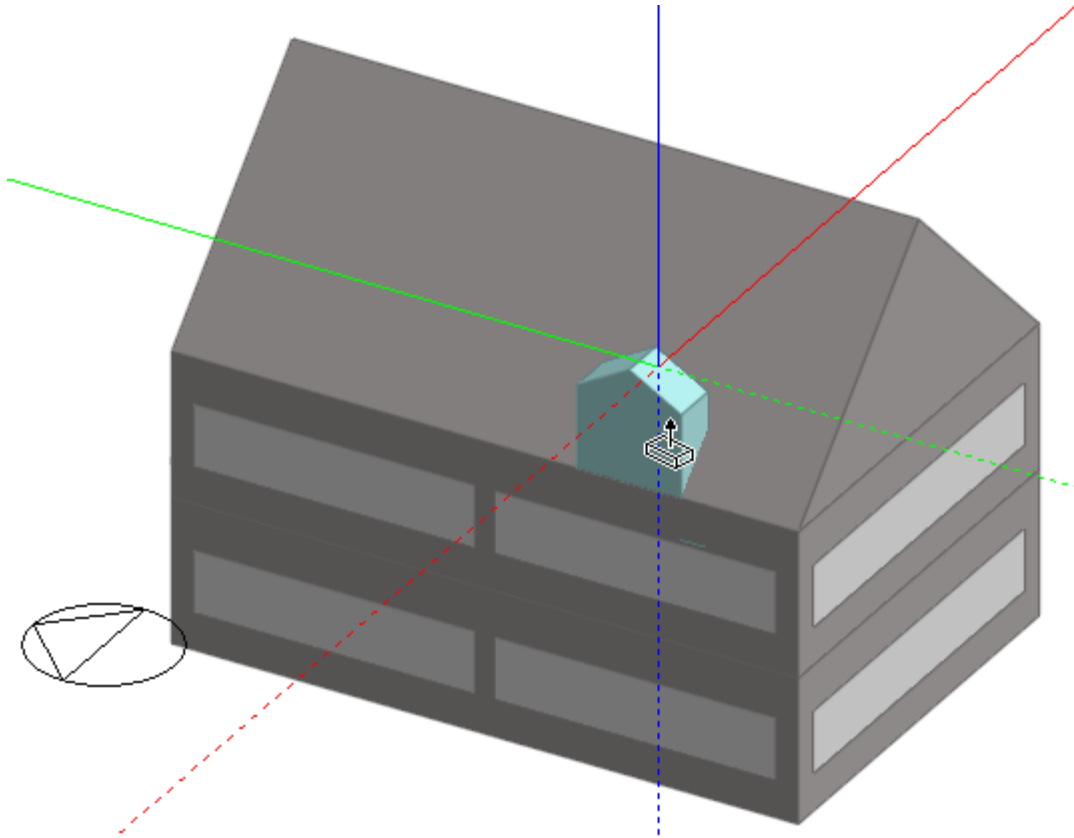


Now drag the dormer perimeter all the way through the main roof block:

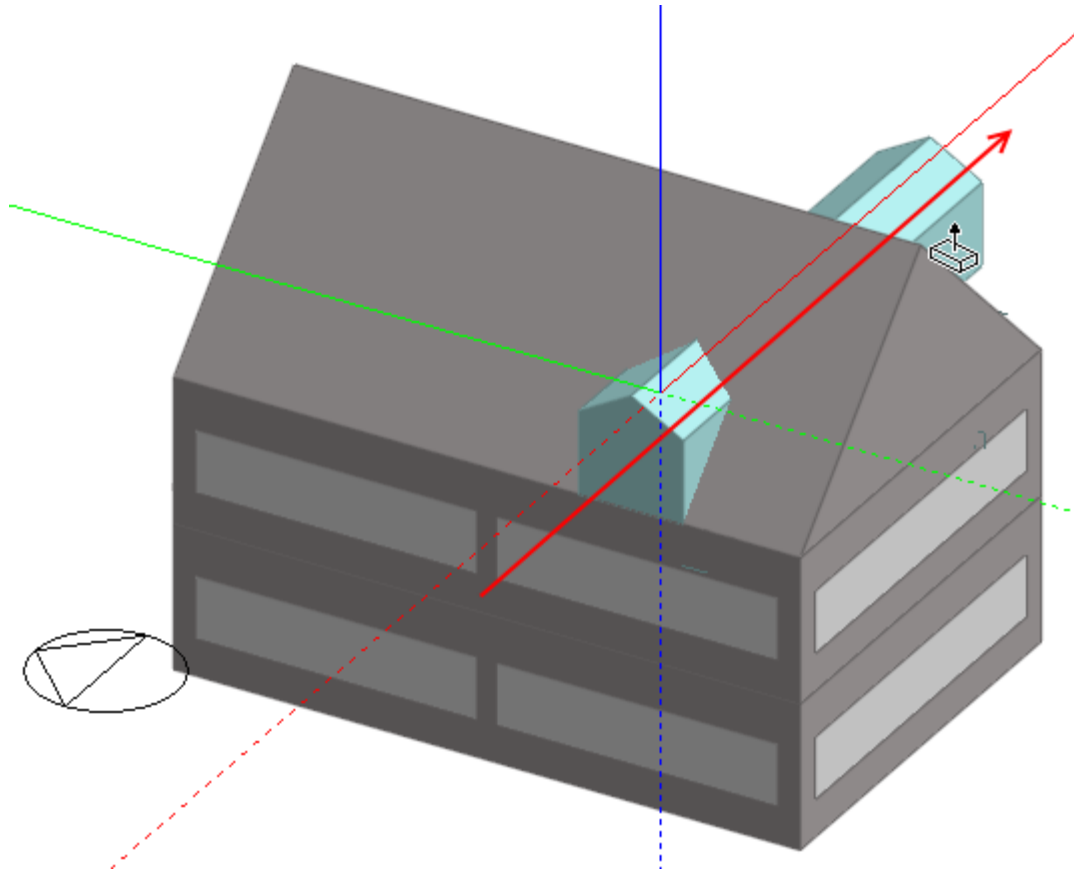


Select the dormer block and click on the [Divide block](#) tool, making sure that the 'Cutting method' on the 'Drawing options' data panel is set to 'Select plane' and click on the forward facing plane of the main roof block to create a cut in the dormer block in the plane of the roof:

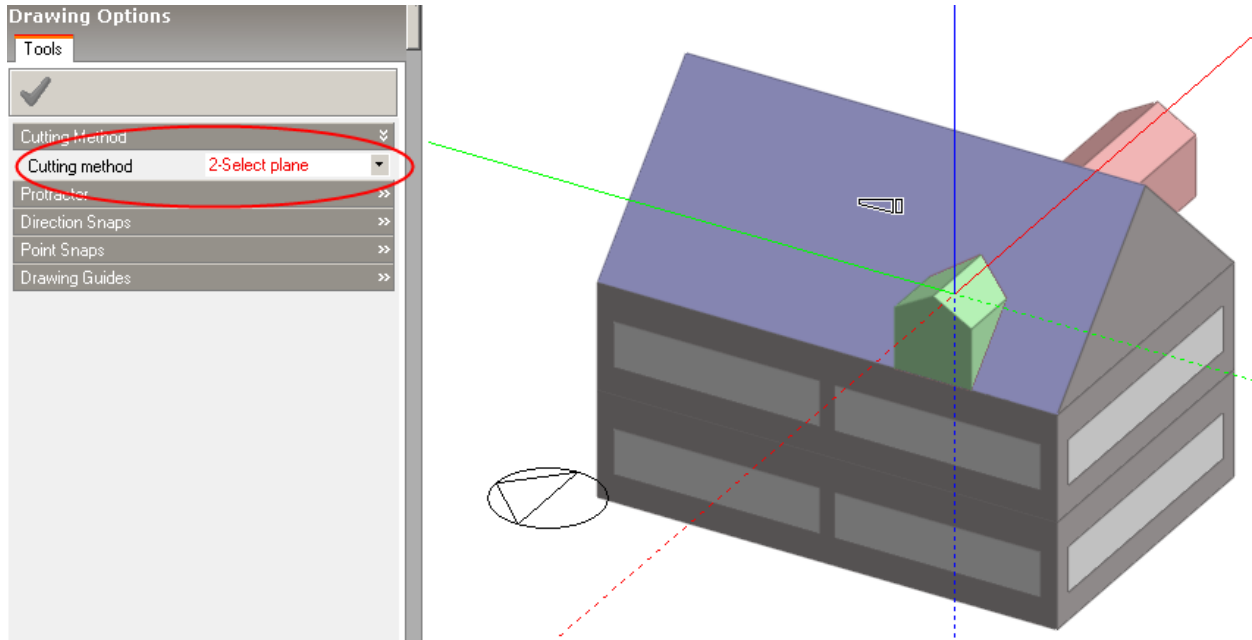


Click again to finish the cut and then select the section of the dormer block that is not required and delete it:

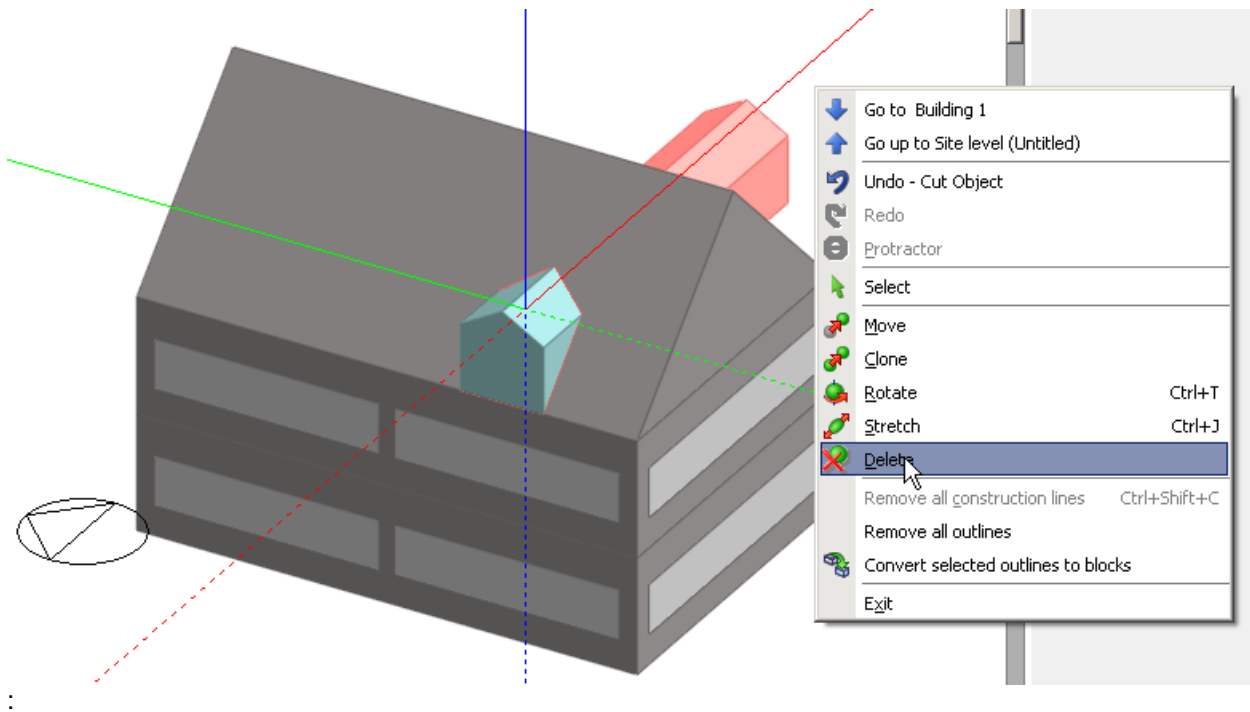

Select the dormer outline block and click on the [Convert outline block](#) tool to complete the process:

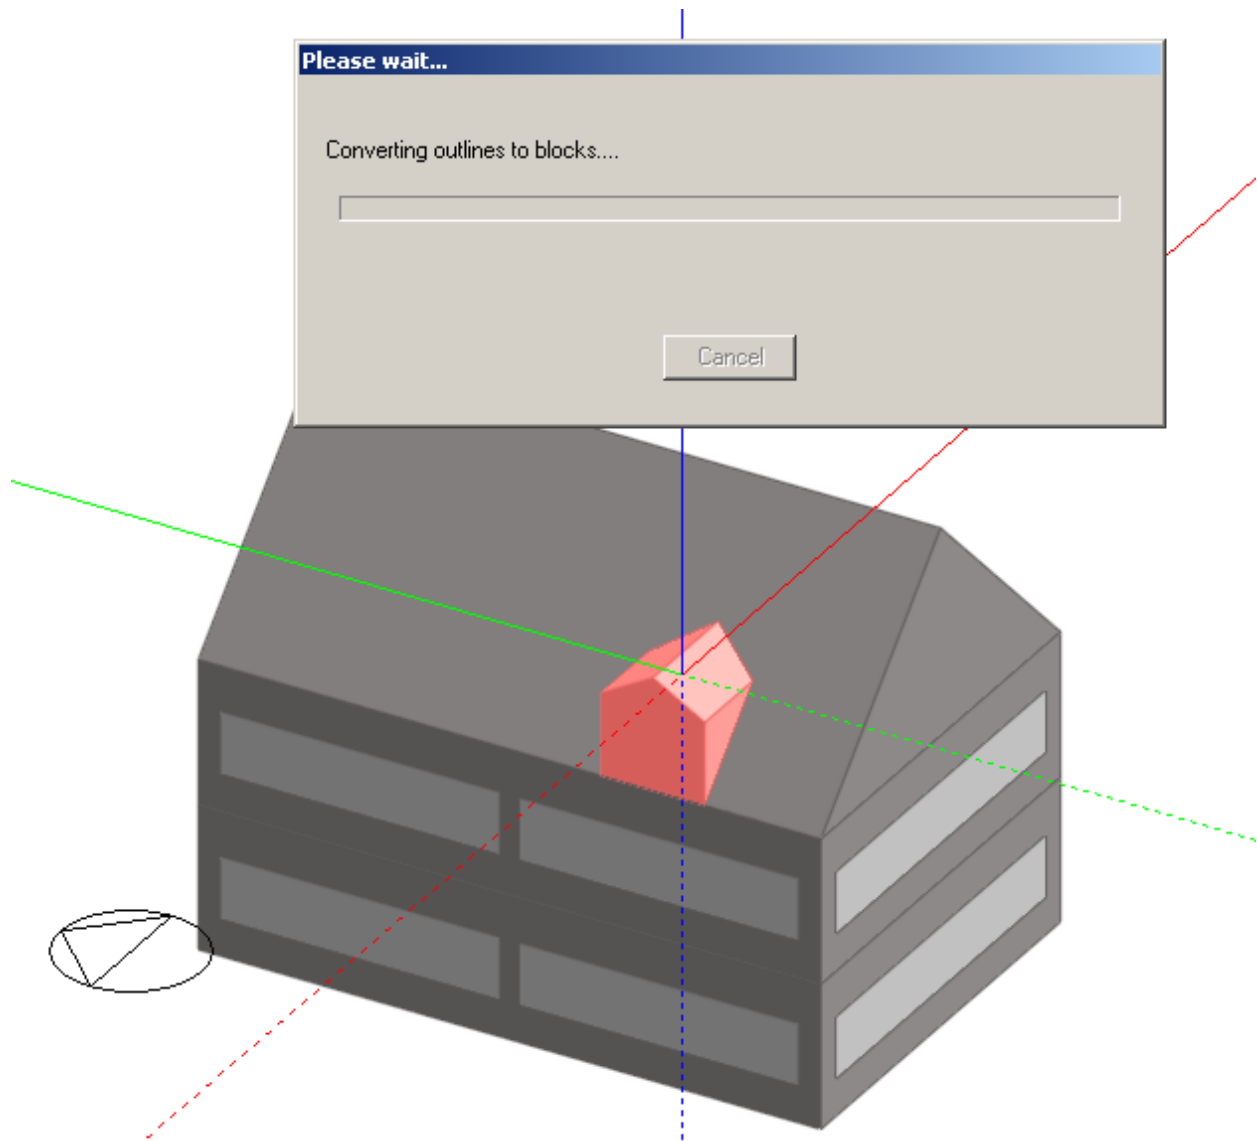

The finished block after adding openings:

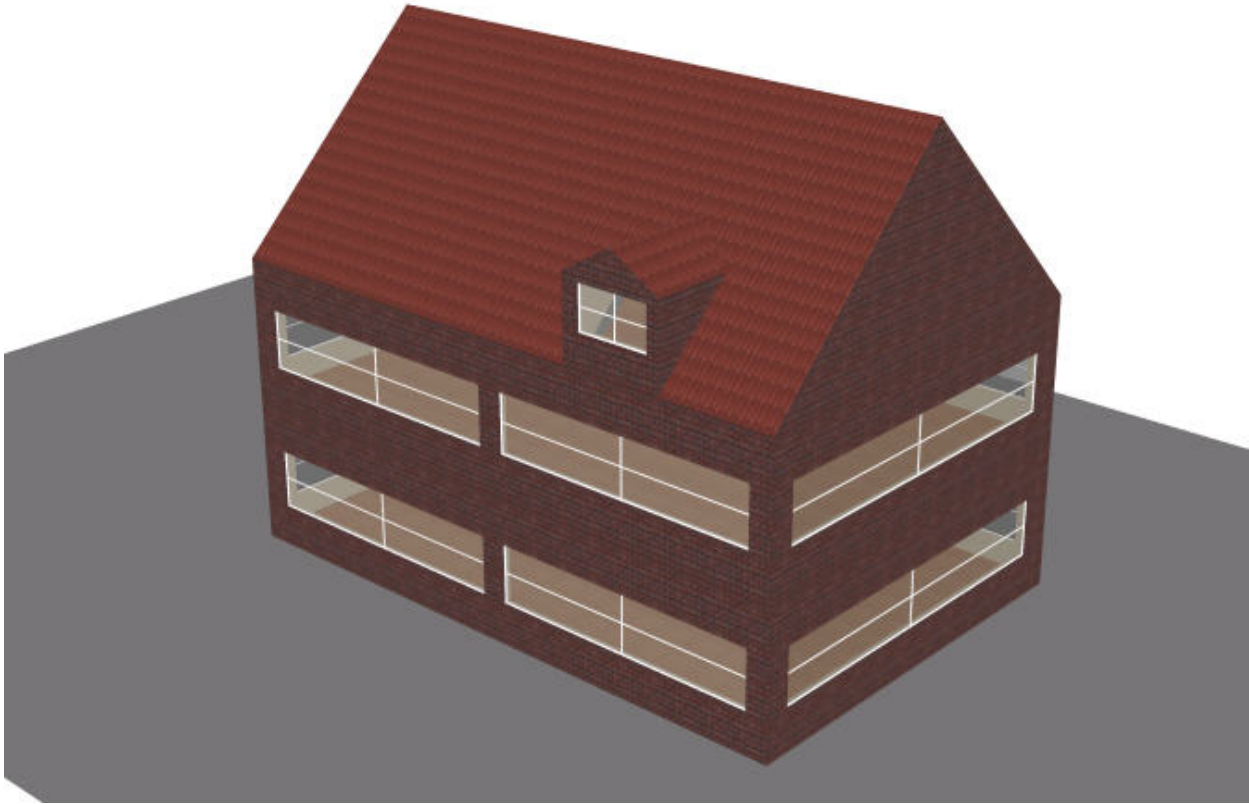

Note: Sometimes when converting outline blocks to component or building blocks you will notice that the new block has a very slightly different size to the original outline block. This can happen when DesignBuilder needs to slightly adjust the size in order to generate a viable zone with 3-D slab surfaces. It is therefore advisable when using outline blocks to create complex geometries to draw and convert the outline blocks individually. This avoids adjacencies between touching outline blocks from getting 'broken' when they are converted 'en-masse'.

There are 3 types of component block:

- **1-Standard** - used for shading, reflection and visualisation.
- **2-Ground** - used for setting ground adjacency, shading, reflection and visualisation.
- **3-Adiabatic** - used for setting adiabatic adjacency, shading, reflection and visualisation.

Component blocks are drawn in the same way as Building blocks but selecting the [Block type](#) in the Drawing Options panel as **3-Component block**.

Each Component block has its own Component block material, transmittance schedule and shade/not shade [model data](#). To edit this you must first go to the component block itself by double-clicking on it in the model edit screen or clicking on the entry in the Navigator. Alternatively, component blocks inherit default model data from the building level so if you leave the component block model data in its default state (blue) you can change all model data in one go by making the edit at the building level.


All component blocks cast shadows in [Visualisations](#).

STANDARD COMPONENT BLOCK

Sometimes it can be useful to create structures such as pillars, shading obstructions and balconies which do not contain zones. **Standard component blocks** can be used for modelling such structures as they are treated simply as shading/reflection surfaces in simulations without any zones.

Standard component blocks are visible in [Visualisations](#), using the texture associated with the [Component block material](#) as set on the [Constructions tab](#) under the Component Block header. They can be used to cast shadows and reflect solar radiation and light in simulations by checking the [Component block shades and reflects](#) model data under Component Blocks on the Constructions tab.


The image below shows some typical uses of Standard component blocks.

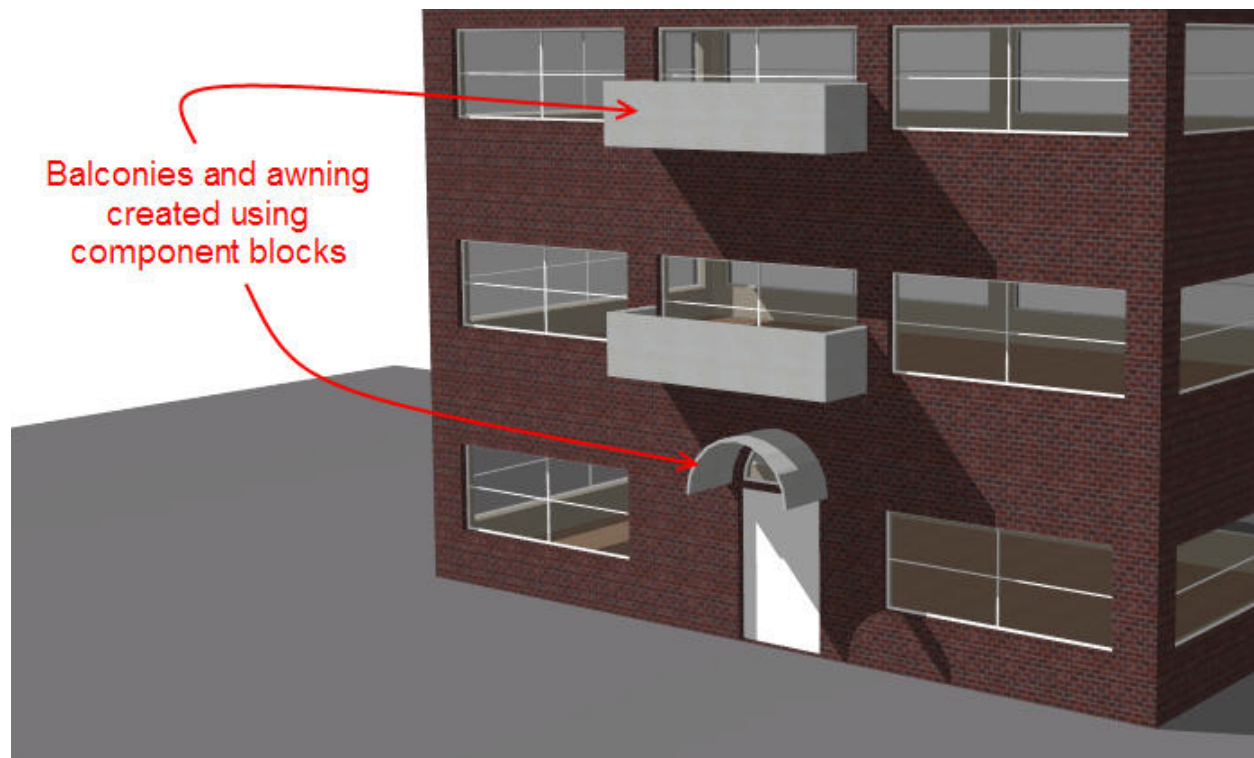

GROUND COMPONENT BLOCK


Ground component blocks can be used as a convenient way to set the adjacency of any touching building block surfaces as being 'adjacent to ground'. In the model below the Ground block (shown in green) has been positioned in contact with the building block to create a ground adjacency in the part of the Building block surface in contact with the Ground block.

Standard component blocks are visible in [Visualisations](#), using the texture associated with the [Component block material](#) as set on the [Constructions tab](#) under the Component Block header. They can be used to cast shadows and reflect solar radiation and light in simulations by checking the [Component block shades and reflects](#) model data under Component Blocks on the Constructions tab.

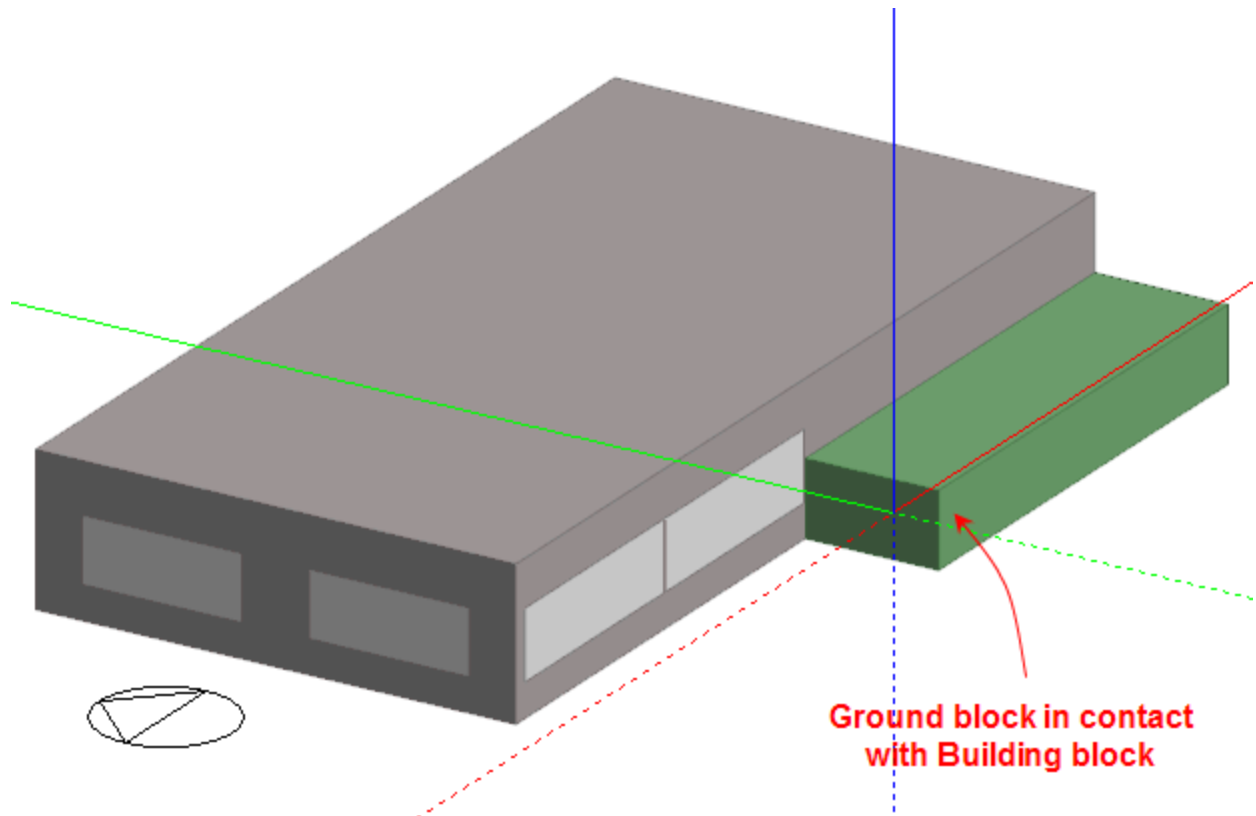

Ground block in contact with Building block

View from building level

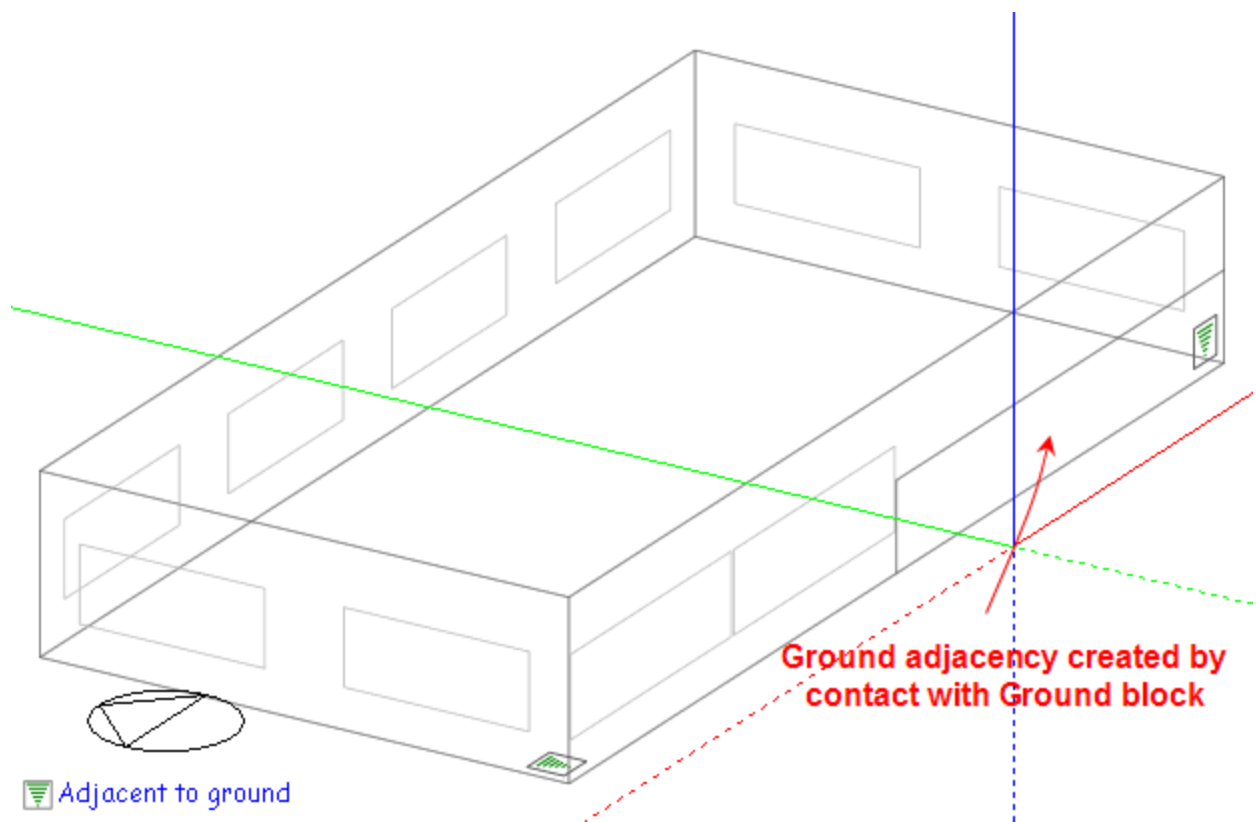

Ground adjacency created by contact with Ground block

 Adjacent to ground

View from zone level

Ground component blocks are displayed in the visualisation screen using the [Ground texture](#) as set at the site level.


More information on ground modelling can be found in the [Ground Modelling](#) topic.


Note: The adjacencies established by contact with ground blocks can be overridden by making settings under [Adjacency](#) in Constructions model data at the surface level.

ADIABATIC COMPONENT BLOCKS

Adiabatic component blocks can be used as a convenient way to set the adjacency of any touching building block surfaces to 'adiabatic'. Adiabatic surfaces do not transfer heat beyond their outer surface and are often used for modelling boundaries with other spaces that can be considered to be at roughly the same temperature as the zone. In the model below the Adiabatic block (shown in red) has been positioned in contact with half of the South facade of the building to model the effect of an adjacent building which does not form part of the DesignBuilder model. The touching adiabatic component block creates an adiabatic adjacency in the part of the Building block surface in contact with the Adiabatic block.

Standard component blocks are visible in [Visualisations](#), using the texture associated with the [Component block material](#) as set on the [Constructions tab](#) under the Component Block header. They can be used to cast shadows and reflect solar radiation and light in simulations by checking the [Component block shades and reflects](#) model data under Component Blocks on the Constructions tab.

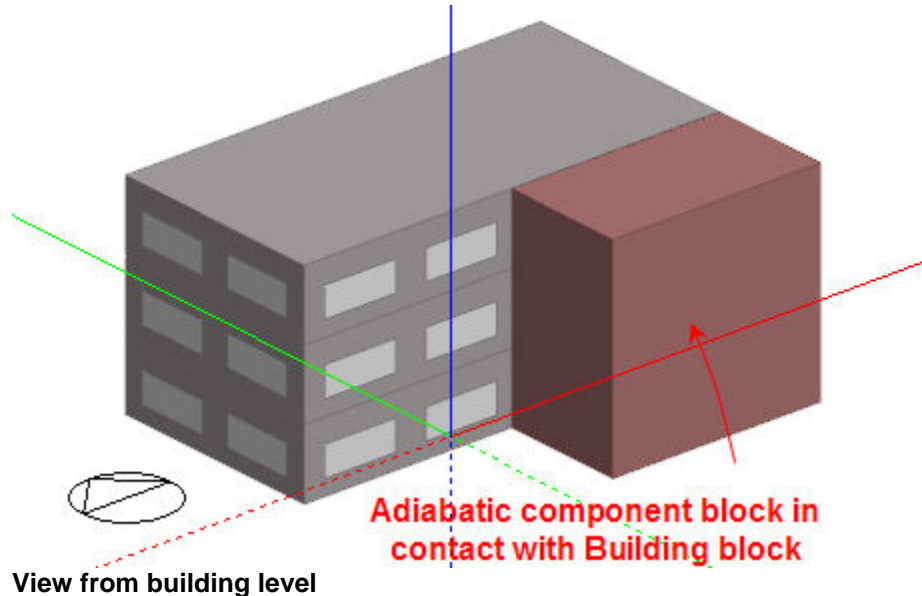

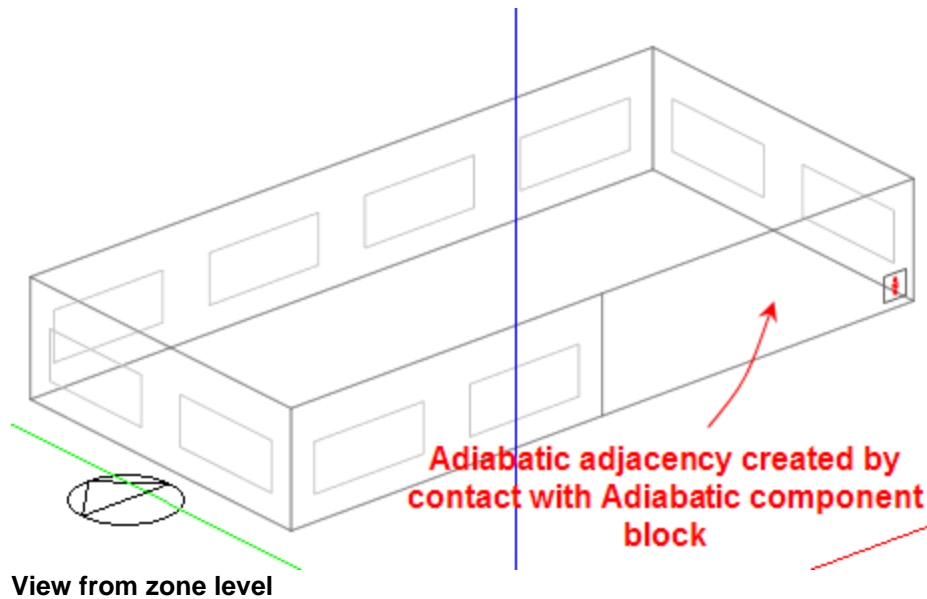


Some standard block forms are provided to facilitate the creation of blocks representing specific building geometries:

- [General extrusion](#)
- [Sloped wall](#)
- [Pitched roof](#)
- [Dome](#)


You can select the block form from the Drawing Options data panel in the bottom left of the screen when the Draw Block command is active.

Once a block has been created, it is possible in some cases to [change to a new form](#) by navigating to the block and opening the [Model options](#) dialog.


The general extrusion [block form](#) is probably the most useful form. You create a general extrusion block by drawing a [perimeter](#) using a number of pre-defined shapes and then extruding the perimeter by whatever distance is required. If you use the polygon perimeter [shape](#) you can create extrusions in both horizontal and vertical planes (or even in sloped planes).

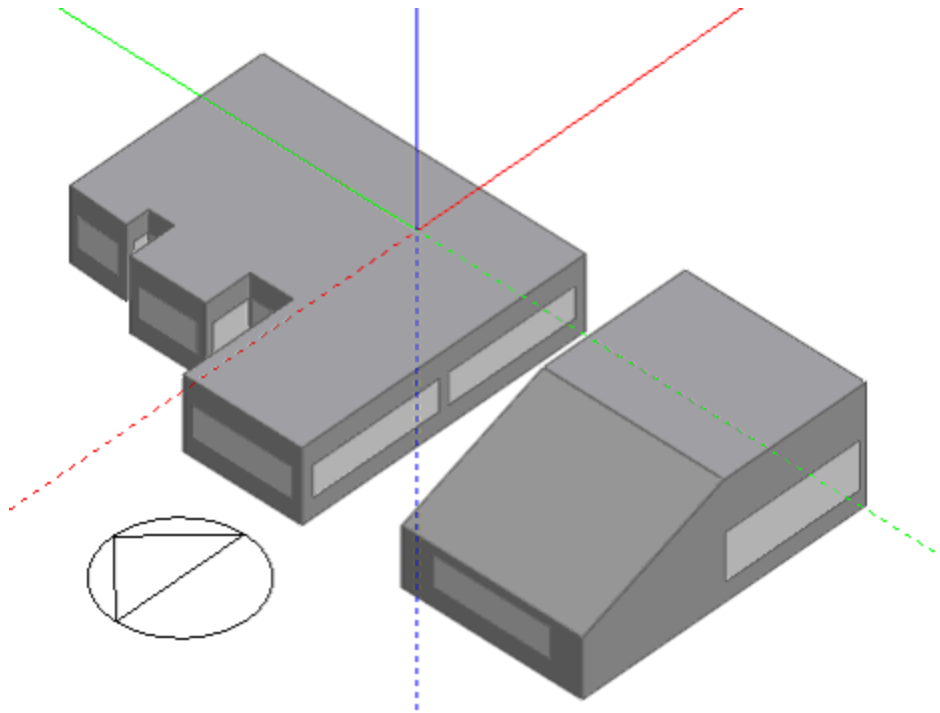



The various methods of drawing general extrusions are explained under [Adding Blocks](#). Circular and rectangular perimeter shapes are used to create cylindrical and rectilinear prismatic extrusions from horizontal planes:

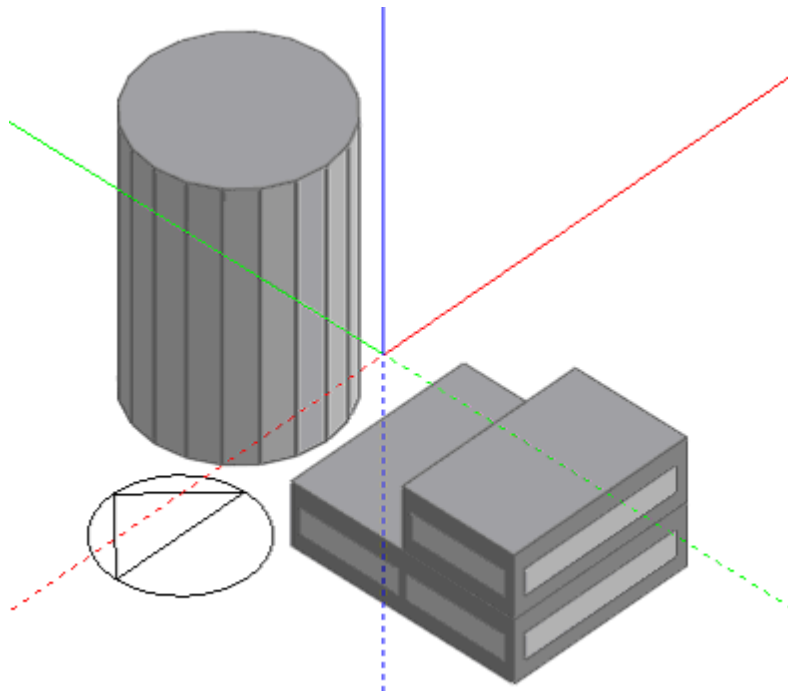


This [block form](#) is used to create blocks on horizontal planes with uniformly sloping walls. Sloping wall blocks can be created using any perimeter shape (polygon, rectangle or circle):

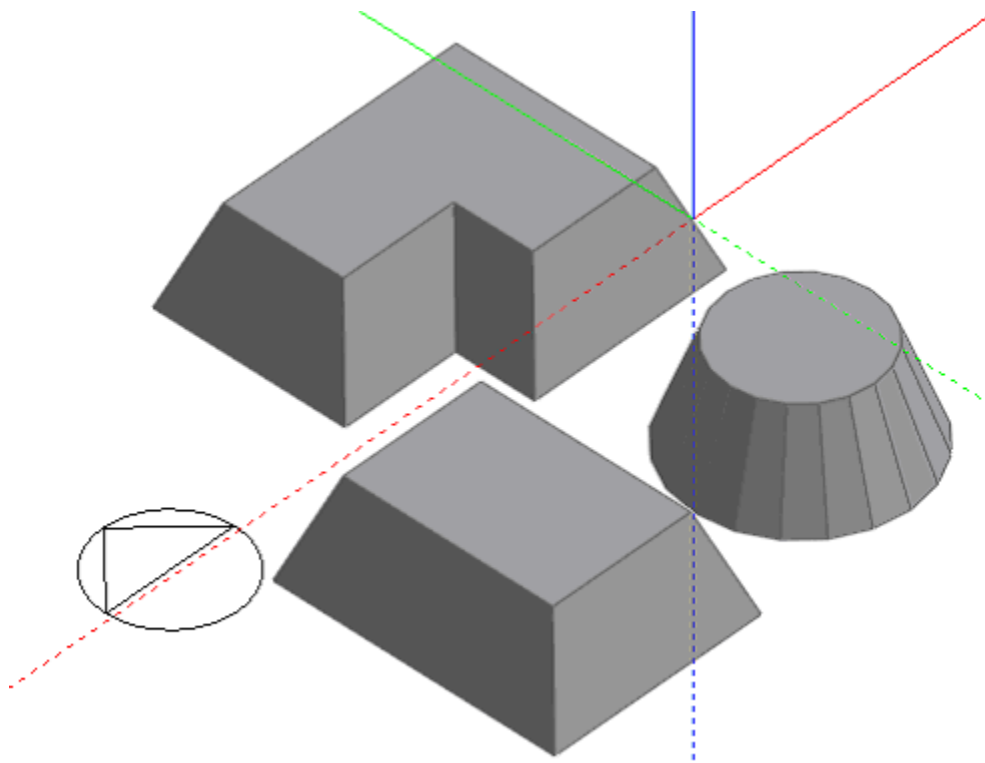


The wall angle is defined using the 'Slope' setting in the 'Drawing options' data panel and the blocks are automatically truncated by the 'Height' setting:

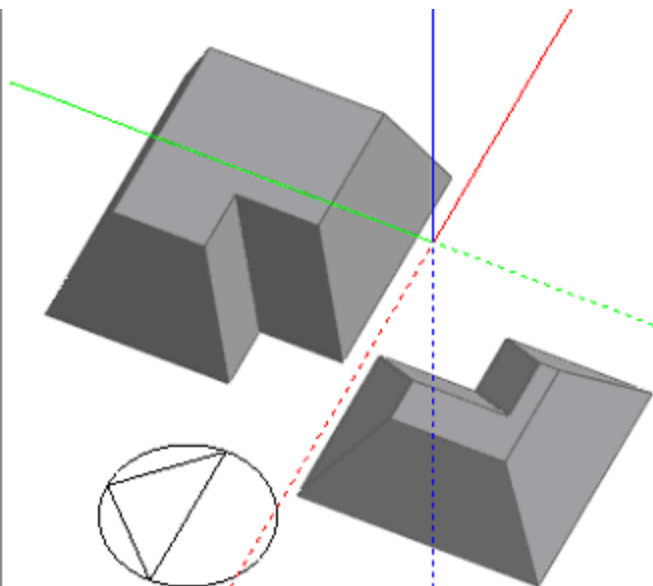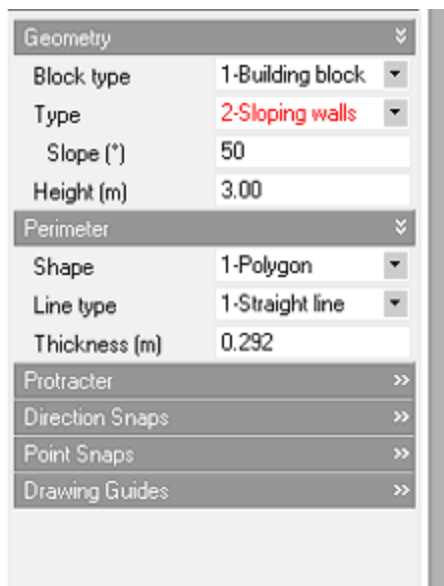


The pitched roof [block form](#) automatically generates a pitched roof from a perimeter drawn on a horizontal plane. Pitched roof blocks can be created using any perimeter shape (polygon, rectangle or circle):

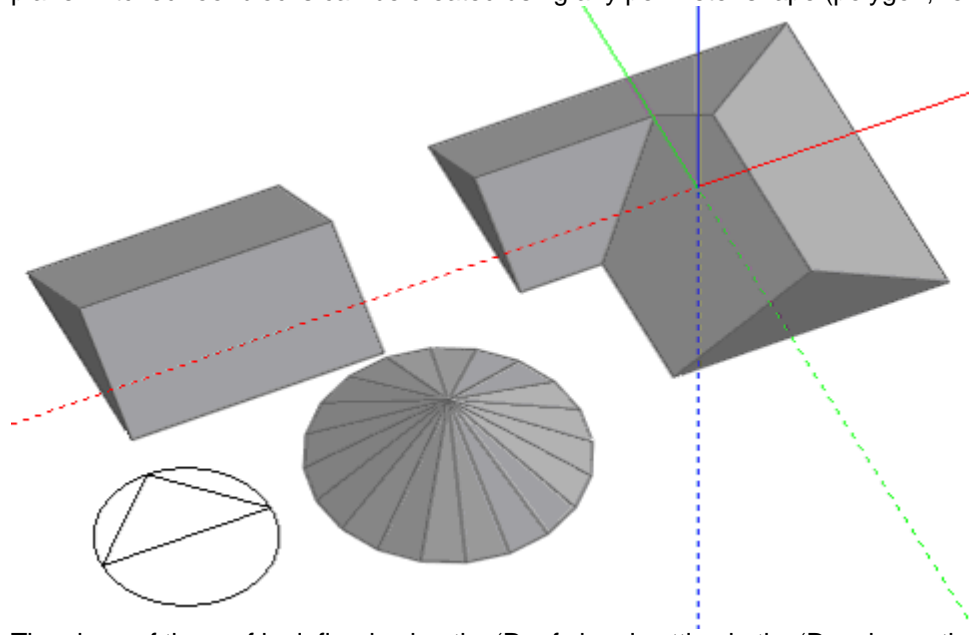

The slope of the roof is defined using the 'Roof slope' setting in the 'Drawing options' data panel. A pitched roof can be created with hips or gable ends using the 'Gable Roof' setting:

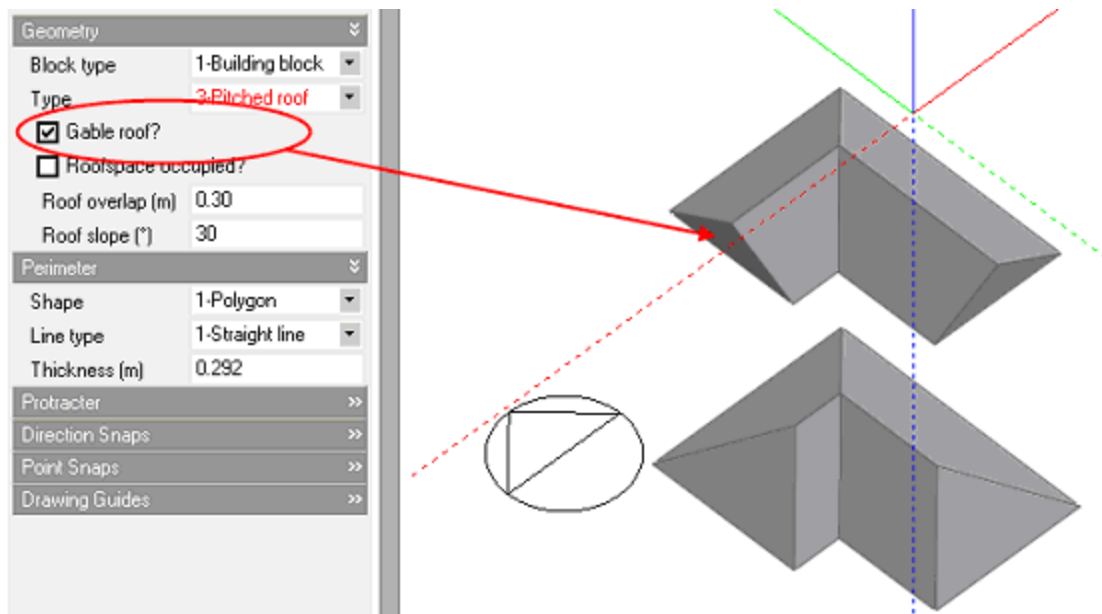


If you draw a pitched roof on top of an existing block, you can control the overhang or the depth of the roof eaves using the 'Roof overlap' setting:

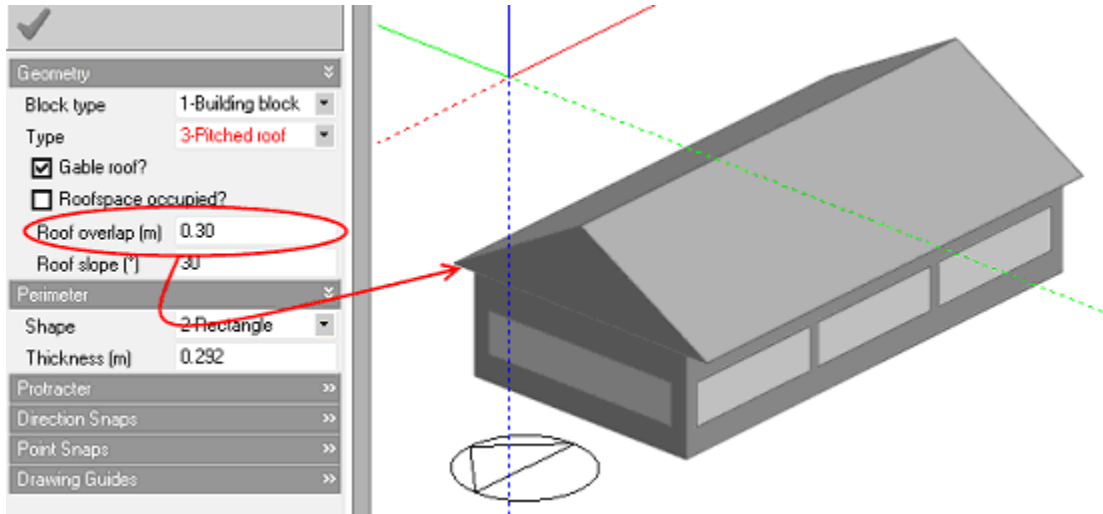

Voids

Where roofs are to be created on top of conventional blocks that contain voids and the voids are to be automatically incorporated within the pitched roof, the [Automatically include voids from lower blocks](#) Model options switch must be switched on before drawing the roof perimeter.

The dome [block form](#) is used to create hemispherical blocks and can only be created using the circular perimeter shape:

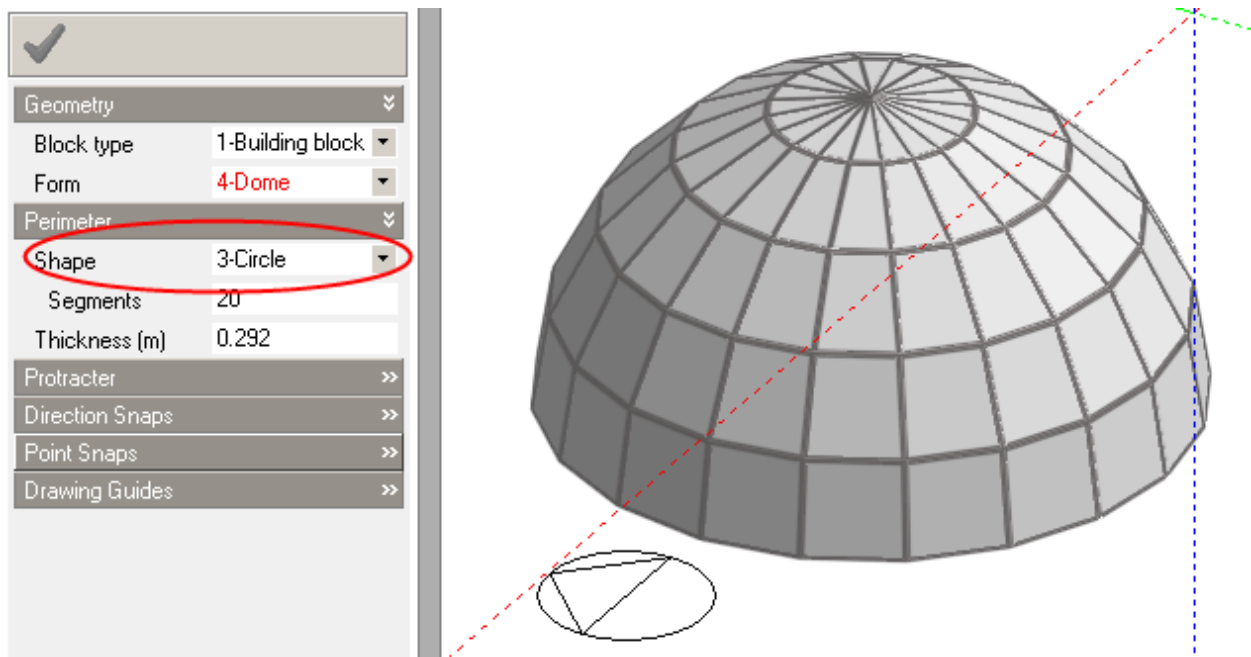

After drawing a vertically extruded block perimeter on a horizontal plane, the block will be automatically extruded using the Height setting, if the [Auto-Complete Block](#) option is switched on or the [View Rotation](#)

has been set to 'Plan'.

After drawing a vertically extruded block perimeter on a horizontal plane, the block will be automatically extruded by the [Height](#) setting if the Auto-Complete Block option is switched on or the [View Rotation](#) has been set to 'Plan'. With this option switched off (or in the case of a non-horizontal drawing plane), the perimeter can be dragged along an axis normal to the perimeter to obtain the required extrusion.

3.2.9.2 Editing blocks

The geometry of blocks can be modified using the following tools:


- [Drag block face](#)
- [Divide block](#)

Outline blocks can be converted to building blocks using the [Convert outline block](#) tool.


3.2.9.2.1 Drag Block Face



The topology of a block can be edited using the 'Drag face' tool which allows you to select a block surface and drag it along an axis, normal to the surface. To edit a block topology first go to the building level, select the block that you want to modify and click on the 'Drag face' tool. Then move the mouse cursor to the surface that you want to move. As you move the cursor across the block surfaces, each surface will highlight to help in selecting the required surface. When the mouse cursor is over the required surface, click to start dragging it:

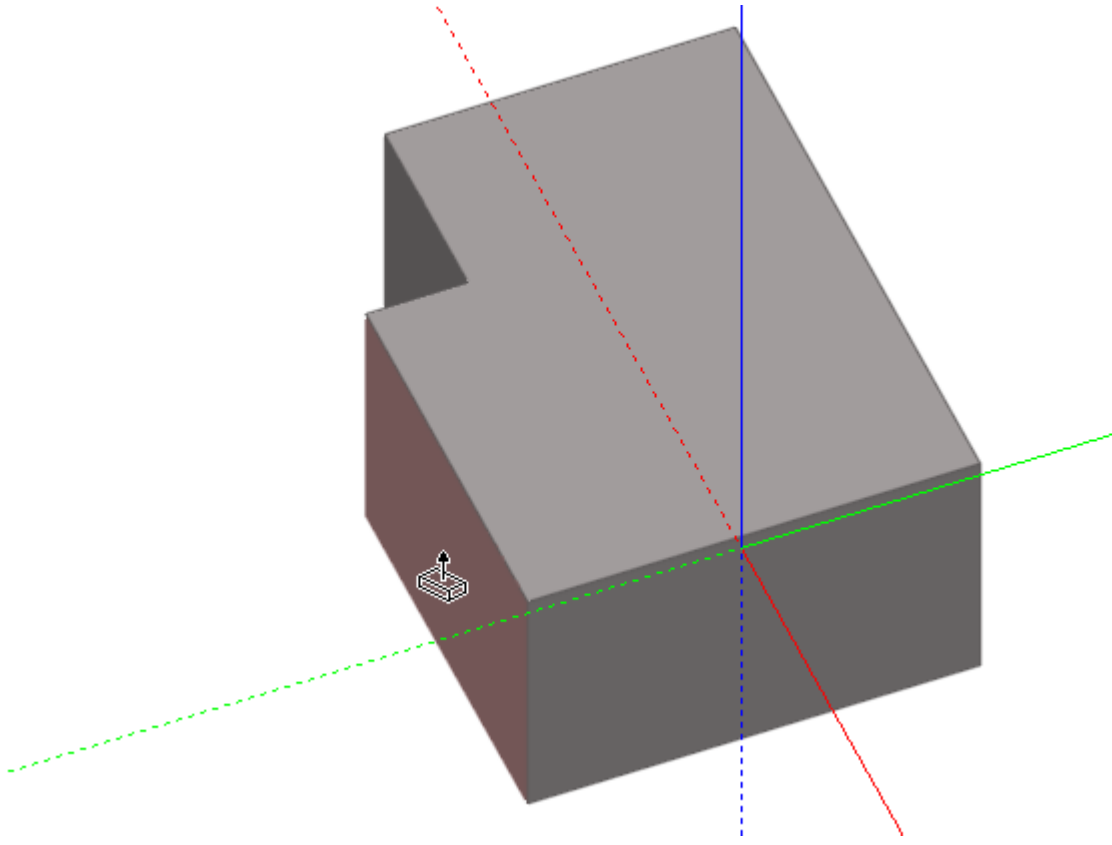

Drag the surface using the mouse or key-in the distance to shift the surface by the required amount:

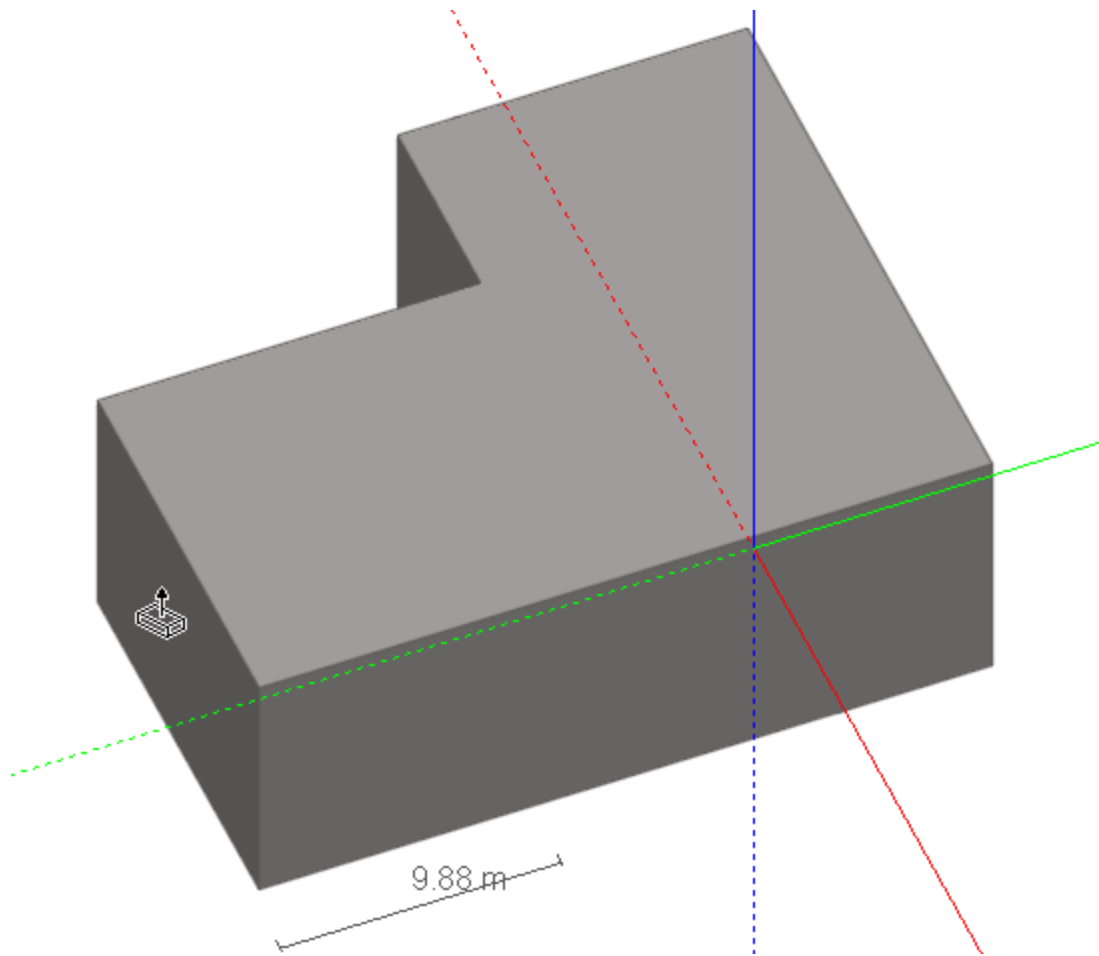

3.2.9.2.2 Divide Block using Cutting Tool




Blocks can be cut (i.e. divided into 2) using the **Divide Block** Tool. To cut or divide a block first go to the building level, select the block that you want to modify and click on the Divide block toolbar icon. Blocks are divided using a plane which can be defined using one of 2 methods:


- **1-Draw plane** - you define the plane by clicking on 3 points.
- **2-Select plane** - you define the plane by selecting an existing plane in the model.

DRAW PLANE METHOD


The **Draw plane** cutting method involves drawing two lines which define the plane. For example to cut a pitched roof to fit flush with a rotunda:

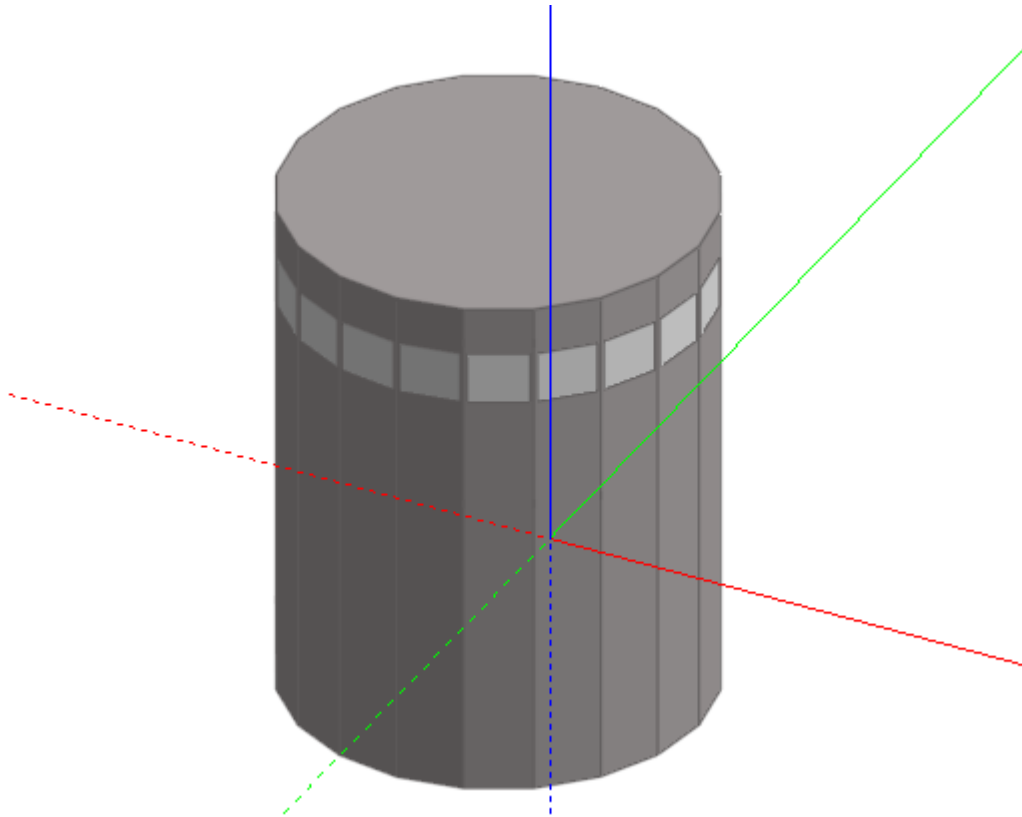


Because the geometry is fairly complicated, it's advisable to use an [outline block](#) to generate the intermediate geometry and then convert the block to a [building block](#) after the editing process is complete. So, from the building level, click on the [Add new block](#) tool, select **2-Outline block** as the block type, set the perimeter shape to **1-Polygon** and the [Height](#) to the same height as the rotunda, then draw a conventional vertical extrusion to fit flush to the rotunda. In order to trace round the base of the rotunda, it's probably easier to set the view rotation to 'Plan', click on to the ground plane and press SHIFT to lock the plane before placing the first perimeter point:

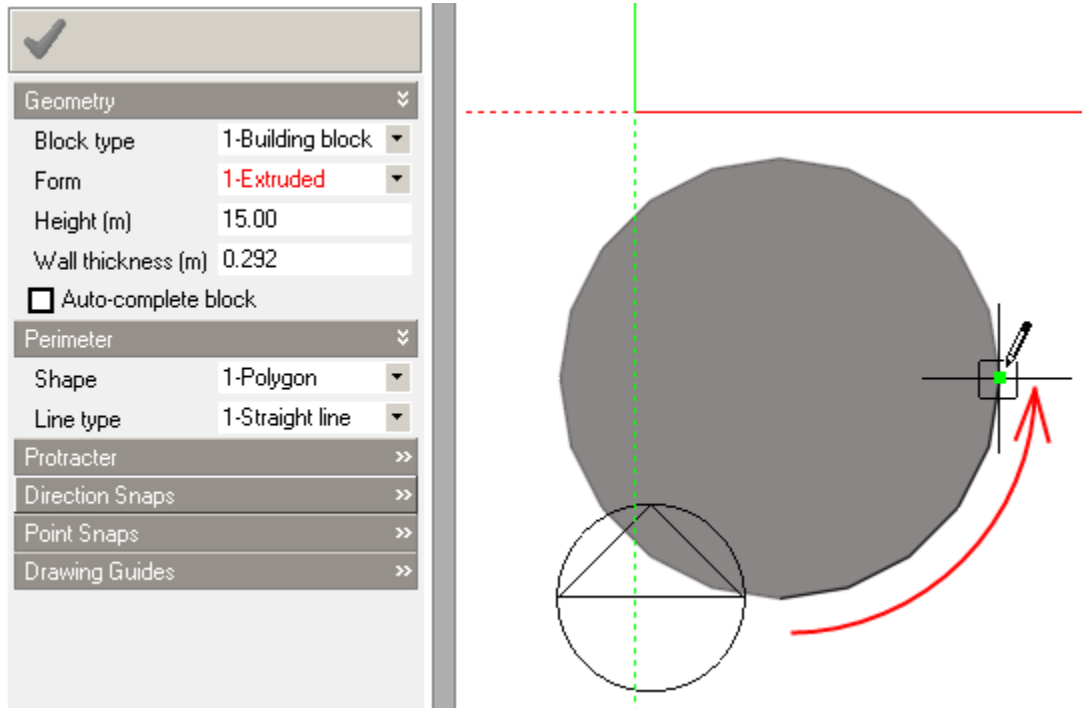


When tracing around a perimeter by snapping from end-point to end-point, it can be helpful to switch off the [direction](#) snaps and the [drawing guides](#) to prevent them from interfering with the point snaps. Completing the perimeter:

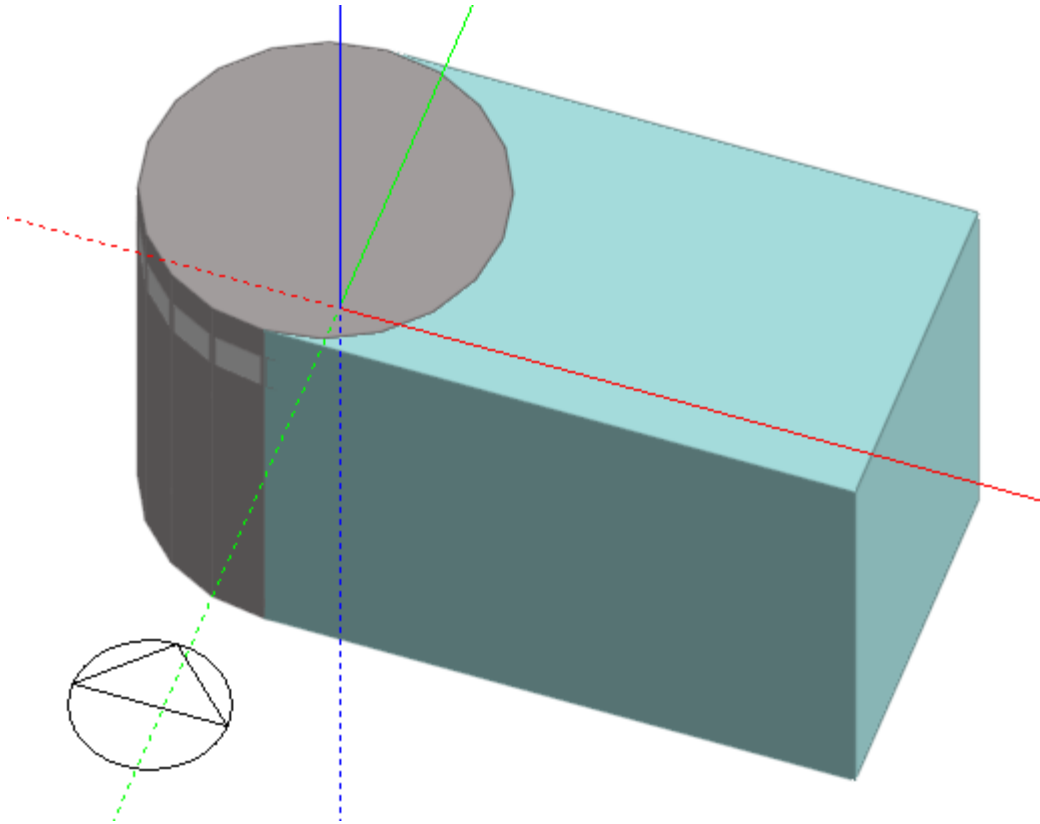


Click on the outline block to select it and then click on the 'Divide block' tool and make sure that the 'Cutting method' is set to **1-Draw plane** in the Drawing Options data panel. Switch the [protractor](#) on and move the cursor over the end face of the selected block, the surface will highlight to indicate that it's become the active drawing plane. Press the SHIFT key to lock the drawing plane and then locate the cursor 4m from the base of the block using [edge snap](#):

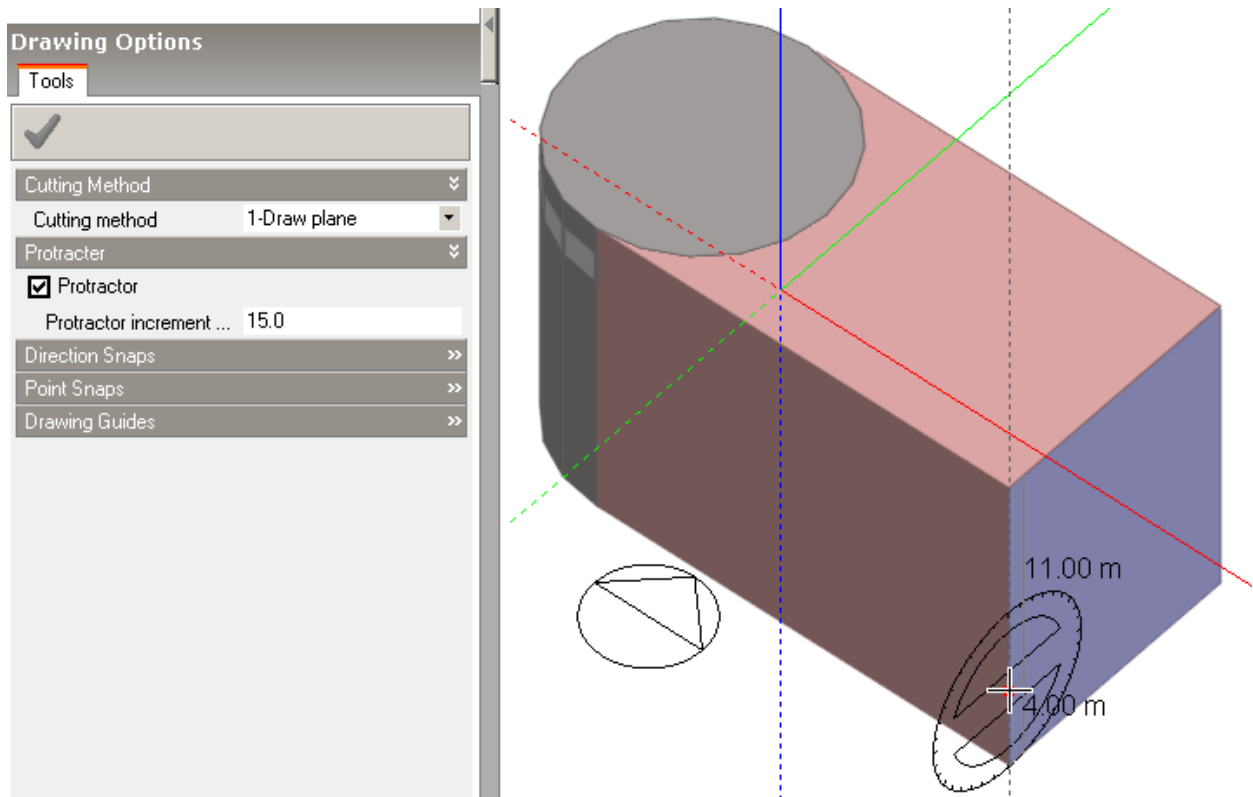


Click to place the beginning of the first cutting plane line, then place the end of the line to intersect the face edge with a pitch angle of 30°:

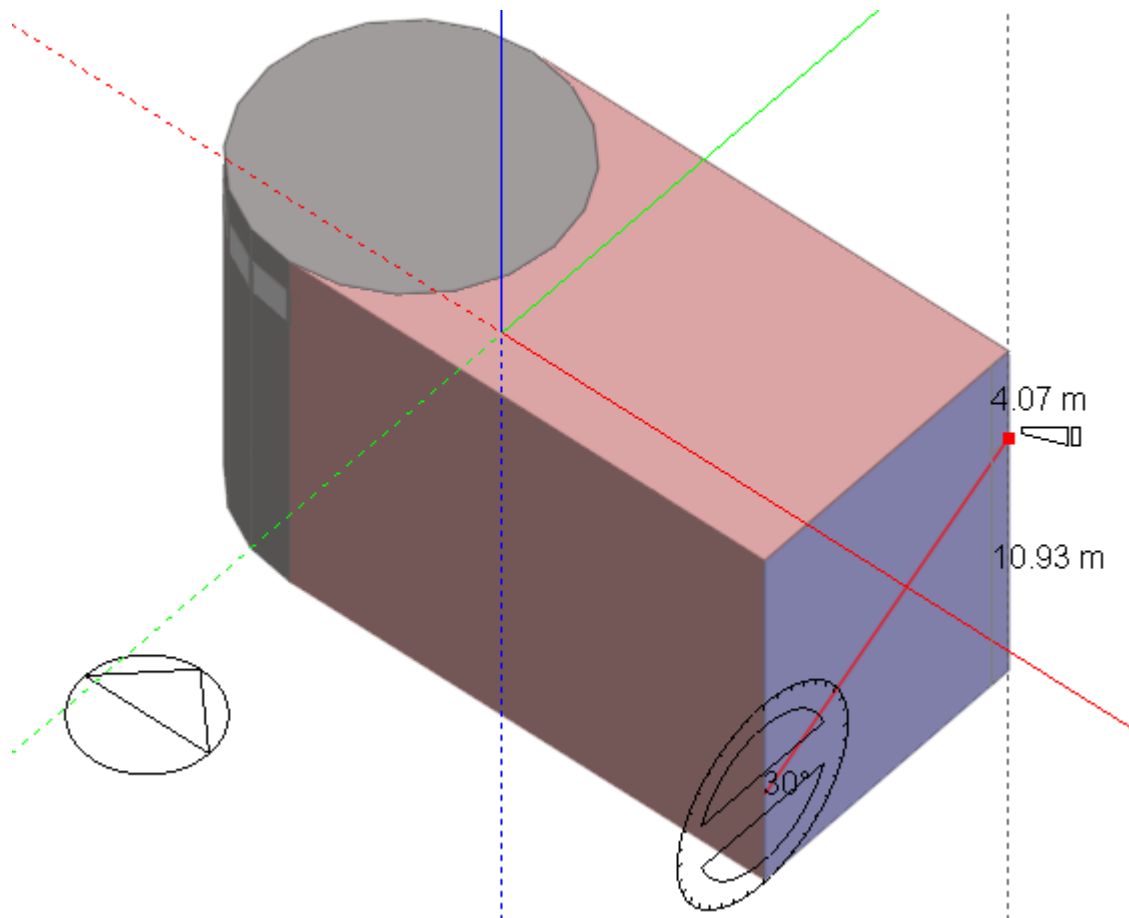


[Orbit](#) to make the back face of the block visible. Move the mouse cursor over the back face and when it highlights, press the SHIFT key to lock the plane. Place the second cutting plane line to snap to the local X-axis of the back face:

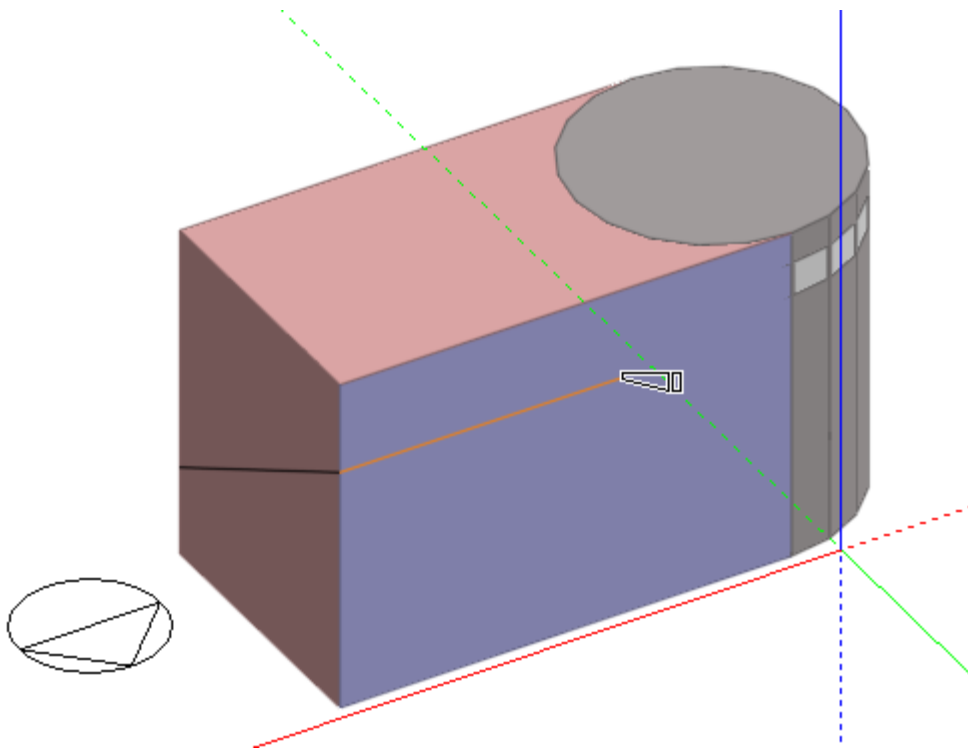


Click to complete the cutting plane. The blocks that will be produced by the cut are displayed in red and green, depending on which side of the cutting plane they lie. At this point, you can choose to cancel the cut by pressing the ESC key or selecting 'Cancel Cut' from the right-click menu.

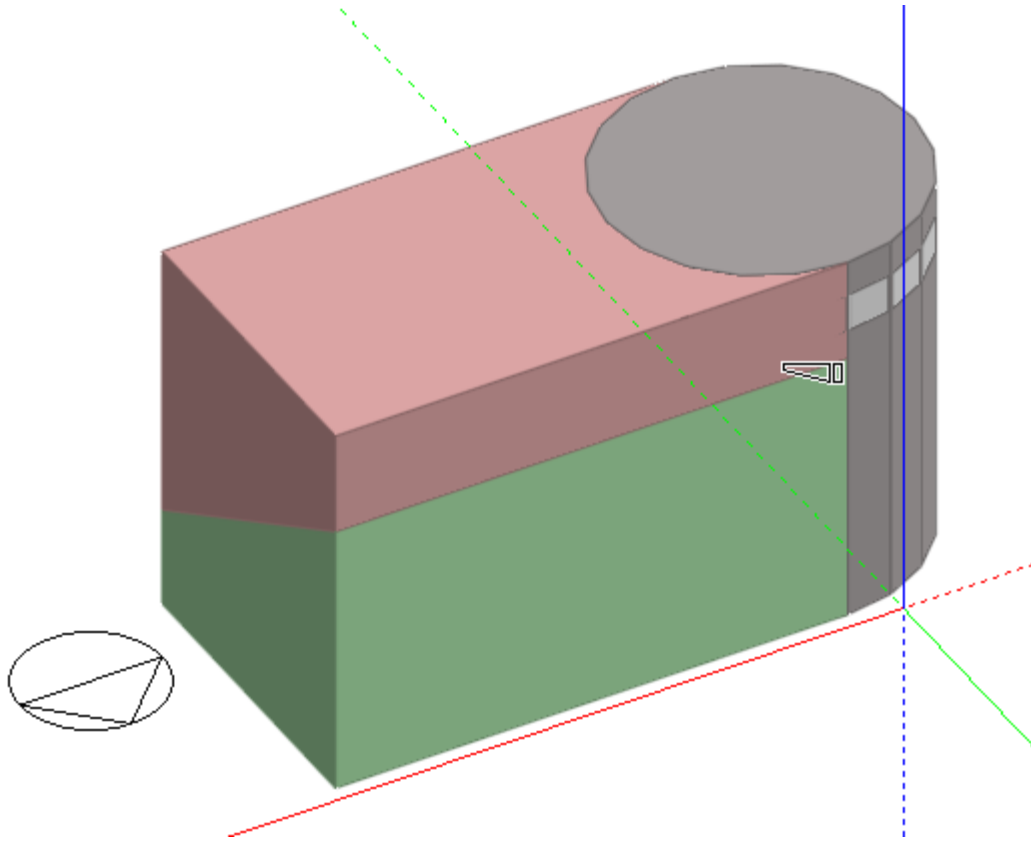


Click again to complete the cut and then select and delete the block that isn't needed:

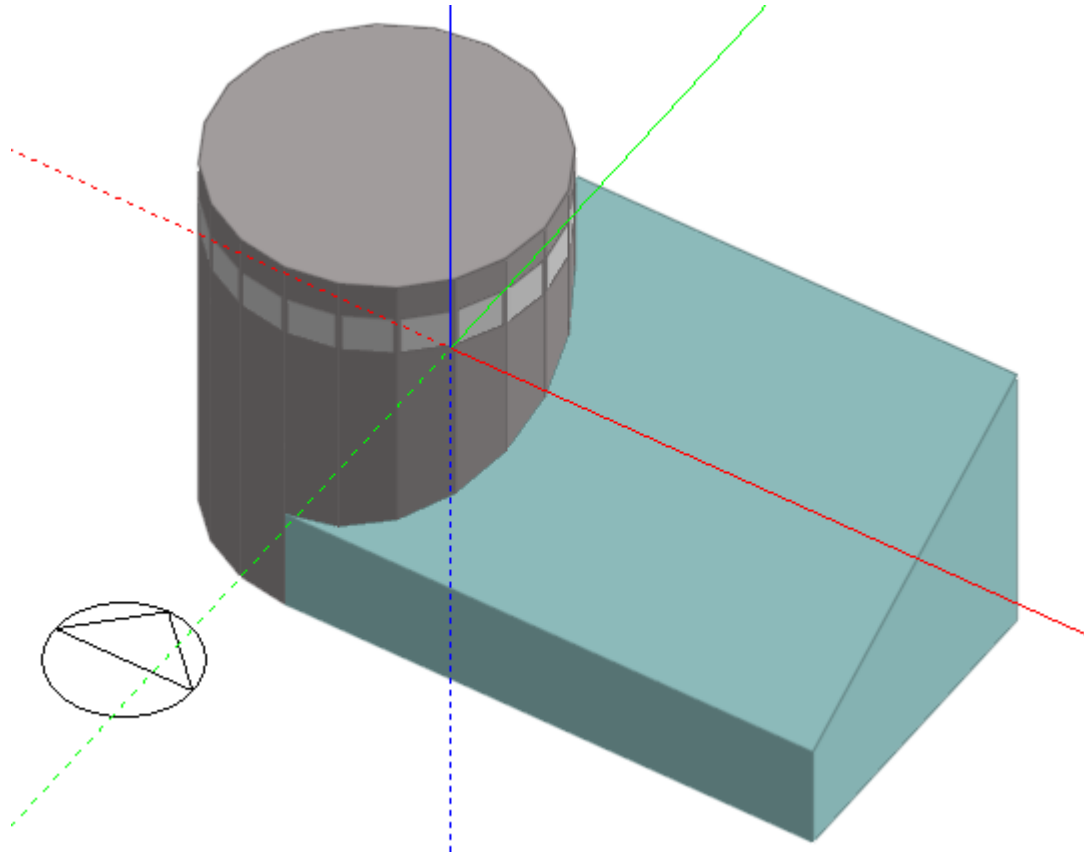


Go through a similar process to create the other pitch. You may need to switch off the [drawing guides](#) and [mid-point snap](#) to prevent them from interfering with the [protractor](#) and [edge snap](#):

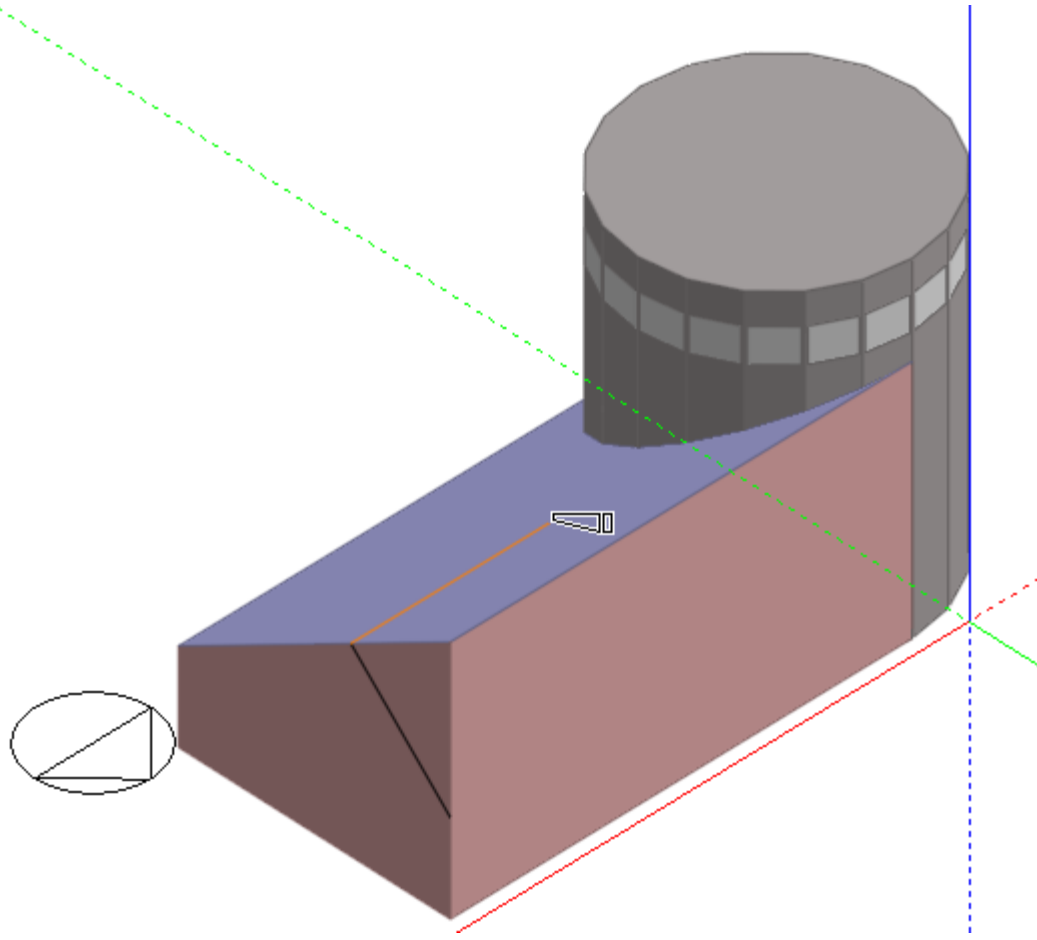


Click to create the cutting plane:

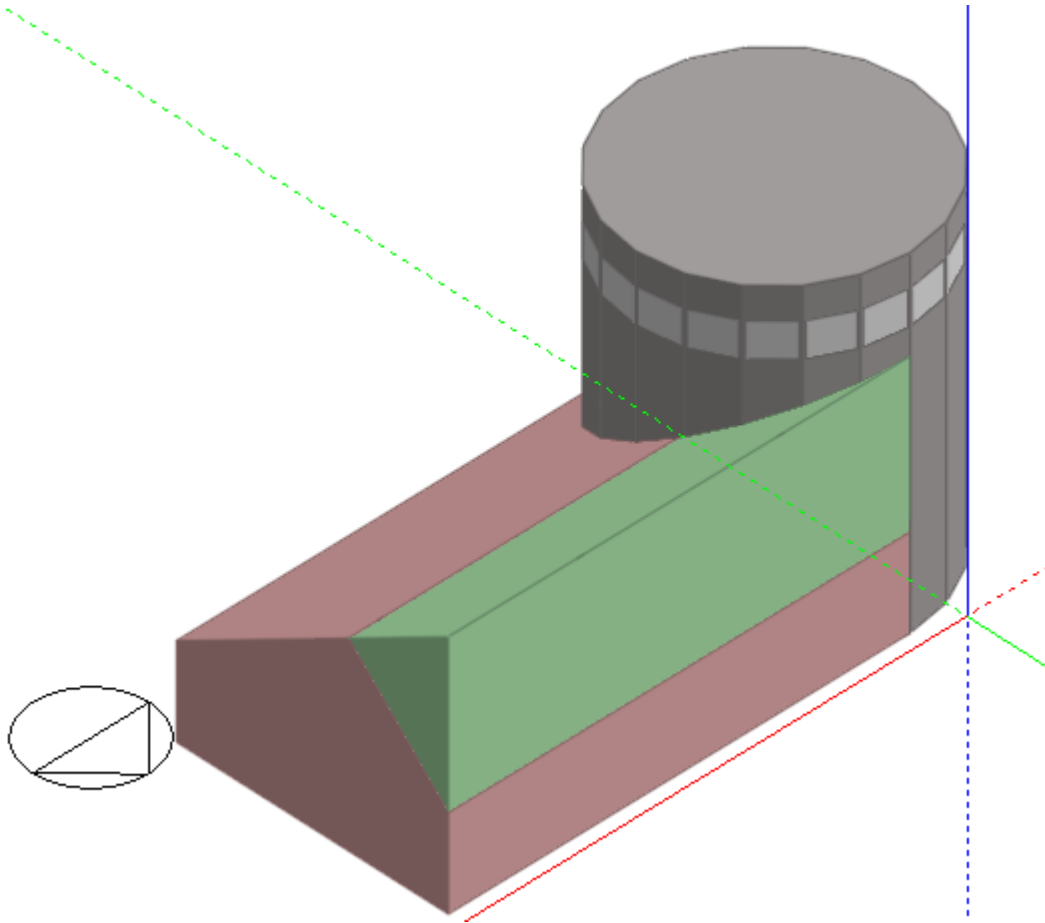

Click again to make the final cut and then select and delete the block that isn't part of the finished structure:

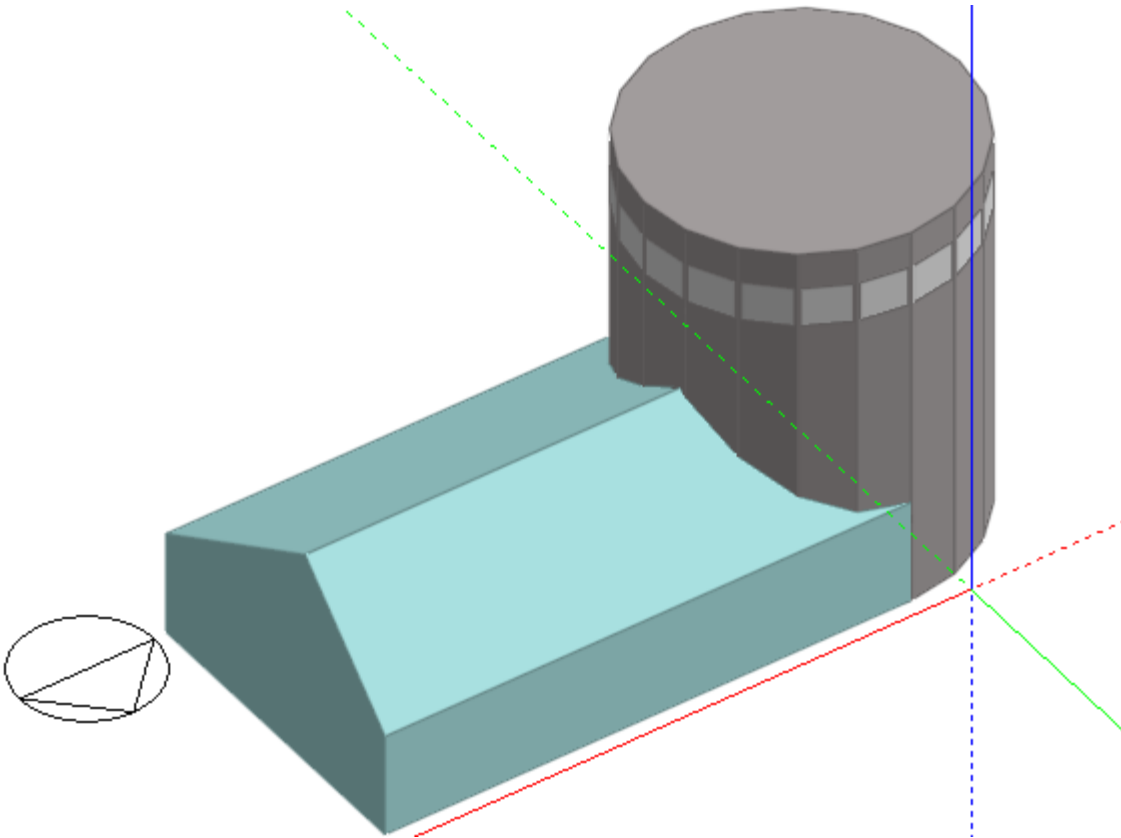


The outline block can then be selected and converted to a building block:

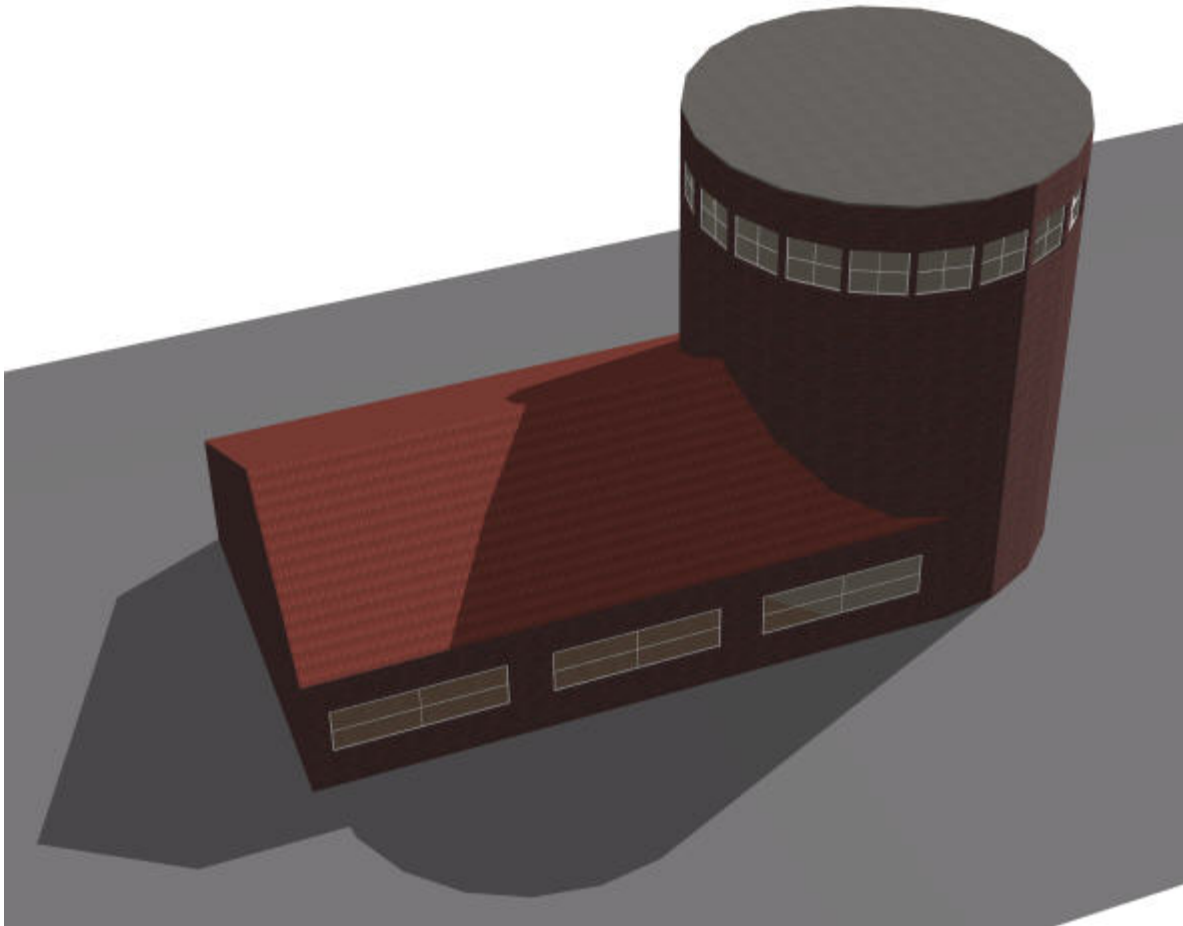


SELECT PLANE METHOD


The Select plane method of cutting a block uses an existing plane to define the cutting plane. It can be demonstrated by modelling a roof offshoot:

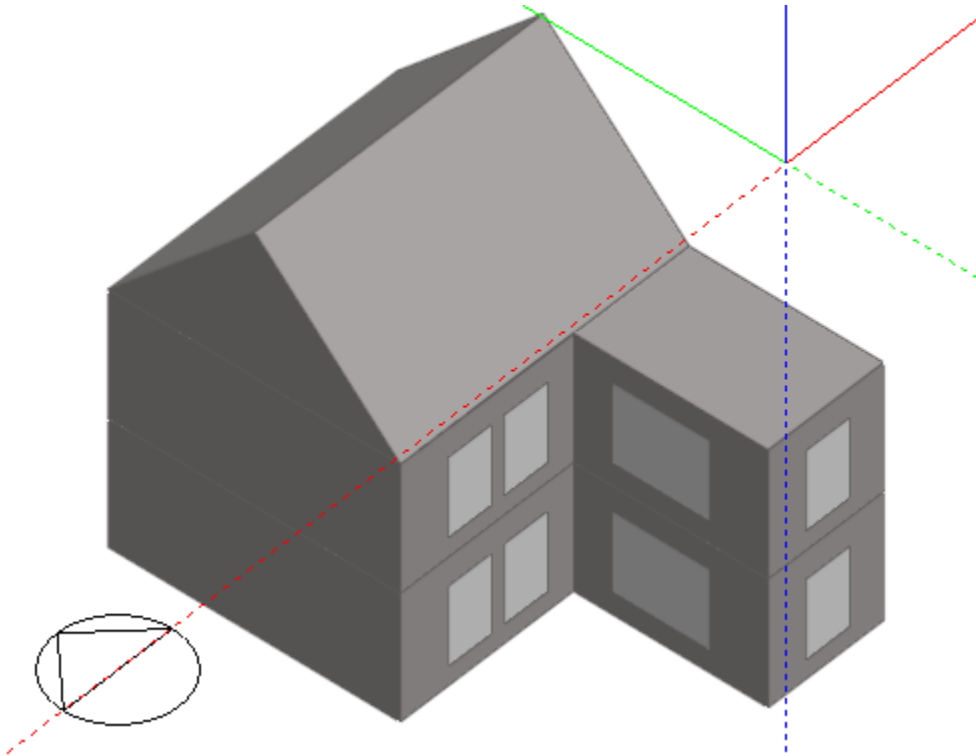


Click on the 'Add new block' tool, select **2-Outline block** as the block type and set the perimeter shape to **1-Polygon**. Switch the [protractor](#) on and move the mouse cursor to the back face of the offshoot. When the cursor is over the back face, press the SHIFT key to lock the drawing plane and snap the protractor to the upper edge end-point:

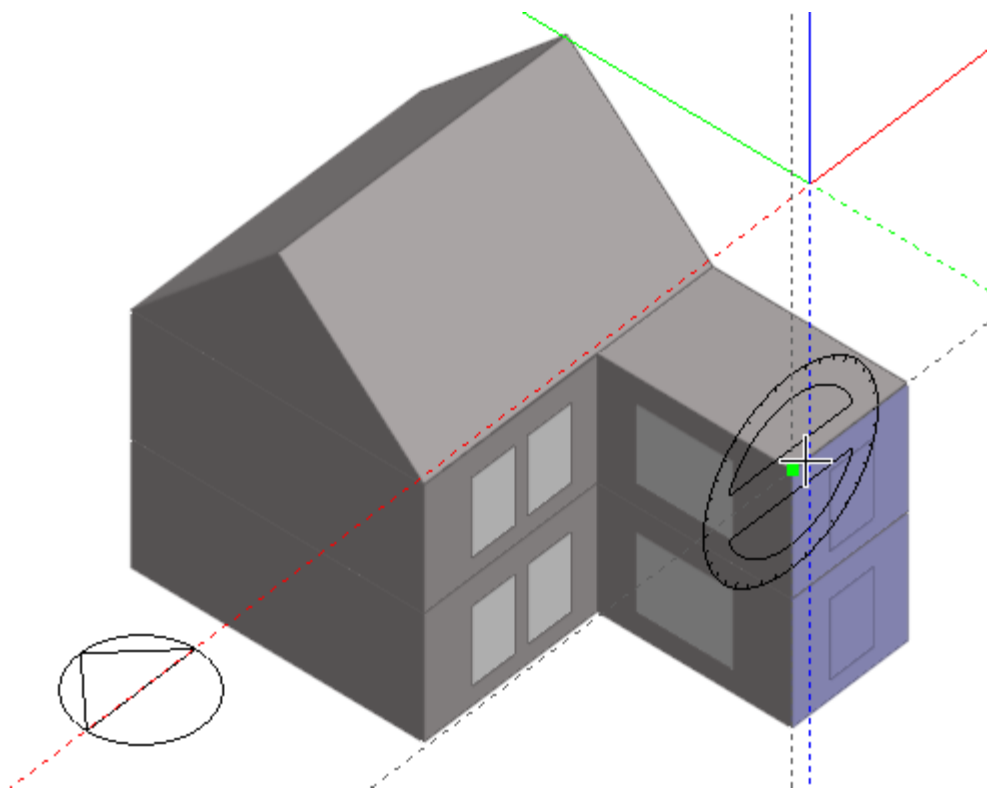


Draw the first perimeter line at a 45° pitch and move the cursor to intersect with the back face upper edge mid-point drawing guide and click to set the end-point:

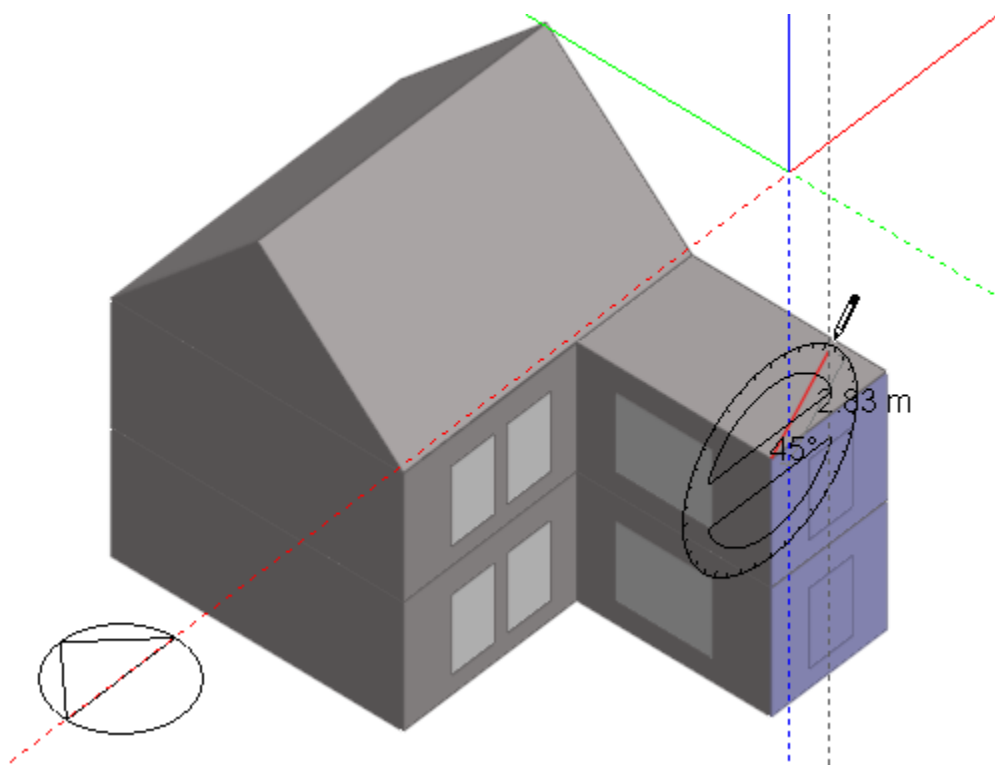



Move the cursor to snap to the other end-point of the back face upper edge and then complete the perimeter:

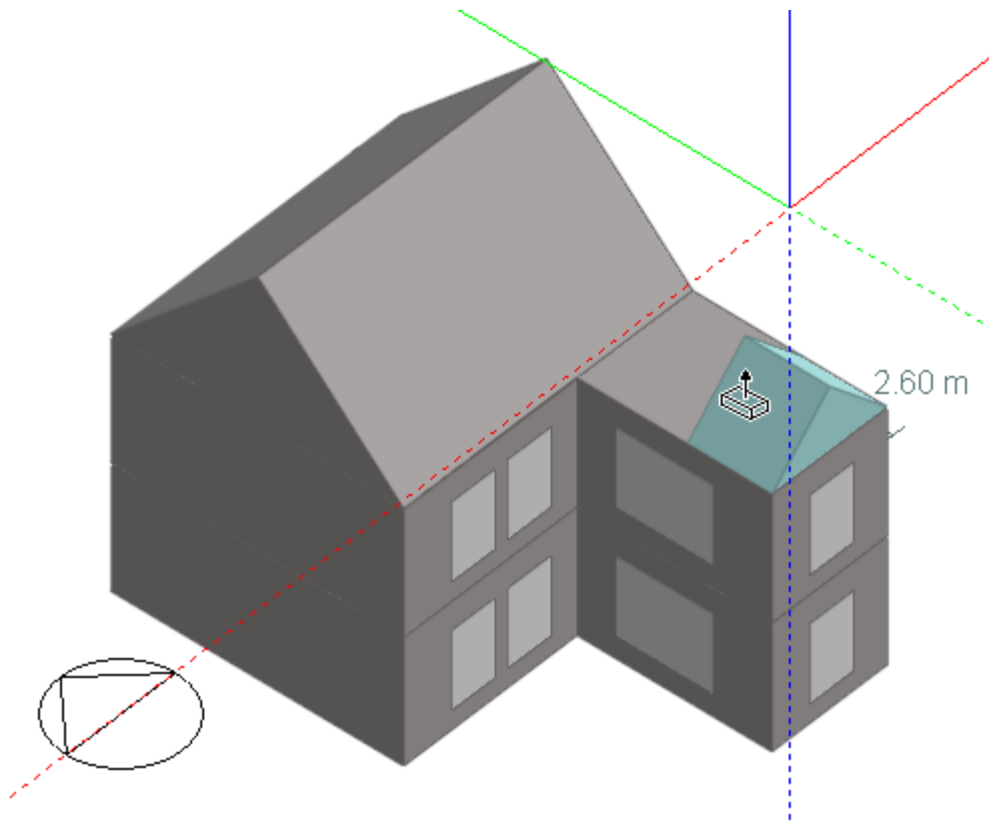


Now drag the outline block face through the main roof block:

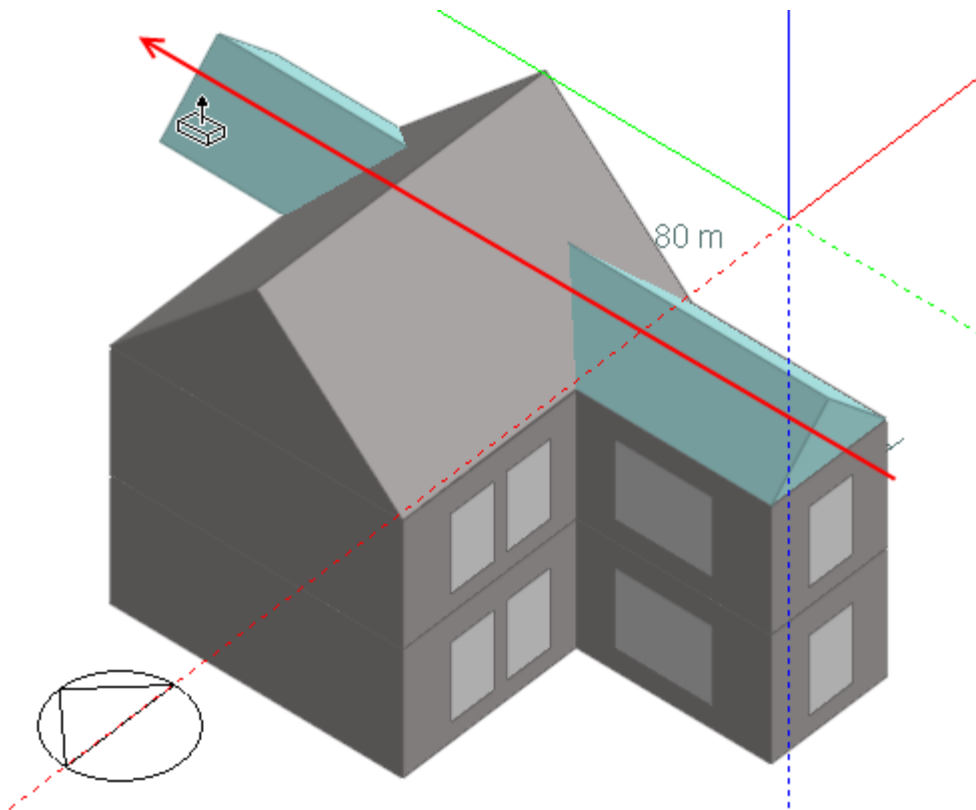


Select the offshoot outline block and click on the 'Cut block along plane' tool, making sure that the 'Cutting method' on the 'Drawing options' data panel is set to 'Select plane' and click on the forward facing plane of the main roof block to create a cut in the offshoot block in the plane of the roof:

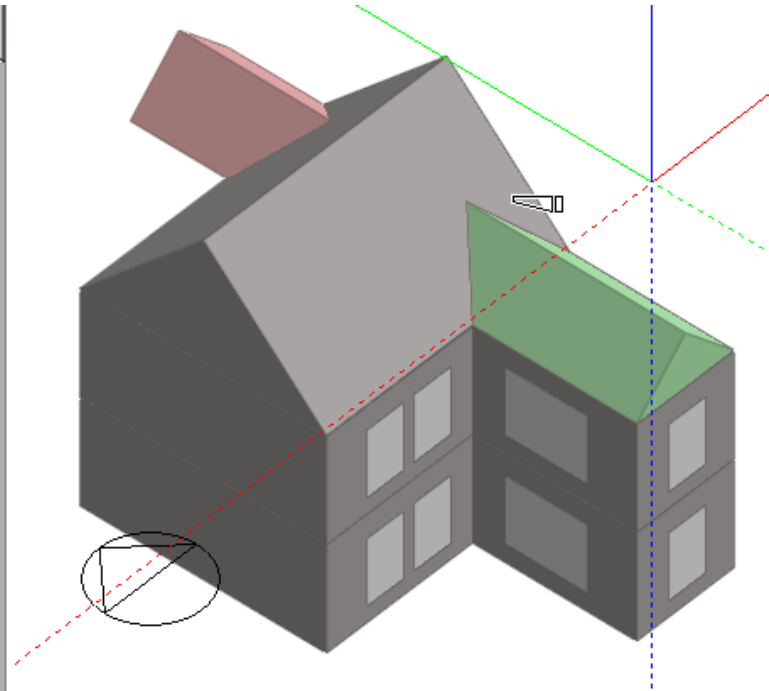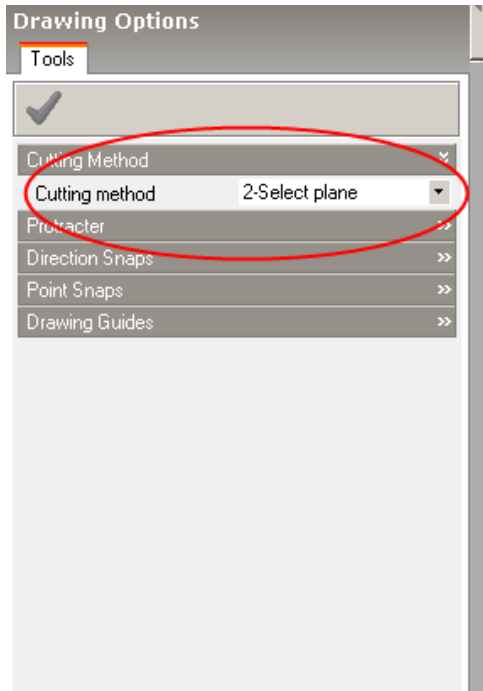

Click again to finish the cut and then select the section of the offshoot roof block that is not required and delete it:

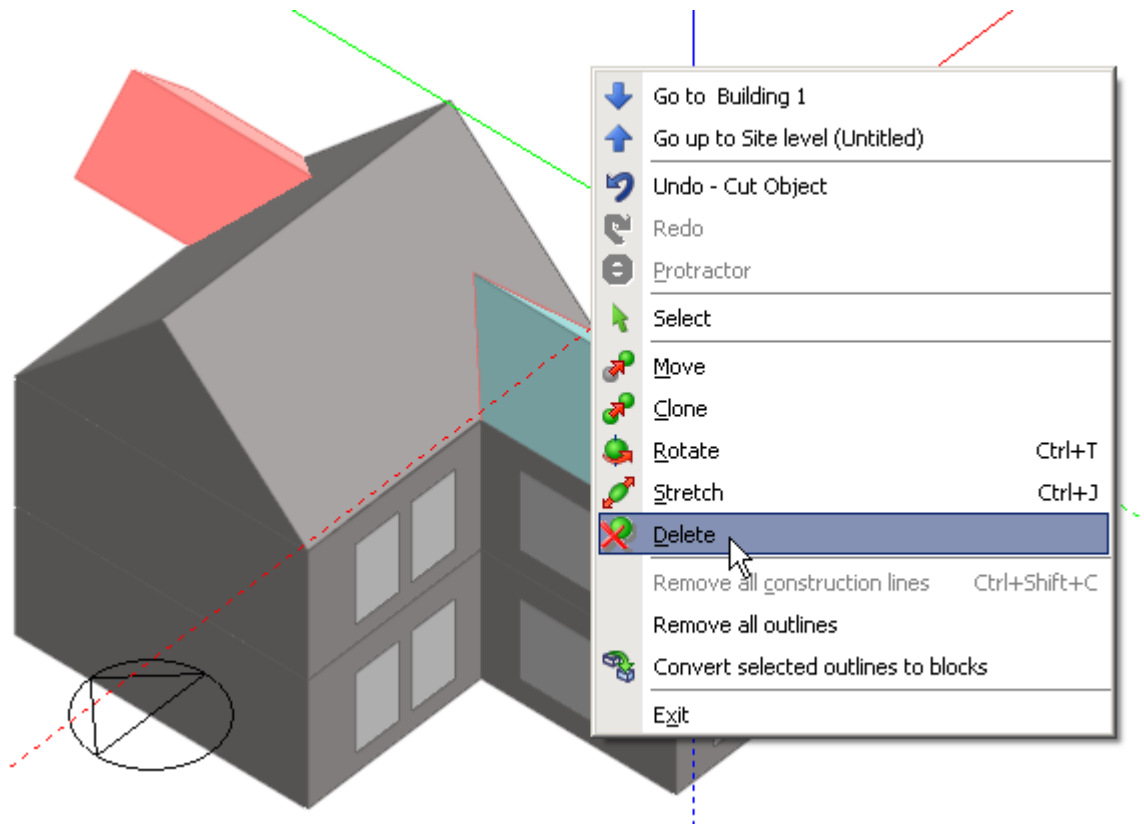

Select the roof offshoot block and click on the 'Convert selected outline blocks to building blocks' tool to complete the process:

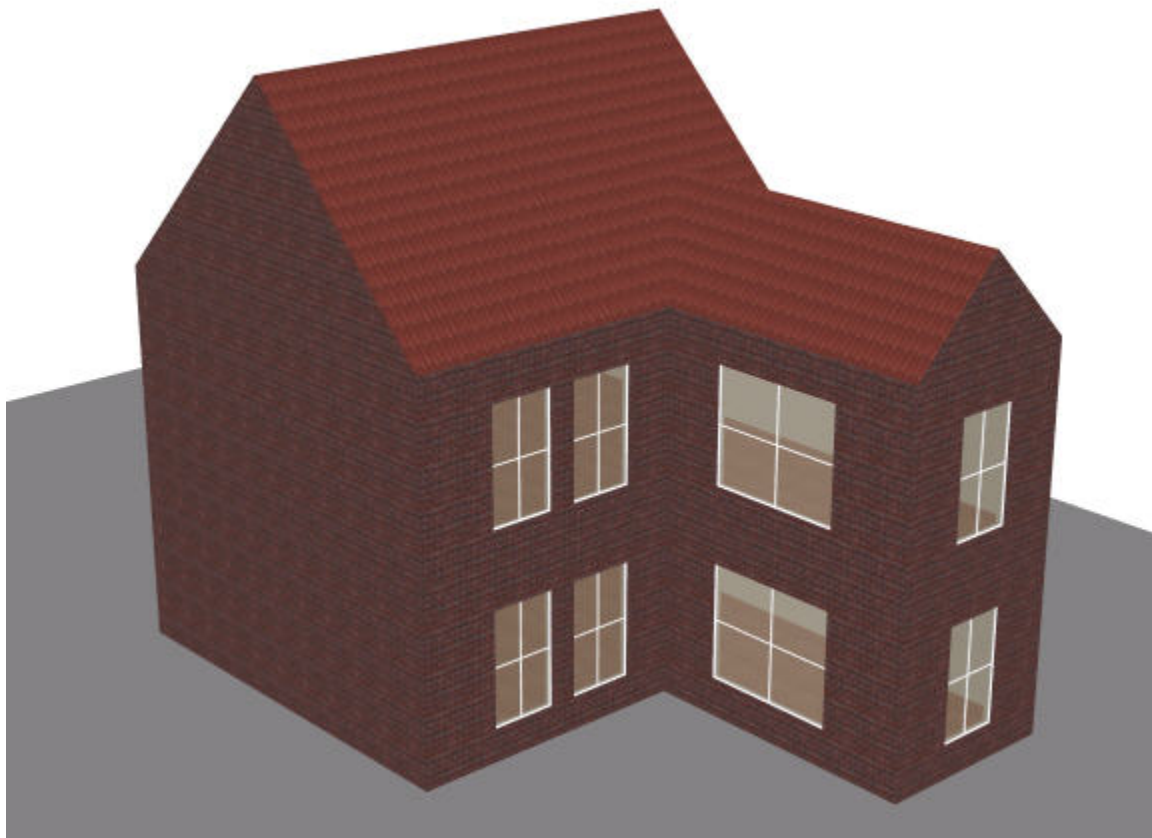


In some circumstances, resulting blocks may not be able to be converted to building blocks due to geometrical limitations. In this case, the block will be displayed in a sepia colour to indicate that it cannot be converted.

3.2.9.2.3 Edit Block Geometry Dialog



You can edit certain aspects of a building block geometry by clicking on the 'Building model options' icon while at the block level. This opens the [Model Options](#) dialog box:

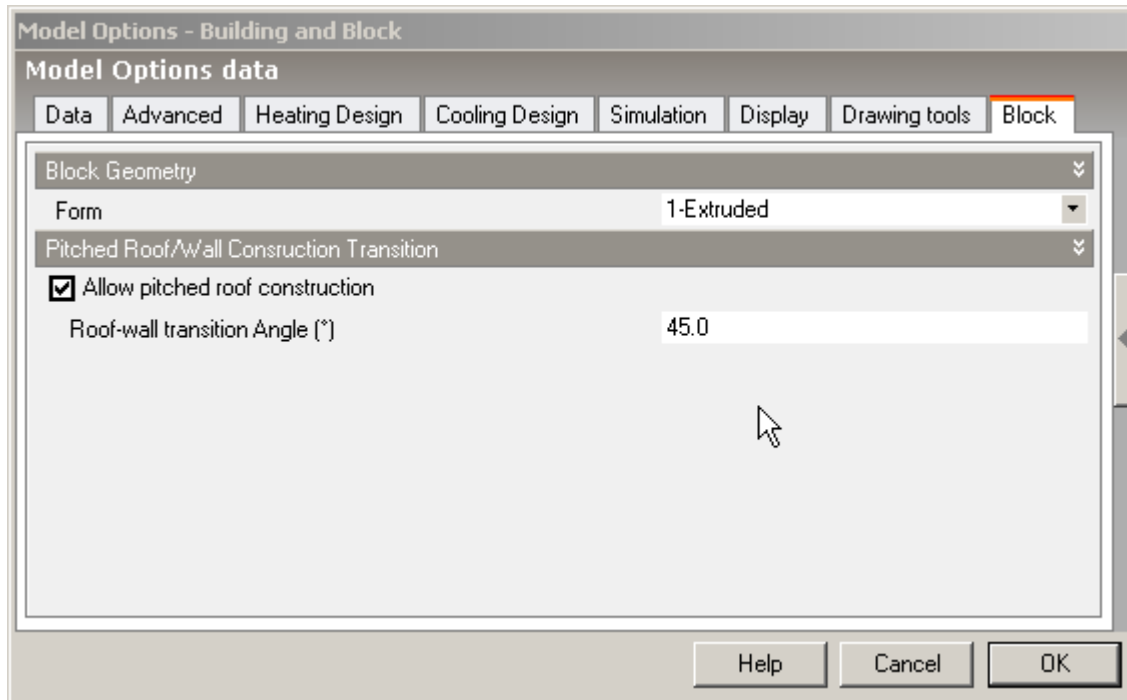

At the block level, the [Block tab](#) on the [Model Options](#) data dialogue box is enabled and allows you to change the [Form](#) of the block and to modify pitched roof assignment.

To change the [form](#) of the current block, make a selection from the 'Form' drop list. When you change the form of a block from an 'Extruded' form to 'Pitched Roof' or 'Sloping Walls' the original form will be remembered so that even if you have edited the block by cutting it or dragging a face, when you convert the form back to 'Extruded', the original form will be restored.

The [Pitched Roof/Wall Construction Transition](#) settings allow you to control which elements within a block will be assigned pitched roof construction, either by disallowing pitched roof construction altogether or by adjusting the element slope to determine which elements should be identified as pitched roofs. The 'Roof-wall transition angle' is the angle from the horizontal below which the element will be considered a roof.

3.2.9.2.4 Wall Thickness

The [Wall thickness](#) is used to generate the geometric thickness of the external wall elements of a building block. It is a significant parameter because zones are generated from the internal dimensions of the block which are derived from the external block geometry and the block wall thickness. So the Wall thickness influences:

1. Calculation of room air volume (thicker block walls mean less zone air volume).
2. Size and shape of zones, especially roof zones (below).
3. Visual representation of external walls in rendered view (below).

The default setting is automatically generated from the overall thickness of the external wall construction set in [Construction](#) Model data panel but can be overridden by typing in the required value.

The block Wall thickness can be changed once the block has been drawn from the [Block](#) tab of Model

options dialog when at block or lower level.

The [Construction](#) that determines the *thermal* characteristics of the external walls can be edited in [Constructions](#) Model data.

Important Notes on Wall thickness

- The external wall thickness is **uniform** for all block surfaces.
- The wall thickness does not affect the thermal properties of the wall. Wall thermal properties are based purely on the construction data specified for the wall.
- A small value of Wall thickness will mean that the zones dimensions will be very similar to the block dimensions (below).

The Wall thickness is also entered when [Converting](#) an [Outline block](#) to a [Building block](#).


Tip: Enter a low value of Wall thickness if:

- The block is a roof with low roof slope angle sloping roof elements - see Example 1 below.
- The block is mainly glazed - see Example 2 below.


The lowest value of wall thickness allowed is 0.01m and the highest allowed value is 2.0m.

ROOF BLOCKS - EXAMPLE 1


Select a small **Wall thickness** when creating a roof block having very shallow slope. This example shows a 2 block, 2 zone model, the top block (selected) representing a roof having shallow slope angles.

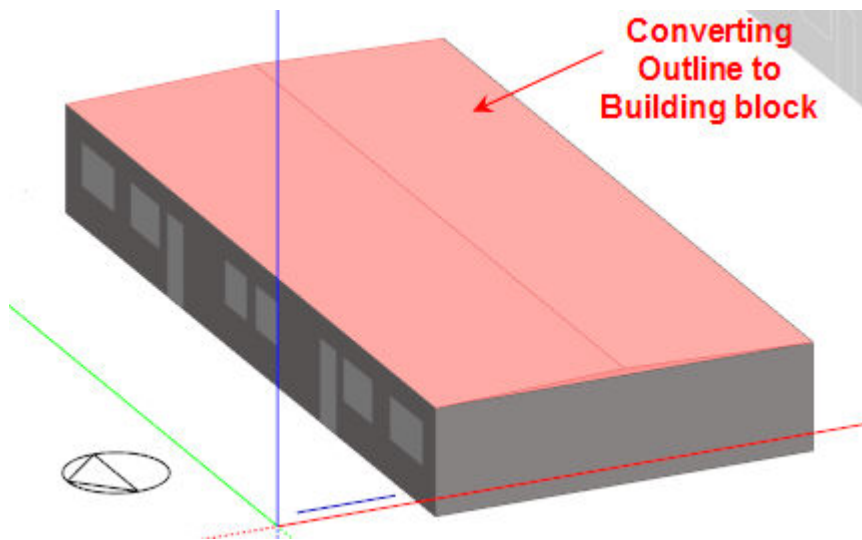

Using a **Wall thickness** Of 0.01m gives **good results** as the roof zone covers most of the block floor area (below).

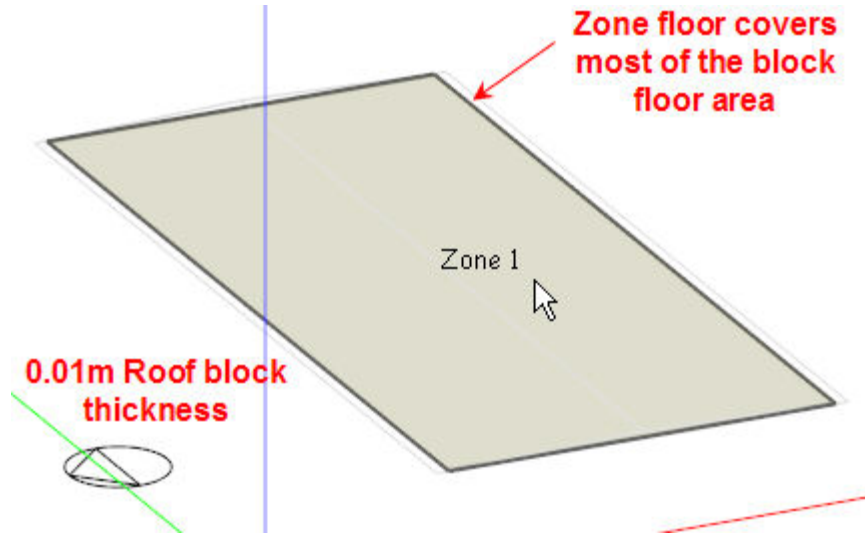

Using a large **Wall thickness** makes it impossible for DesignBuilder to generate a floor covering the whole block floor area giving **Poor results** (below).

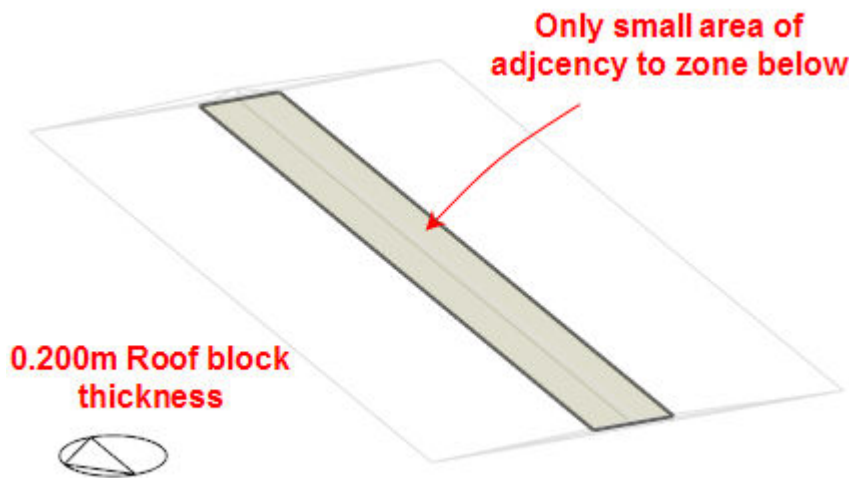


In the image above the white areas of the block floor will not form part of the model which is probably not what the user had in mind.


CURTAIN GLAZING - EXAMPLE 2

When modelling continuous glazing for curtain walls, atria, greenhouses etc. it is often necessary to model glazing joining at the corners. It is not possible for windows to literally meet in this way because EnergyPlus requires all openings (windows, doors etc) to be placed on a parent surface with at least a small gap between the opening and the parent surface edge. But by using a low value of block thickness you can give the appearance of adjacent windows as shown below.

A small **Wall thickness**, below, allows the glazing to cover most of the wall giving **Good results** (below).

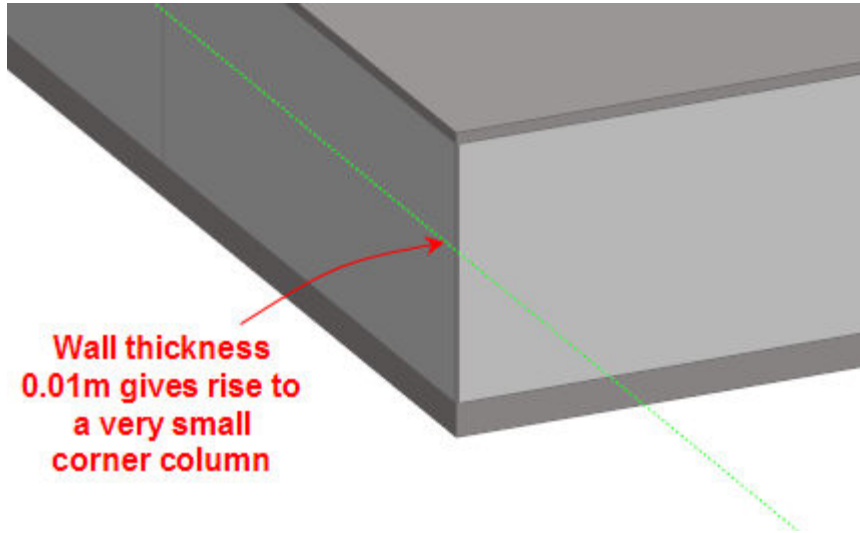

A larger **Wall thickness**, below, requires more area to cater for the walls joining at the corners and the glazing does not meet 'round the corner' giving **Poor results** (below).

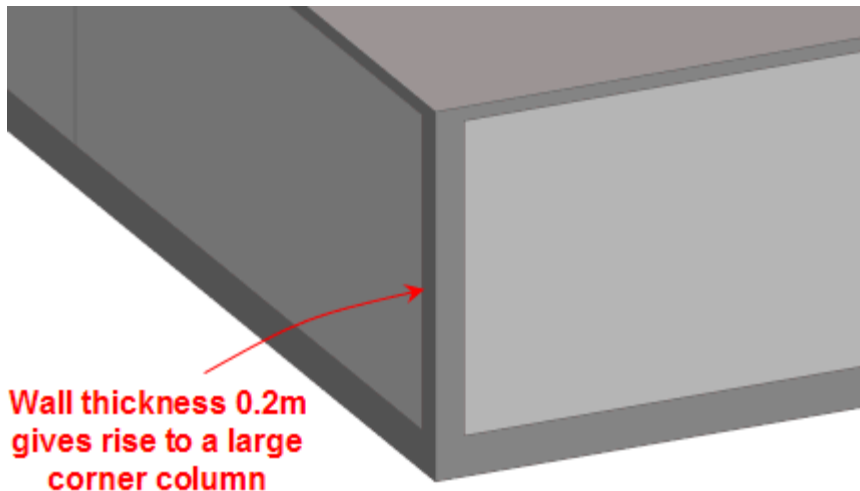


r

3.2.9.2.5 Convert Outline Block



To convert an [Outline block](#) to a [Building block](#), or [Component block](#) select the blocks that you want to convert and then click on the **Convert selected outline block** tool. This opens the **Convert Outline Block Options** dialog below.

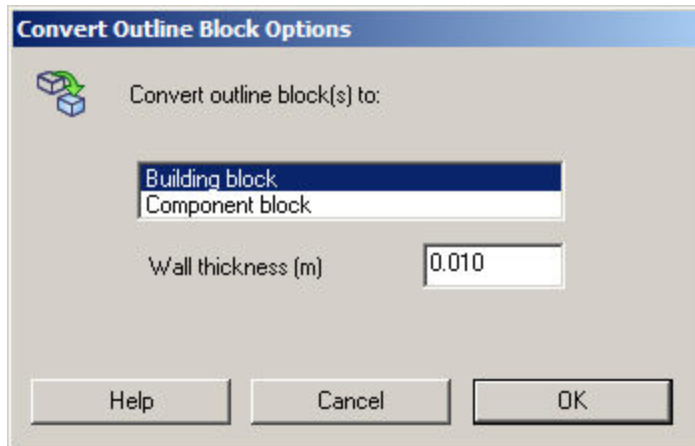


Select the type of block to convert to:

- [Building block](#)
- [Component block](#)

When converting to a Building block you can also enter the [Wall thickness](#) of the block.

3.2.9.2.6 Transfer Blocks

You can move blocks from one building to another using the Transfer blocks command accessed from the Edit menu when the site contains more than 1 building. This starts the Transfer blocks dialog below. Select the building containing the blocks to be copied and the building to receive the blocks and Press OK.

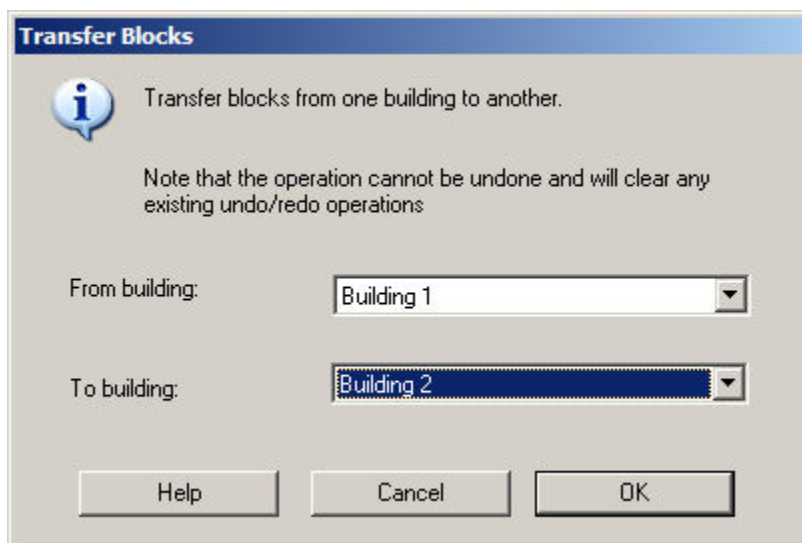


You should check before starting the transfer that none of the source blocks overlap with blocks in the destination building. Even a small overlap will cause the process to fail.

Note: the operation cannot be undone and it clears any existing undo/redo information.


3.2.10 Working within Blocks

This section describes the various operations involved in [partitioning](#) a block to create zones and adding [courtyards](#) to blocks. Before you start to draw partitions or courtyards, you first need to go to the block that you want to edit and you can do this by clicking on the block entry in the navigator or by double-clicking on the block in the 'Edit' screen, if you're at the building level.

Go to block level

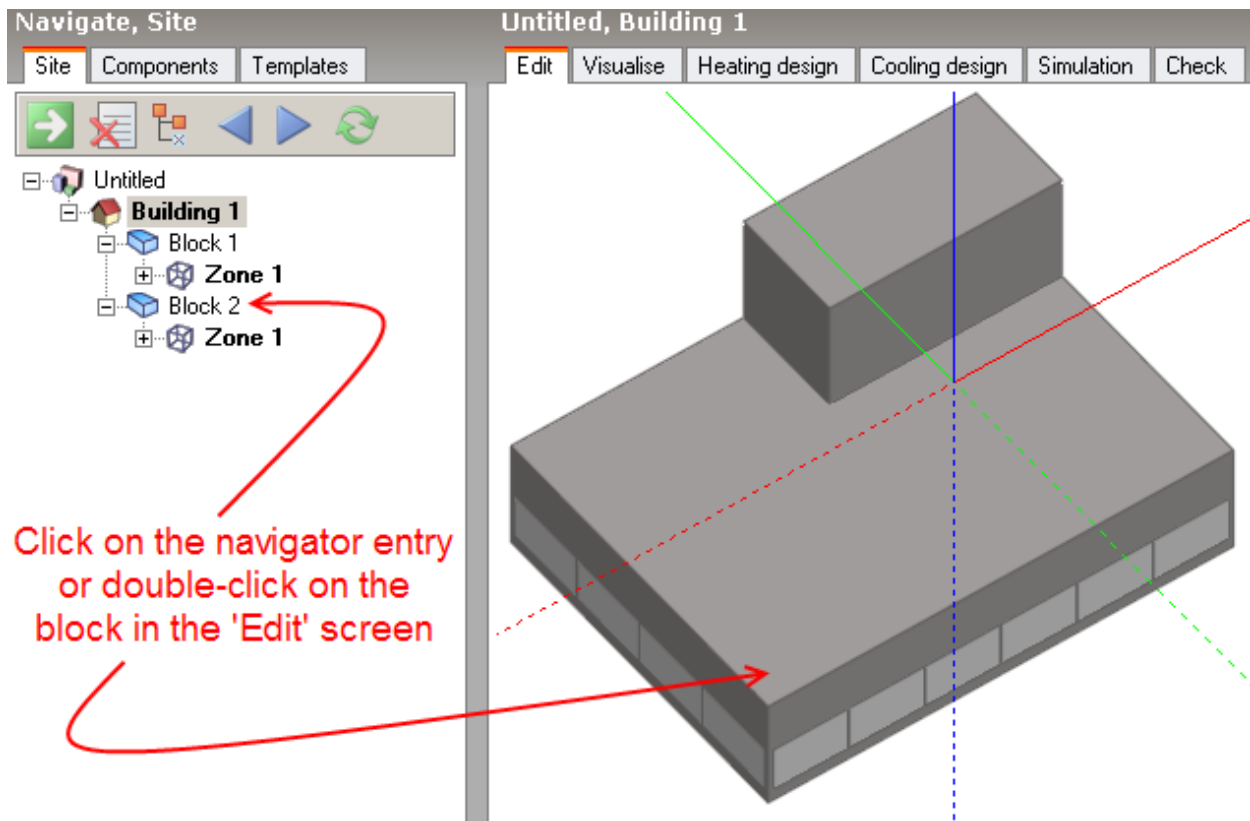

Either of these operations will take you to the block:

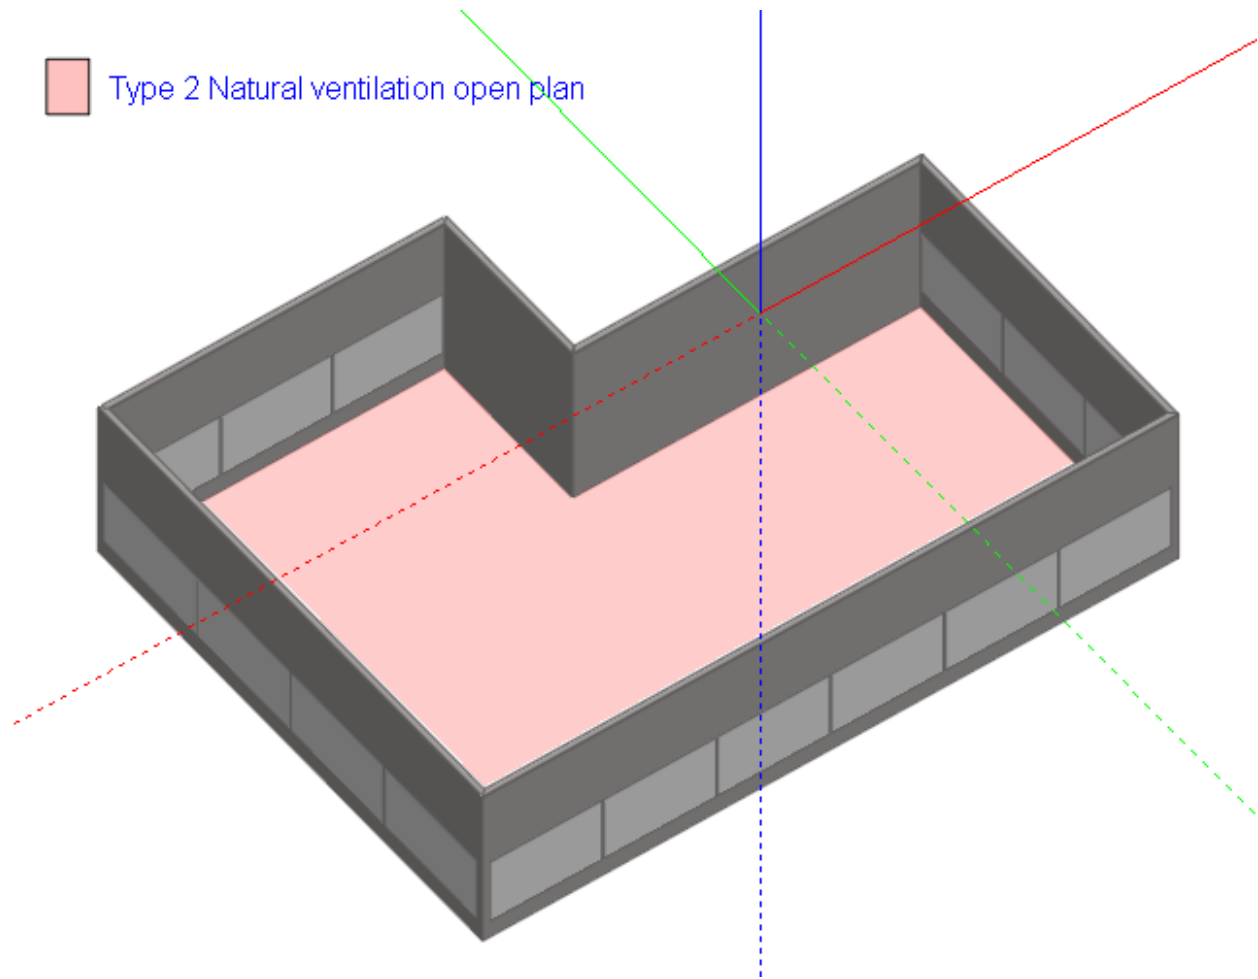

3.2.10.1 Zone Block by Drawing Partitions




Building blocks can be divided into any number of zones by drawing partitions inside the block. To start drawing partitions, click on the 'Draw partitions' tool. You can place partitions freely within a block either free-standing or snapped to an external block wall or existing partition. Partitions can be positioned using the [snaps, drawing guides and protractor](#). A partition doesn't need to be snapped to a wall element, you can drag a partition across a wall and when you click the end-point, it will be automatically trimmed to the wall.

You can enter the thickness of the first partition drawn in the block and subsequent partitions take on the same thickness as the first.


Note for partitioning large models

By default, blocks are automatically re-zoned as soon as complete zone perimeters are formed by drawing partitions. In order to speed up the process of adding partitions, particularly in the case of large and complex blocks, the block zoning process can be postponed until partitioning has been

completed. To do this, open the Model options dialog and switch off the [Automatic block zoning](#) option under the [Miscellaneous Edit](#) header on the [Advanced](#) tab. When partitioning has been completed, the block can be manually re-zoned by selecting the [Rezone block](#) command from the [Tools](#) menu. Partitions drawn with the [Automatic block zoning](#) option switched off are called [Outline partitions](#) and are shown in blue.

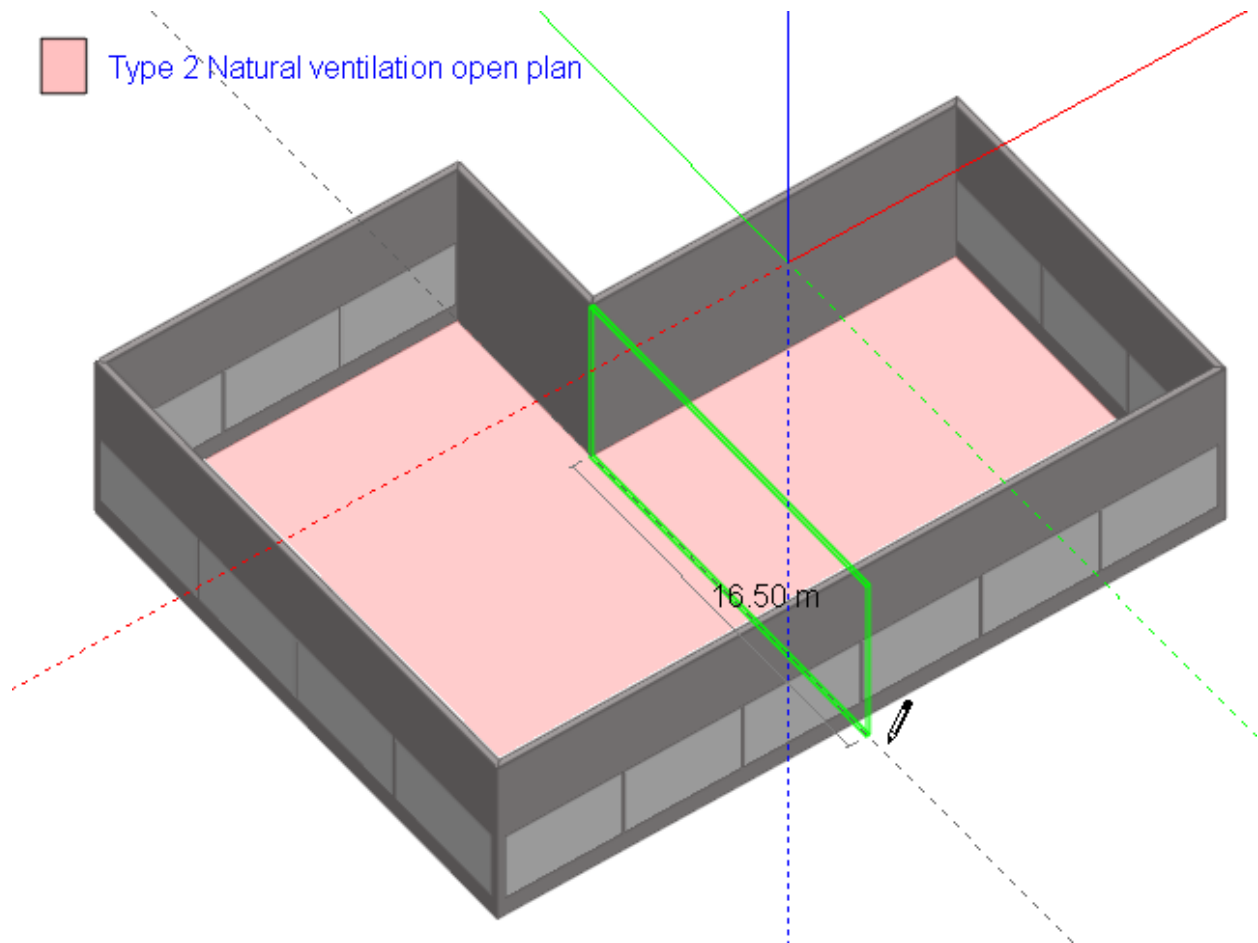


Click the partition end-point on the outside of the wall and it's automatically trimmed:

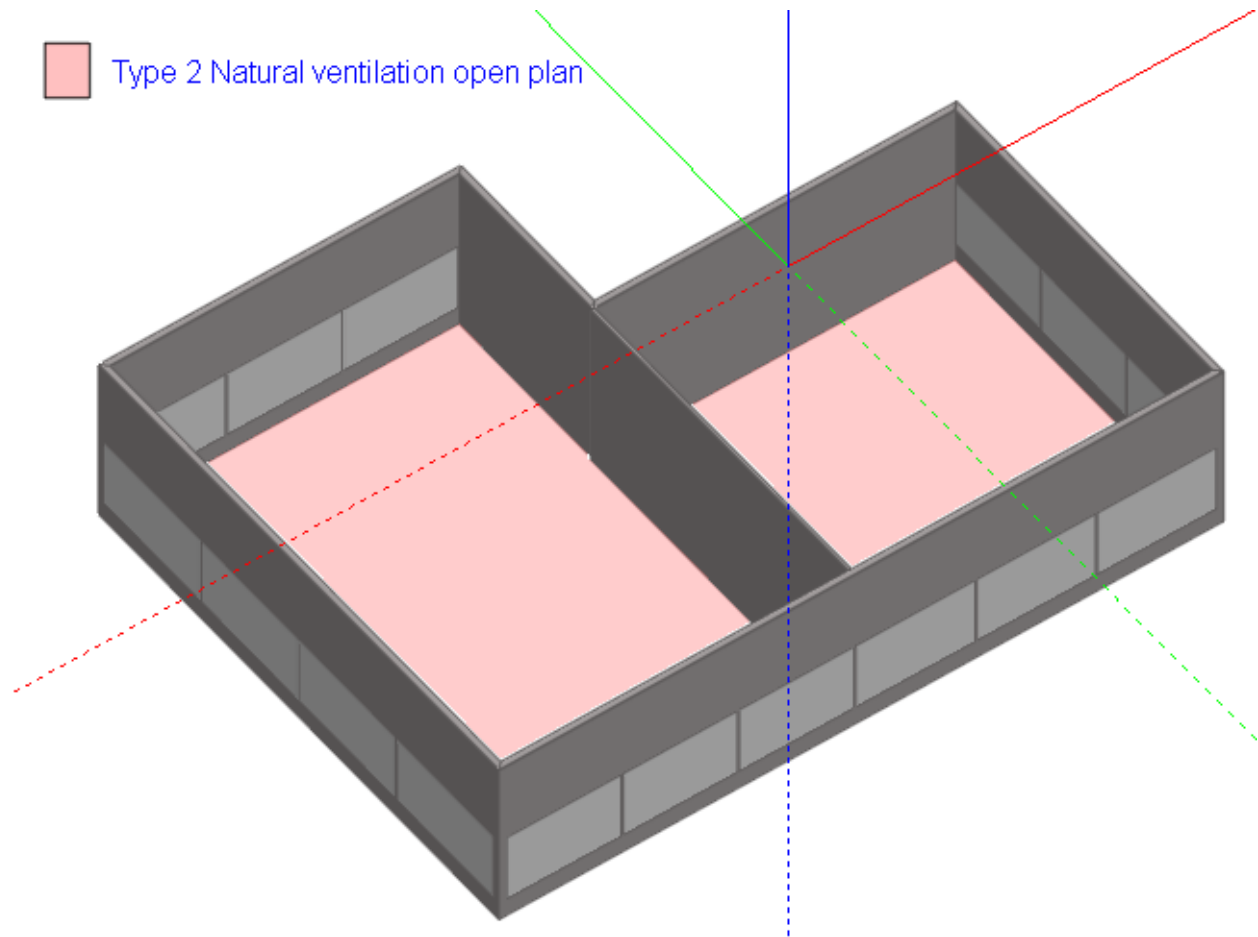


When you draw a partition or a series of partitions (stream), you can undo the last point placed by pressing the ESC key or selecting 'Undo last point' from the right-click menu.


You can also terminate a partition stream anywhere by selecting 'End stream' from the right-click menu (or by pressing the ENTER key):

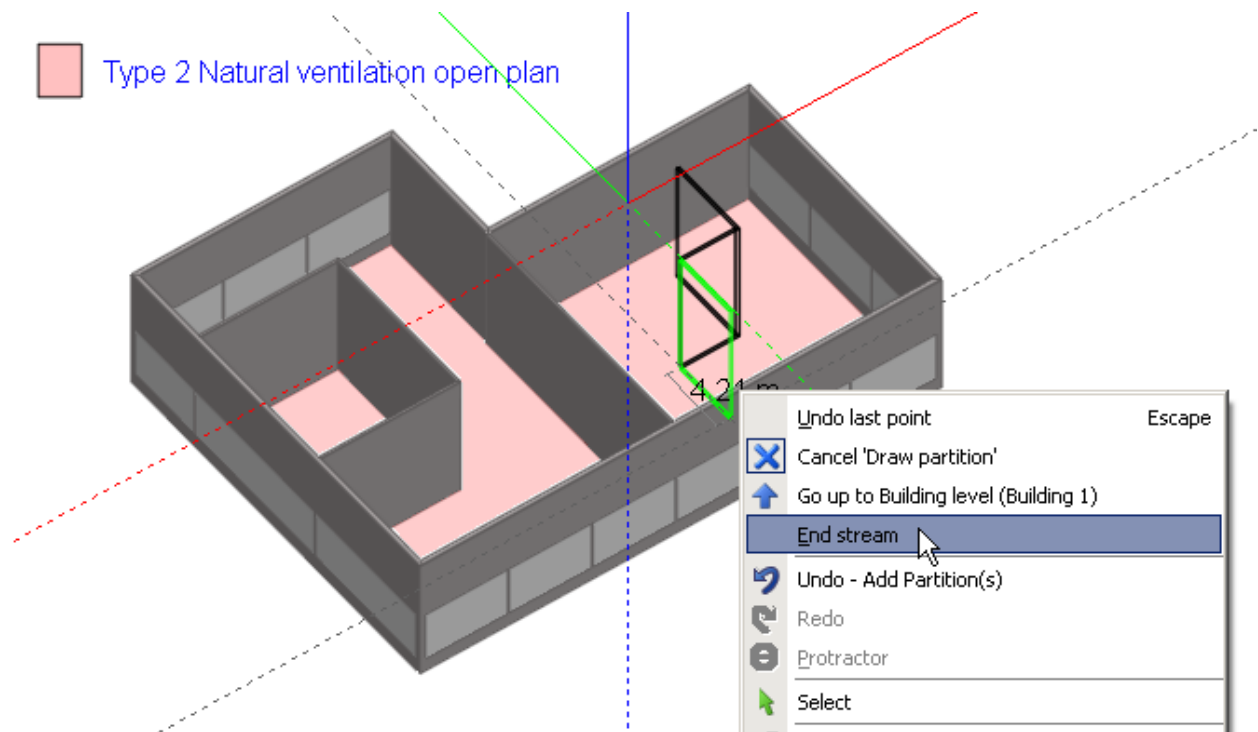


When partitions or partition streams are placed that don't connect with anything at either or both ends, they are called [hanging partitions](#) and can be used to add thermal mass to zones:

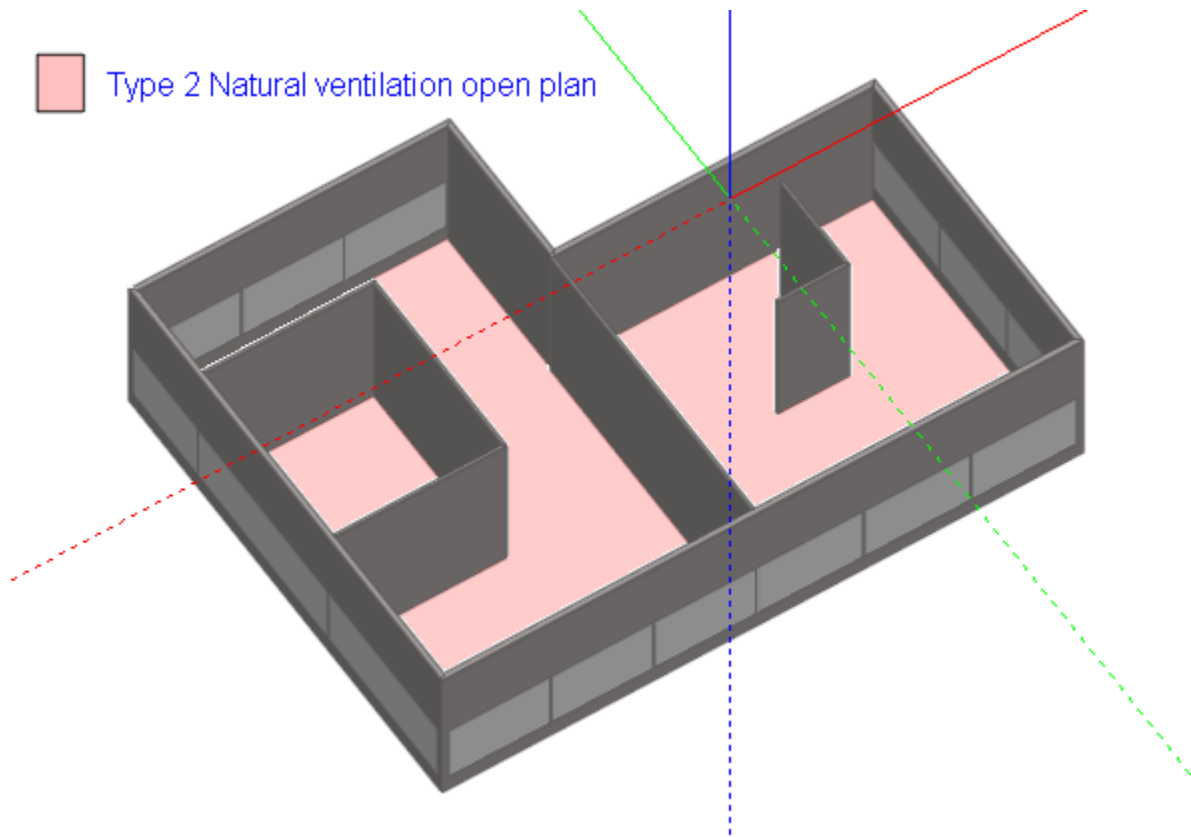


Once you've placed partitions that divide existing zones within a block, the block is re-zoned automatically:

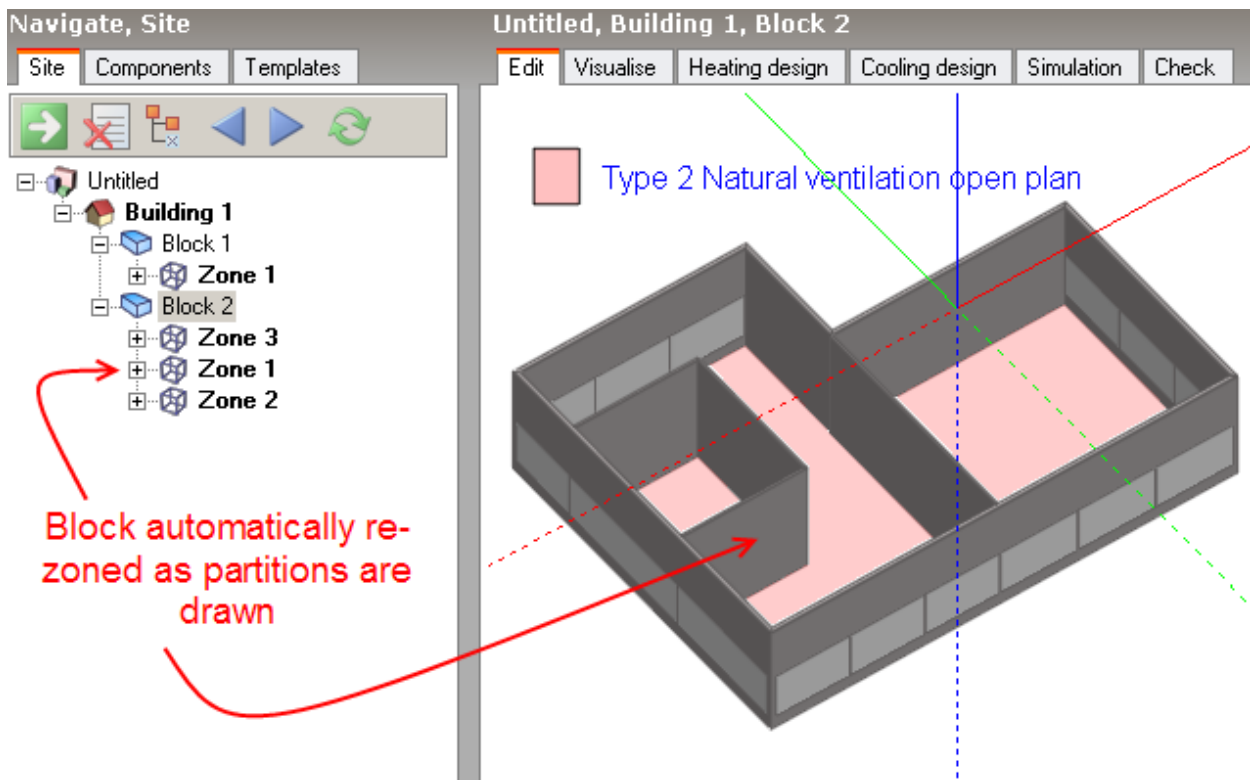


When you partition complex blocks rather than simple vertical extrusions, partitions are automatically cut to fit within the block:

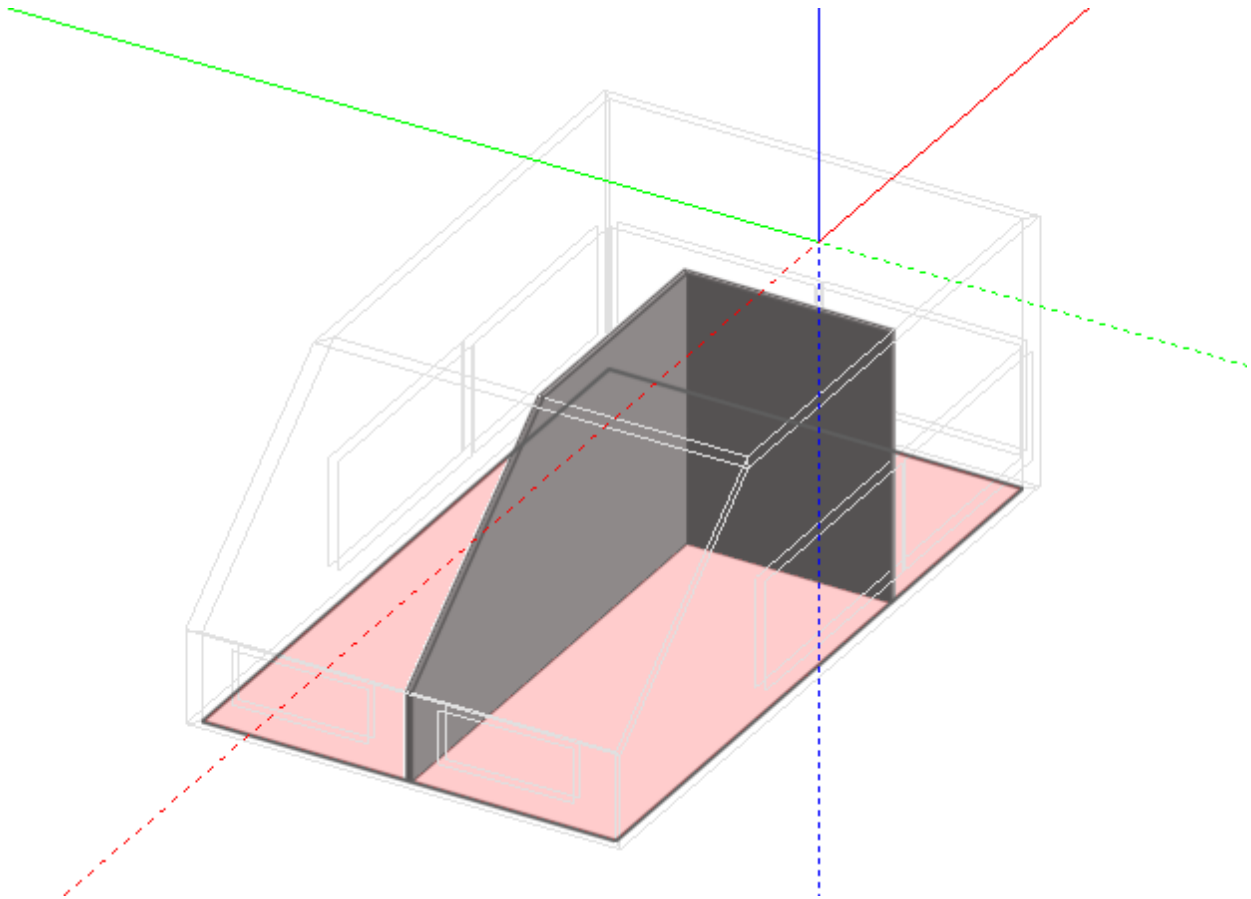


In some cases, if the geometry is complex, it can be possible to create a zone that comprises several geometric bodies which are physically separated from each other. For example, in the case of a horizontally extruded 'C' shape:

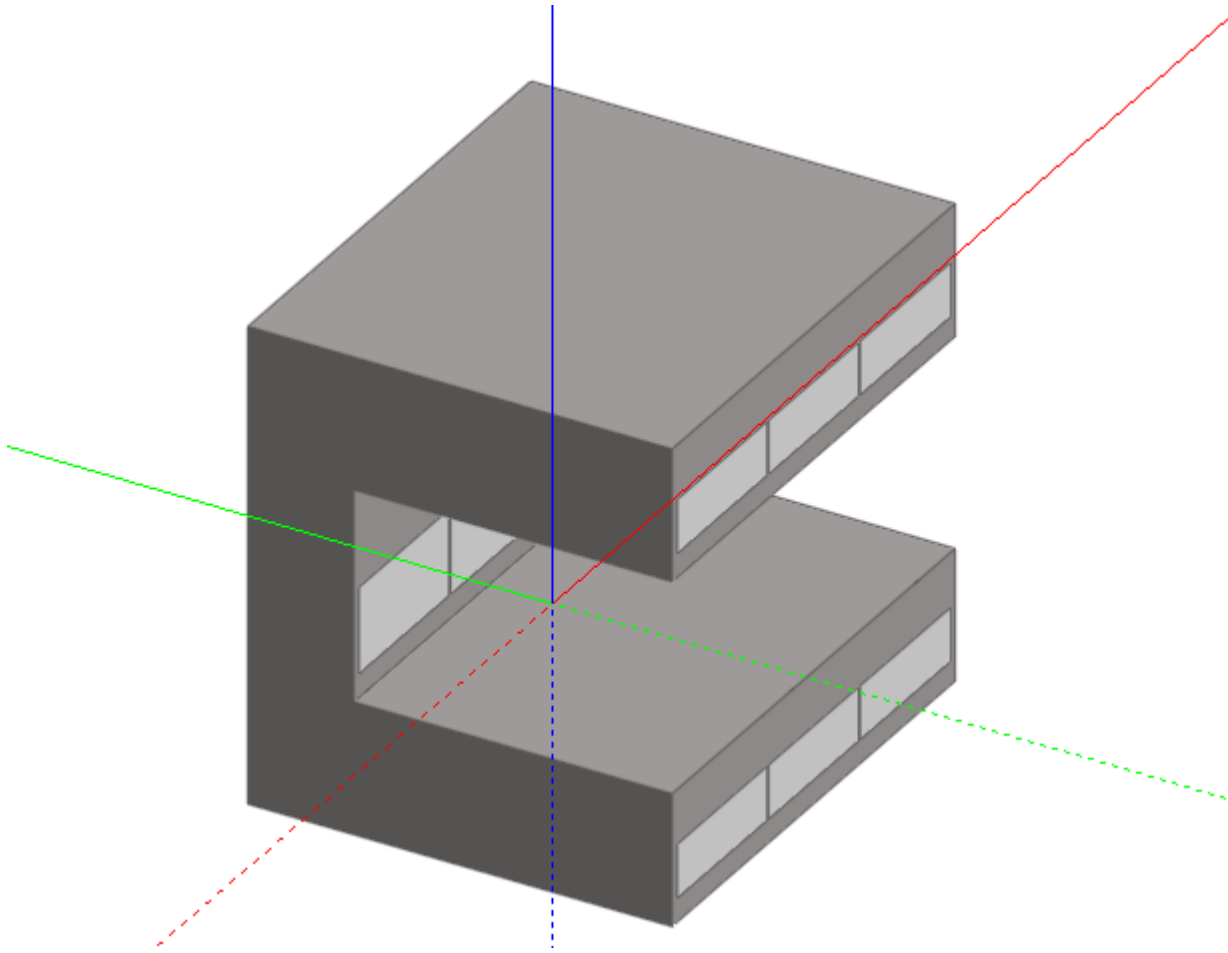


If a partition is drawn as shown:

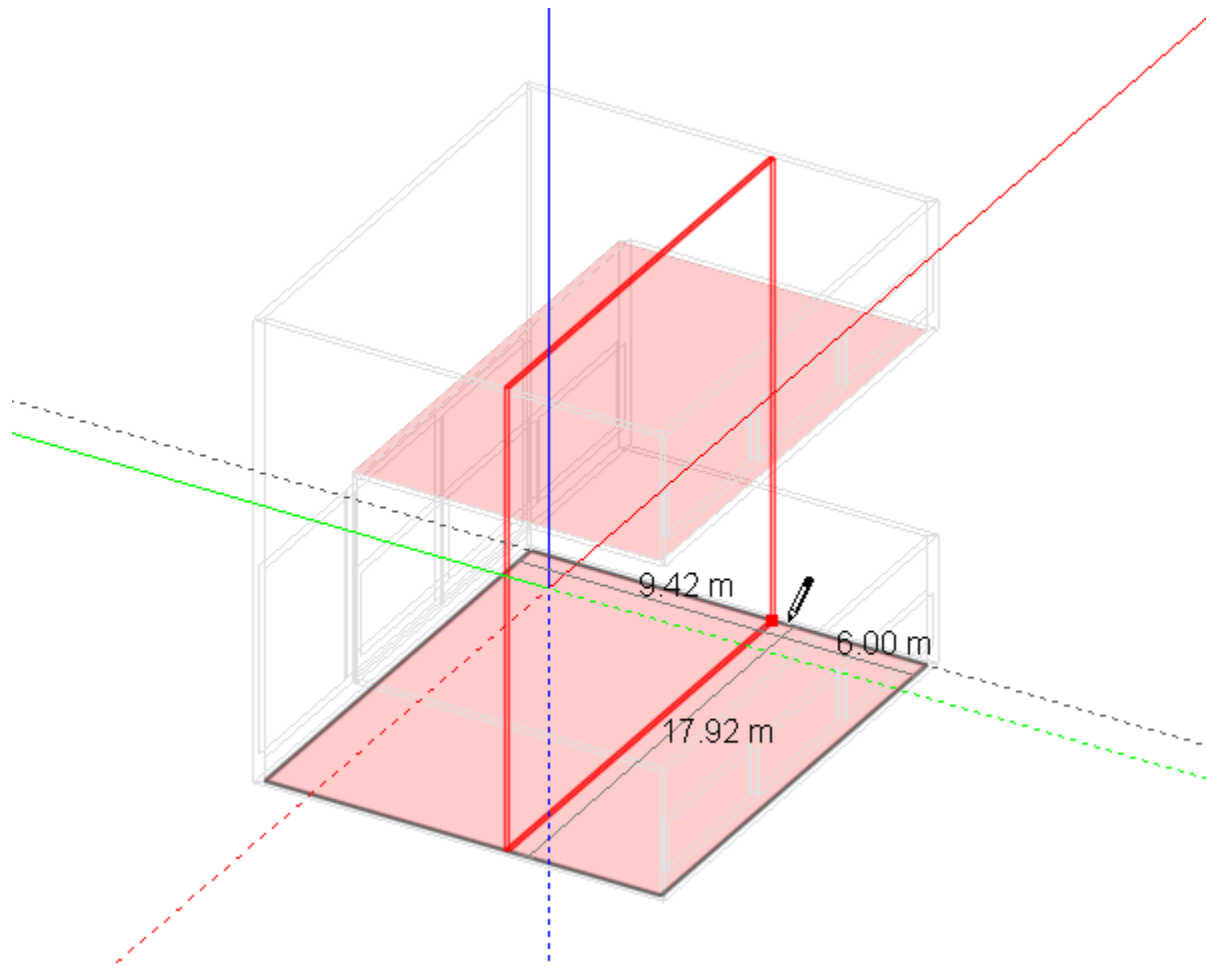

The partition and resulting zone will be cut to form what appears to be two partitions and two zones:

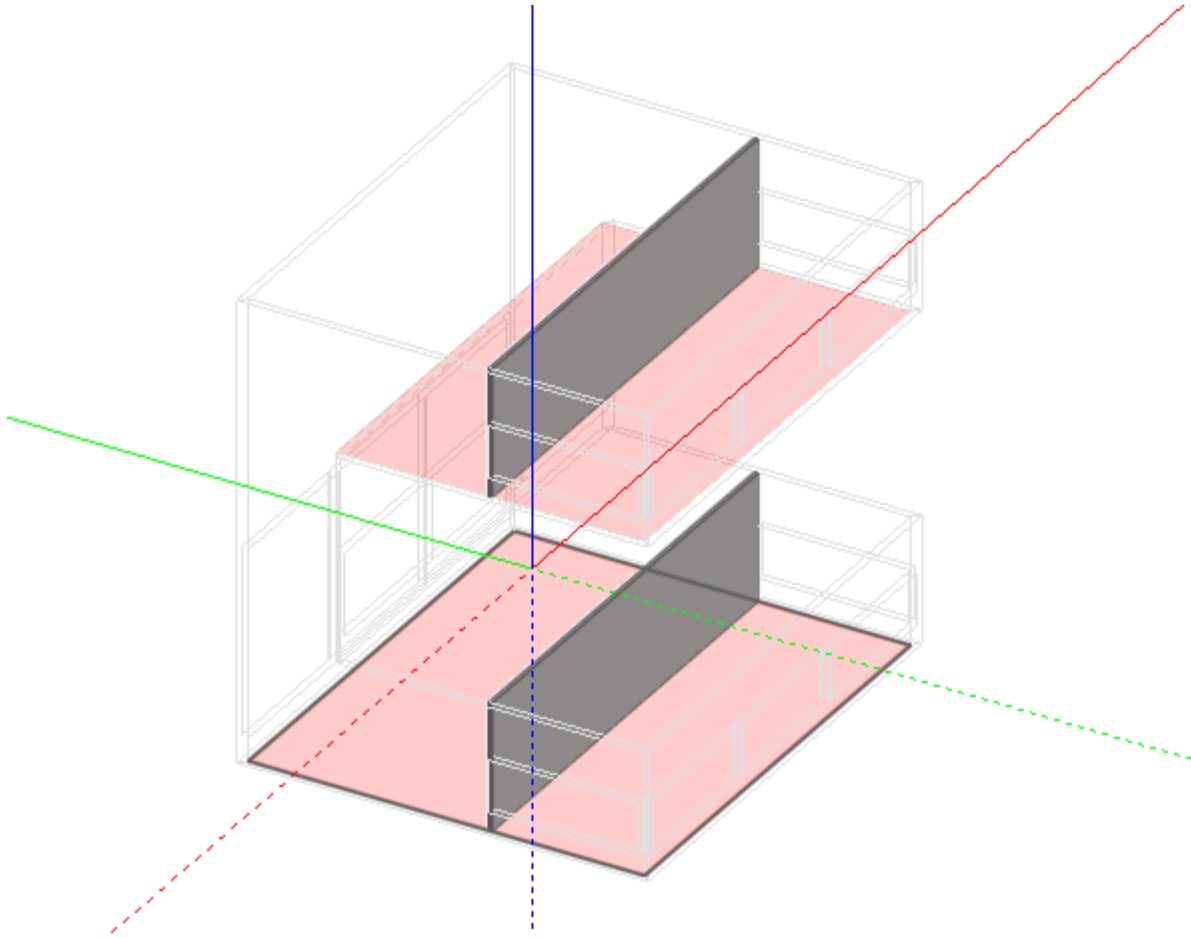


However the two resulting zones are in fact two geometric bodies within one zone:

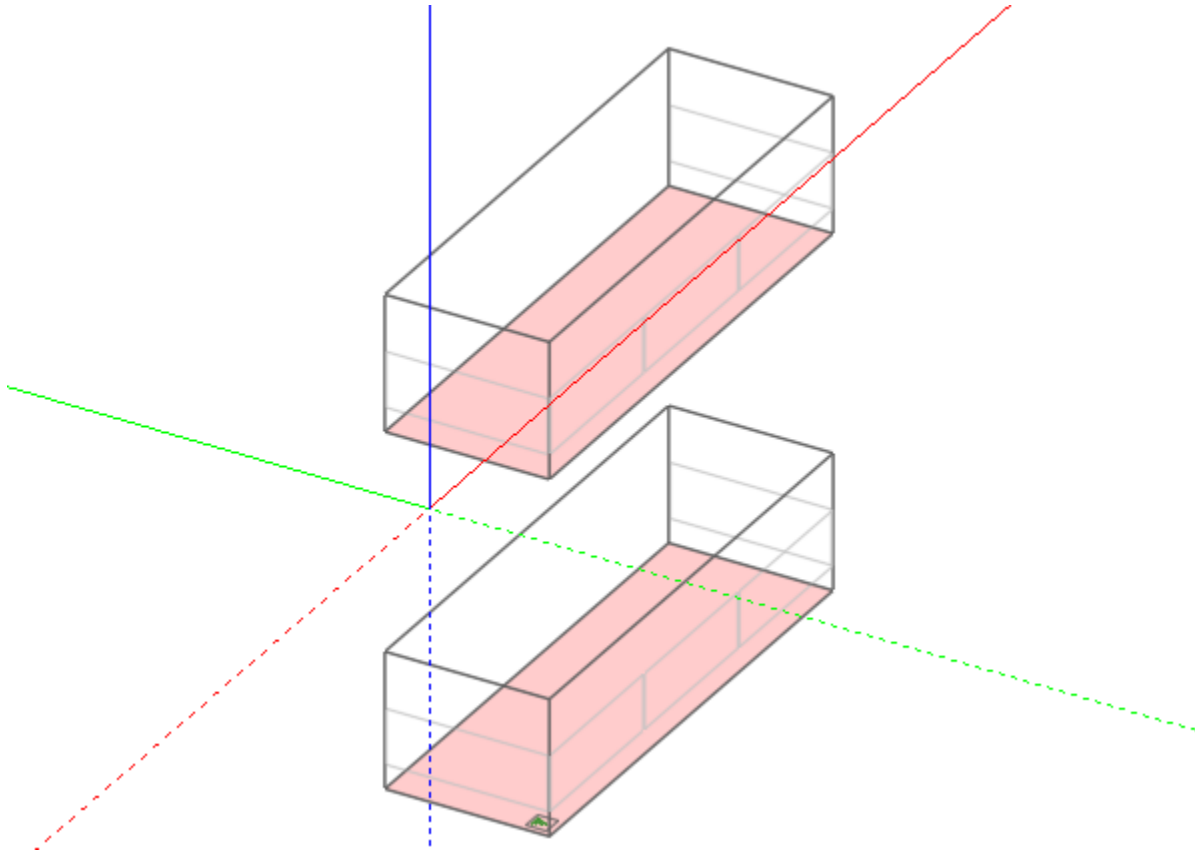

While this geometry is perfectly acceptable for the default EnergyPlus solar calculations (see Model Options), it cannot be processed by the more rigorous [Full exterior and interior](#) solar distribution option. If this latter option is required, you can either model the geometry as two separate blocks or [cut the block](#).

3.2.10.2 Hanging and Outline Partitions

Hanging partitions are partitions that do not create zones because they do not connect at both ends with other walls/partitions. Hanging partitions are created in the same way as ordinary partitions using the [Draw partition](#) tool, but are finished by pressing <Enter> (or the End partition stream command from the right click menu) to define the end of a partition stream. They are shown in blue (below).

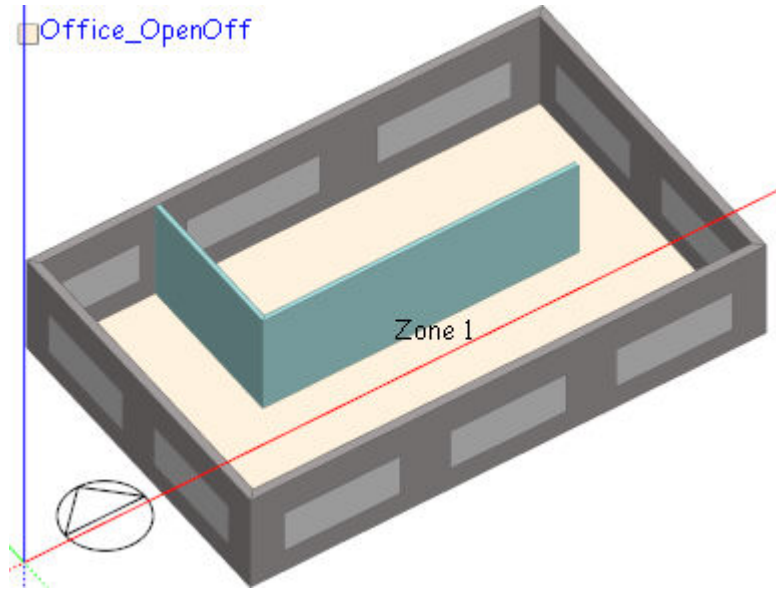

Hanging partitions are modelled non-geometrically in EnergyPlus as [Internal thermal mass](#).

Outline partitions

Also if [Automatic block zoning](#) is switched off, all new partitions are treated as outline partitions (shown in blue and do not create zones) until converted to standard partitions by using the [Rezone block](#) command from the [Tools](#) menu.

3.2.10.3 Virtual Partitions

A virtual partition is a partition between 2 zones which exists purely to sub-divide the space up and has no corresponding wall in the actual building.

Virtual partitions are commonly used for separating perimeter zones from core zones when there is to be different HVAC provision or when carrying out daylighting or solar overheating studies in situations where a large open plan space is subject to a high level of solar gain around the perimeter. Virtual partitions can be placed to create separate perimeter and core zones so that the local effect of the solar gain in the perimeter zone may be calculated. In the absence of virtual partitions, the risk of overheating could be underestimated due to the distribution of solar gain throughout the open plan space.

When drawing partitions you can set the Partition type to **2-Virtual** in the Drawing option panel. Also for partitions that have already been created you can freely switch the partition type between **1-Standard** and **2-Virtual** using the same control.


Virtual partitions are modelled using a hole that fills the whole surface area. You cannot draw custom openings on a virtual partition. The model options for controlling the effect of holes equally apply to virtual partition holes:

- [Merge zones connected by holes](#)
- [Model holes \(including holes in virtual partitions\)](#)
- [Model airflow through internal openings using flow per unit area](#)


3.2.10.4 Creating Voids (Courtyard Spaces) Within Blocks



To create an external courtyard within a block, go to the required block by clicking on the navigator entry or double-clicking the block in the 'Edit' screen and then click on the 'Draw void perimeter' tool. You can select a perimeter [shape](#) and set the required [wall thickness](#) in the 'Drawing Options' data panel:

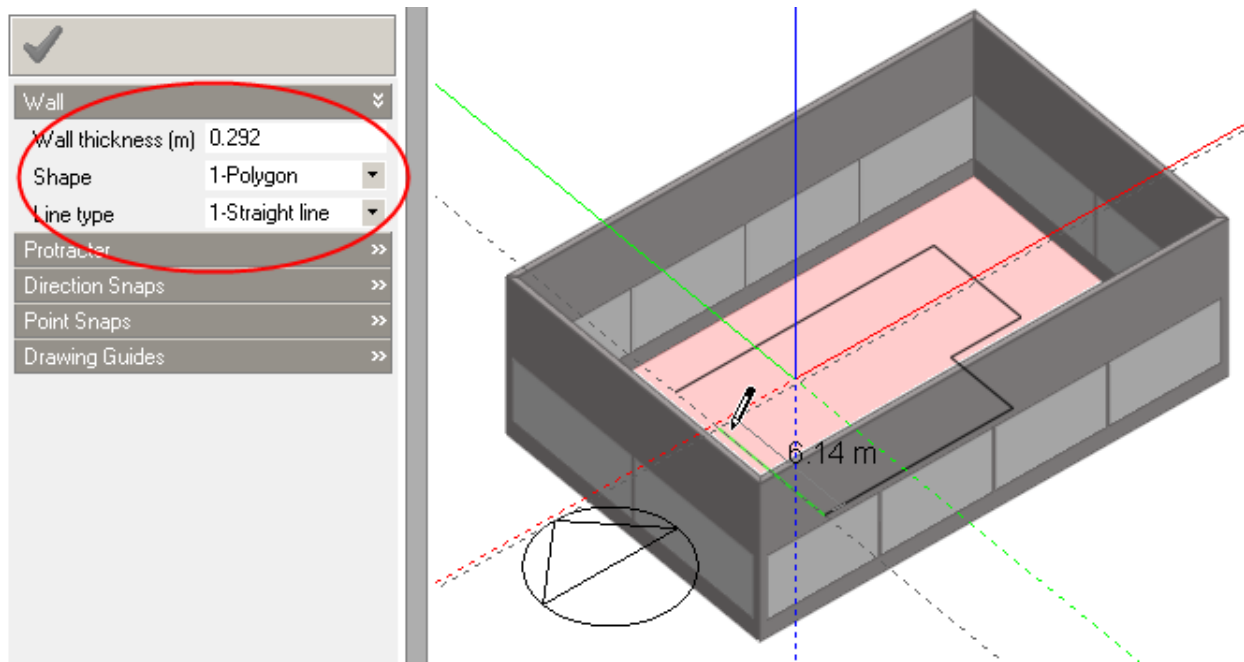


After completing the perimeter, a courtyard is automatically generated within the block:

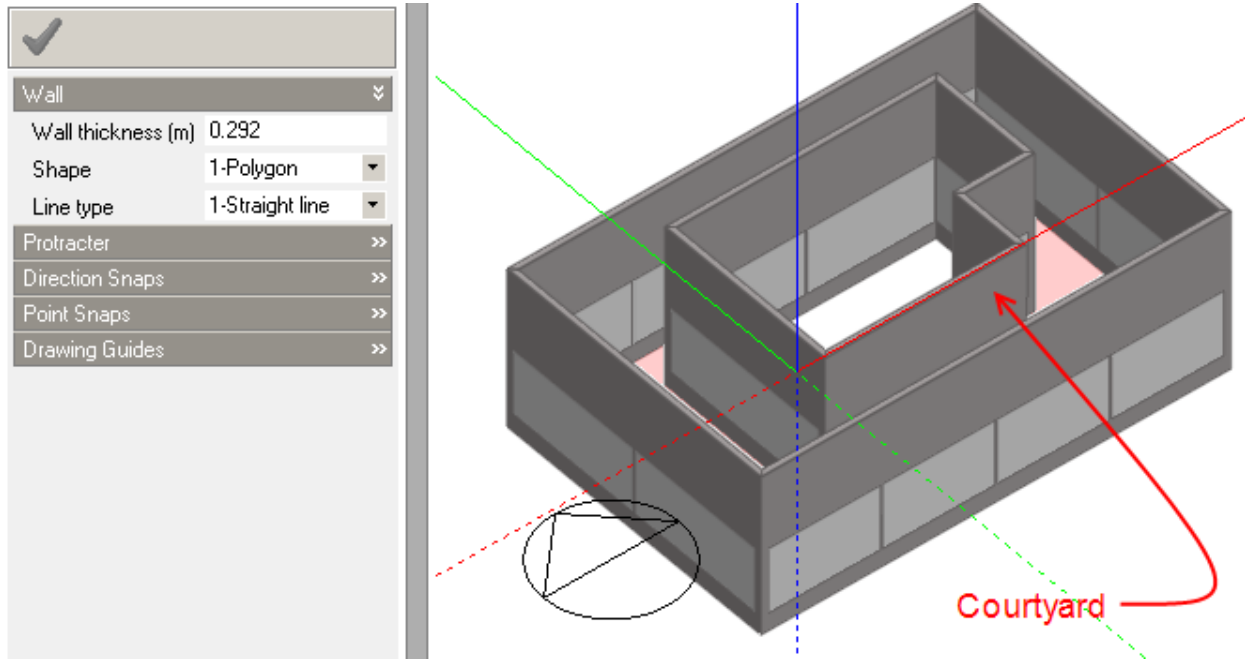

3.2.10.5 Edit Block Options



You can edit certain aspects of a building block geometry by clicking on the 'Building model options' icon while at the block level. This opens the [Model Options](#) dialog box:

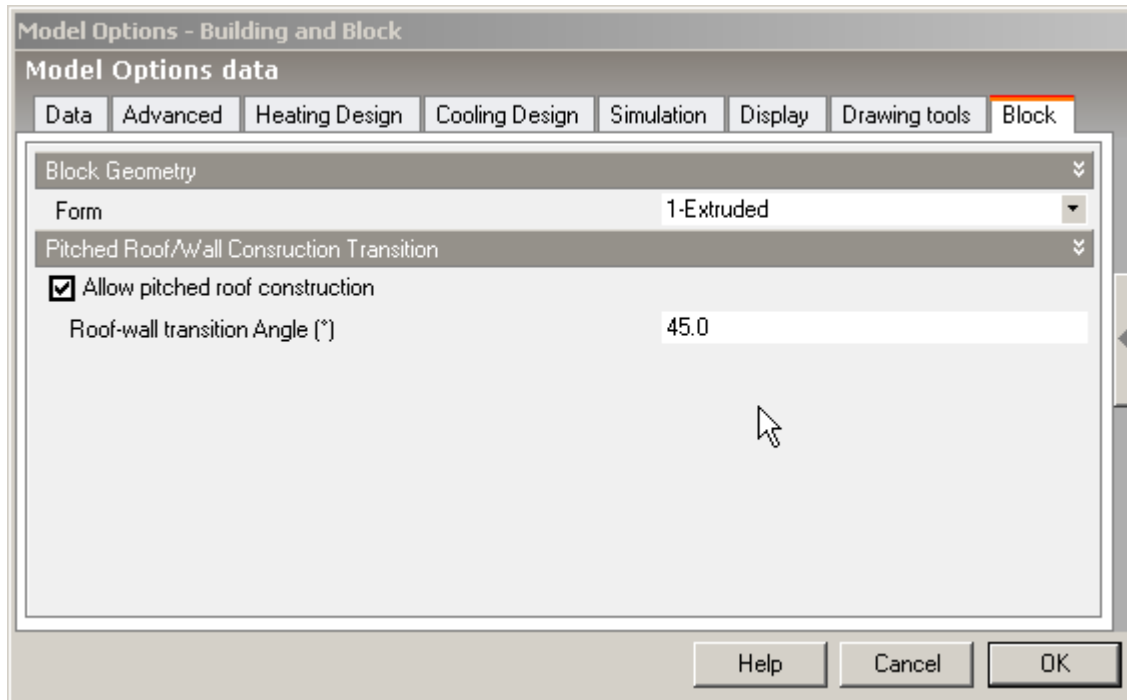

At the block level, the [Block tab](#) on the [Model Options](#) data dialogue box is enabled and allows you to change the [Form](#) of the block and to modify pitched roof assignment.


To change the [form](#) of the current block, make a selection from the 'Form' drop list. When you change the form of a block from an 'Extruded' form to 'Pitched Roof' or 'Sloping Walls' the original form will be remembered so that even if you have edited the block by cutting it or dragging a face, when you convert the form back to 'Extruded', the original form will be restored.

The [Pitched Roof/Wall Construction Transition](#) settings allow you to control which elements within a block will be assigned pitched roof construction, either by disallowing pitched roof construction altogether or by adjusting the element slope to determine which elements should be identified as pitched roofs. The 'Roof-wall transition angle' is the angle from the horizontal below which the element will be considered a roof.


3.2.11 Working within Zones

This section describes the operations involved in placing [light sensors](#) within zones. To [place light sensors](#) within a zone, you first need to go to the zone that you want to modify. You can do this from the block level either by clicking on the navigator entry or double-clicking on the zone floor in the 'Edit' screen if you're at the block level.

Go to zone level

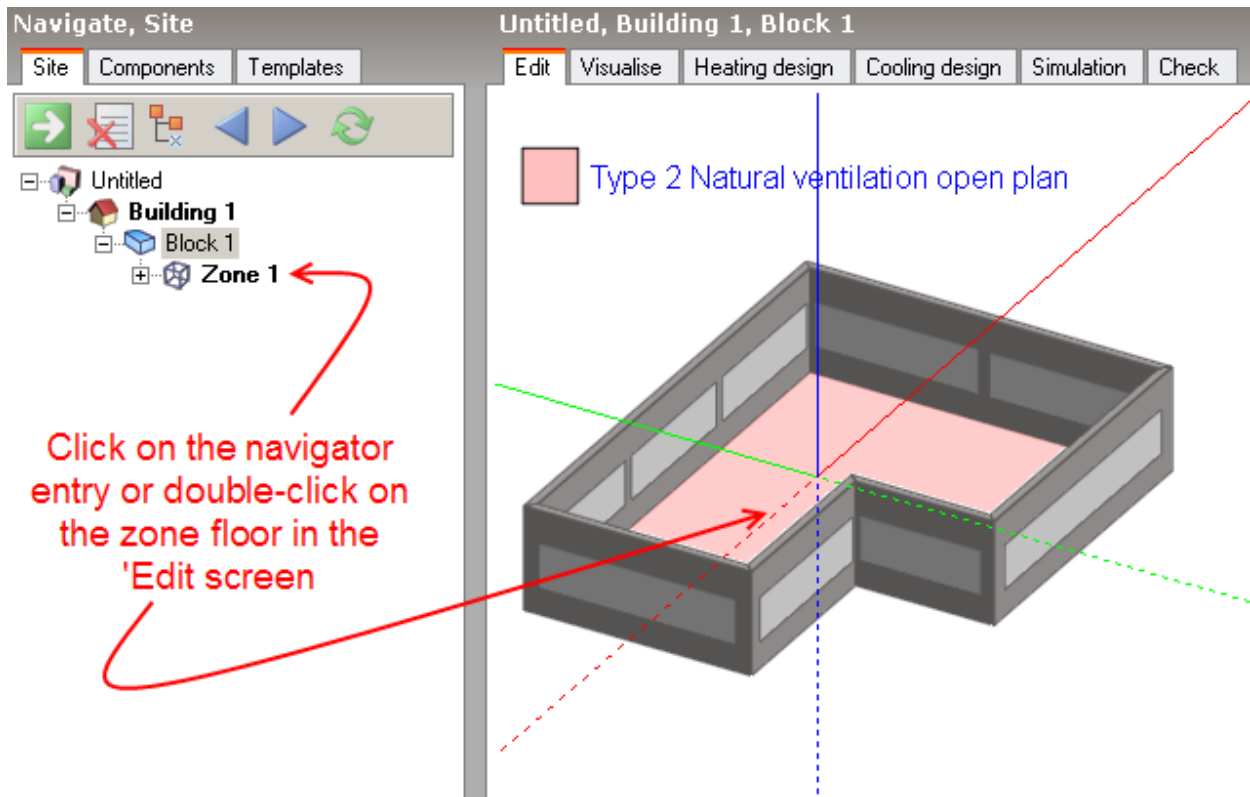


Either of these operations will take you to the zone:

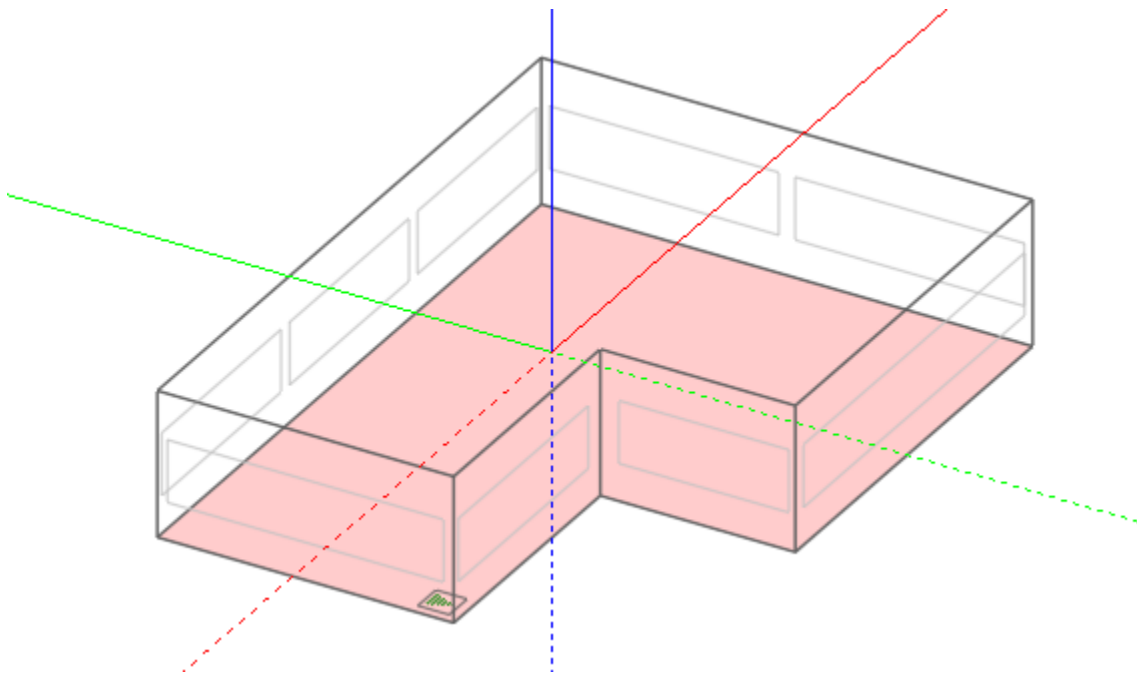


3.2.11.1 Placing Light Sensors

If you switch zone [Lighting Control](#) on, a light sensor will be displayed as a blue rectangle with the number '1' inside it indicating 'Light sensor 1'. By default Light sensor 1 is positioned in the geometric centre of the zone.

If you now switch on the [Second Lighting Area](#), a second light sensor will be displayed with a number '2' inside it:

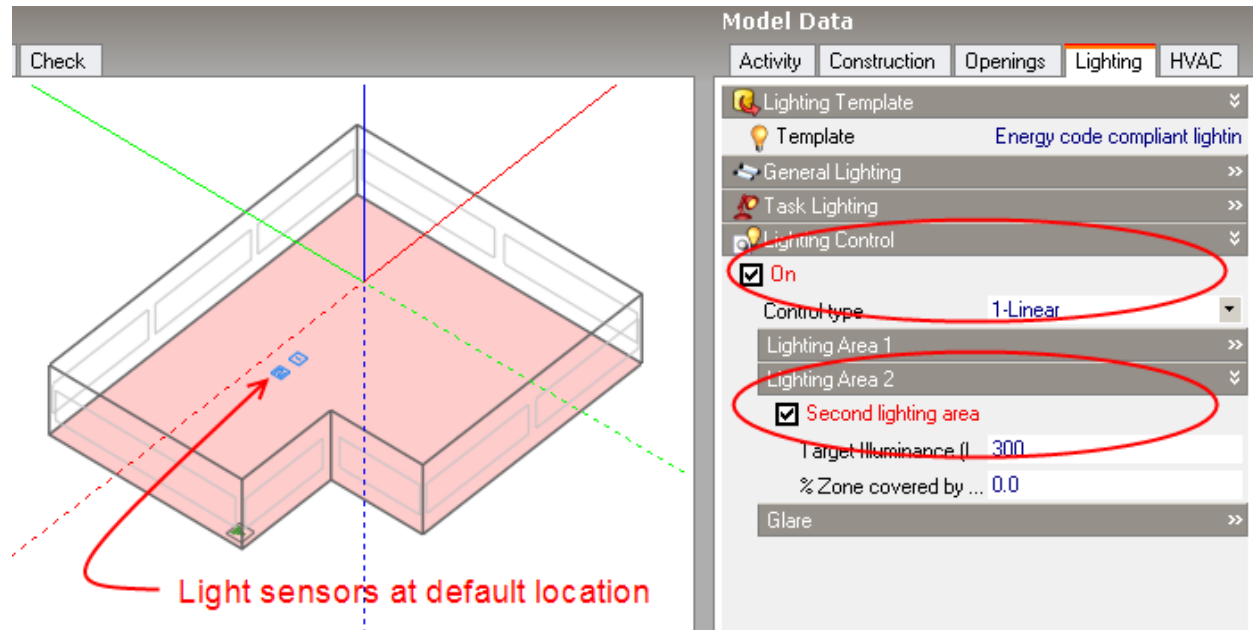

To move a light sensor to a different location, move the mouse cursor over the required sensor and click on it to select it and then [Move](#) it to wherever you want within a floor perimeter:

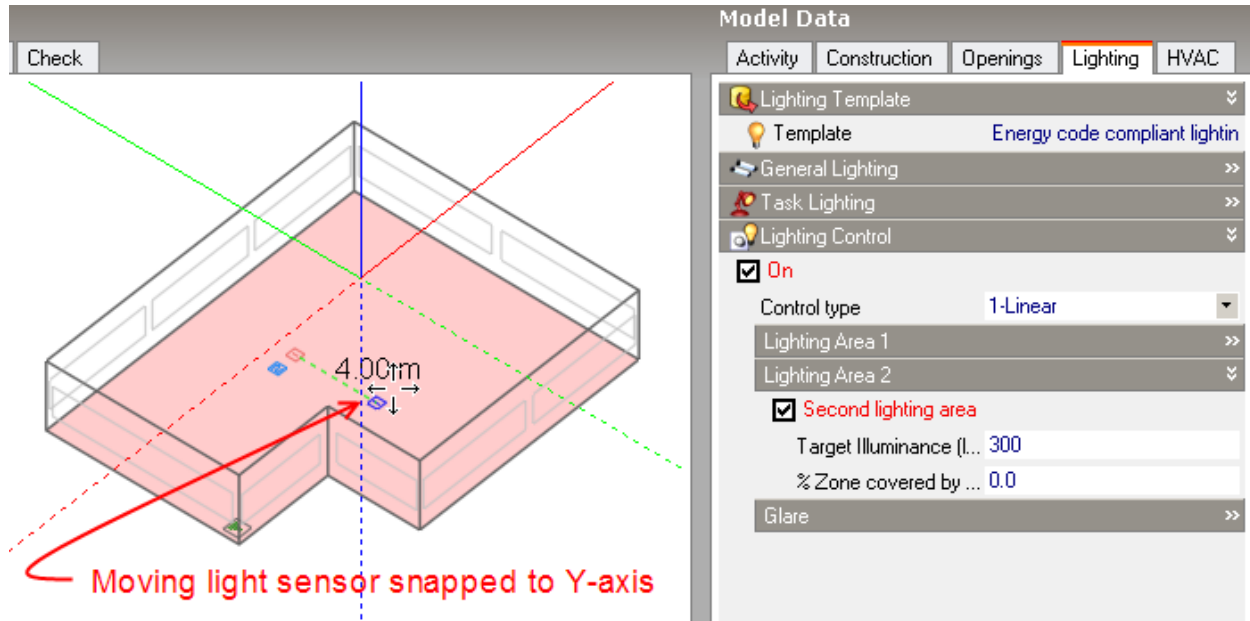


Note: You can set the [height of the working plane](#) (and hence the z-position of the lighting sensor) on the Advanced tab of the Model options dialog.

3.2.12 Working with Surfaces (Surface Level)


This section describes the operations involved in creating surface openings and sub-surfaces. To [create openings](#) and sub-surfaces in a zone surface, you first need to go to the surface that you want to modify. You can do this from the zone level either by clicking on the navigator entry or double-clicking on the zone surface in the 'Edit' screen, if you're at the zone level.

Go to surface level

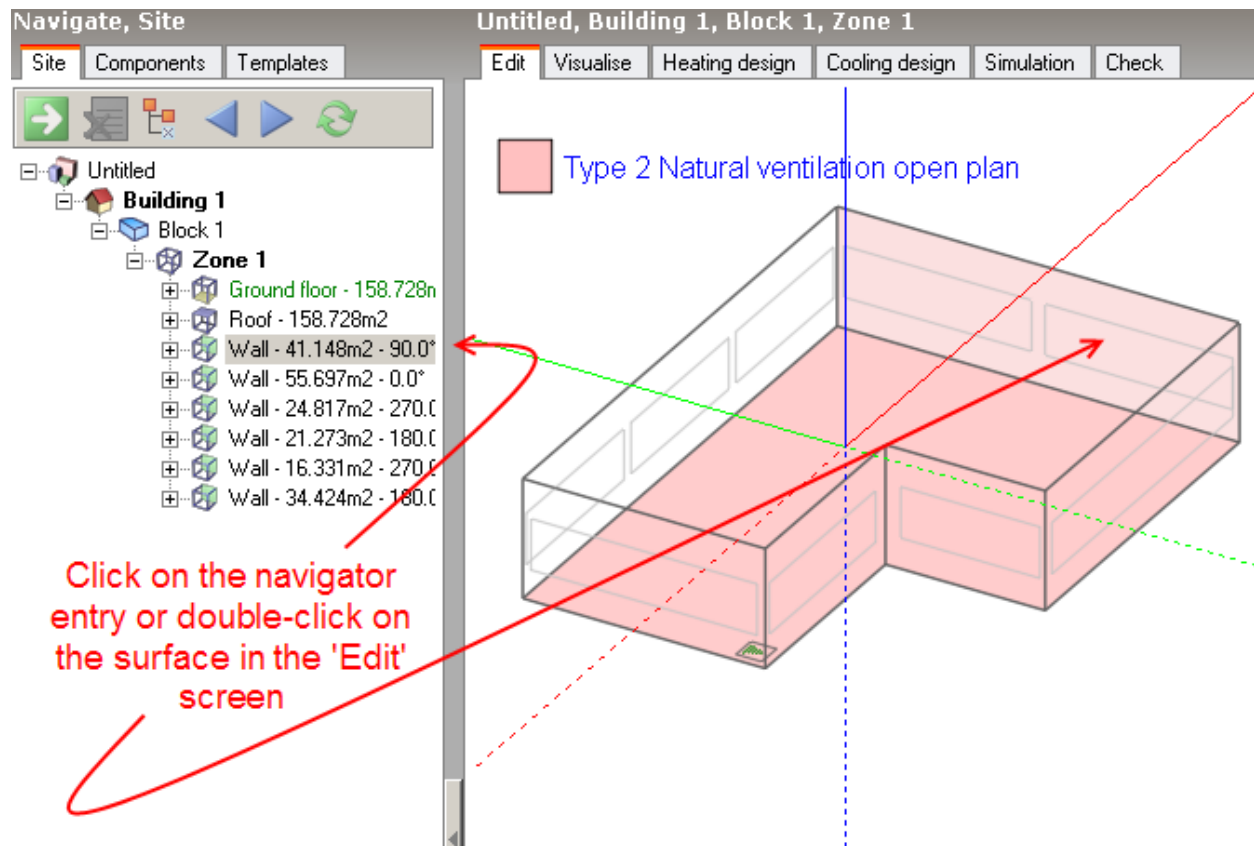


Click on the navigator entry or double-click on the surface in the 'Edit' screen

Either of these operations will take you to the surface:

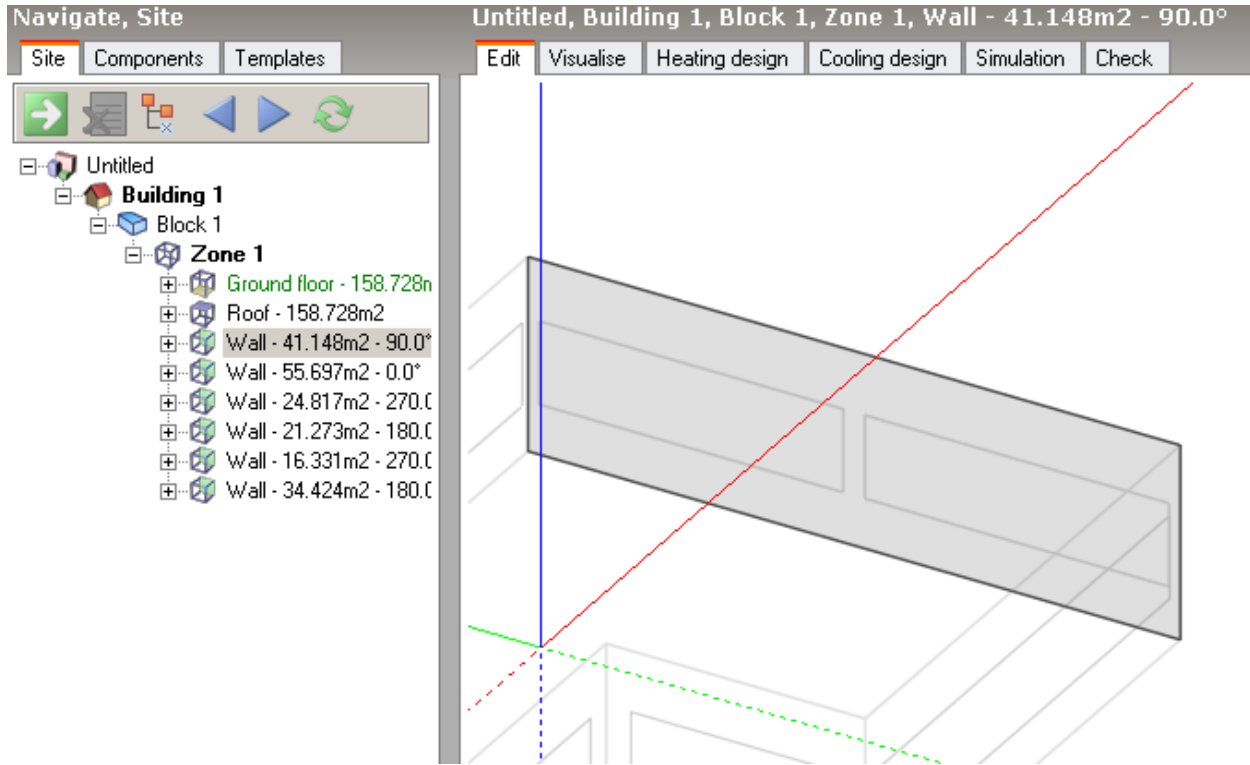

When working with surfaces, switching to [Normal view](#) rotation can be helpful in orientating openings and sub-surfaces:

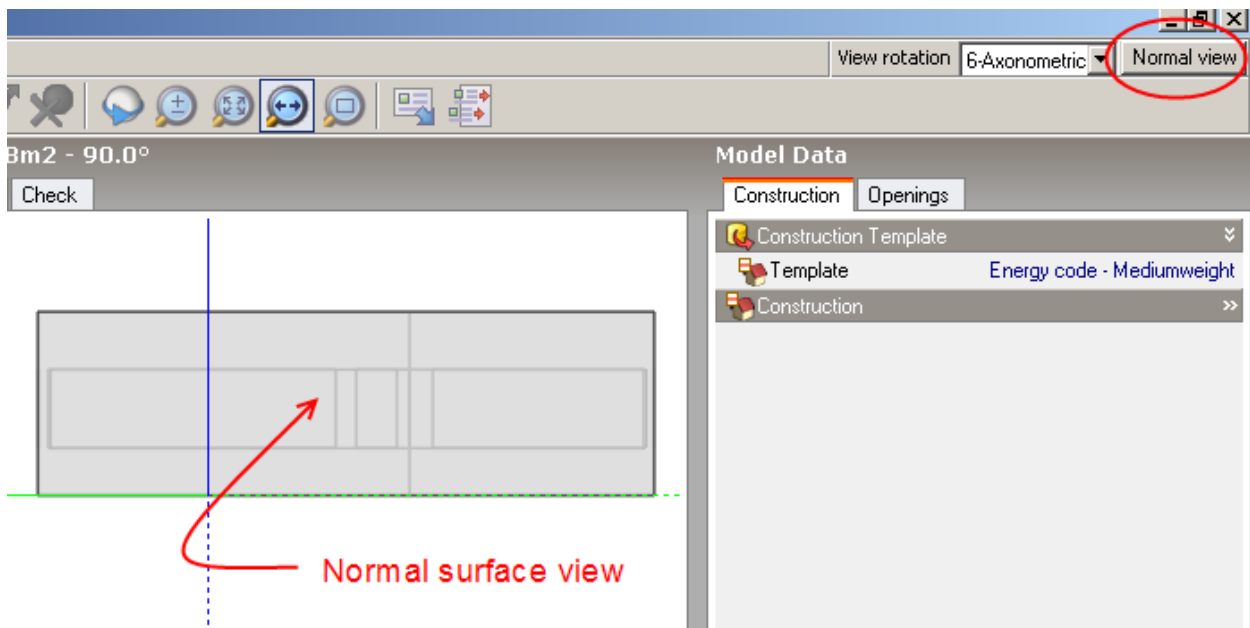

Openings

You can draw, move, clone (copy), rotate and delete the following types of opening:

- [Window](#)


- [Sub-surface](#)
- [Hole](#)
- [Door](#)
- [Vent](#)

3.2.12.1 Draw Window




Before activating the 'Draw window' tool, you are given the option of keeping any default surface openings. If you choose to keep these openings, they will not be subsequently affected by any changes to the surface attribute data and must be deleted or edited manually.


To add a window to a surface, click on the 'Draw window' tool. If you have opted to keep the default openings, they will be converted to custom openings:

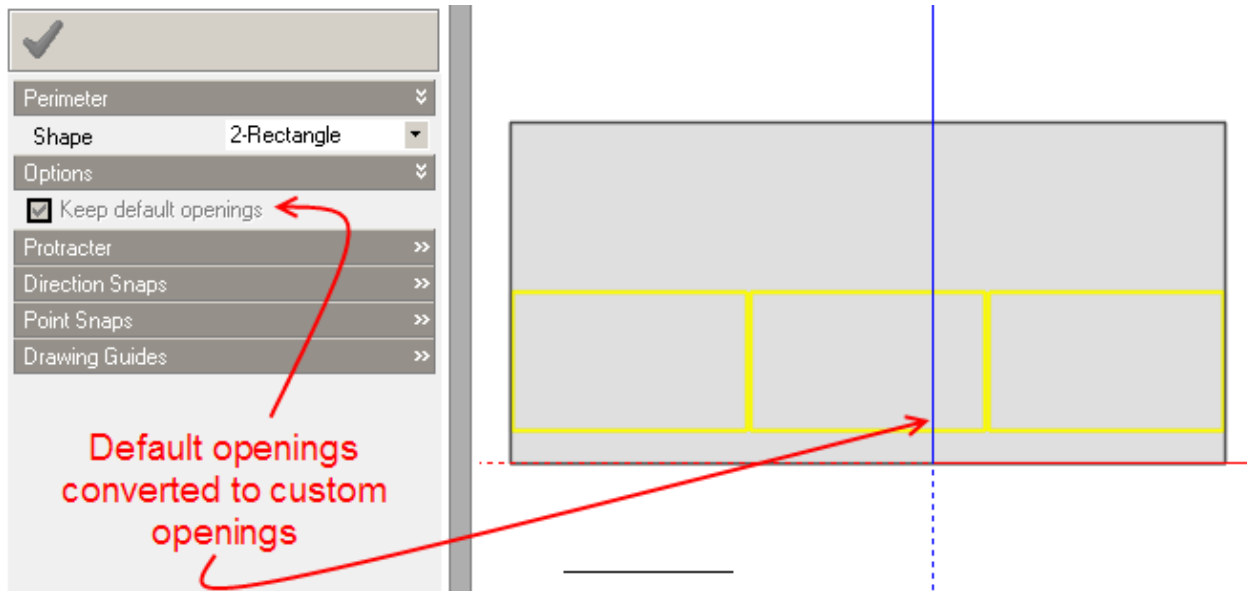

On the other hand, if you un-check the 'Keep default openings' option, all default openings will be removed. Select the [perimeter shape](#) that you require and then move the mouse cursor to place the window origin. As you move the mouse cursor over the surface, distance guides will be displayed from each of the surface vertices to help in placing the window origin. If the increment snap is switched on, the origin will snap in increments from the vertex that's nearest to the mouse cursor:

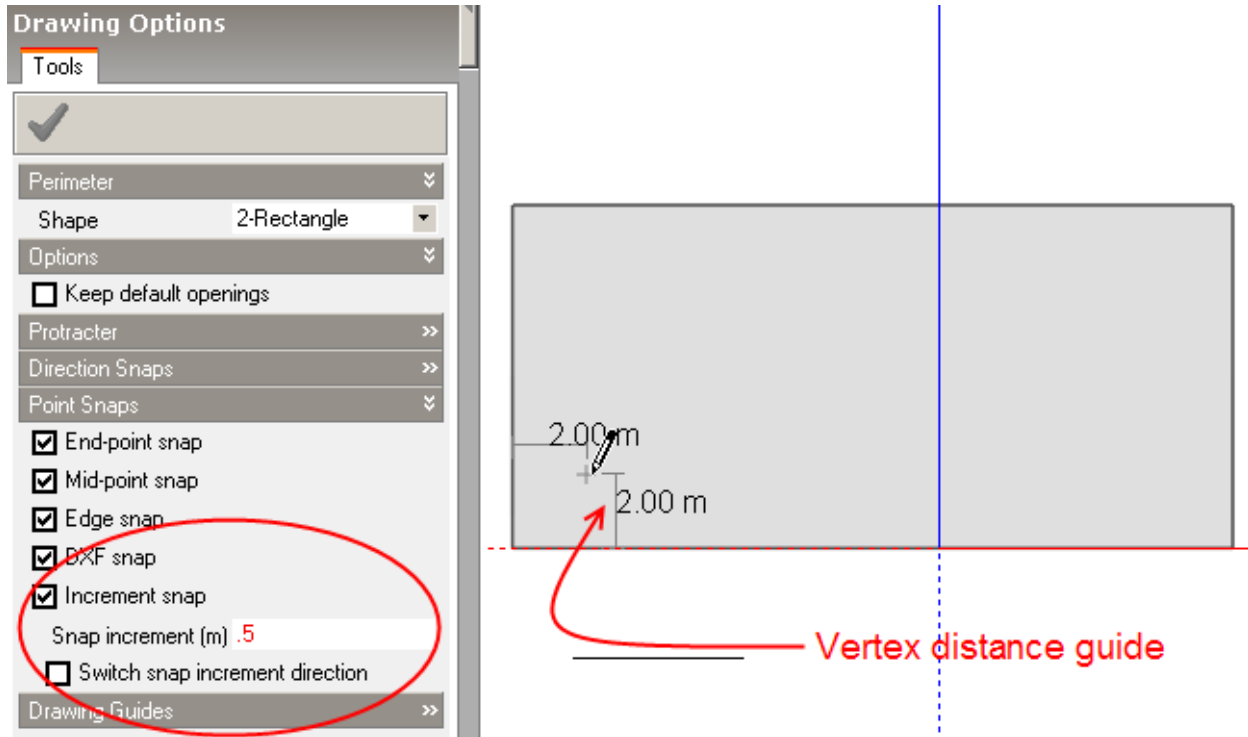

You can lock the origin to a particular vertex by moving the mouse cursor close to the vertex and pressing the SHIFT key and keeping it pressed until you actually place the surface. This can be helpful if you want to place a window relative to a vertex at the other end of the surface:

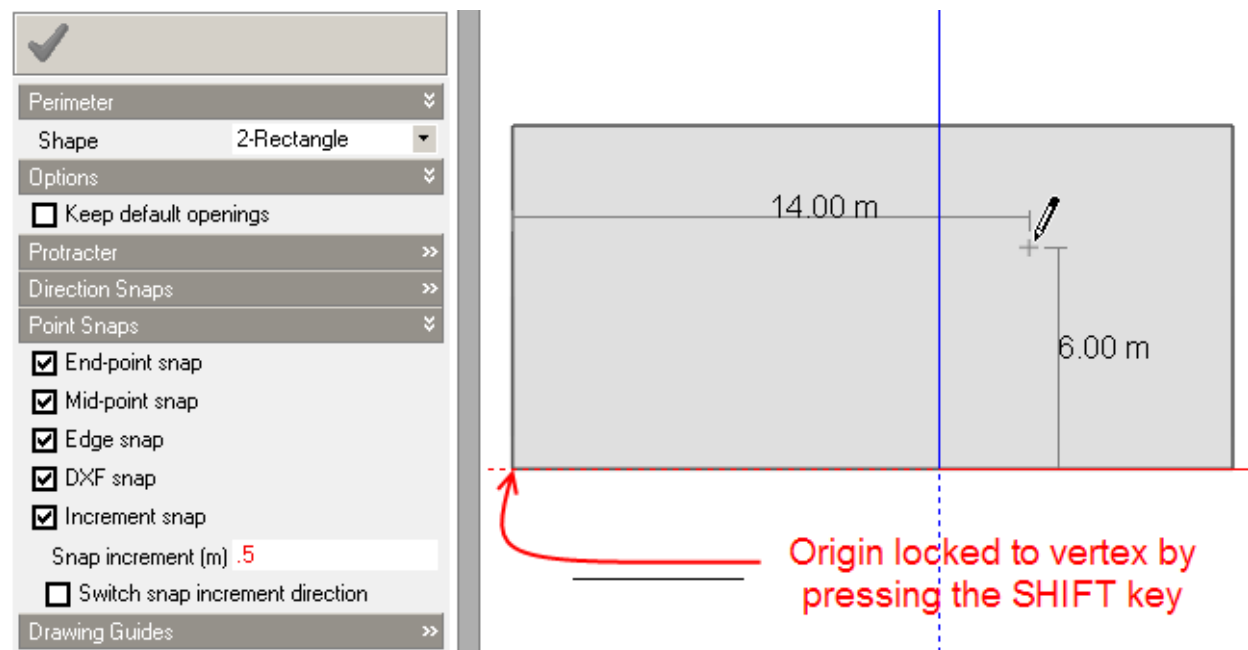


Having placed the window origin, you can then draw the window using the selected perimeter drawing mode, for details of drawing perimeters please refer to the [Perimeters](#) section.


USING KEY INS TO CREATE OPENINGS

You can type in the precise dimensions and offset from the origin of your window using 'Key Ins'. The procedure is:

1. Start the 'Draw window' command as described above.
2. Define the window position relative to an origin by first moving the mouse cursor to define the origin (typically the bottom left corner of the surface)

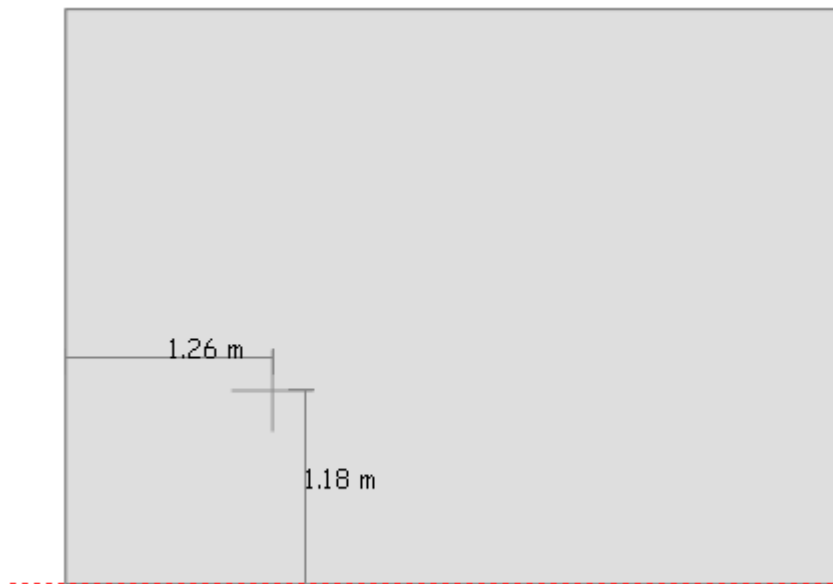


3. Then type in the offset of the window origin (bottom left corner of the window in this example) in the format x y. Note that there is no comma between the x and the y coordinates. The coordinates that you type in will appear under the 'Key In' header in Drawing Options panel. The convention used when positioning and drawing openings at surface level is that x increases from left to right and y increases from bottom to top. This is true whether viewing the surface from inside or from outside.

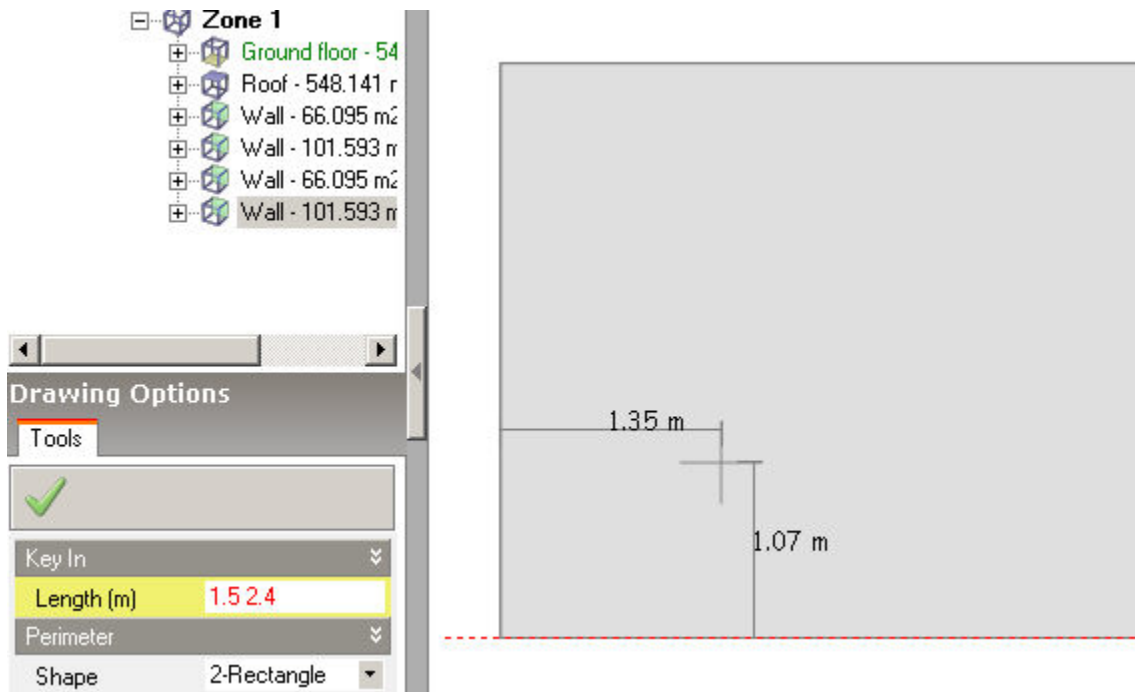


4. Then press <Enter> to define the window origin.

5. Next type in the window width followed by a space followed by the window height. Again the coordinates you type in are shown in the Drawing Options panel. In the example below a window is being defined having width 2m and height 1m.

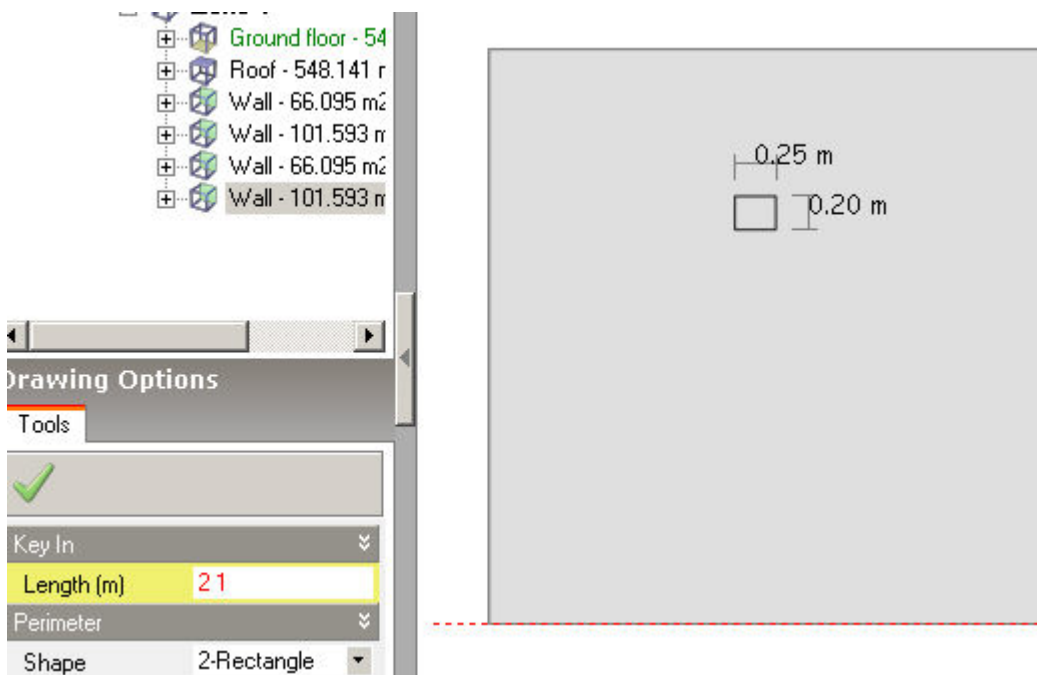

6. Press enter to create the window:

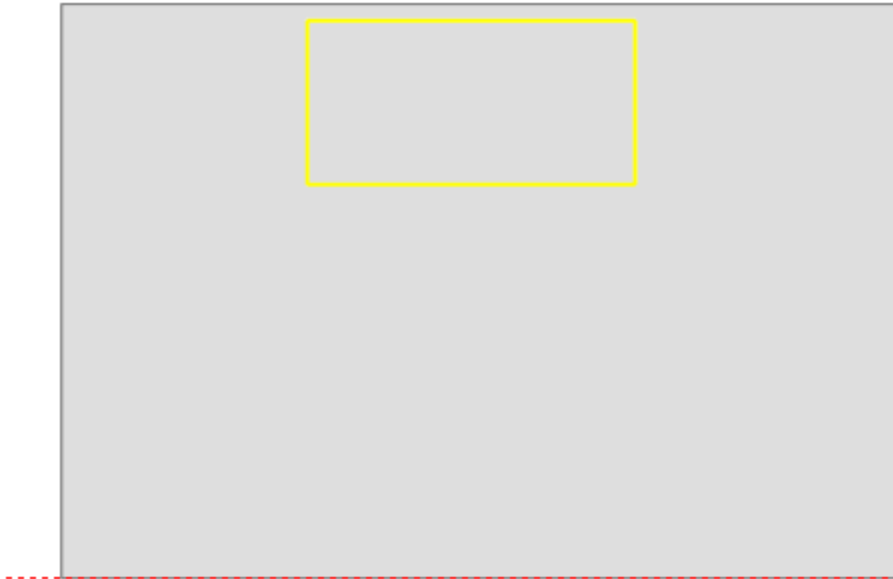

You can use the mouse in conjunction with Key Ins if you prefer. So you could use the mouse to define the window offset from the origin and then use Key Ins to define the window dimensions or vice versa.

Tip: You can also enter negative x and y values when keying in offset and coordinates.

3.2.12.2 Draw Sub-Surface



For details of using the 'Draw sub-surface' tool, please refer to the [Draw window](#) tool.

3.2.12.3 Draw Door



For details of using the 'Draw door' tool, please refer to the [Draw window](#) tool.

3.2.12.4 Draw Hole



For details of using the 'Draw hole' tool, please refer to the [Draw window](#) tool.

Holes are used for two purposes:

1. **As an air flow path between a zone and an other zone or outside** (in much the same way that Vents are used). Holes cannot be controlled - they simply represent a constant air flow path in the fabric.

Holes positioned on **external** walls only have an effect on Simulation calculations when the [Natural ventilation building model option](#) is set to Calculated. They have no effect on Heating and Cooling Design calculations. Holes positioned on **internal** partition walls are used to mix the air between the two adjacent zones when the Scheduled Natural ventilation building model option is set. They also provide an air flow path when the Calculated option is set. You can find information on the way Mixing works by looking at the [Vent Operation](#) help topic.

2. **For merging zones together.** Note that the [Merge zones connected by holes](#) option must be selected for this to work.

Tip: It is possible to draw large holes in surfaces to give the effect of the surface having being removed. This can be a useful technique for creating atrium-type spaces, connecting gable roof blocks to the main roof block and generally merging zones in different blocks.

Note: Holes transmit solar radiation.

Large horizontal holes

You can draw holes in internal and external horizontal surfaces to model the flow of air between storeys or to outside, but you should be aware when using the Calculated natural ventilation option that Large horizontal openings are only [modelled approximately](#).

3.2.12.5 Draw Vent



For details of using the 'Draw vent' tool, please refer to the [Draw window](#) tool.

3.2.12.6 Edit Surfaces


You can select custom openings and [move](#), [clone](#) (copy), [delete](#) and [rotate](#) them. Default openings cannot be selected and manipulated in this way.

You can also clear custom openings their default state using the [Clear Data to Default](#) command.


3.2.13 Editing Openings at the Building Level

Building block façade openings can be selected at the building level and subsequently [moved](#), [copied](#) or [deleted](#). In order to edit openings at the building level you first need to select the openings either clicking

on them using the [Select](#) tool or by dragging a selection window around them:

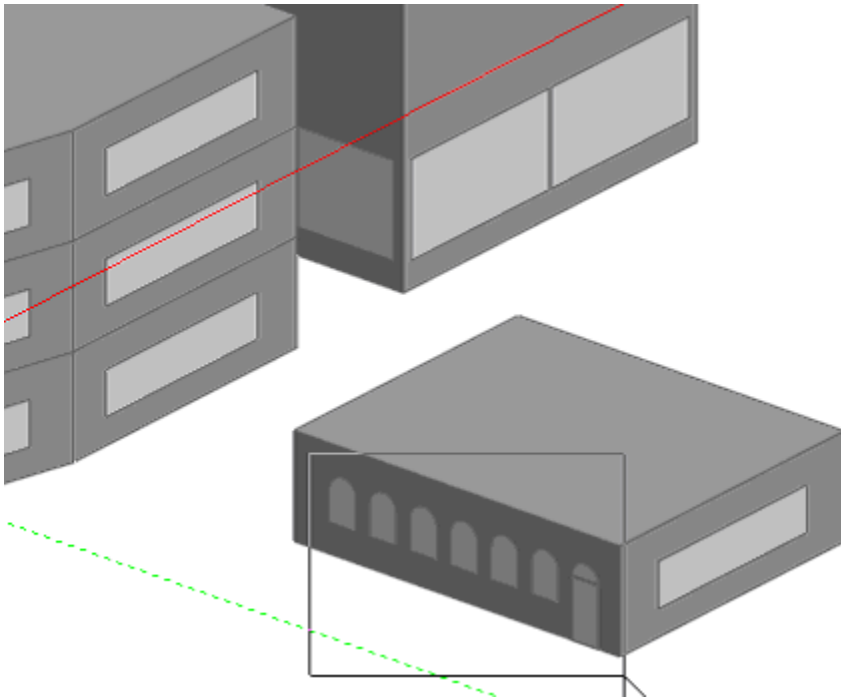


The selected openings are highlighted:

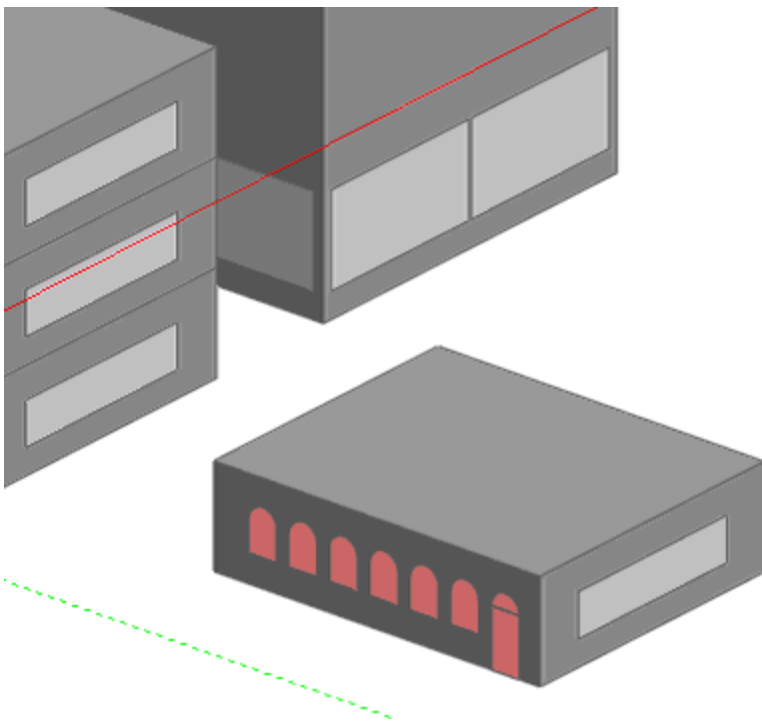


When you have selected an opening, you will see that the [Move selected object\(s\)](#), [Clone selected object\(s\)](#) and [Delete selected object\(s\)](#) icons are active and you can select one of these commands. As an

example, the arched openings and doorway are to be copied onto the angled façade of the leftmost block. To begin with, you need to delete the existing opening on the angled façade by selecting it and clicking on the [Delete selected object\(s\)](#) icon:

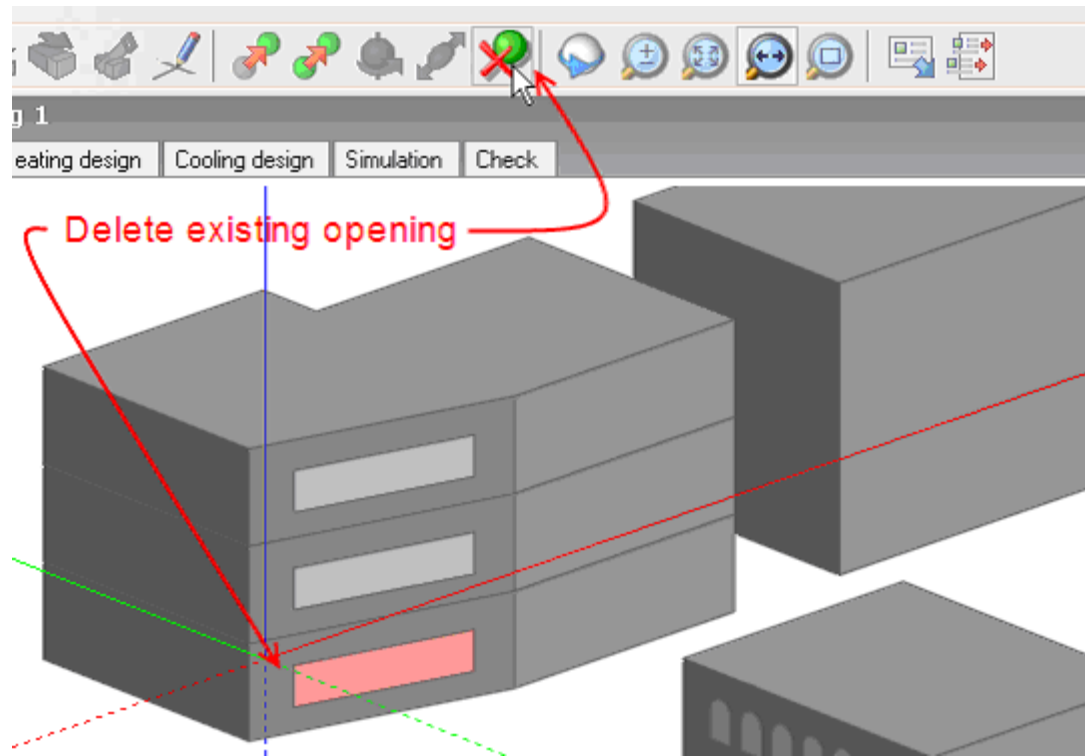


Opening removed:

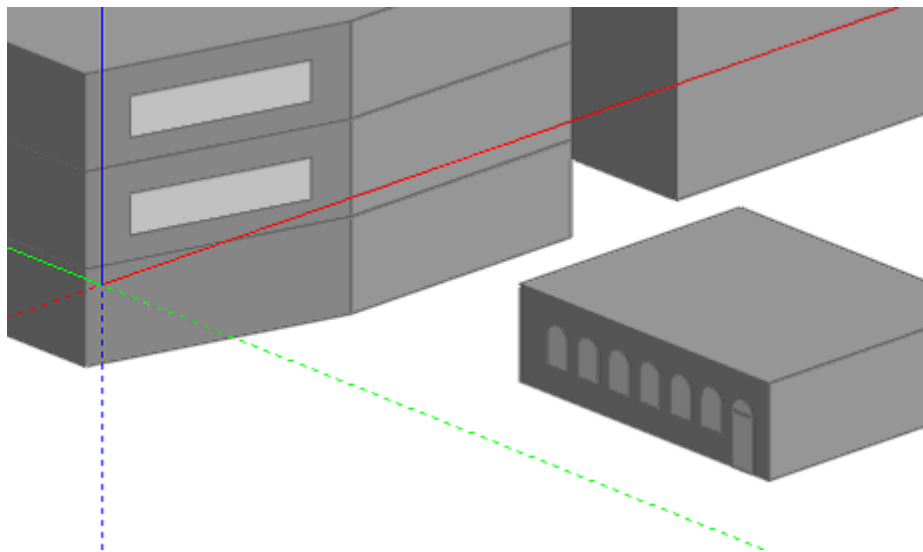


All opening edit operations at the building level automatically convert default openings to custom openings, which is why you need to remove the existing opening.

Then in order to copy the openings, you need to select a **handle point** and you can do this by first clicking on the [Clone selected object\(s\)](#) command icon and then clicking on the required handle point - the


[endpoint snap](#) will help in selecting the handle point.

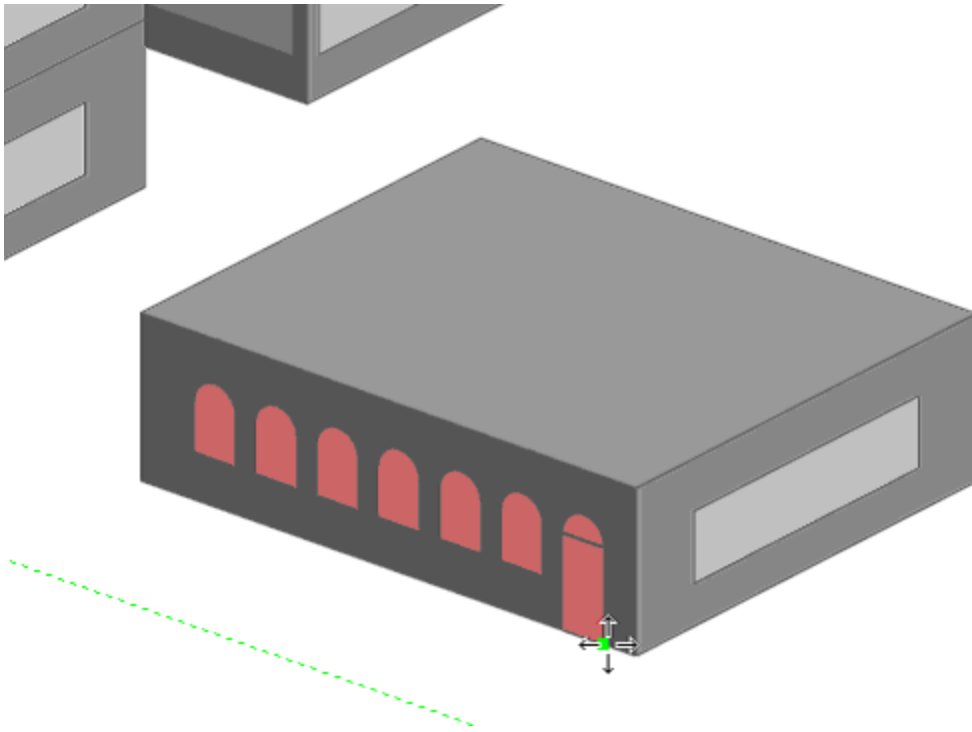

First select the handle point, and then position the copy using the various [snaps](#):

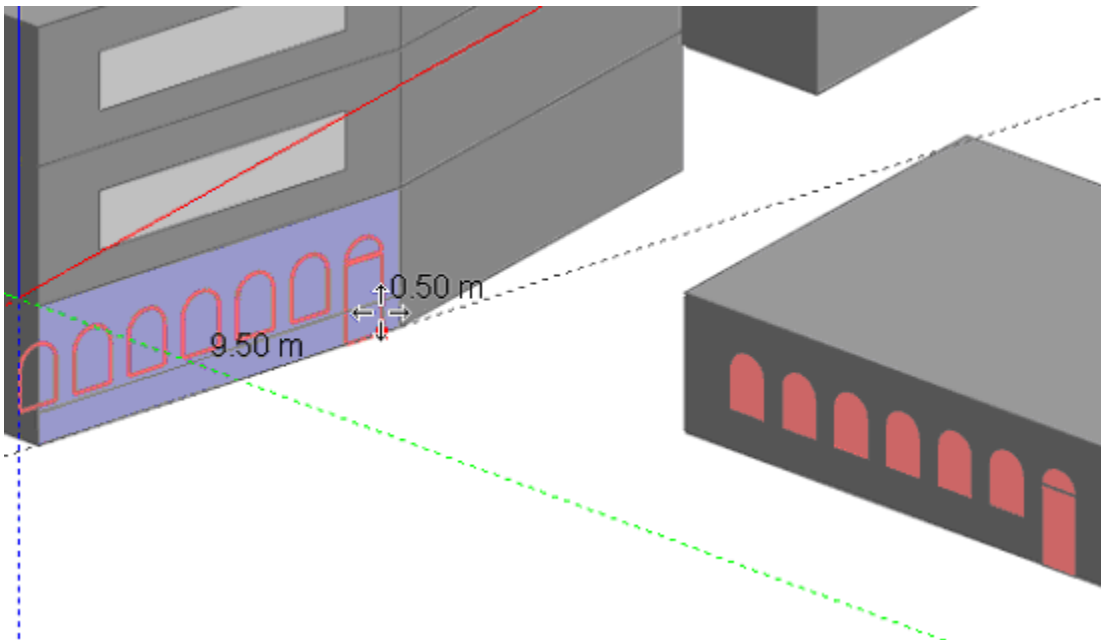

As you move the copied openings across each block façade you will see them automatically snap into the façade plane and after positioning the openings, you can then click on the mouse key to add the openings in the required position:

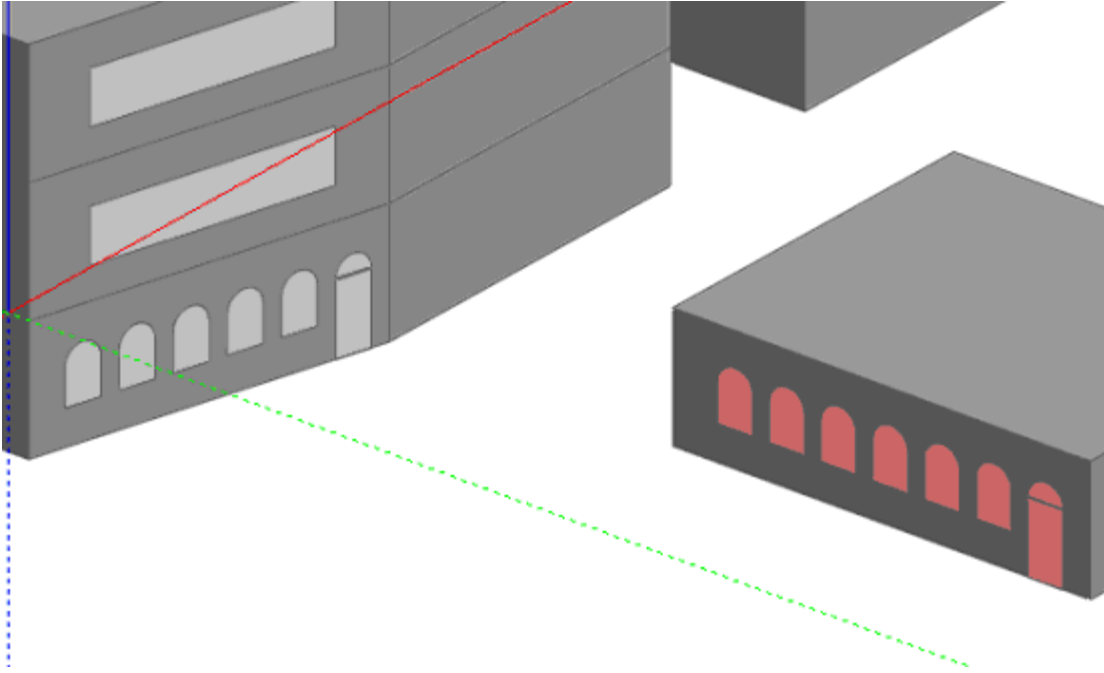

You will see that any copies that won't fit into the selected location are automatically discarded.

Note: You can select openings on multiple planes but in this case the openings can only be deleted, not moved or copied.

3.2.14 Undo/Redo

Undo/Redo commands accessed from [Edit](#) menu

To undo a geometric operation, select Undo from the 'Edit' menu (or press <Control-Z>) and similarly to redo a geometric operation, select Redo (or press <Control-R>). Because many of the geometric operations are dependent on specific model levels, you may need to undo or redo navigation operations before you get to the required geometric operation, e.g. 'Undo - Go to surface', etc.

Note that Undo/Redo applies only to geometric operations and *changes to Model Data cannot be undone*.

3.2.15 Rebuild

Rebuild command accessed from [Tools](#) menu

Sometimes the adjacencies within DesignBuilder models can become corrupt. The **Rebuild** command recalculates the zone, surface and adjacency geometry from the base building elements.

3.2.16 Rezone Block

Rezone block command accessed from [Tools](#) menu

Use the Rezone block command to refresh the zoning in the current block. The command converts any [outline](#) partitions in a block to standard partitions and updates zones due to any partitions that may have been deleted. The command should be used when the Automatic block zoning model option is switched off. When the option is switched on (and it has always been switched on during the life of a model) then you will not need to use this command.

3.3 Model Data

Model Data is the data for the [site](#) on the tabs:

- [Location](#)
- [Legislative region and insulation standards](#)

and data for [building model](#) on the tabs:

- [Activity \(usage\)](#)
- [Constructions](#)
- [Openings](#) (windows, doors, vents, holes, sub-surfaces)
- [Lighting](#)
- [HVAC](#)


The Model Data tabs are shown in the [Edit Screen - User Interface](#) help topic.

At the point of the building is created, building model default data is initially loaded at the building level from templates. This is inherited from the building to blocks to zones to surfaces and to openings. This default model data can be overwritten by making edits on the Model Data tabs on the [Edit screen](#).

3.3.1 Site Data

The **site data** represents information about the site including its location, the conditions of the ground, weather, the legislative region and the maximum allowed U-values for new buildings. All buildings on the site use the same site model data.

To edit site model data, go to site level and click on the Location or Region tabs (below).

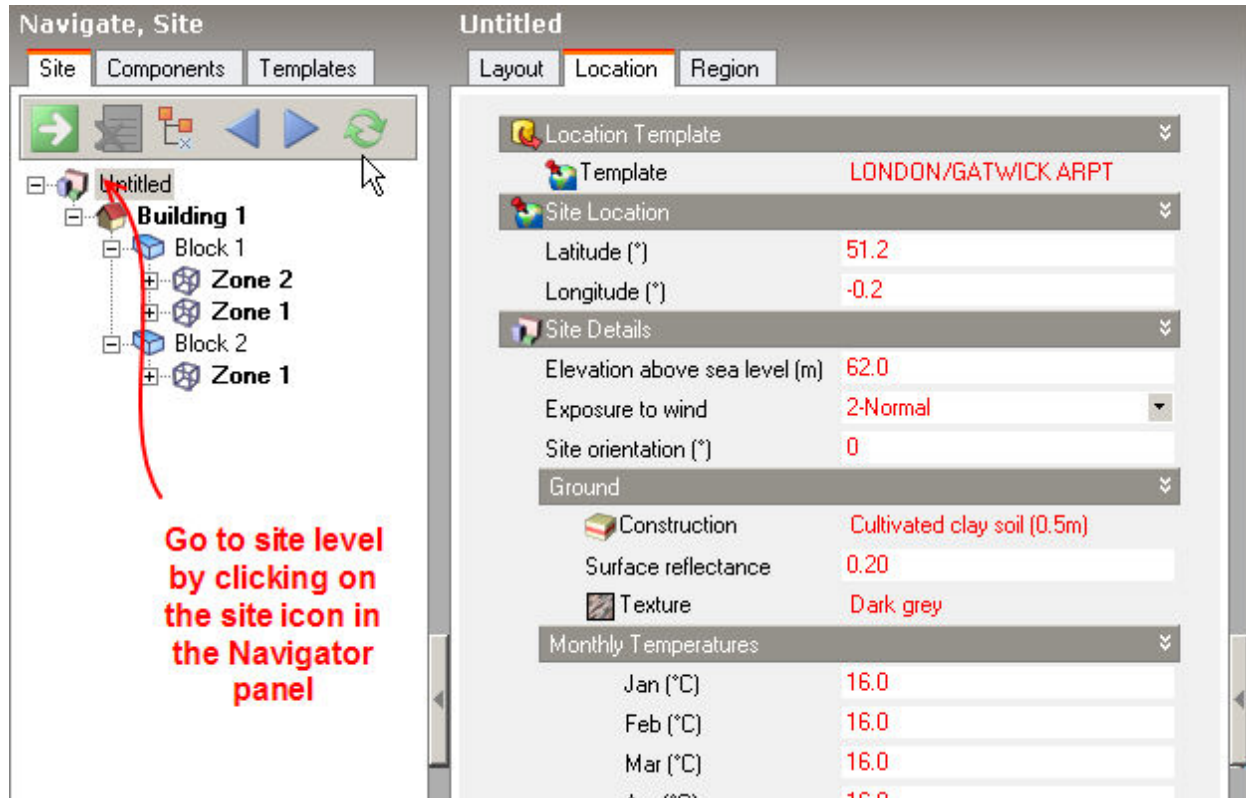

You can easily change the location of the site by making a selection for the [Location template](#) on the [Location tab](#) or by using the [Load data from template](#) command.

Alternatively you can open up the headers on the [Location](#) and [Region](#) tabs to edit the data.

3.3.1.1 Location

Location tab on model data at [Site level](#)

Use this screen to edit the location of the site, its weather data, the daylight savings and energy codes which apply.

You can load a location from the database by clicking on Template line under the Location Template header then on the '...' at the right of the line.



When you make a selection from the list of [location templates](#) data from selected template will be loaded to the model.

Alternatively you can use the [Load data from template](#) tool.

You can enter data on:

- [Site location](#),
- [Site details](#),
- [Time and daylight saving](#),
- [Simulation weather](#),
- [Winter design weather](#) and
- [Summer design weather](#).

3.3.1.1.1 Site Location

[Location tab on model data at Site level](#)

You can set the latitude/longitude of the site as well as a number of site characteristics.

Latitude

The latitude (in degrees) of the site. By convention, North Latitude is represented as positive; South Latitude as negative. Minutes should be represented in decimal fractions of 60. (15' is 15/60 or .25)

Longitude

The longitude (in degrees) of the site. By convention, East Longitude is represented as positive; West Longitude as negative. Minutes should be represented in decimal fractions of 60. (15' is 15/60 or .25).

3.3.1.1.2 Site Details


[Location tab on model data at Site level](#)

Elevation above sea level

This data are defines the elevation of the site relative to sea level and is passed directly to EnergyPlus for use in pressure-related calculations. It is also used to calculate [air density](#) within DesignBuilder when calculating volumetric flow rates from cooling loads.

Site orientation

The site orientation is the angle of the site plan view relative to North. For example enter 45 to rotate the building(s) clockwise by 45°.relative to North (screenshot example below).

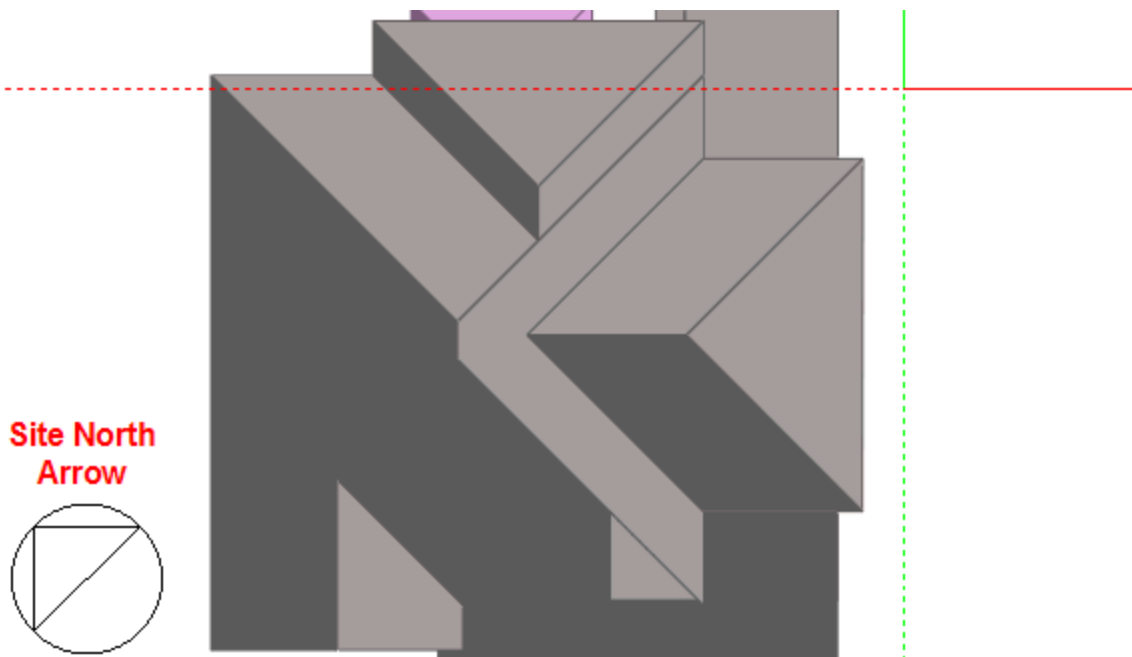

This is the quickest and most reliable way to rotate all the buildings on the site relative to North and allows you to keep your x and y axes aligned with the building. [Rotating](#) the building(s) is possible but once this is done it makes further geometric edits more difficult because, for rotations other than 90, 180 or 270°, the x and y axes will be out of alignment with the building.

North is indicated by the direction of the North arrow in the sketch plan view (above).

Exposure to wind

The exposure to wind model data affects the [pressure coefficients](#) used when the 'Calculated' Natural ventilation option is set. It also affects the calculation of U-values but these are not used in EnergyPlus simulations.

GROUND

Add ground construction layers to surfaces in contact with ground

You can choose to add ground construction layers to any surface that is in contact with the ground. If you select this option you can define the construction layers of the ground.

Note: this option only affects the model for buildings having the [Separate constructions model option set](#).

Ground construction

When the [Add ground construction layers to surfaces in contact with ground](#) option is selected you can define the construction layers to be added below any ground floor constructions and on the outside of any other surfaces which have been specified as being [adjacent to ground](#).

[More info on ground modelling.](#)

Ground texture

The texture used to represent the ground in the rendered view on the Visualisation screen.

Ground surface reflectance

This field is a decimal number between 0.0 and 1.0 and is used to characterize the average reflectivity of the ground throughout the year. Ground reflectance data is used to calculate the ground reflected solar amount. This fractional amount is used in the following equation:

$$\text{GroundReflectedSolar} = (\text{BeamSolar} \times \text{COS}(\text{SunZenithAngle}) + \text{DiffuseSolar}) \times \text{GroundReflectance}$$

Important note on ground reflection

Reflection from the ground is calculated even if the [Reflections](#) option is not used, but if Reflections are not calculated the ground plane is considered unobstructed, i.e., the shadowing of the ground by the building itself or by component blocks is ignored.

Shadowing of the ground by component blocks is only taken into account if the [Reflections](#) option is used.

Conclusion: Switch Reflections on for accurate shading calculations.

Snow reflected solar modifier

A number between 0.0 and 10.0 which is used to modify the basic ground surface reflectance when snow is on the ground. Note that the value of $\text{GroundReflectance}_{\text{Used}}$ (below) must be ≤ 1 .

$$\text{GroundReflectance}_{\text{Used}} = \text{GroundReflectance} \times \text{Modifier}_{\text{Snow}}$$

During simulations, the ground is considered to be snow-covered when the SnowDepth data in the hourly weather file is > 0 .

Snow reflected daylight modifier

A number between 0.0 and 10.0 which is used to modify the basic ground surface reflectance when snow is on the ground. Note that the value of $\text{DaylightingGroundReflectance}_{\text{Used}}$ (below) must be ≤ 1 .

$$\text{DaylightingGroundReflectance}_{\text{Used}} = \text{GroundReflectance} \times \text{Modifier}_{\text{Snow}}$$

During simulations, the ground is considered to be snow-covered when the SnowDepth data in the hourly weather file is > 0 .

Ground monthly temperatures

There are 12 fields allowing you to represent the mean ground temperature for each month of the year. These temperatures are used as the outside surface temperature for all surfaces [adjacent to ground](#).

Note that the depth at which these temperatures apply depends on the thickness of the ground construction (see above) added to the main floor/wall construction.

Caution: It may not be appropriate to use the 'undisturbed' ground temperatures calculated by the weather converter and listed in EnergyPlus hourly weather files as these values are too extreme for the soil under typical large conditioned buildings. A reasonable default value is 2°C less than the average monthly indoor space temperature is appropriate for such buildings. For *smaller buildings*, the ground

temperatures will be closer to be undisturbed ground temperatures.

More information about determining appropriate ground temperatures is given in [Ground Modelling](#) and in the EnergyPlus Auxiliary Programs document.

3.3.1.1.3 Time and Daylight Saving

[Location tab on model data at Site level](#)

Select the [Time zone](#) for the site location. The time zone defines both the standard time meridian and information on daylight saving. Generally you should leave this as the default for the location.

You can override daylight savings to be off by unchecking the [Use daylight saving](#) model data.

DesignBuilder models the effect of daylight saving time where the clocks are moved forward one hour in the summer months in most non-equatorial countries. The timing of this is handled automatically using the [Time zones database](#) when you load data from one of the [Location templates](#) supplied with the program.



There are some factors you should be aware of:

- In EnergyPlus, summer Daylight saving works by adding the number of hours specified in the Time zone data (usually 1 hour) to the local mean time to get the time to determine schedule operation. Because [Simulation results](#) are displayed in **local mean time**, during the summer when daylight saving time is in use, occupancy and equipment etc will appear to start 1 hour earlier in the day than it does in the winter. To help you pinpoint this, DesignBuilder prints the times when daylight saving starts and ends on the graph.
- When comparing results with and without Daylight saving you will notice:
 - Solar radiation data has exactly the same timing with and without daylight saving.
 - Occupancy, equipment (and other aspects of building operation controlled by schedules) will start 1 hour earlier with daylight saving.
- [Visualisations](#) use local mean time when setting the position of the sun for site shading analysis. Again you can account for daylight saving time by adding 1 hour to the time during summer months to see shading for local clock time.

3.3.1.1.4 Simulation Weather Data

[Location tab on model data at Site level](#)

DesignBuilder uses [EnergyPlus epw format](#) hourly weather data for [simulations](#) (heating and cooling design calculations use much simpler design weather data).

You can review, edit and convert weather using the [Edit hourly weather data](#) dialog.

You can also [add your own hourly weather data](#).

3.3.1.1.5 Winter Design Weather Data

[Location tab on model data at Site level](#)

You can select the 'confidence' of the design data, i.e. the probability that the design data will be at the very extreme of conditions encountered over recent years. Select either 99.6 or 99% confidence (i.e. 0.4 or 1% chance of more extreme winter weather occurring).

The weather data used in [heating design calculations](#):

- Minimum outside dry-bulb temperature - the design outside air temperature
- Co-incident wind speed and direction. - the speed of the wind and its direction for design conditions. Note that the direction is not used at the moment.

3.3.1.1.6 Summer Design Weather Data

[Location tab on model data at Site level](#)

You can select the 'confidence' of the design data, i.e. the probability that the design data will be at the very extreme of conditions encountered over recent years. This risk can be specified based on dry or wet-bulb temperatures, for 99.6, 99 and 98% confidence (i.e. 0.4, 1 or 2% chance of more extreme weather occurring).

The weather data used in [cooling design calculations](#):

- Maximum outside dry-bulb temperature - the maximum dry bulb air temperature over the day
- Minimum outside dry-bulb temperature - the minimum dry bulb air temperature (nighttime)
- Wet-bulb temperature at the time of the maximum dry-bulb temperature.

The daily temperature profile used in the cooling design calculations is calculated from the maximum and minimum values using a sinusoidal curve and assuming that the maximum temperature lags maximum solar elevation by 3 hours.

3.3.1.2 Legislative Region and Insulation Standards

[Region tab on model data at Site level](#)

The data on the tab is related to the [Legislative Region](#) and associated insulation standards of the site.

Legislative region

A Legislative region in DesignBuilder is typically a whole country or a region, province or state within a country which has its own building control powers. The legislative region contains information on:

- Local energy codes and building regulations
- Carbon dioxide emission factors for a range of fuels

3.3.1.2.1 Energy codes/insulation standards

[Region tab on model data at Site level](#)

You can select the mandatory energy code in force as well as three additional levels of reference insulation standards to represent buildings with 'Uninsulated', 'Stock average' and 'Best practice' construction standards.

This data is used:

- To identify the mandatory energy code in force in the region.
- To set the insulation levels used when the 'Pre-design' Construction and glazing Model option is selected.
- When calculating asset ratings.

Note that if you change any of this data, the insulation standards of the constructions in the <System> category will be automatically updated.

3.3.2 Building Model Data

Take care to enter the minimum amount of data to get the most from the inheritance system. For example if all zones in a particular block have the same activity called say 'Office work', you should set the activity at block level and not multiple times at zone level. Equally if all the blocks in the building have the same activity, you should set the data at the building level and allow the blocks to inherit the data from the building. By keeping the amount of user data to a minimum, you will find it quicker to make changes at a later date. Clearly it is much faster to change a few Model Data items at building and block level than it is to make multiple changes at zone or surface levels.

Building Model Data can be entered at building, block, zone and surface levels (but not at site level). The set of data shown will depend on the level in the hierarchy (building, block etc) and on the Model options selected.

Default data is [inherited](#) from the level above in the hierarchy and is shown in [blue](#), while 'user data', i.e. data you have explicitly set (or loaded from template) is shown in [red](#). You can clear user data back to its default state so it inherits from the level above using the [Clear data to default](#) command.

Building Model Data is laid out on five tabs:

- [Activity](#)
- [Construction](#)
- [Openings](#)
- [Lighting](#)
- [HVAC](#)

Each of these categories of data has a template selection at the top of the tab allowing rapid loading of the data from template.

Tip: Use DesignBuilder defaults wisely!

See also section on [Model Data Hierarchy & Data Inheritance](#).


3.3.2.1 Activity Data

Activity tab in model data

Data on the Activity tab allows you to define the activity (usage) of the zones including information on:

- [Zone Type \(block and zone level only\)](#)
- [Occupancy](#)
- [Metabolic rates](#)
- [Holidays \(building level only\)](#)
- [Domestic Hot Water \(DHW\)](#)
- [Environmental control](#)
- [Computer gains](#)
- [Office equipment gains](#)
- [Miscellaneous gains](#)
- [Catering gains](#)
- [Process gains](#)

You can load generic activity data by clicking on the Template option under Activity Template and then by clicking on the '...' at the right of the line (below).

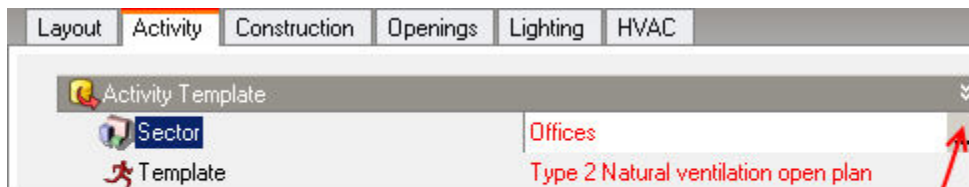

Select generic activity template

When you make a selection from the list of [Activity templates](#), data from selected template will be loaded to the model.

Alternatively you can use the [Load data from template](#) tool.

Note that the appropriate [Sector](#) is loaded with the activity (screenshot above).

All Activity data (apart from Holidays) is used to generate simulation data at the **Zone level**. Holiday data is used at **Building level**.

3.3.2.1.1 Zone Type

[Activity tab in model data under Activity Template header](#)

The zone type can be set at block or zone level on the Activity tab and can be one of:

- **1-Standard** - considered to be occupied and heated or cooled.

- **2-Semi-exterior unconditioned** - is an unoccupied zone in the building which is neither heated or cooled. Examples of 'semi-exterior unconditioned' spaces are roofspaces, sunspaces, car parks etc).
- **3-Cavity** - the zone is a cavity such as the glazed cavity within a double facade or a Trombe wall. This algorithm correctly calculates the convection coefficients for a narrow sealed vertical cavity based on the ISO 15099 standard.
- **4-Plenum** - the zone is a plenum which is unoccupied and has no heating, cooling, or mechanical ventilation (though of course air will flow through it to meet the needs of the zones it serves).

Semi-exterior unconditioned

When the Zone type is set to **2-Semi-exterior unconditioned**, the program asks you 'Do you want to load default unoccupied data including Activity, HVAC and Construction templates'. If you reply 'Yes' then the zone is set as unoccupied by loading **<None>** Activity, HVAC and Lighting template data.

Also [Semi-exposed constructions](#) will be used instead of standard partitions for adjacencies with 'Semi-exterior unconditioned' zones. For example the wall between an occupied office and a car park would use the Semi-exposed construction, whereas the wall between two occupied offices would use Internal partition construction.

Also [roofspace insulation](#) is applied in the floor of a Semi-exterior unconditioned space when it is above a Standard space, if '[Floor fitted above floor slab](#)' option is checked.

Glazed cavity

When the Zone type is set to **3-Cavity**, the program asks you 'Do you want to load default 'Glazed cavity' data including appropriate convection coefficients, calculation options and Activity, HVAC and Construction templates'. If you reply 'Yes' then the following changes are made:

- The zone is set as unoccupied by loading **<None>** Activity, HVAC and Lighting template data.
- Suspended floors and ceilings are switched off.
- The **5-Cavity** [Inside convection algorithm](#) is set for Cooling design, Heating design and simulation calculations.
- The **3-Full interior and exterior** [Solar distribution algorithm](#) is set for Cooling design and simulation calculations.

You can find out more about [Trombe wall simulations](#) in the [Modelling Issues](#) section.

Plenum

When the Zone type is set to **4-Plenum**, the program asks you 'Do you want to load default plenum data including appropriate convection coefficients, calculation options and Activity and HVAC templates?'. If you reply 'Yes' then the following changes are made:

- The zone is set as unoccupied by loading **<None>** Activity, HVAC and Lighting template data.
- Suspended floors and ceilings are switched off.
- The **4-Ceiling diffuser** [Inside convection algorithm](#) is set for Cooling design, Heating design and simulation calculations.

You can find out more about modelling [plenums](#) under HVAC.

3.3.2.1.2 Occupancy

[Activity tab in model data](#)


The Occupancy model data defines the number people in the space and the times of occupancy. This data is used in simulations together with the [Metabolic](#) heat output of the occupants and [Holidays](#) to calculate the heat input to the building.

The Occupancy schedule setting (Typical workday or Schedule) may also be used to control internal gains and/or HVAC systems if the appropriate [Model options](#) are set.

Set the number of people (per unit floor area) and the occupancy times. Occupancy time definition depends on the [Timing](#) model data option:

TYPICAL WORKDAY TIMING MODEL OPTION

When the [Typical workday](#) Timing model option is set, the occupancy times are controlled by setting **On** and **Off** values and the number of days in the working week.

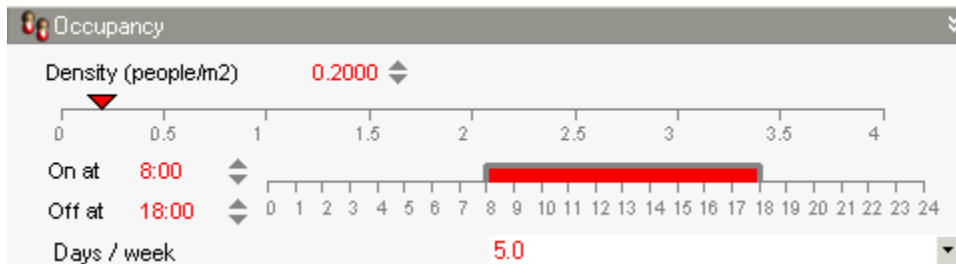


In above example there are 0.2 people per m2 between 8am and 6pm and there are no people outside these times and at weekends.

Note: The Occupancy **Days / week** is set at the building level only and is used for all other Typical workday schedules in the model apart from Mechanical ventilation, and Heating and Cooling operation which have their own Days / week data.

SCHEDULE TIMING MODEL OPTION

When the Schedule [Timing](#) model option is set, the occupancy times are controlled by a [Schedule](#) . The metabolic gains for the zone are multiplied by the value of the Schedule at each time step in the simulation so you can define periods of part-occupancy using Schedule values less than 1. Use values of 0 to indicate that the space is unoccupied.

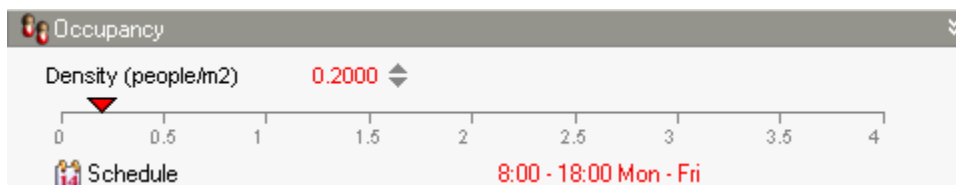

In above example number of people per m2 is calculated as $0.2 \times \text{Schedule value}$.

3.3.2.1.3 Metabolic

[Activity tab in model data under Occupancy header](#)

Set the metabolic rate according to the level of activity within the space.

The metabolic rate determines the amount of heat gain per person in the zone *under design conditions*. This value is modified during simulations based on a correlation to account for variations in space temperature. *This should be borne in mind when analysing occupant sensible heat output in the Cooling design and Simulation results screens*. Metabolic rate has units Watts per person and represents the total heat gain per person including convective, radiant, and latent heat. An internal algorithm is used to determine what fraction of the total is sensible and what fraction is latent. Then, the sensible portion is divided into radiant and convective portions based on the assumption of 50% radiant fraction.

Metabolic rate data can be found in the ASHRAE Handbook of Fundamentals, Chapter 8, Table 5.

DesignBuilder data is derived from this data and is for adult males having typical surface area of 1.8m². For women multiply the adult male value by 0.85 and for children multiply by 0.75.

The **metabolic factor** accounts for people of various sizes. Enter 1.00 for men, 0.85 for women, 0.75 for children or you can use an average value if there is a mix of sizes.

Background

Heat is generated in the human body by oxidation at a rate called the metabolic rate. This heat is dissipated from the body surface and respiratory tract by a combination of radiation, convection and evaporation. The relative proportions of sensible and latent heat from people is a complex function of the metabolic rate and the environmental conditions.

EnergyPlus uses a polynomial function to divide the heat gain into sensible and latent portions. More details can be found in the EnergyPlus EngineeringDoc.pdf documentation.

Note: sensible/latent split for occupancy gains is affected by the internal temperature and relative humidity. With high internal temperatures, people cool themselves largely by evaporation and sensible occupancy gains can be very low or even zero.

Clothing

You can define the clothing levels of the occupants for summer and winter periods. This data is used when generating [comfort output](#).

Clothing reduces the body's heat loss and is classified according to its insulation value. The unit normally used for measuring clothing's insulation is the Clo unit. The more technical unit is m²°C/W is also used frequently (1 Clo = 0.155 m²°C/W). The Clo value can be calculated by adding the Clo value of each individual garment. The insulation value for individual garments can be found in ISO 7730.

Clo-Values for Different Items of Clothing and Ensembles

Clothing	Clo-Value
Naked	0.0
Briefs	0.06
T-shirt	0.09

Bra and panties	0.05
Long underwear	
upper	0.35
lower	0.35
Shirt	
White, short sleeve	0.14
heavy, long sleeve	0.29
Add 5% for tie or turtleneck	
Skirt	0.22-0.70
Trousers	0.26-0.32
Sweater	0.20-0.37
Socks	0.04-0.10
Light summer outfit	0.3
Working clothes	0.8
Typical indoor winter clothing combination	1.0
Heavy business suit	1.5

Note: Clo-values are additive, so one can calculate the clo-value for a person wearing a T-shirt and light socks (0.09 + 0.04) = 0.13. (Adapted from ASHRAE Fundamentals and "Technical Review of Thermal Comfort," Bruel and Kjaer, No. 2, 1982.)

3.3.2.1.4 Holidays

[Activity tab in model data](#)

You can add holidays to the simulation to include the effect of building shutdown during certain periods of the year. Do this by selecting the Holidays option under the Holidays header on the Activity tab at building level. Holidays defined at building level in this way are used for the whole simulation and are **additional** to any holidays which may have been defined in [Compact schedules](#) (Schedules [Timing](#) model option)

The holiday data is used for Simulations only (not Heating/Cooling Design Calculations) and allows you to set the [Holiday Schedule](#) and the number of days of holiday per year. The [possible holiday dates](#) are defined in the Holiday schedule and the actual holidays to be used in the simulation are selected from the top of the list based on the [Holidays per year](#) data entered.

Note that you must have at least as many days defined in the holiday schedules as you request here. If there are insufficient holidays in the holiday schedule you will receive an error message to this effect prior to a simulation.



The way holiday definition works depends on the [Timing](#) model option:

COMPACT SCHEDULES

When the [Timing](#) model option is Schedules you can use [Compact schedules](#). The value of Compact schedule output during holidays can be defined explicitly using the Holidays day type following **For**:

For example:

```
SCHEDULE:COMPACT,  
Bedroom_Cool,  
Temperature,  
Through: 31 Dec,  
For: Weekdays SummerDesignDay WinterDesignDay,  
Until: 05:00, 0.5,  
Until: 09:00, 1,  
Until: 24:00, 0.5,  
For: Weekends,  
Until: 05:00, 0.5,  
Until: 24:00, 1,  
For: Holidays AllOtherdays,  
Until: 24:00, 0;
```

The Holiday data in this [Compact schedule](#) indicates that the cooling is switched off on holidays.

7/12 SCHEDULES

Holiday operation is not defined explicitly and holidays use the same data as Sundays

TYPICAL WORKDAY

Holidays use the same data as Sundays

3.3.2.1.5 Environmental Control

[Activity tab in model data](#)

The heating and cooling setpoint temperatures, minimum fresh air per person and illuminance requirements are related to the Activity or Usage of the zone and are accessed by opening the Environmental Comfort group header.

HEATING SETPOINT TEMPERATURES

Heating setpoint temperature

Defines the ideal temperature (i.e. the setting of the heating thermostat) in the space when heating is required. Its meaning depends on the [Temperature control](#) calculation option. When using **1-Air temperature** control the **Heating setpoint temperature** corresponds to the air temperature in the space and when it is set to **2-Operative temperature** it is the operative temperature $(MAT+MRT)/2$.

Heating setback setpoint temperature

Some buildings require a low level of heating during unoccupied periods to avoid condensation/frost damage or to prevent the building becoming too cold and to reduce peak heating requirements at startup. Enter the setpoint temperature to be used at night-time, weekends and other holidays during the heating season. Its meaning depends on the [Temperature control](#) calculation option (above).

Note: when using the **Typical workday** timing option, this setback temperature set point is only applied during unoccupied periods such as night-time and holidays during the heating season. It is not applied during the summer (if heating is switched off during the summer.)

Note: if the setback temperature set does not appear to affect results when using a [Compact schedule](#), this may be because the **Zone setpoint heating schedule** selected uses only 0 and 1, not the 0.5 required to access setback temperature. See [Defining setpoint temperature schedules](#) for more on this.

COOLING SETPOINT TEMPERATURES

Cooling setpoint temperature

Defines the ideal temperature (i.e. the setting of the cooling thermostat) in the space when cooling is required. Its meaning depends on the [Temperature control](#) calculation option. When using **1-Air temperature** control the **Cooling setpoint temperature** corresponds to the air temperature in the space and when it is set to **2-Operative temperature** it is the operative temperature (MAT+MRT)/2.

Note: the cooling setpoint temperature must be higher than the heating setpoint temperature.

Cooling setback setpoint temperature

Some buildings require a low level of cooling during unoccupied periods to prevent the building becoming too hot and to reduce the startup cooling load the next morning. Enter the setpoint temperature to be used at night-time, weekends and other holidays during the cooling season. Its meaning depends on the [Temperature control](#) calculation option (above).

Note: when using the **Typical workday** timing option, this setback temperature set point is only applied during unoccupied periods such as night-time and holidays during the cooling season. It is not applied during the winter (if cooling is switched off during the winter.)

Note: if the setback temperature set does not appear to affect results when using a [Compact schedule](#), this may be because the **Zone setpoint cooling schedule** selected uses only 0 and 1, not the 0.5 required to access setback temperature. See [Defining setpoint temperature schedules](#) for more on this.

VENTILATION SETPOINT TEMPERATURES

Natural ventilation cooling setpoint temperature

The natural ventilation cooling setpoint temperature controls the activation of **natural ventilation**. If the inside air temperature is greater than this setpoint temperature (and the natural ventilation operation schedule is on) then [natural ventilation](#) can take place. The way this works depends on the [Natural ventilation model option](#).

Note that when using the [Calculated natural ventilation](#) model option windows and vents are only opened

when:

- The inside air temperature is above this cooling setpoint temperature, and
- The inside air temperature is greater than the outside air temperature, and
- The operation schedule allows ventilation.

Also, the data under the [Calculated Natural Ventilation](#) header on the [Advanced tab](#) of the [Model Options](#) dialog can modify ventilation control behaviour.

When using the [Scheduled natural ventilation](#) model option the **Max natural ventilation in-out delta T** (below) can prevent natural ventilation from occurring if the outside air temperature is too high.

Natural ventilation max natural ventilation in-out delta T

The Natural ventilation Max. int-out temp difference is used for [Scheduled natural ventilation](#) only and is the temperature difference between the indoor and outdoor air dry bulb temperatures below which ventilation is shut off. This is to allow ventilation to be stopped if the temperature outside is too warm and could potentially heat the space. It is not related to preventing drafts.

For example, if you specify a maximum delta temperature of 2°C, ventilation is assumed to be available if the outside air temperature is at least 2°C cooler than the zone air temperature. If the outside air dry bulb temperature is less than 2°C cooler or warmer than the indoor dry bulb temperature, then ventilation is automatically turned off. The values for this field can include negative numbers. This allows ventilation to occur even if the outdoor temperature is above the indoor temperature. The Delta Temperature control works in the code in the following way:

if $(IndoorTemp - OutdoorTemp) < Max\ ventilation\ in-out\ delta\ T$ then ventilation is **not allowed**.

For example:

Value of Natural ventilation Max in-out delta T	Effect
0	Natural ventilation only operates when $OutdoorTemp < IndoorTemp$
-50	Natural ventilation unrestricted by Inside-Outside delta T
2	Natural ventilation only operates when $OutdoorTemp + 2 < IndoorTemp$

Tip: input a large negative number to allow ventilation even if the outdoor temperature is greater than the indoor temperature. This useful for uncontrolled natural ventilation (open windows) or as a way to estimate the effect of required ventilation air for load calculations.

See also [Defining setpoint temperature schedules](#).

Mechanical ventilation cooling setpoint temperature

The mechanical ventilation cooling setpoint temperature controls the activation of mechanical ventilation when using [Simple HVAC data](#). If the inside air temperature is greater than this setpoint temperature (and the mechanical ventilation operation schedule is on) then mechanical ventilation can take place. This data is not used when working with [Compact HVAC data](#).

Mechanical ventilation max natural ventilation in-out delta T

The mechanical ventilation Max int-out temp difference is used for [Scheduled mechanical ventilation](#) only and is the temperature difference between the indoor and outdoor air dry bulb temperatures below which ventilation is shut off. This is to allow ventilation to be stopped if the temperature outside is too warm and

could potentially heat the space. It is not related to preventing drafts.

For example, if you specify a maximum delta temperature of 2°C, ventilation is assumed to be available if the outside air temperature is at least 2°C cooler than the zone air temperature. If the outside air dry bulb temperature is less than 2°C cooler or warmer than the indoor dry bulb temperature, then ventilation is automatically turned off. The values for this field can include negative numbers. This allows ventilation to occur even if the outdoor temperature is above the indoor temperature. The Delta Temperature control works in the code in the following way:

if $(IndoorTemp - OutdoorTemp) < Max\ ventilation\ in-out\ delta\ T$ then ventilation is **not allowed**.

For example:

Value of Mechanical ventilation Max in-out delta T	Effect
0	Mechanical ventilation only operates when $OutdoorTemp < IndoorTemp$
-50	Mechanical ventilation unrestricted by Inside-Outside delta T
2	Mechanical ventilation only operates when $OutdoorTemp + 2 < IndoorTemp$

Tip: input a large negative number to allow ventilation even if the outdoor temperature is greater than the indoor temperature. This useful for uncontrolled mechanical ventilation or as a way to estimate the effect of required ventilation air for load calculations.

See also [Defining setpoint temperature schedules](#).

MINIMUM FRESH AIR PER PERSON

Minimum fresh air per person

The **Minimum fresh air per person** defines the fresh air requirements of each person in the zone. It is defined on the Activity tab because the fresh air requirement of the people in the zone depends on the activity (use) of the space.

The fresh air requirement data is used to generate appropriate mechanical outside air distribution rates when the *mechanical* air distribution [Flow type](#) on the [HVAC tab](#) is set to any of:

- **2-Min fresh air per person.**
- **3-Min fresh air (Per area).**
- **4-Min fresh air (Sum per person + per area).**
- **5-Min fresh air (Max per person and per area).**

This data is also used for *natural* ventilation when the natural ventilation [Flow type](#) on the HVAC tab is set to **2-Min fresh air per person**.

Minimum fresh air per area

The **Minimum fresh air per area** defines the fresh air requirements of the zone in terms of floor area. It is defined on the Activity tab because the fresh air requirement of the zone depends on the activity (use) of the space.

The data is used to generate appropriate mechanical outside air distribution rates when the mechanical air distribution [Flow type](#) on the [HVAC tab](#) is set to any of:

- **3-Min fresh air (Per area),**
- **4-Min fresh air (Sum per person + per area),**
- **5-Min fresh air (Max per person and per area).**

The data is not currently used for natural ventilation.

LIGHTING

Target illuminance

The desired lighting level (in lux) at the first daylighting sensor. This is also the lighting level that would be produced at this sensor position at night if the overhead electric [General lighting](#) were operating at full input power. Recommended values depend on type of activity; they may be found, for example, in the Lighting Handbook of the Illuminating Engineering Society of North America and in CIBSE A Guide. A typical value for general office work (excluding computer terminals) is 500 lux.

Display lighting

The typical density of display lighting for the activity. This value is used as a default on the Lighting tab for the Task and Display lighting density.

3.3.2.1.6 Domestic Hot Water (DHW)

[Activity tab in model data](#)

In DesignBuilder the amount of DHW consumed is considered to be a function of the activity in the zone. For example, there is a demand assumed to arise from the occupants of an office for activities such as washing hands and washing up cups. This demand is associated with the office rather than the toilet or tea room. Thus the demand from each space needs to be assigned to a DHW system even if the system itself is not present in the space.

The effect of hot water consumption (hot water taps, showers etc) on building energy use can be included in your thermal model by switching on [DHW](#) on the HVAC tab.

The data on this tab defines the hot water consumption rate in each zone as l/day/m² data (gal/day/ft in IP units). **The DHW consumption data is only used if DHW is selected on the HVAC tab.**

Note: Convert **l/person/day** DHW consumption data to the DesignBuilder format by multiplying it by [occupant density](#) (people/m²).

The [hot water generation system](#) is defined under [DHW](#) on the HVAC tab.

3.3.2.1.7 Computer Gains

[Activity tab in model data](#)

Set the thermal gains due to computers and other related IT equipment per unit floor area. The fuel is assumed to be electricity, all gains are assumed to be emitted to the space and

Radiant Fraction

This field is a decimal number between 0.0 and 1.0 and is used to characterise the amount of long-wave radiant heat being given off by computer equipment in a zone. The radiant fraction will be multiplied by the total energy consumed by electric equipment and (1-Fraction lost) to give the amount of long wavelength radiation gain from computer equipment in a zone. A value of zero means that the heat gain is entirely convective in which case all the heat is transferred to the air node in simulations. A value of 1 means that the gain is entirely radiative in which case all the heat is distributed to the inside surfaces. a typical value is somewhere between 0.1 and 0.2.

If the [Internal gains operate with occupancy](#) model option is not selected you can also set the operation schedule.

3.3.2.1.8 Office Equipment Gains

[Activity tab in model data](#)

Set the thermal gains due to office equipment per unit floor area. The fuel is assumed to be electricity, all gains are assumed to be emitted to the space.

Radiant Fraction

This field is a decimal number between 0.0 and 1.0 and is used to characterise the amount of long-wave radiant heat being given off by office equipment in a zone. The radiant fraction will be multiplied by the total energy consumed by electric equipment and (1-Fraction lost) to give the amount of long wavelength radiation gain from office equipment in a zone.

A value of zero means that the heat gain is entirely convective in which case all the heat is transferred to the air node in simulations. A value of 1 means that the gain is entirely radiative in which case all the heat is distributed to the inside surfaces. a typical value is somewhere between 0.1 and 0.4.

If the [Internal gains operate with occupancy](#) model option is not selected you can also set the operation schedule.

3.3.2.1.9 Miscellaneous Gains

[Activity tab in model data](#)

Gain

Set the design level of energy consumption due to miscellaneous equipment per unit floor area. The actual heat gain to the space may be reduced through the **Fraction lost** data (below).

The Gain, entered in Watts/m² (or Watts/ft²), is typically used to represent the maximum fuel consumption of miscellaneous equipment in a zone that is then multiplied by a schedule fraction (below). This is slightly more flexible in that the design level could be a 'diversity factor' applied to a schedule of real numbers. Note that while the schedule value can vary from hour to hour, the design level field is constant.

Fuel

The fuel can be selected from a drop down list. Note that these fuels are currently mapped to a shorter list in the results as follows:

Fuel in Model Data	Mapped to Fuel in Output
1-Electricity from grid	Electricity
2-Natural gas	Gas
3-Oil	Oil
4-Coal	Solid
5-LPG	Gas
6-Biogas	Gas
7-Anthracite	Solid
8-Smokeless fuel (including coke)	Solid
9-Dual fuel appliances (mineral + wood)	Other
10-Biomass	Other
11-Waste heat	Other

Fraction lost

This field is a decimal number between 0.0 and 1.0 and is used to characterise the amount of 'lost' heat being given off by the equipment in a zone. The number specified in this field will be multiplied by the total energy consumed by equipment to give the amount of heat which is 'lost' and does not impact the zone energy balances. This might correspond to electrical energy converted to mechanical work or heat that is vented to the atmosphere.

Radiant Fraction

This field is a decimal number between 0.0 and 1.0 and is used to characterise the amount of long-wave radiant heat being given off by miscellaneous equipment in a zone. The radiant fraction will be multiplied by the total energy consumed by electric equipment and (1-Fraction lost) to give the amount of long wavelength radiation gain from miscellaneous equipment in a zone. A value of zero means that the heat gain is entirely convective in which case all the heat is transferred to the air node in simulations. A value of 1 means that the gain is entirely radiative in which case all the heat is distributed to the inside surfaces. a typical value is somewhere between 0.1 and 0.5.

If the [Internal gains operate with occupancy](#) model option is not selected you can also set the operation schedule.

3.3.2.1.10 Catering Gains

[Activity tab in model data](#)

Set the thermal gains due to cooking and other catering activities per unit floor area.

Gain

Set the design level of energy consumption due to catering equipment per unit floor area. The actual heat gain to the space may be reduced through the [Fraction lost](#) data (below).

The Gain, entered in Watts/m² (or Watts/ft²), is typically used to represent the maximum fuel consumption of catering equipment in a zone that is then multiplied by a schedule fraction (below). This is slightly more flexible in that the design level could be a 'diversity factor' applied to a schedule of real numbers. Note that while the schedule value can vary from hour to hour, the design level field is constant.

Fuel

The fuel can be selected from a drop down list. Note that these fuels are currently mapped to a shorter list in the results as follows:

Fuel in Model Data	Mapped to Fuel in Output
1-Electricity from grid	Electricity
2-Natural gas	Gas
3-Oil	Oil
4-Coal	Solid
5-LPG	Gas
6-Biogas	Gas
7-Anthracite	Solid
8-Smokeless fuel (including coke)	Solid
9-Dual fuel appliances (mineral + wood)	Other
10-Biomass	Other
11-Waste heat	Other

Fraction lost

This field is a decimal number between 0.0 and 1.0 and is used to characterise the amount of 'lost' heat being given off by the catering equipment in a zone. The number specified in this field will be multiplied by the total energy consumed by equipment to give the amount of heat which is 'lost' and does not impact the zone energy balances. This might correspond to cooker heat that is vented to the atmosphere through an extract hood.

Radiant Fraction

This field is a decimal number between 0.0 and 1.0 and is used to characterise the amount of long-wave radiant heat being given off by catering equipment in a zone. The radiant fraction will be multiplied by the total energy consumed by electric equipment and (1-Fraction lost) to give the amount of long wavelength radiation gain from catering equipment in a zone. A value of zero means that the heat gain is entirely convective in which case all the heat is transferred to the air node in simulations. A value of 1 means that the gain is entirely radiative in which case all the heat is distributed to the inside surfaces. a typical value is somewhere between 0.1 and 0.5.

If the [Internal gains operate with occupancy](#) model option is not selected you can also set the operation schedule.

3.3.2.1.11 Process Gains

[Activity tab in model data](#)

Set the thermal gains due to process heat per unit floor area.

Gain

Set the design level of energy consumption due to process activity per unit floor area. Process heat is the heat from any manufacturing/industrial process which is part of the business activity. The actual heat gain to the space may be reduced through the **Fraction lost** data (below).

The Gain, entered in Watts/m² (or Watts/ft²), is typically used to represent the maximum fuel consumption of process equipment in a zone that is then multiplied by a schedule fraction (below). This is slightly more flexible in that the design level could be a 'diversity factor' applied to a schedule of real numbers. Note that while the schedule value can vary from hour to hour, the design level field is constant.

Fuel

The fuel can be selected from a drop down list. Note that these fuels are currently mapped to a shorter list in the results as follows:

Fuel in Model Data	Mapped to Fuel in Output
1-Electricity from grid	Electricity
2-Natural gas	Gas
3-Oil	Oil
4-Coal	Solid
5-LPG	Gas
6-Biogas	Gas
7-Anthracite	Solid
8-Smokeless fuel (including coke)	Solid
9-Dual fuel appliances (mineral + wood)	Other
10-Biomass	Other
11-Waste heat	Other

Fraction lost

This field is a decimal number between 0.0 and 1.0 and is used to characterise the amount of 'lost' heat being given off by the process equipment in a zone. The number specified in this field will be multiplied by the total energy consumed by equipment to give the amount of heat which is 'lost' and does not impact the zone energy balances. This might correspond to electrical energy converted to mechanical work or heat that is vented to the atmosphere.

Radiant Fraction

This is a decimal number between 0.0 and 1.0 and is used to characterise the amount of long-wave radiant heat being given off by process equipment in a zone. The radiant fraction will be multiplied by the total energy consumed by electric equipment and (1-Fraction lost) to give the amount of long wavelength radiation gain from process equipment in a zone. A value of zero means that the heat gain is entirely convective in which case all the heat is transferred to the air node in simulations. A value of 1 means that the gain is entirely radiative in which case all the heat is distributed to the inside surfaces. A typical value is somewhere between 0.1 and 0.5.

If the [Internal gains operate with occupancy](#) model option is not selected you can also set the operation schedule.

3.3.2.2 Construction Data

Construction tab in model data

DesignBuilder uses [construction](#) components to model the conduction of heat through walls, roofs, ground and other opaque parts of the building envelope. Constructions can be selected on the Constructions model data tab to define the thermophysical and visual properties of the various internal and external surface elements in the building. From the Construction model data tab, you can access data on:

- [Construction](#) and
- [Airtightness](#)

Open the headers to enter construction details where they are different from those loaded from the template. Any changes you make that are different from the template data originally loaded shown in bold red.

TEMPLATES

General Construction and glazing


When you have the [General](#) Construction and glazing model option set, you can load generic Construction data by clicking on the Template option under Construction Template and then by clicking on the '...' at the right of the line (below).



When you make a selection from the list of [Construction templates](#) data from selected template is loaded to the model.

Pre-design Construction and glazing

Alternatively if you have the [Pre-design](#) Construction and glazing model option set, generic constructions can be loaded using the sliders shown below. In this case you are restricted to the 4x3 construction templates from the <System> Construction templates category identified by the combination of Insulation and Thermal mass selected on the sliders. For example in the screenshot shown below data will be loaded from the 'Energy code - Mediumweight' template.

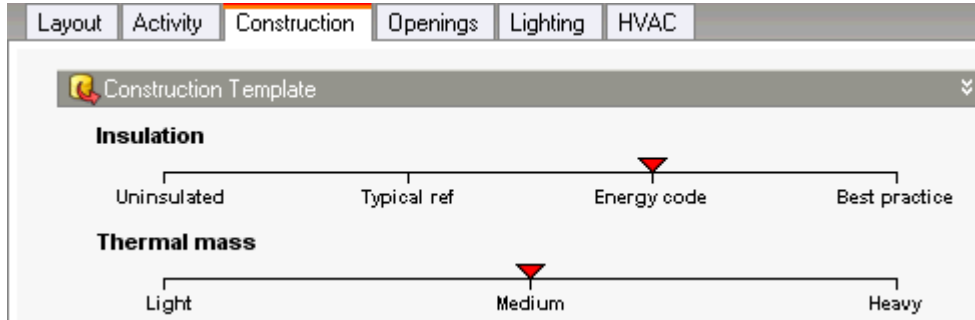

Or in either case you can use the [Load data from template](#) tool.

3.3.2.2.1 Constructions

[Construction tab](#) in model data

From the Construction tab, you can open the group header boxes to edit detailed makeup of the construction of walls, roofs, floors, ceilings, partitions etc. used in the building.

The [default/inheritance](#) system used in DesignBuilder allows you to define building constructions quickly and easily by [loading data from templates](#) and by making global settings at building, block and zone levels.

There are 2 alternative methods for representing floors/slabs/ceilings in DesignBuilder depending on the setting of the [Floor/slab/ceiling representation](#) model option :

- [Combined](#) - option generally recommended for flexibility and ease of use.
- [Separate](#) - only option in v 1.2 and earlier allows you to set up floor/slab/ceiling configuration by making selections in model data.

Other construction data:

- [Sub-Surface Construction](#) - construction details of sub-surfaces (opaque surfaces within surfaces)
- [Internal Thermal Mass](#) - how to define additional thermal mass
- [Component Block](#) - construction and surface properties of component blocks
- [Adjacency](#) - defining special adjacency conditions
- [Surface Convection](#) - defining special surface convection options

Note: data on the [Openings tab](#) can be used to define the layout of the facade.

View/Edit construction details

To inspect the details of a selected [construction](#), click on the icon to the left of the appropriate data entry box ([Learning mode](#) only). Alternatively double-click the icon to view/edit the data in a dialog.

Note: Please be aware that **all settings made on the Constructions Model data tab are defaults, (unless you are working at the surface level)**. Model data at the surface level (inherited from the zone above or directly set) defines the thermal and visual characteristics of the surface in the model.


[Construction tab](#) in model data under [Construction header](#)

When the Floor/slab/ceiling representation model option is set to [Combined](#) wall, floor and roof constructions are all defined using simple constructions as shown in the diagram below.

The diagram shows:

- The location/definition of the various categories of construction
- Block and zone dimension definitions

Schematic Diagram Showing 'Combined' Floor/Slab/Ceiling Constructions

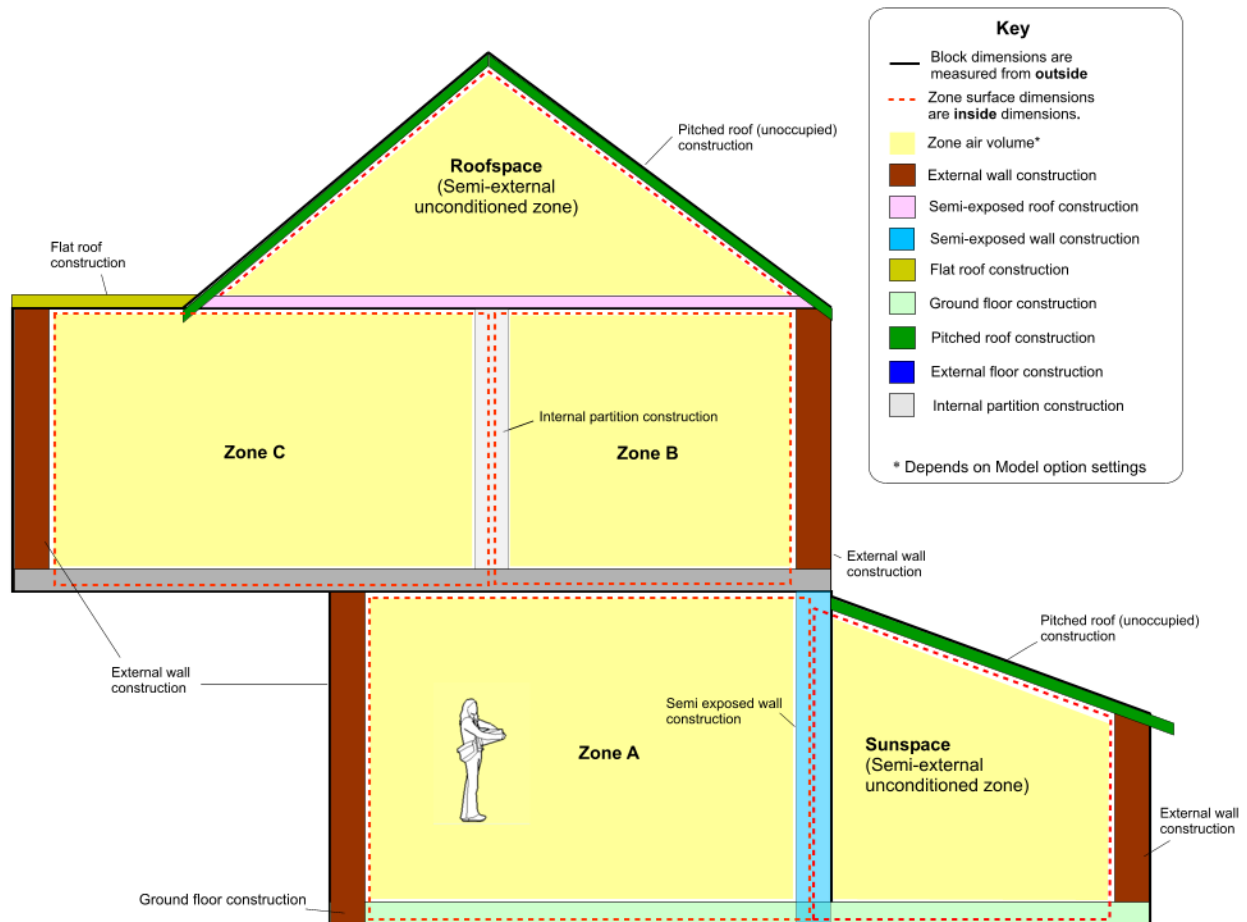

Construction Template	
Template	Part L2 2006, Medium weight
Construction	
External walls	Part L2 2006 Wall, Medium weight
Flat roof	Part L2 2006 Flat roof, Medium weight
Pitched roof (occupied)	Part L2 2006 Pitched roof, Medium weight
Pitched roof (unoccupied)	Clay tiles (25mm) on air gap (20mm) on roo
Internal partitions	Lightweight 2 x 25mm gypsum plasterboar
Semi-Exposed	
Semi-exposed walls	Part L2 2006 Semi-exposed wall, Medium
Semi-exposed roof	Part L2 2006 Semi-exposed roof, Medium
Semi-exposed floor	Part L2 2006 Semi-exposed floor, Medium
Floors	
Ground floor	Part L2 2006 Ground floor, Medium weight
External floor	Part L2 2006 External floor, Medium weigh
Internal floor	100mm concrete slab

External walls

The external wall construction defines the construction of walls adjacent to outside. The definition of walls is given by the [roof-wall transition](#) angle model option. In cold climates this construction will generally include an insulating layer.

Flat roof

Flat roof constructions apply to external horizontal surfaces. The construction used to represent the flat roof should include any slabs, insulation and suspended ceiling layers. If there are no flat roof surfaces, just ignore this data.

Pitched roof (occupied)

The Pitched roof (occupied) construction applies to external sloped surfaces when they appear in [occupied zones](#). In cold climates this construction will generally include an insulating layer. If there are no pitched roof surfaces, just ignore this data.

The definition of 'pitched roof' is given by the [roof-wall transition](#) angle model option.

Pitched roof (unoccupied)

The Pitched roof (unoccupied) construction applies to external sloped surfaces when they appear in [semi-exterior unconditioned zones](#). This construction will generally not include any insulation layers. If there are no pitched roof surfaces, just ignore this data.

The definition of 'pitched roof' is given by the [roof-wall transition](#) angle model option.

Internal partitions

The internal partition construction defines the construction of internal partitions (walls used to divide blocks into zones) and inter-block partitions (internal walls shared with other blocks). Internal partitions are used where both zones are occupied. When one of the zones is occupied and the other is not the **Semi-exposed walls** construction data is used (below). If there are no partitions just ignore this data.

SEMI-EXPOSED

Semi-exposed walls

The semi-exposed wall construction applies to walls between fully occupied zones and [Semi-exterior unconditioned zones](#). They will normally include some insulation. DesignBuilder determines which of the zones is relatively 'outside' and uses this information to correctly order the material layers in the wall. The material layer defined in the construction as being 'outermost' (first-in list) will be the one adjacent to the semi-external unconditioned zone. If there are no semi-exposed wall surfaces, just ignore this data.

Semi-exposed roof

The semi-exposed roof construction is used between occupied zones and [Semi-exterior unconditioned zones](#) (such as roofspace/attic/loft spaces) above. The construction should include any slabs, insulation and suspended ceiling layers. DesignBuilder determines which of the zones is relatively 'outside' and uses this information to correctly order the material layers in the roof. If there are no semi-exposed roof surfaces, just ignore this data.

Semi-exposed floor

The semi-exposed floor construction is used between occupied zones and [Semi-exterior unconditioned spaces](#) below. The construction should include any slabs, insulation and raised floor layers. If there are no semi-exposed floor surfaces, just ignore this data.

FLOORS

Ground floor

The ground floor construction is used between all internal zones and the ground and can be optionally combined with additional [ground constructions](#) layer(s) as shown in diagram above. The [site ground temperatures](#) are applied to the outside of all surfaces adjacent to ground. If there are no ground wall surfaces, just ignore this data.

External floor

External floors are floors that are adjacent to outside air, e.g. the floor of a cantilevered part of the building or where for any other reason there is no ground or other zone below. The External floor construction should include any slabs, insulation and raised floor layers. If there are no external floor surfaces, just ignore this data.

Internal floor

The internal floor construction defines the makeup of floors between occupied zones including any slabs, air gaps, raised floors and suspended ceilings. It will not usually contain insulation. Where the zone above is unoccupied the [Semi-exposed roof](#) construction is used instead. Likewise where the zone below is unoccupied the [Semi-exposed floor](#) construction is used instead. If there are no internal floor surfaces, just ignore this data.

ZONE STATISTICS

Zone Volume

The zone volume is calculated for all zone geometries and by default, the volume is the actual air volume of the space excluding the volume of floor and ceiling constructions but including half the volume of partition walls. The volume of the floor construction can be included by checking the [Include constructions in zone volume](#) Model option.


Construction tab in model data under Construction header


When the Floor/slab/ceiling representation model option is set to [Separate](#) floor/ceiling and roof constructions are defined by combining constructions as shown in the diagram below.

The diagram shows:

- The location/definition of the various categories of construction
- How constructions are combined (behind-the-scenes) to form the floor/ceiling 'combo constructions' passed to calculations.
- Block and zone dimension definitions

Schematic Diagram Showing 'Separate' Floor/Slab/Ceiling Constructions

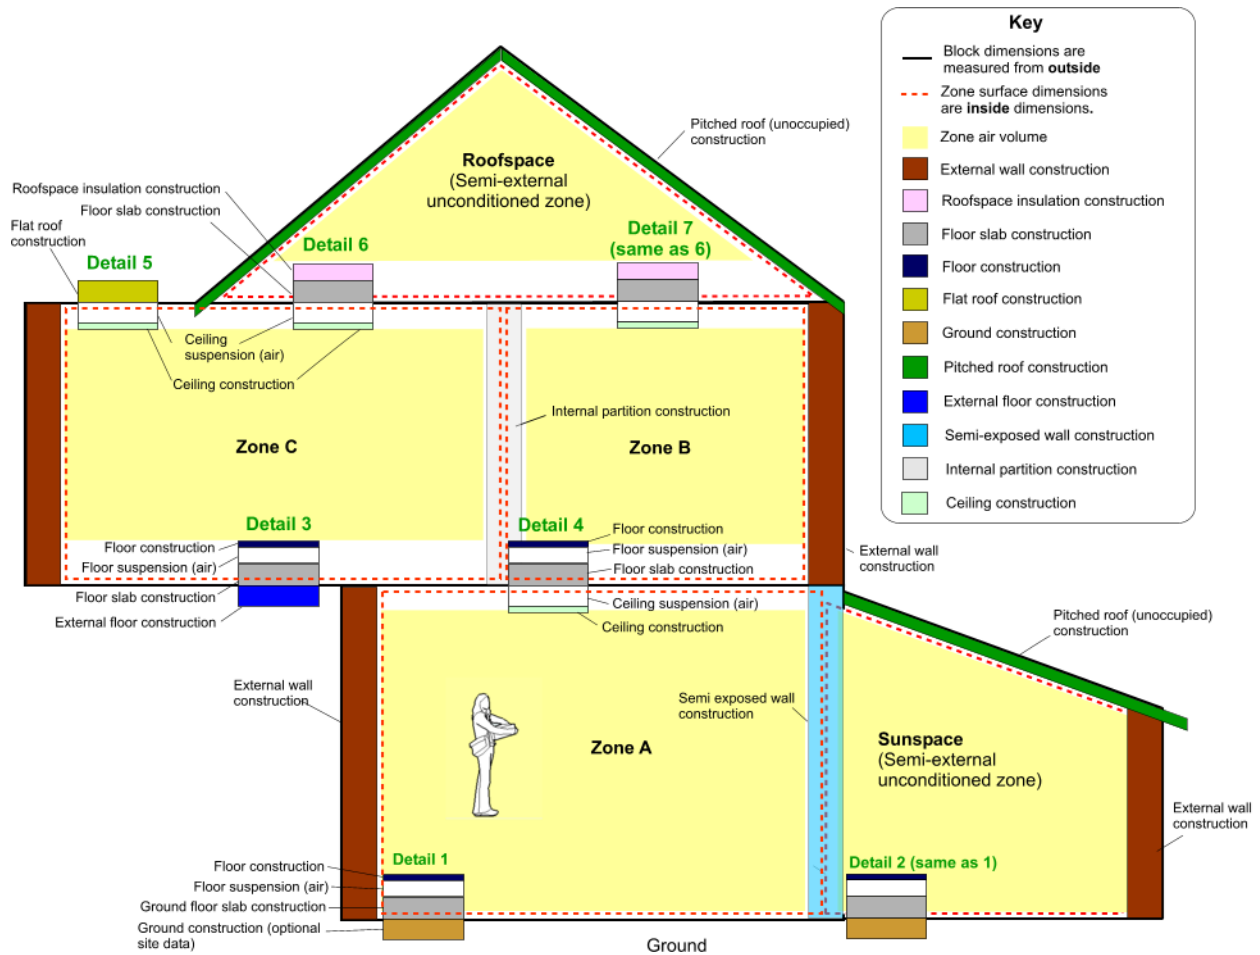

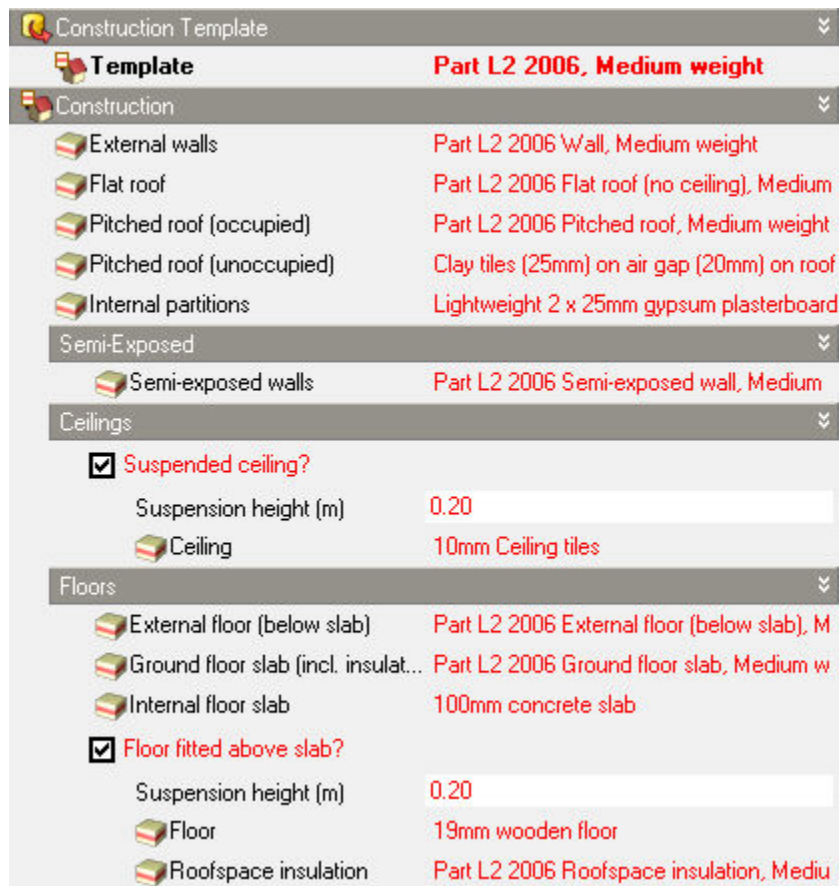

External walls

The external wall construction defines the construction of walls adjacent to outside. The formal definition of walls is given by the [roof-wall transition](#) angle model option. In cold climates this construction will generally include an insulating layer.

Flat roof

Flat roof constructions apply to external horizontal surfaces. The construction used to represent the flat roof should include all construction layers between inside and outside excluding any suspended ceiling and ceiling construction which is most easily included using the [Suspended ceiling?](#), [Suspension height](#) and [Ceiling construction](#) data described below. In cold climates this construction will generally include an insulating layer.

See Detail 5 above.

Pitched roof (occupied)

The Pitched roof (occupied) construction applies to external sloped surfaces when they appear in [occupied zones](#). In cold climates this construction will generally include an insulating layer.

The definition of 'pitched roof' is given by the [roof-wall transition](#) angle model option.

Pitched roof (unoccupied)

The Pitched roof (unoccupied) construction applies to external sloped surfaces when they appear in [semi-exterior unconditioned zones](#). This construction will generally not include any insulation layers.

The definition of 'pitched roof' is given by the [roof-wall transition](#) angle model option.

Internal partitions

The internal partition construction defines the construction of internal partitions (walls used to divide blocks into zones) and inter-block partitions (walls shared with other blocks). Internal partitions are used where both zones are occupied. When one of the zones is occupied and the other is not the **Semi-exposed walls** construction data is used (below).

Semi-exposed walls

The semi-exposed wall construction applies to walls which separate fully occupied zones with [semi-exterior unconditioned](#) zones. They will normally include some insulation. DesignBuilder determines which of the zones is relatively 'outside' and uses this information to correctly order the material layers in the wall. The material layer defined in the construction as being 'outermost' (first-in list) will be the one adjacent to the semi-external unconditioned zone.

Ceilings

In [separate](#) mode, you can define ceiling and floor constructions by combining standard structural slab constructions with optional ceiling and floor layers and air gaps. In DesignBuilder a ceiling is the construction immediately adjacent to the room at the top and is positioned below the floor slab of the zone above (diagram above). Often its purpose is to act as a finish (e.g. to hide ugly concrete slabs) or to provide an air gap between the slab above and the ceiling to allow light fittings, ducting, circuits and other services to be hidden from sight. Ceilings can also provide improved thermal and acoustic properties. If the ceiling is 'suspended' from the slab above it will have an air gap between the slab and the ceiling. You can use the following model data to define ceilings:

- **Suspended ceiling?** - check this option if there is a ceiling in the zone and it is to be defined separately from the floor slab. Checking this option shows:
- **Suspension height** - sets the height of the air gap between the floor slab of the zone above and the ceiling.
- **Ceiling construction** - the construction of the ceiling tiles or other ceiling construction layers, not including the suspension, slab or floor above.

See Details 4, 5, 6 and 7 in the diagram above.

If there is no suspended ceiling, you should clear the 'Suspended ceiling' checkbox. In this case, the zone will be in direct contact with the floor slab of the zone above (if it is an internal ceiling) or the underside of the flat roof construction (if it is an external flat roof).

Floors

Floors are made up by combining floor, slab and ceiling constructions with floor and ceiling suspension voids as shown in the diagram above. If there is no raised floor, you should clear the 'Floor fitted above slab' check box. In this case, the room will be in direct contact with the floor slab.

Note: it is not possible in v.1 to use the gap defined by the suspension height in floors and ceilings as a plenum zone - supply and return [plenums](#) for use in Compact HVAC must be completely separate zones.

Roofspace insulation

In [Semi-exterior unconditioned](#) spaces such as roofspaces, the **Roofspace insulation** data is used instead of the floor construction as the topmost floor layer. To include Insulation in the roofspace floor follow the steps:

1. Go to the roofspace block or zone

2. Check the **Floor fitted above slab** checkbox
3. Select the appropriate **Roofspace insulation** data. Note that this construction contains just the construction layers above the slab. The construction might typically contain two layers: i) insulation and possibly ii) boarding or other lining material.
4. If the roofspace floor construction is directly in contact with the slab, i.e. there is no suspension, set the suspension height to zero.

See Detail 6 in the diagram above.

Ground floors

Ground floors are made up by combining floor, ground floor slab and [ground constructions](#) (optional site level data) with an optional floor suspension void as shown in Construction Location and [Block and Zone Dimensions](#). The [site ground temperatures](#) are applied to the outside of all surfaces adjacent to ground. In cold climates the Ground floor slab construction will generally include an insulating layer.

See Detail 1 in the diagram above.

External floors

External floors are floors that are adjacent to outside air, e.g. the floor of a cantilevered part of the building or where for any other reason there is no ground or other zone below. With Separate constructions, External floors are generated from Floor slab and External floor constructions plus optional Floor suspension and Floor construction. In cold climates the External floor construction will generally include an insulating layer.

See Detail 3 above.

Zone Volume

The zone volume is calculated correctly for all zone geometries and by default, the volume is the actual air volume of the space excluding the volume of floor and ceiling constructions and any raised floor and suspended ceiling voids (if selected) but including half the volume of partition walls.

[Construction tab](#) in model data under [Construction header](#)

Sub-surfaces are exceptions to the main surface construction. Examples include cold-bridging elements such as window lintels and opaque panels in a lightweight facade. You can define different sub-surface construction types for external walls, internal partitions and pitched roofs.

Note: because DesignBuilder Version 1 does not have model data associated with 'openings', it is not possible to have more than one type of sub-surface on any particular surface.

To **add** a sub-surface, go to the surface you wish to work on, click on the Layout tab and select the [Draw sub-surface](#) command.

You can also define constructions for doors.

Walls

Any opaque [sub-surfaces](#) created in a [wall](#) will have this construction.

Internal

Any opaque [sub-surfaces](#) created in any inside surface (partitions, internal floor etc) will have this construction.

Roof

Any opaque [sub-surfaces](#) created in any [pitched roof](#) will have this construction.

External door

Defines the construction of external doors.

Internal door

Defines the construction of internal doors.

[Construction tab](#) in model data under [Construction header](#)

DesignBuilder uses the thermal characteristics of the constructions for each of the walls, floors, roofs, partitions etc in each zone and accounts for the thermal mass in the simulations. You can also include additional thermal mass to account for partitions within a zone, furniture and any other mass which will affect the dynamic thermal response of the zone. There are two ways you can define additional internal thermal mass in DesignBuilder:


1. Drawing [hanging partitions](#) (i.e. partitions which do not meet other walls at both ends),
2. Entering a non-zero internal thermal mass exposed area on the Constructions tab under the Internal Thermal Mass header at zone level.

Thermal mass defined using these methods is lumped together for each zone and modelled in EnergyPlus in a 'non-geometric' way. In both cases, the construction is defined under the **Internal Thermal Mass** header on the Constructions tab.

Internal thermal mass defined in this way is used to specify the construction and area of items within the space that are important to heat transfer calculations but not necessarily important geometrically. For example, furniture within the space – particularly for large spaces. It can also be used for internal walls that are not needed for solar distribution, when [Solar distribution](#) is set to **3-Full interior and exterior** or to represent all interior walls when solar is distributed to the floors only with [Solar distribution](#) set to **2-Full exterior**.

Example

When zoning an office building, five west-facing offices have been combined into one zone. All of the offices have interior walls made of the same materials. As shown in the figure below, this zone may be described with 5 exterior walls and 11 internal walls or 1 exterior wall and 1 internal mass. Note that fewer surfaces will speed up the EnergyPlus calculations.

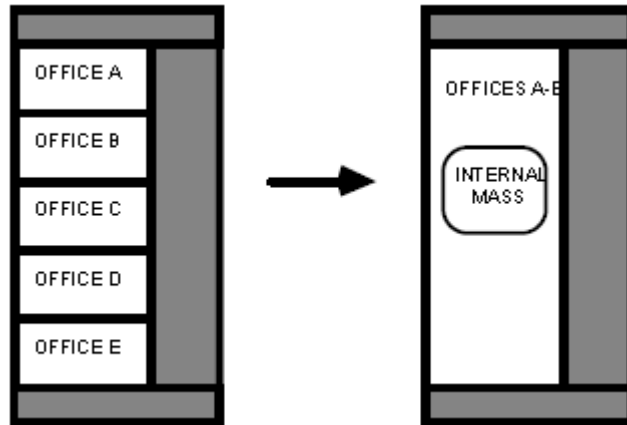

Example

A five-story building has the same ceiling/floor construction separating each of the levels. Zones that are on floors 2 through 4 may be described using a single piece of internal mass to represent both the floor and ceiling. The construction for this internal mass would be identical to the ceiling/floor construction that would be used to describe separate surfaces.

Exposed Area

The exposed area is the surface area of the internal mass. The area that is specified must be the entire surface area that is exposed to the zone. If both sides of a wall are completely within the same zone, then the area of both sides must be included when describing that internal wall.

[Construction tab in model data under Construction header](#)

The adjacency of individual surfaces can be set to be either adjacent to ground or adiabatic. The adjacency data is used at the surface level, though defaults can be set at a block and zone level as well if all surfaces in a block or zone have the same adjacency.

The full range of options are:

- **1-Auto** - the adjacency of the surface is determined automatically by DesignBuilder based on its position. External surfaces below the ground plane are, by default, considered to be adjacent to ground and external surfaces above the ground plane are considered to be adjacent to outside conditions.
- **2-Not adjacent to ground** - the surface is not adjacent to ground even if it is situated below the ground plane.
- **3-Adjacent to ground** - the surface is adjacent to ground even if it is above the ground plane or it is an internal surface.
- **4-Adiabatic** - the surface is adiabatic. This means that heat is not transferred across in its external surface. Adiabatic surfaces are frequently used in thermal modelling to represent surfaces which are between two zones at substantially similar conditions. Note that thermal mass is still modelled in Adiabatic surfaces because heat can still be transferred into the mass through the internal surface. Adiabatic surfaces are often used for modelling the boundary between the actual building model and any [adjacent buildings](#) which are not to be modelled.

You can determine which surfaces are adiabatic or adjacent to ground by looking for the corresponding surface adjacency markers in the Edit Screen at zone and surface levels:



Adiabatic

Adjacent to ground

Note that the recommended way to set ground and adiabatic adjacencies is to use [component blocks](#).

Adiabatic surfaces use internal constructions:

- Adiabatic external floors use **Internal floor** construction.
- Adiabatic flat roofs use *reversed* **Internal floor** construction.
- Adiabatic external wall surfaces use **Internal partition** construction.

You can find out the construction that will be used for each adiabatic surface by looking at data on the Construction tab at surface level.

Note that in the current version of DesignBuilder the Visualisations shows adiabatic surfaces using external surfaces properties but internal surfaces (Internal floor and partition constructions) are used in calculations as described above.

Paraphrased note from EnergyPlus developers: "The Trombe wall convection coefficients only make sense for a zone. They are specific coefficients calculated for a narrow enclosed space. The two major walls of a Trombe wall zone are so close together that the convection patterns for the two walls actually interact. If they are close enough they can fight each other and totally stagnate the convection cell in the space. This is not free-boundary convection such as that found in a typical room. Therefore, it does not make sense to apply these coefficients to a single surface. The algorithm analyzes the zone to figure out which are the two major surfaces and then sets the coefficients on those surfaces. The other minor surfaces receive negligible convection."

- Model options dialog (Heating design, Cooling design, Simulation tabs)
- Calculation options dialog (Heating design, Cooling design, Simulation)
- Model data on Construction tab

[Construction tab](#) in model data under [Construction header](#)

You can select the inside and outside surface convection algorithms in the Model data on the Construction tab under the Surface Convection header. This provides you with the option of making different selections in different parts of the building.

Inside convection algorithm

You can select from a range of EnergyPlus inside convection algorithms for calculating the convection between internal zone surfaces and the rest of the zone air in the simulation calculations:

- **1-Detailed** - correlates the heat transfer coefficient to the temperature difference for various orientations. This model is based on flat plate experiments.
- **2-Simple** - applies constant heat transfer coefficients depending on the surface orientation.
- **3-CIBSE** - applies constant heat transfer coefficient derived from traditional CIBSE values.
- **4-Ceiling diffuser** - a mixed and forced convection model for ceiling diffuser configurations. The model correlates the heat transfer coefficient to the air change rate for ceilings, walls and floors.
- **5-Cavity** - This algorithm correctly calculates the convection coefficients for a narrow sealed vertical cavity based on the ISO 15099 standard. Natural convection model correlated for air in a narrow vertical cavity that is sealed and not ventilated. This applies both to the air gap in between panes of a window or to the air gap between the Trombe wall glazing and the inner surface (often a selective

surface). The 5-Cavity Inside convection algorithm is not available at the surface level.

To avoid discontinuities in surface heat transfer rate calculations, all correlations are extrapolated beyond the lower limit of the data set (3 ACH) to a natural convection limit which is applied during the hours when the system is off. These models are explained in greater detail in the EnergyPlus Engineering Reference Document.

Outside convection algorithm

You can select from a range of EnergyPlus outside convection algorithms:

- **1-Detailed** - all other methods apply heat transfer coefficients depending on the roughness, windspeed, and terrain of the building's location.
- **2-Simple** - applies heat transfer coefficients depending on the roughness and windspeed. This is a combined heat transfer coefficient that includes radiation to sky, ground, and air. The correlation is based on Figure 1, Page 25.1 (Thermal and Water Vapor Transmission Data), 2001 ASHRAE Handbook of Fundamentals.
- **3-CIBSE** - applies heat transfer coefficients depending on orientation, derived from traditional CIBSE values.
- **4-BLAST**,
- **5-TARP**,
- **6-DOE-2**,
- **7-MoWiTT**

These are convection-only heat transfer coefficients; radiation heat transfer coefficients are calculated automatically by the program. All algorithms are described more fully in the EnergyPlus Engineering Reference.

When the surface is wet (i.e. it is raining and the surface is exposed to wind) then the convection coefficient appears in results as a very large number (1000) and the surface is exposed to the Outdoor Wet Bulb Temperature rather than the Outdoor Dry Bulb Temperature.

Inside and Outside convection algorithm settings can be made in various places.

You cannot make changes to individual surface convection settings where the surface is an internal partition.

Note: the equivalent inside and outside surface convection options in the Calculation and Model options dialogs control **building default values** (equivalent of making a setting in Model data at building level) and changes at block, zone or surface levels in the Model data will override these settings.

[Construction tab in model data under Construction header](#)

[Component blocks](#) can be used to include shading and reflection effects of objects such as local shading devices, awnings, adjacent buildings and trees. They can also be used to define ground and adiabatic adjacencies. The component block model data allows you to define the component block type, whether the component block shades and reflects in simulations, transmittance of the shading material and also a schedule for modelling seasonal variations in transmittance.

Component block type

You can change the type of the component block. Select from:

- **1-Standard** - used for shading, reflection and visualisation.
- **2-Ground** - used for setting ground adjacency, shading, reflection and visualisation.

- **3-Adiabatic** - used for setting adiabatic adjacency, shading, reflection and visualisation.

For more information on the Component block types see [Component Block](#) under [Working with Blocks \(Building Level\)](#)

Component block shades and reflects

Switch this option on to include the component block as a shading/reflection surfaces in the simulations. Shading surfaces have the following effects:

- Shade direct beam solar radiation.
- Reflect solar radiation onto the building (if you select [Model reflections](#) in the calculation options).
- Shade diffuse solar and long-wave radiation from the sky.
- Shade diffuse solar radiation from the ground (if you select [Model reflections](#) in the calculation options).

Important note on ground reflection

Reflection from the ground is calculated even if the [Reflections](#) option is not used, but if Reflections are not calculated the ground plane is considered unobstructed, i.e., the shadowing of the ground by the building itself or by component blocks is ignored.

Shadowing of the ground by component blocks is only taken into account if the [Reflections](#) option is used.

Conclusion: Switch Reflections on for accurate shading calculations.

Note: all component block types cast shadows in the [visualisations](#).

Material

The component block material is used to define the [solar and visible reflectance](#) of the block surfaces in Cooling design calculations and Simulations using real weather data when the [model reflections](#) calculation option is selected.

Note: Although component blocks are displayed in DesignBuilder as solid objects, non-flat component blocks are modelled in EnergyPlus as a group of surfaces and it is the reflectance and transmission of each of these surfaces that is being described here. The solar flux incident upon a building facade will be attenuated by each successive shading object located on a path between the facade and the sun position.

Maximum Transmittance


The transmittance of the component block during the simulation is calculated by multiplying the maximum transmittance by the time varying schedule value:

$$\text{Transmittance} = \text{Max Transmittance} \times \text{Schedule value}$$

In most cases you will want component blocks to provide 100% shading for 100% of the time. In this case you can leave the **Maximum transmittance** and **Transmittance schedule** in their default states of 0 and **On** respectively. If you wish the component block to transmit solar and visible radiation you can define the extent and timing of the transmission. The component block transmittance is calculated during the simulations as the **Maximum transmittance** multiplied by the value of the transmittance schedule below. The maximum transmittance can have any value between 0 and 1. Note that if the component block is [flat](#)

(i.e. it consists of 2 large surfaces and several smaller 'edge' surfaces) the block is represented in the simulations by a single shading surface. In this case the surface used will depend on the value of the [Flat component block surface selection](#) model option.

Tip: If your component block has a constant transmittance you can set the transmittance schedule below to On and set the constant transmittance for the block here.

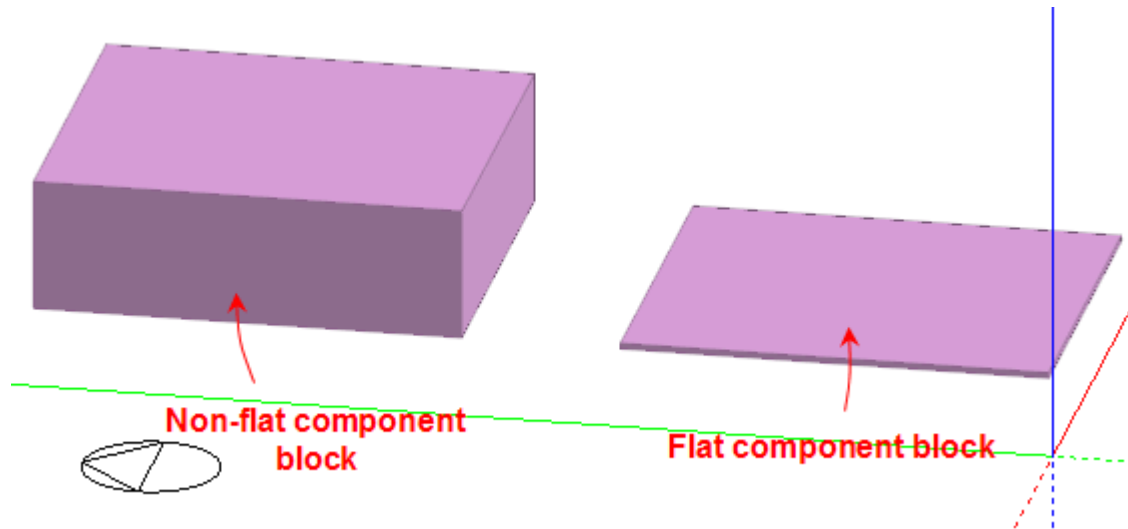

For non-flat component blocks every surface is included in the simulation as a shading surface and the solar flux incident upon a building facade will be attenuated by each successive shading object located on a path between the facade and the sun position. The shading transmittance schedule you define is therefore modified to ensure that the overall transmittance of the block is the Maximum Transmittance value multiplied by the schedule you selected. This is done assuming that the component block is convex and that therefore solar rays can only pass through a maximum of 2 surfaces. The transmittance of each non-flat component block surface is set to square root of the value you defined to achieve this.

Note: non-convex non-flat component blocks will provide more shading than you specified during times when solar rays pass through more than 2 surfaces.

Note: there was a bug in the calculation of transmittance through multiple shading devices having fractional transmittance in EnergyPlus version 2.0 and earlier. We haven't yet verified that the bug has been fixed and so must recommend that you check results carefully when using fractional transmittance for component blocks.

Transmittance schedule

The component block transmittance schedule defines any time varying transmittance of the component block surfaces. By default, the component block is fully opaque for the whole year. The transmittance schedule can contain any value between 0 and 1. The transmittance schedule can be used to allow for seasonal transmittance change, such as deciduous trees that have a higher transmittance in winter than in summer. Transmittance based on time of day can also be used - a movable awning, for example, where the transmittance is some value less than 1.0 when the awning is in place and is 1.0 when the awning is retracted.

The following assumptions are made in the shading surface transmittance calculation:

- Both sides of the shading surface have the same transmittance properties.
- The transmittance is the same for both beam and diffuse solar radiation.
- Beam solar transmittance is independent of angle of incidence on the shading surface.

- Beam radiation incident on a shading surface is transmitted as beam radiation with no change in direction, i.e., there is no beam-to-diffuse component.
- If two shading surfaces with non-zero transmittance overlap, the net transmittance is the product of the individual transmittances. Inter-reflection between the shading surfaces (and between the shading surfaces and the building) is ignored.
- For the [daylighting](#) calculation the shading surface's visible transmittance is assumed to be the same as its solar transmittance.
- Shading devices are assumed to be opaque to long-wave radiation no matter what the solar transmittance value is.

Note that shading devices only shade solar radiation when the sun is up, which is automatically determined by EnergyPlus from latitude, time of year, etc. The user need only account for the time-varying transmittance of the shading device in the transmittance schedule, not whether the sun is up or not.

3.3.2.2.2 Airtightness

[Construction tab in model data](#)

There are two ways of defining air tightness depending on the Natural ventilation model option:

- [Scheduled](#)
- [Calculated](#)

In both cases infiltration can be switched off at building, block or zone level.

[Construction tab in model data under Airtightness header](#)

The infiltration rate (rate of entry of unintentional air from outside through cracks, holes and through the porosity of the fabric) can be set in Air changes per hour (ac/h) and is constant throughout the simulation. The air flow rate in m³/s is calculated from the ac/h data using:


$$\text{m}^3/\text{s} = \text{ac}/\text{h} * \text{ZoneVolume} / 3600$$

where `ZoneVolume` is the *total* air volume of the space including the volume of floor and ceiling constructions and any raised floor and suspended ceiling voids (if selected in [Separate](#) constructions) and including half the volume of partition walls.

Note: this *total* zone volume value may be different from the value used for calculating air flow rates for [natural ventilation](#) and [mechanical ventilation](#) which have model options for [excluding floor/ceiling constructions](#).

[Construction tab in model data under Airtightness header](#)

The Airtightness is defined by a position on a five point scale:

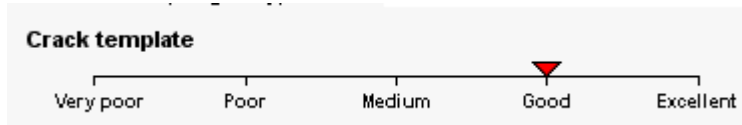

The five settings correspond to the five [Crack templates](#).

You can also switch off calculated infiltration off by unchecking the **Model infiltration** checkbox. This may be useful if you are carrying out a summertime simulation of a large building to get around the [restriction on the maximum number of cracks](#) in the model.

3.3.2.3 Openings Data (Windows, Doors, Vents, Holes, Sub-surfaces)

Openings tab in model data


The term **opening** is used in DesignBuilder to describe any opening in the main building fabric. These are modelled as exceptions to the main surface construction. There are five types of opening:

- Windows
- Sub-surfaces (i.e. opaque elements within the surface that have different properties from the main construction. For example lintels and lightweight panels can be defined as sub-surfaces. Data for these is held on the [Construction tab](#))
- Holes
- Doors
- Vents

The layout, operation and construction data for these (apart from sub-surfaces) can be set on the Openings tab.

Templates

You can load generic Opening data by clicking on the Template option under Glazing Template and then by clicking on the '...' at the right of the line (below).

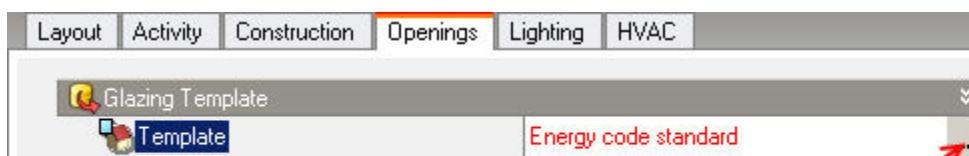

Select generic glazing template

When you make a selection from the list of [Glazing templates](#), data from selected template will be loaded to the model.

You can also open the:

- [External Glazing](#),
- [Internal Glazing](#),
- [Roof Glazing](#),
- Doors,
- Vents

headers to enter opening details where they are different from those loaded from the template.

Note: Once you have created custom openings on any particular surface, changes made on this tab will not affect the layout for the surface.

All Openings data is used to generate simulation data at the **Surface level**.

You can also override default [Pressure Coefficient](#) data when the Calculated Natural ventilation option is set and you are at surface level.

3.3.2.3.1 External Glazing

[Openings tab in model data](#)

The data under the External Glazing header applies to all glazing lying on external walls. You can enter information on:

- [Dimensions](#)
- [Frame](#)
- [Shading](#)
- [Operation](#)

[Openings tab in model data under External Glazing and Internal Glazing headers](#)

Facade types

There are a number of standard facade types:


- **None** - there is no glazing.
- **Continuous horizontal** - glazing is generated in a continuous horizontal strip using Sill height, Window spacing and Percentage glazing.
- **Fixed height** - glazing is generated with a fixed height at the specified Sill height and Window spacing, and width is calculated based on the Percentage glazing. This option uses **Window to wall %** but prioritises window height.
- **Preferred height** - glazing is generated using the window height data and the Percentage glazing, but the Window height may be adjusted to achieve the required **Window to wall %**. This option uses Window height, Window spacing and Sill height but prioritises **Window to wall %**.
- **Fixed width and height** - windows have fixed width and height. This option uses **Window to wall %** but prioritises Window Width, Height, Spacing and Sill height.
- **Fill surface (100%)** - the entire surface is filled with glazing and there is **no frame**.

You can use the **Window to wall %** (WWR) data and Window height, Window spacing and Sill height to easily change the amount of glazing and its layout on the walls. This data is used as described above under Facade types.

Note 1: you can control the makeup of the building facades in greater detail by [drawing individual windows](#) at the surface level. In this case glazing, vent and door layout model data is ignored.

Note 2: flat roofs do not have default glazing set up using Roof glazing layout model data. To create openings on a flat roof you should go to the surface level and add them there.

Openings tab in model data under **External Glazing**, **Internal Glazing** and **Roof Glazing** headers

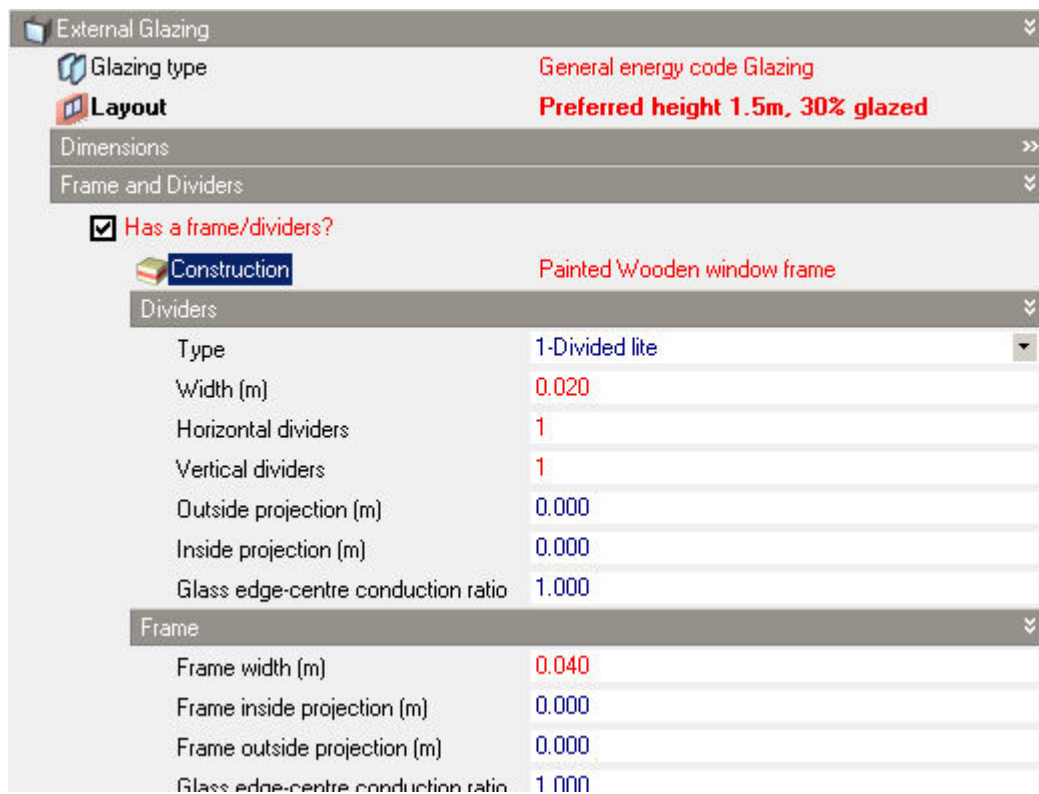

External Glazing

Glazing type General energy code Glazing

Layout Preferred height 1.5m, 30% glazed

Dimensions >>

Frame and Dividers >>

Has a frame/dividers?

Construction Painted/Wooden window frame

Dividers >>

Type	1-Divided lite
Width (m)	0.020
Horizontal dividers	1
Vertical dividers	1
Outside projection (m)	0.000
Inside projection (m)	0.000
Glass edge-centre conduction ratio	1.000


Frame >>

Frame width (m)	0.040
Frame inside projection (m)	0.000
Frame outside projection (m)	0.000
Glass edge-centre conduction ratio	1.000

Frames are applied to all rectangular windows (default and custom) but not to other shaped windows and not when using the **Fill surface (100%)** facade type.

If the glazing does not have a frame or dividers, uncheck the **Has a frame?** box. If **Has a frame?** is checked and then you can enter:

- the construction of the frame and dividers,
- the number of horizontal dividers and vertical dividers,
- frame width and divider with (see diagrams below for definition).

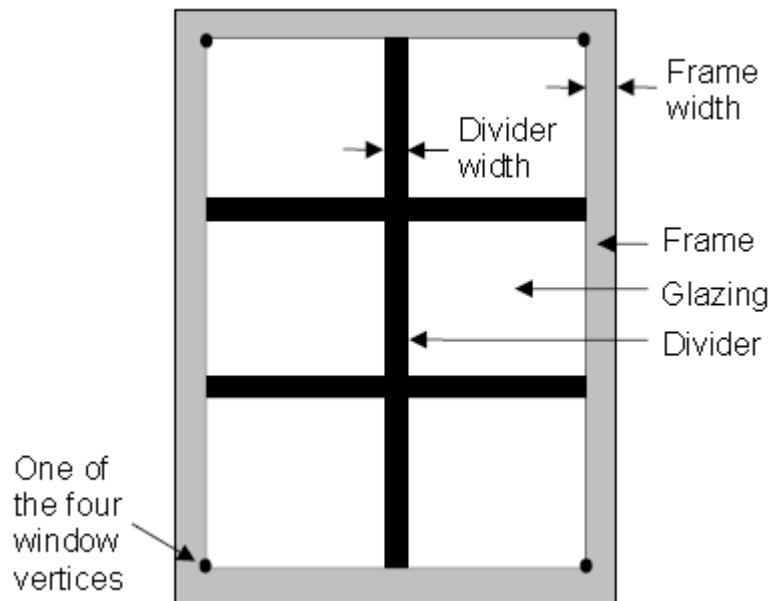


EXTERNAL WINDOWS ON WALLS

For **external windows on walls** the following dimensions in the direction of the glazing normal can also be entered:



- Inside reveal depth
- Inside sill depth
- Outside divider projection
- Inside divider projection
- Outside frame projection
- Inside frame projection
- Divider glass edge-centre conduction ratio
- Frame glass edge-centre conduction ratio
- Divider type

The definition of the above dimensions is shown in the diagrams.

REVEAL

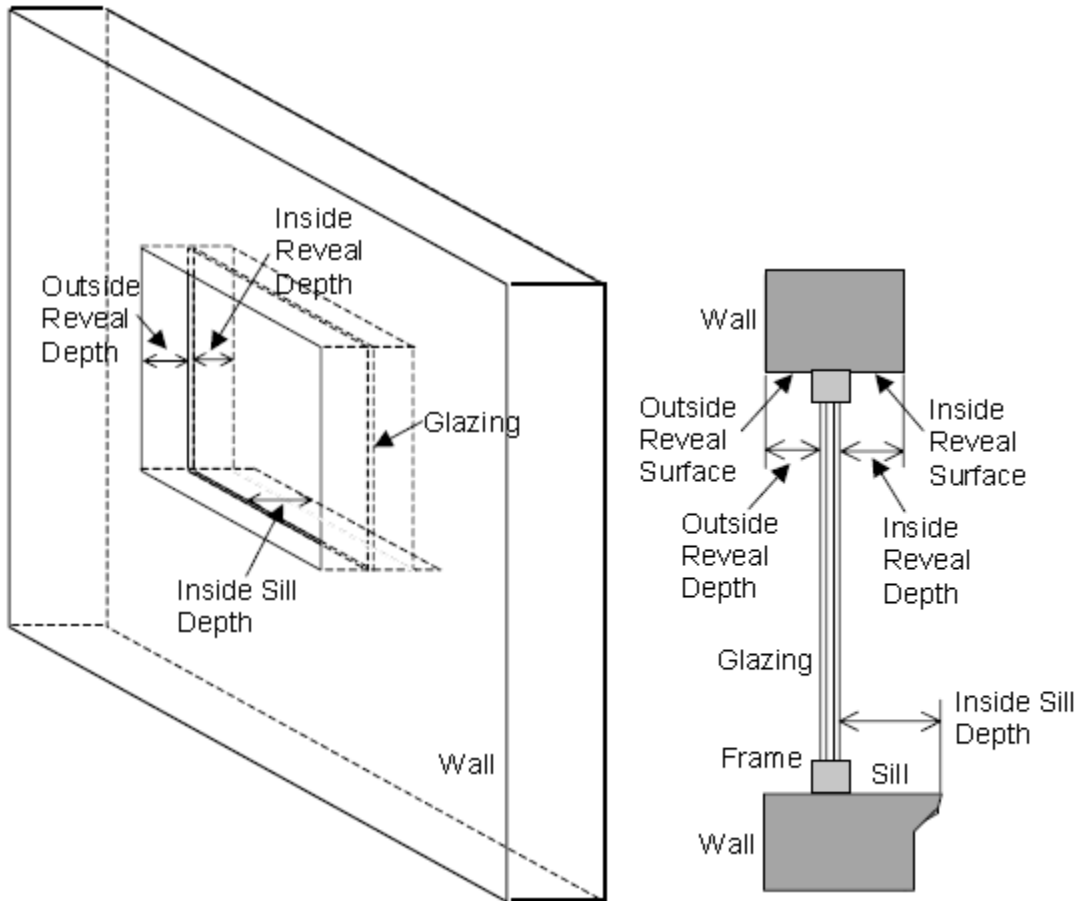

DIVIDERS

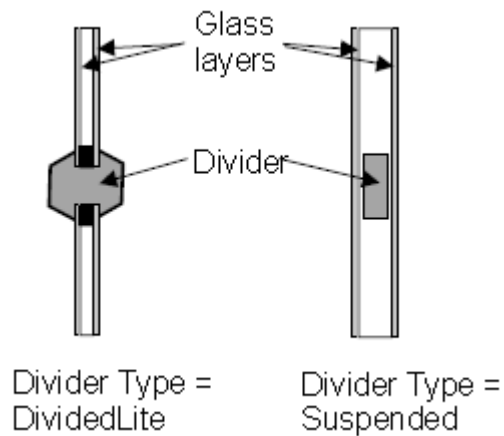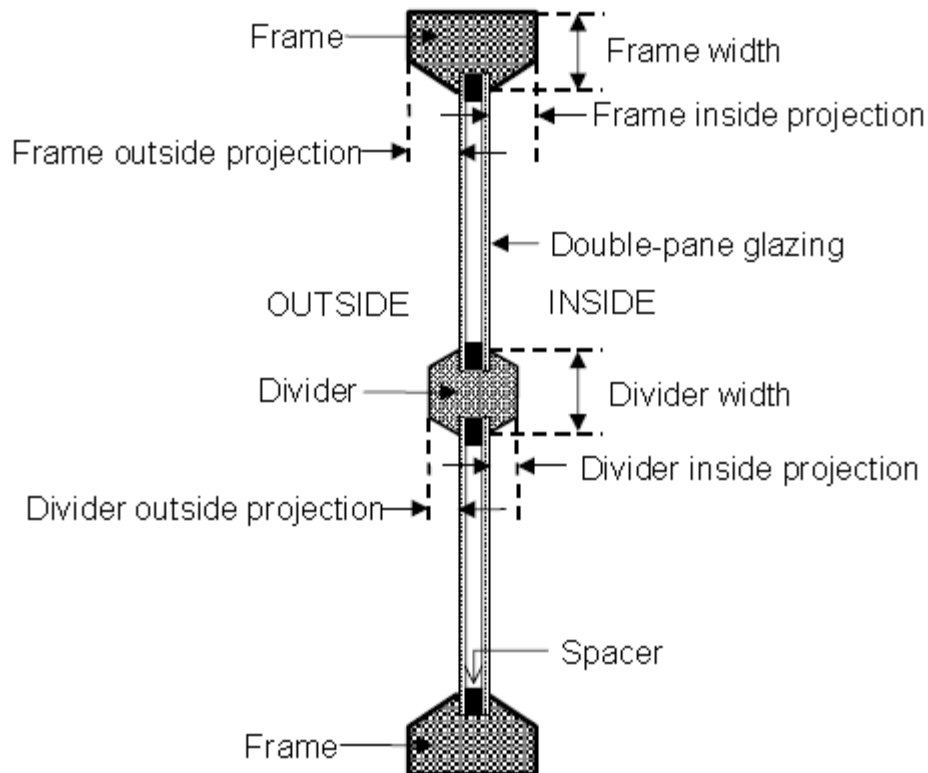

[Openings tab](#) in model data under **External Glazing, Internal Glazing and Roof Glazing headers**

You can select two types of shading for external windows:

- [Window shading](#) (blinds, curtains etc walls and roofs).
- [Local shading](#) (overhangs, louvres, sidefins on external walls only)

These types of shading can be used individually or combined.

[Openings tab](#) in model data under **External Glazing**, **Internal Glazing** and **Roof Glazing** headers

To include blinds, transparent insulation or electrochromic glazing check the 'Window shading' checkbox.

Window shading

Type	Blind with high reflectivity slats
Position	1-Inside
Control type	3-Summer

This displays the data above.

Type


Select the [Window blind](#) component type. There are 4 categories of window blinds:

- [Slat](#)
- [Shade](#)
- [Transparent insulation](#)
- [Electrochromic switching](#) (if you select a blind of this category the position must be 'Switchable'.

Position

The window shading devices can be positioned in one of four ways:

- **1-Inside** - the window shading devices is positioned inside the zone.
- **2-Mid-pane** - the window shading device is positioned between the inner pane and the second pane.
- **3-Outside** - the shading devices positioned outside.
- **4-Switchable** - select this option for [electrochromic glazing](#) in which case the outer pane is switched based on the shading control (below).

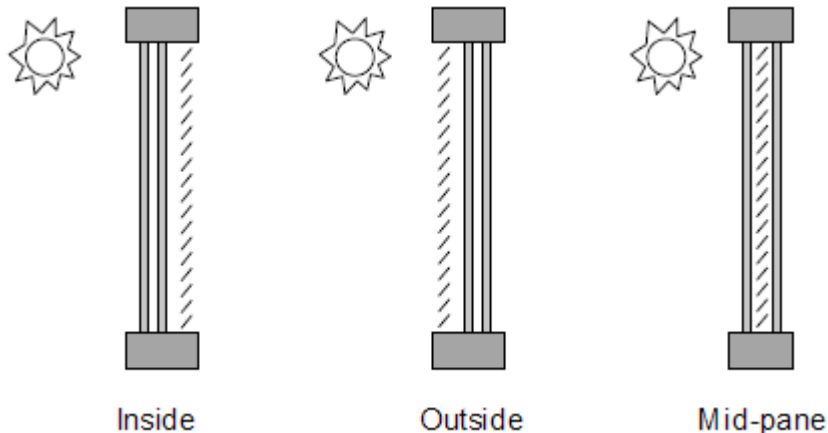

Control type

Control data specifies how the shading device is controlled. It determines whether the shading device is "on" or "off." For [blinds and shades](#), when the device is "on" it is assumed to cover all of the window except its frame; when the device is "off" it is assumed to cover none of the window (whether "on" or "off" the shading device is assumed to cover none of the wall that the window is on). For [switchable glazing](#),

“on” means that the glazing is in the fully-switched state and “off” means that it is in the unswitched state; for example, for electrochromic glazing, “on” means the glazing is in its darkest state and “off” means it is in its lightest state.

The choices for **Shading control type** are the following. *Equivalent EnergyPlus control types* are shown in italics. If SetPoint is applicable its units are shown in parentheses.

1- Always on (*AlwaysOn*) - Shading is always on.

The following six control types are used primarily to reduce zone cooling load due to window solar gain.

2-Daylight (*MeetDaylightIlluminanceSetpoint*) - Used only with Position = **4-Switchable** in zones with [daylighting controls](#). In this case the transmittance of the glazing is adjusted to just meet the daylight illuminance set point at the first daylighting reference point. Note that the [daylight illuminance set point](#) is specified under [Environmental Control](#) on the Activity tab.

3-Schedule - Shading operation is defined by a schedule.

4-Solar (*OnIfHighSolarOnWindow*) - Shading is on if beam plus diffuse solar radiation incident on the window exceeds SetPoint (W/m² or BTU/hr-ft²).

5-Glare (*OnIfHighGlare*) - Shading is on if the total daylight glare index at the zone’s first daylighting sensor from all of the exterior windows in the zone exceeds the maximum glare index specified in the daylighting input for zone.

Note: Glare control requires [Lighting control to be switched on in the zone](#).

6-Outside air temp (*OnIfHighOutsideAirTemp*) - Shading is on if outside air temperature exceeds SetPoint (C or F).

7-Inside air temp (*OnIfHighZoneAirTemp*) - Shading is on if zone air temperature in the previous time step exceeds SetPoint (C or F)

8-Cooling (*OnIfHighZoneCooling*) - Shading is on if zone cooling rate in the previous time step is non-zero.

The following two control types can be used to reduce zone cooling load. They are applicable to any Shading type but are most appropriate for interior or exterior blinds, interior or exterior shades with low insulating value, or switchable glazing.

9-Day cooling and solar + night (*OnNight/OnDayIfCoolingAndHighSolarOnWindow*) - Shading is on at night. Shading is on during the day the solar radiation incident on the window exceeds SetPoint (W/m² or BTU/hr-ft²) and if the zone cooling rate in the previous time step is non-zero.

10-Day cooling and solar (*OffNight/OnDayIfCoolingAndHighSolarOnWindow*) - Shading is off at night. Shading is on during the day when the solar radiation incident on the window exceeds SetPoint (W/m² or BTU/hr-ft²) and if the zone cooling rate in the previous time step is non-zero.

The following three control types can be used to reduce zone heating load during the winter by reducing window conductive heat loss at night and leaving the window unshaded during the day to maximize solar gain. They are applicable to any Shading Type but are most appropriate for interior or exterior shades with high insulating value (“movable insulation”). “Night” means the sun is down and “day” means the sun is up.

11-Night outside low air temp (*OnNightIfLowOutsideTemp/OffDay*) - Shading is on at night if the outside air temperature is less than SetPoint (C or F) and schedule, if specified, allows shading. Shading is off during the day.

12-Night inside low air temp (*OnNightIfLowInsideTemp/OffDay*) - Shading is on at night if the zone air temperature in the previous time step is less than SetPoint (C or F) and schedule, if specified, allows shading. Shading is off during the day.

13-Night heating (*OnNightIfHeating/OffDay*) - Shading is on at night if the zone heating rate in the previous time step exceeds SetPoint (W) and schedule, if specified, allows shading. Shading is off during the day.

The following two control types can be used to reduce zone heating and cooling load. They are applicable to any Shading type but are most appropriate for translucent interior or exterior shades with high insulating value ("translucent movable insulation").

14-Night outside low air temp + day cooling (*OnNightIfLowOutsideTemp/OnDayIfCooling*) - Shading is on at night if the outside air temperature is less than Set point (C or F). Shading is on during the day if the zone cooling rate in the previous time step is non-zero.

15-Night heating + day cooling (*OnNightIfHeating/OnDayIfCooling*) - Shading is on at night if the zone heating rate in the previous time step is non-zero. Shading is on during the day if the zone cooling rate in the previous time step is non-zero.

SetPoint

The setpoint for activating window shading. The units depend on the type of trigger:


- W/m² or BTU/hr-ft² for solar-based controls.
- C or F for temperature-based controls.

Openings tab in model data under External Glazing headers

To include overhangs, sidefins and/or louvres check the 'Local shading' checkbox.



This shows the [Local shading component](#) data. DesignBuilder comes with a small database of Local shading devices, but if you cannot find a suitable component for your model, you can create a custom local shading component by clicking on the New button from the Selection dialog (below).

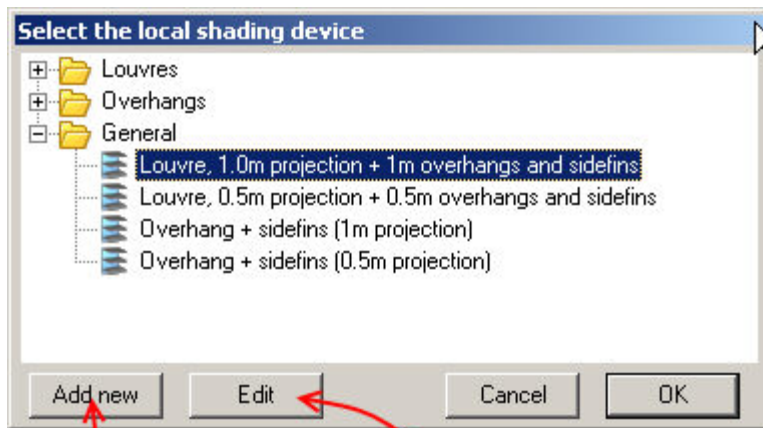

Create custom local shading device

Edit selected local shading device

Note: the DesignBuilder Local shading devices allow a range of different overhangs, side fins and louvres to be defined, but if you need to model a shading device not covered by the standard mechanism, you can draw custom shading devices using [Component blocks](#).

[Openings tab](#) in model data under External Glazing, Internal Glazing and Roof Glazing headers

The operation of windows can be defined by entering data under Operation headers. The data will depend on the [Natural ventilation model option](#) set:

Calculated Natural Ventilation

The **% Glazing area opens** slider allows you to define the openable window area as a percentage of the total window area. For example enter '20' if 20% of the window area can open.

Note: if [modulation](#) is switched on (it is by default) the glazing opening areas are multiplied by a factor to account for external conditions.

You can also enter a schedule to define the timing of the window operation.

The windows are 'open' when:

$T_{\text{zone_air}} > T_{\text{setpoint}}$ AND $T_{\text{zone_air}} > T_{\text{outside_air}}$ AND the schedule value = 1

The ventilation rate is calculated based on the pressure difference across the opening calculated from wind and stack pressure effects using equations described in [Natural Ventilation Modelling](#).

Scheduled Natural Ventilation

Airflow through *external* windows, vents, doors and holes are not modelled with **Scheduled** natural ventilation because the natural ventilation airflow from outside is explicitly defined using the total [natural ventilation flow rate](#) and operation on the [HVAC](#) tab. *No operation data is entered on the Openings tab for external windows in this case.*

Note: Natural Ventilation can be [overridden to be off](#) on the HVAC tab for both Calculated and Scheduled model options.

3.3.2.3.2 Internal Glazing

[Openings tab](#) in model data

The data under the Internal Glazing header applies to all glazing lying on internal partition walls. You can enter information on:

- [Dimensions](#)
- [Frame](#)
- [Operation](#)

[Openings tab](#) in model data under External Glazing and Internal Glazing headers

Facade types

There are a number of standard facade types:

- **None** - there is no glazing.
- **Continuous horizontal** - glazing is generated in a continuous horizontal strip using Sill height, Window spacing and Percentage glazing.
- **Fixed height** - glazing is generated with a fixed height at the specified Sill height and Window spacing, and width is calculated based on the Percentage glazing. This option uses **Window to wall %** but prioritises window height.
- **Preferred height** - glazing is generated using the window height data and the Percentage glazing, but the Window height may be adjusted to achieve the required **Window to wall %**. This option uses Window height, Window spacing and Sill height but prioritises **Window to wall %**.
- **Fixed width and height** - windows have fixed width and height. This option uses **Window to wall %** but prioritises Window Width, Height, Spacing and Sill height.
- **Fill surface (100%)** - the entire surface is filled with glazing and there is **no frame**.

You can use the **Window to wall %** (WWR) data and Window height, Window spacing and Sill height to easily change the amount of glazing and its layout on the walls. This data is used as described above under Facade types.

Note 1: you can control the makeup of the building facades in greater detail by [drawing individual windows](#) at the surface level. In this case glazing, vent and door layout model data is ignored.

Note 2: flat roofs do not have default glazing set up using Roof glazing layout model data. To create openings on a flat roof you should go to the surface level and add them there.

Openings tab in model data under External Glazing, Internal Glazing and Roof Glazing headers

The screenshot shows the 'External Glazing' settings panel. The 'Layout' section is expanded to show 'Preferred height 1.5m, 30% glazed'. The 'Construction' section is set to 'Painted Wooden window frame'. The 'Dividers' section is expanded to show a table of settings:

Property	Value
Type	1-Divided lite
Width (m)	0.020
Horizontal dividers	1
Vertical dividers	1
Outside projection (m)	0.000
Inside projection (m)	0.000
Glass edge-centre conduction ratio	1.000


The 'Frame' section is also expanded to show a table of settings:

Property	Value
Frame width (m)	0.040
Frame inside projection (m)	0.000
Frame outside projection (m)	0.000
Glass edge-centre conduction ratio	1.000

Frames are applied to all rectangular windows (default and custom) but not to other shaped windows and not when using the **Fill surface (100%)** facade type.

If the glazing does not have a frame or dividers, uncheck the **Has a frame?** box. If **Has a frame?** is checked and then you can enter:

- the construction of the frame and dividers,
- the number of horizontal dividers and vertical dividers,
- frame width and divider with (see diagrams below for definition).

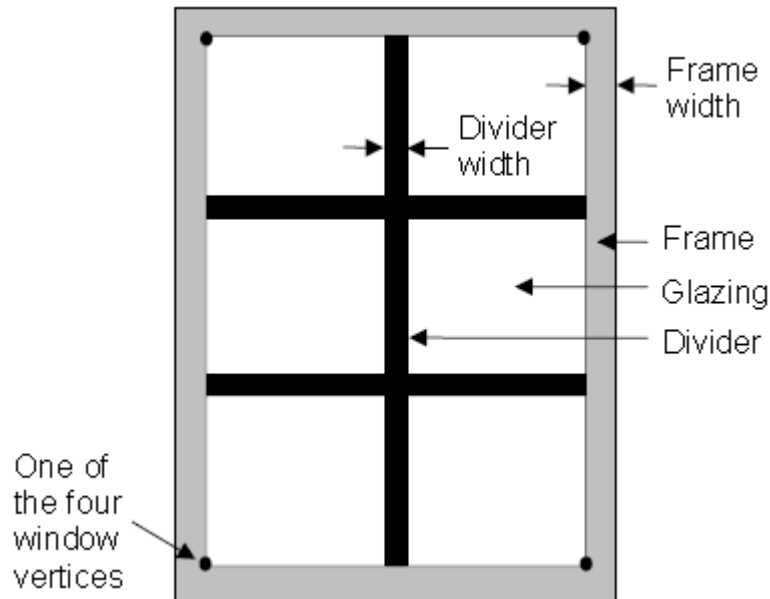


EXTERNAL WINDOWS ON WALLS

For **external windows on walls** the following dimensions in the direction of the glazing normal can also be entered:



- Inside reveal depth
- Inside sill depth
- Outside divider projection
- Inside divider projection
- Outside frame projection
- Inside frame projection
- Divider glass edge-centre conduction ratio
- Frame glass edge-centre conduction ratio
- Divider type

The definition of the above dimensions is shown in the diagrams.

REVEAL

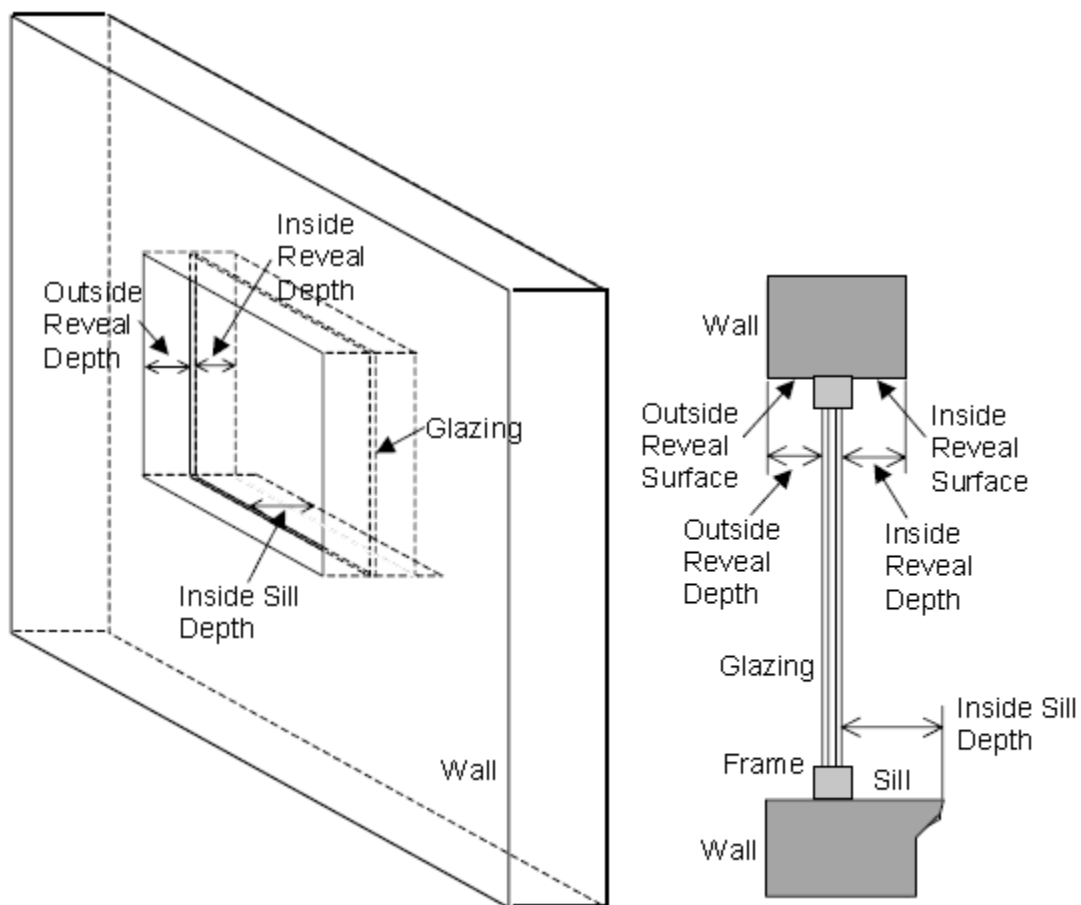

DIVIDERS

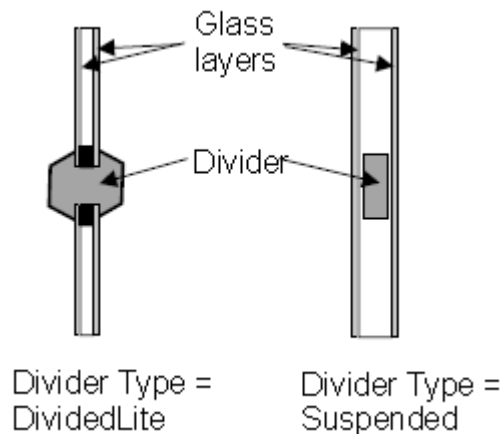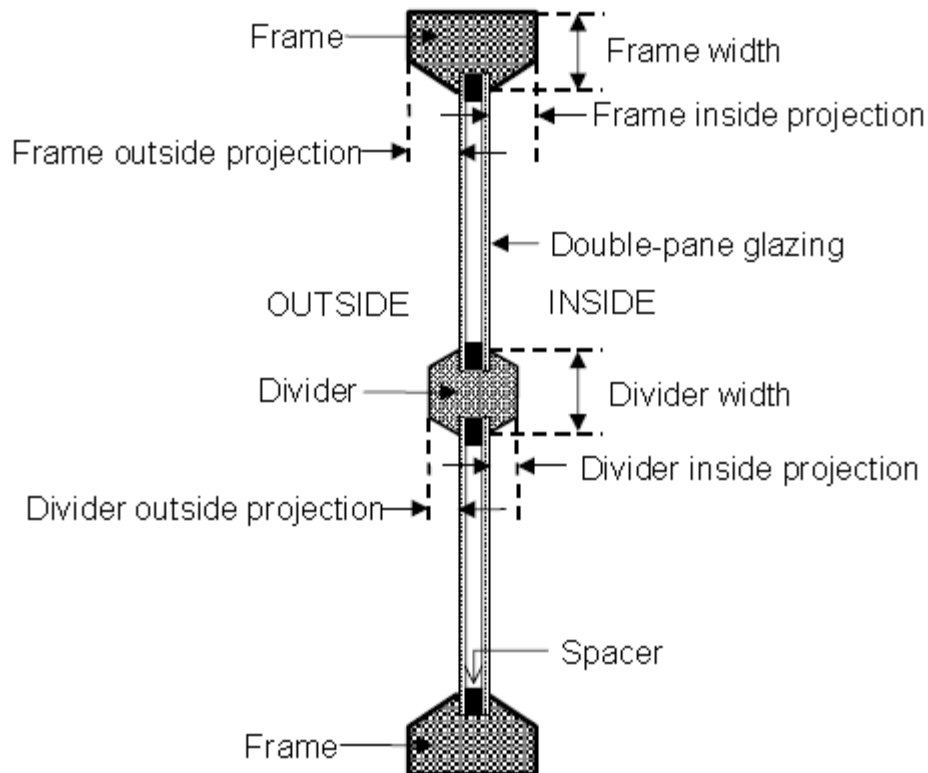

[Openings tab](#) in model data under **External Glazing, Internal Glazing and Roof Glazing headers**

The operation of windows can be defined by entering data under Operation headers. The data will depend on the [Natural ventilation model option](#) set:

Calculated Natural Ventilation

The **% Glazing area opens** slider allows you to define the openable window area as a percentage of the total window area. For example enter '20' if 20% of the window area can open.

Note: if [modulation](#) is switched on (it is by default) the glazing opening areas are multiplied by a factor to account for external conditions.

You can also enter a schedule to define the timing of the window operation.

The windows are 'open' when:

$T_{\text{zone_air}} > T_{\text{setpoint}}$ AND $T_{\text{zone_air}} > T_{\text{outside_air}}$ AND the schedule value = 1

The ventilation rate is calculated based on the pressure difference across the opening calculated from wind and stack pressure effects using equations described in [Natural Ventilation Modelling](#).

Scheduled Natural Ventilation

Airflow through *external* windows, vents, doors and holes are not modelled with **Scheduled** natural ventilation because the natural ventilation airflow from outside is explicitly defined using the total [natural ventilation flow rate](#) and operation on the [HVAC](#) tab. *No operation data is entered on the Openings tab for external windows in this case.*

Note: Natural Ventilation can be [overridden to be off](#) on the HVAC tab for both Calculated and Scheduled model options.

3.3.2.3.3 Roof Glazing

[Openings tab](#) in model data

The data under the Roof Glazing header applies to all glazing lying on external roof surfaces. You can enter information on:

- [Dimensions](#)
- [Frame](#)
- [Shading](#)
- [Operation](#)

Note: flat roofs do not have default glazing set up using Roof glazing layout model data. To create openings on a flat roof you should go to the surface level and add them there.

[Openings tab](#) in model data under External Glazing and Internal Glazing headers

Facade types

There are a number of standard facade types:

- **None** - there is no glazing.
- **Continuous horizontal** - glazing is generated in a continuous horizontal strip using Sill height, Window spacing and Percentage glazing.
- **Fixed height** - glazing is generated with a fixed height at the specified Sill height and Window spacing, and width is calculated based on the Percentage glazing. This option uses **Window to wall %** but prioritises window height.
- **Preferred height** - glazing is generated using the window height data and the Percentage glazing,

but the Window height may be adjusted to achieve the required **Window to wall %**. This option uses Window height, Window spacing and Sill height but prioritises **Window to wall %**.

- **Fixed width and height** - windows have fixed width and height. This option uses **Window to wall %** but prioritises Window Width, Height, Spacing and Sill height.
- **Fill surface (100%)** - the entire surface is filled with glazing and there is **no frame**.

You can use the **Window to wall %** (WWR) data and Window height, Window spacing and Sill height to easily change the amount of glazing and its layout on the walls. This data is used as described above under Facade types.

Note 1: you can control the makeup of the building facades in greater detail by [drawing individual windows](#) at the surface level. In this case glazing, vent and door layout model data is ignored.

Note 2: flat roofs do not have default glazing set up using Roof glazing layout model data. To create openings on a flat roof you should go to the surface level and add them there.

[Openings tab](#) in model data under **Roof Glazing headers**

You can select one type of shading for external roof windows:

- [Window shading](#) (blinds, curtains etc walls and roofs).

[Openings tab](#) in model data under **External Glazing, Internal Glazing and Roof Glazing headers**

The screenshot shows the 'External Glazing' configuration panel. The 'Layout' section is highlighted in red, showing 'Preferred height 1.5m, 30% glazed'. The 'Construction' section is highlighted in blue, showing 'Painted Wooden window frame'. The 'Dividers' section is expanded, showing the following settings:

Property	Value
Type	1-Divided lite
Width (m)	0.020
Horizontal dividers	1
Vertical dividers	1
Outside projection (m)	0.000
Inside projection (m)	0.000
Glass edge-centre conduction ratio	1.000

The 'Frame' section is also expanded, showing the following settings:


Property	Value
Frame width (m)	0.040
Frame inside projection (m)	0.000
Frame outside projection (m)	0.000
Glass edge-centre conduction ratio	1.000

Frames are applied to all rectangular windows (default and custom) but not to other shaped windows and not when

using the **Fill surface (100%)** facade type.

If the glazing does not have a frame or dividers, uncheck the **Has a frame?** box. If **Has a frame?** is checked and then you can enter:

- the construction of the frame and dividers,
- the number of horizontal dividers and vertical dividers,
- frame width and divider with (see diagrams below for definition).

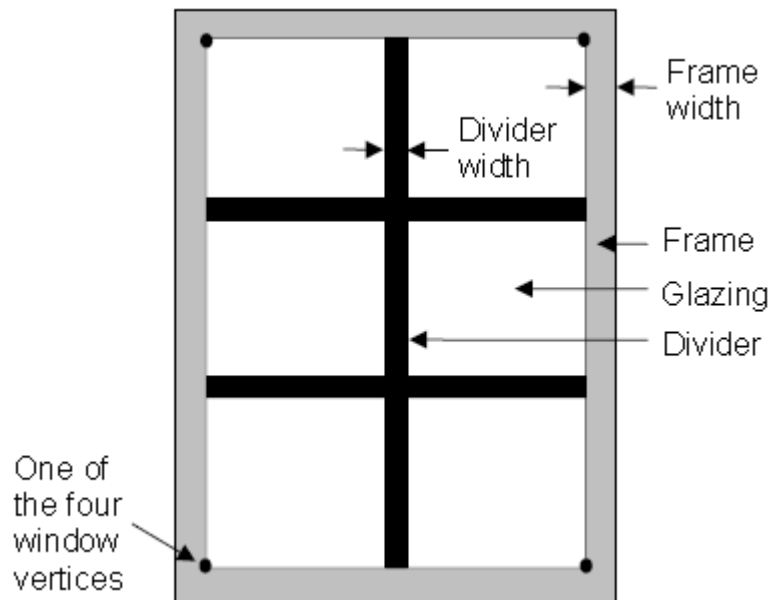


EXTERNAL WINDOWS ON WALLS

For **external windows on walls** the following dimensions in the direction of the glazing normal can also be entered:



- Inside reveal depth
- Inside sill depth
- Outside divider projection
- Inside divider projection
- Outside frame projection
- Inside frame projection
- Divider glass edge-centre conduction ratio
- Frame glass edge-centre conduction ratio
- Divider type

The definition of the above dimensions is shown in the diagrams.

REVEAL

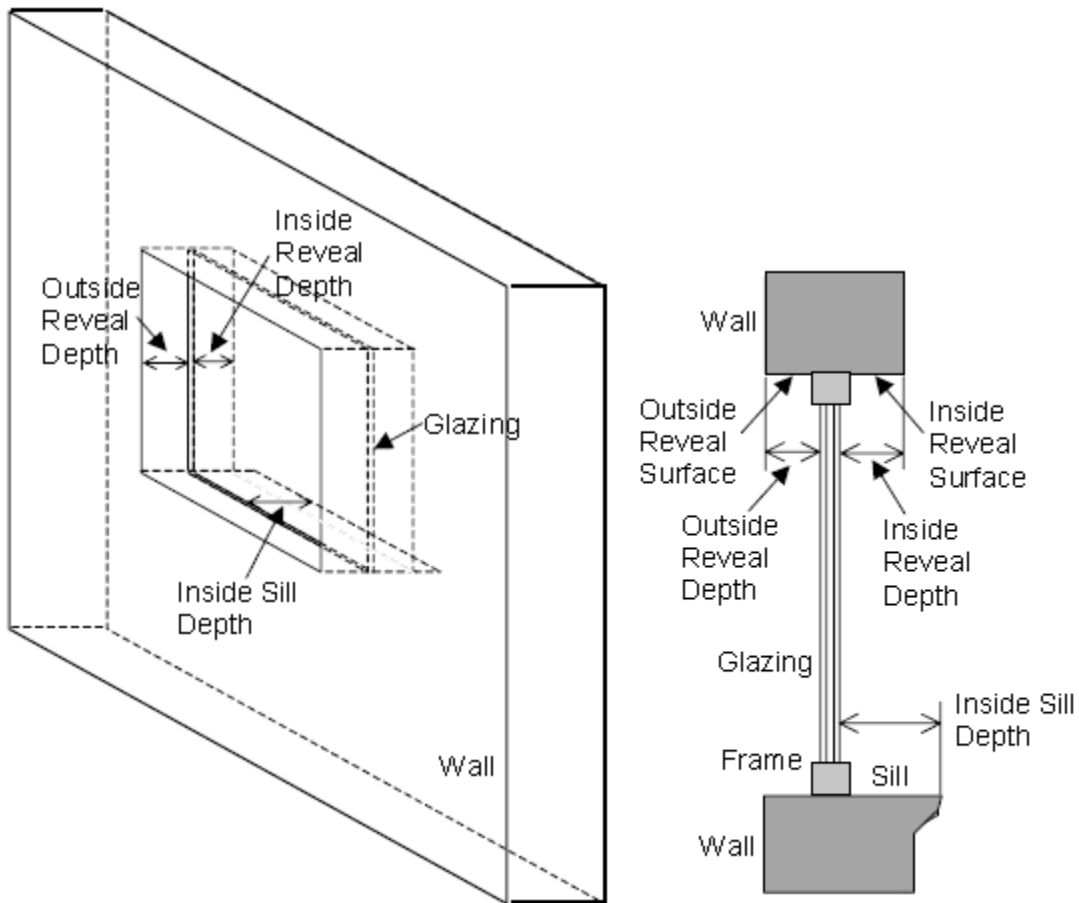

DIVIDERS

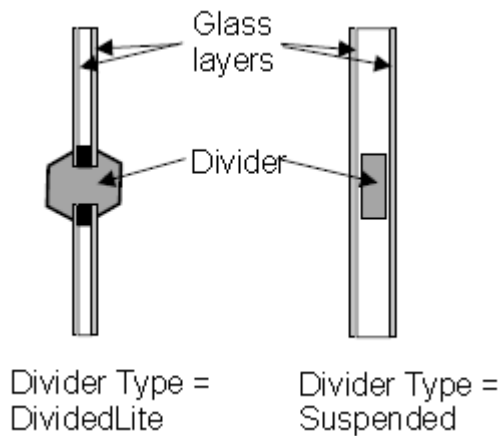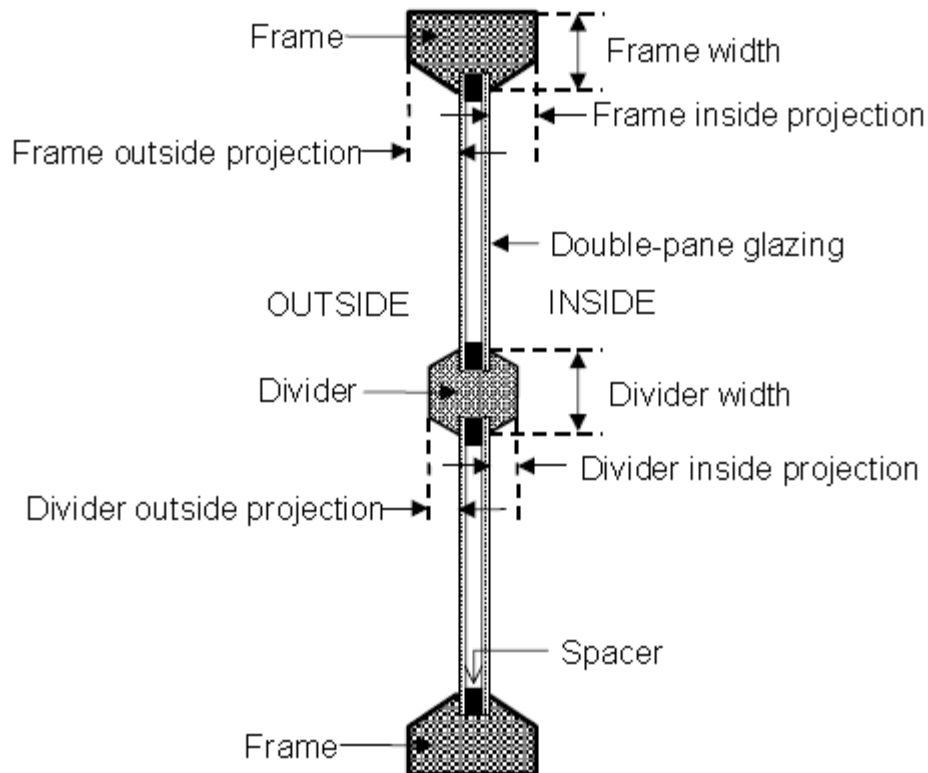

[Openings tab](#) in model data under **External Glazing**, **Internal Glazing** and **Roof Glazing** headers

To include blinds, transparent insulation or electrochromic glazing check the 'Window shading' checkbox.



This displays the data above.

Type


Select the [Window blind](#) component type. There are 4 categories of window blinds:

- [Slat](#)
- [Shade](#)
- [Transparent insulation](#)
- [Electrochromic switching](#) (if you select a blind of this category the position must be 'Switchable').

Position

The window shading devices can be positioned in one of four ways:

- **1-Inside** - the window shading devices is positioned inside the zone.
- **2-Mid-pane** - the window shading device is positioned between the inner pane and the second pane.
- **3-Outside** - the shading devices positioned outside.
- **4-Switchable** - select this option for [electrochromic glazing](#) in which case the outer pane is switched based on the shading control (below).

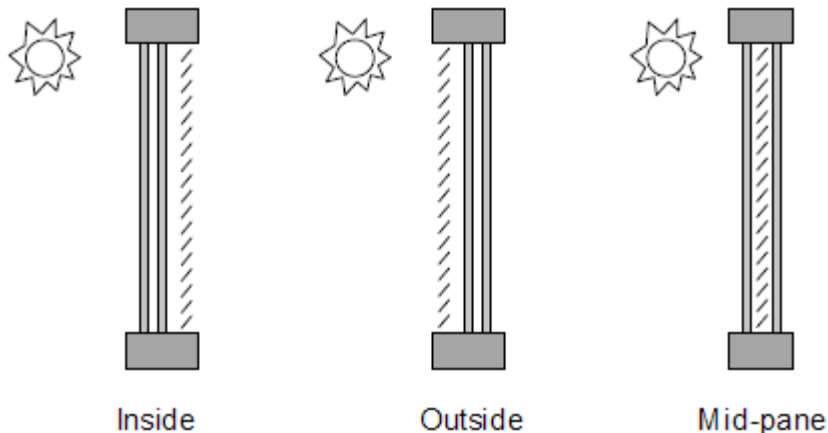

Control type

Control data specifies how the shading device is controlled. It determines whether the shading device is “on” or “off.” For [blinds and shades](#), when the device is “on” it is assumed to cover all of the window except its frame; when the device is “off” it is assumed to cover none of the window (whether “on” or “off” the shading device is assumed to cover none of the wall that the window is on). For [switchable glazing](#), “on” means that the glazing is in the fully-switched state and “off” means that it is in the unswitched state; for example, for electrochromic glazing, “on” means the glazing is in its darkest state and “off” means it is in its lightest state.

The choices for **Shading control type** are the following. *Equivalent EnergyPlus control types* are shown in italics. If SetPoint is applicable its units are shown in parentheses.

1- Always on (*AlwaysOn*) - Shading is always on.

The following six control types are used primarily to reduce zone cooling load due to window solar gain.

2-Daylight (*MeetDaylightIlluminanceSetpoint*) - Used only with Position = **4-Switchable** in zones with

[daylighting controls](#). In this case the transmittance of the glazing is adjusted to just meet the daylight illuminance set point at the first daylighting reference point. Note that the [daylight illuminance set point](#) is specified under [Environmental Control](#) on the Activity tab.

3-Schedule - Shading operation is defined by a schedule.

4-Solar (*OnIfHighSolarOnWindow*) - Shading is on if beam plus diffuse solar radiation incident on the window exceeds SetPoint (W/m² or BTU/hr-ft²).

5-Glare (*OnIfHighGlare*) - Shading is on if the total daylight glare index at the zone's first daylighting sensor from all of the exterior windows in the zone exceeds the maximum glare index specified in the daylighting input for zone.

Note: Glare control requires Lighting control to be switched on in the zone.

6-Outside air temp (*OnIfHighOutsideAirTemp*) - Shading is on if outside air temperature exceeds SetPoint (C or F).

7-Inside air temp (*OnIfHighZoneAirTemp*) - Shading is on if zone air temperature in the previous time step exceeds SetPoint (C or F)

8-Cooling (*OnIfHighZoneCooling*) - Shading is on if zone cooling rate in the previous time step is non-zero.

The following two control types can be used to reduce zone cooling load. They are applicable to any Shading type but are most appropriate for interior or exterior blinds, interior or exterior shades with low insulating value, or switchable glazing.

9-Day cooling and solar + night (*OnNight/OnDayIfCoolingAndHighSolarOnWindow*) - Shading is on at night. Shading is on during the day the solar radiation incident on the window exceeds SetPoint (W/m² or BTU/hr-ft²) and if the zone cooling rate in the previous time step is non-zero.

10-Day cooling and solar (*OffNight/OnDayIfCoolingAndHighSolarOnWindow*) - Shading is off at night. Shading is on during the day when the solar radiation incident on the window exceeds SetPoint (W/m² or BTU/hr-ft²) and if the zone cooling rate in the previous time step is non-zero.

The following three control types can be used to reduce zone heating load during the winter by reducing window conductive heat loss at night and leaving the window unshaded during the day to maximize solar gain. They are applicable to any Shading Type but are most appropriate for interior or exterior shades with high insulating value ("movable insulation"). "Night" means the sun is down and "day" means the sun is up.

11-Night outside low air temp (*OnNightIfLowOutsideTemp/OffDay*) - Shading is on at night if the outside air temperature is less than SetPoint (C or F) and schedule, if specified, allows shading. Shading is off during the day.

12-Night inside low air temp (*OnNightIfLowInsideTemp/OffDay*) - Shading is on at night if the zone air temperature in the previous time step is less than SetPoint (C or F) and schedule, if specified, allows shading. Shading is off during the day.

13-Night heating (*OnNightIfHeating/OffDay*) - Shading is on at night if the zone heating rate in the previous time step exceeds SetPoint (W) and schedule, if specified, allows shading. Shading is off during the day.

The following two control types can be used to reduce zone heating and cooling load. They are applicable to any Shading type but are most appropriate for translucent interior or exterior shades with high insulating value ("translucent movable insulation").

14-Night outside low air temp + day cooling (*OnNightIfLowOutsideTemp/OnDayIfCooling*) - Shading is on at night if the outside air temperature is less than Set point (C or F). Shading is on during the day if the zone cooling rate in the previous time step is non-zero.

15-Night heating + day cooling (*OnNightIfHeating/OnDayIfCooling*) - Shading is on at night if the zone heating rate in the previous time step is non-zero. Shading is on during the day if the zone cooling rate in the previous time step is non-zero.

SetPoint

The setpoint for activating window shading. The units depend on the type of trigger:

- W/m² or BTU/hr-ft² for solar-based controls.
- C or F for temperature-based controls.

[Openings tab](#) in model data under **External Glazing, Internal Glazing and Roof Glazing** headers

The operation of windows can be defined by entering data under Operation headers. The data will depend on the [Natural ventilation model option](#) set:

Calculated Natural Ventilation

The **% Glazing area opens** slider allows you to define the openable window area as a percentage of the total window area. For example enter '20' if 20% of the window area can open.

Note: if [modulation](#) is switched on (it is by default) the glazing opening areas are multiplied by a factor to account for external conditions.

You can also enter a schedule to define the timing of the window operation.

The windows are 'open' when:

$T_{\text{zone_air}} > T_{\text{setpoint}}$ AND $T_{\text{zone_air}} > T_{\text{outside_air}}$ AND the schedule value = 1

The ventilation rate is calculated based on the pressure difference across the opening calculated from wind and stack pressure effects using equations described in [Natural Ventilation Modelling](#).

Scheduled Natural Ventilation

Airflow through *external* windows, vents, doors and holes are not modelled with **Scheduled** natural ventilation because the natural ventilation airflow from outside is explicitly defined using the total [natural ventilation flow rate](#) and operation on the [HVAC](#) tab. *No operation data is entered on the Openings tab for external windows in this case.*

Note: Natural Ventilation can be [overridden to be off](#) on the HVAC tab for both Calculated and Scheduled model options.

3.3.2.3.4 Doors

[Openings tab](#) in model data

DesignBuilder doors are opaque and are added to the model by navigating to the appropriate surface and checking the '[Door fitted](#)' option. This adds a single door replacing one of the windows. Alternatively, for more control over the placement position of the doors, you can go to surface level and draw the doors using the [Draw Door](#) command. On surfaces where custom openings have been defined, any changes to door layout model data on the [Opening tab](#) is ignored.

- [Door Placement](#)
- [Door Operation](#)

Note: if you have drawn custom doors at the surface level then these will be used even if the **Doors fitted** checkbox is not checked. The **Doors fitted** checkbox only controls the automatic generation of doors, not their use in the calculations.

Airflow through Doors: Doors positioned on **external** walls only have an effect on airflow in Simulation calculations when the Natural ventilation building model option is set to Calculated. They have no effect on airflow in Heating and Cooling Design calculations. Doors positioned on **internal** partition walls are used to mix the air between the two adjacent zones when the Scheduled Natural ventilation building model option is set. They also provide an air flow path when the Calculated option is set.

Openings tab in model data under Doors

On surfaces where no custom openings have been defined, you can create doors simply by checking the 'Doors fitted?' options under the External and Internal Doors headers. In this case a single door is positioned on each surface in place of one of the windows in the automatically generated facade layout.

Openings tab in model data under Doors

The operation of doors can be defined by entering data under Operation headers:

- **% Area door opens** - defines the area of the door which opens relative to the total area to give an approximation of the actual opening size and,
- **% Time door is open** - defines the average time the door is in the open position. Accounts for the fact that during occupied periods the door may open and close repeatedly. The average effect

The way this data is used depends on the Natural ventilation model option set:

Calculated

The average door opening size used in the simulation is calculated by multiplying the **% Area door opens** by the **% Time the door is open** by the gross door area. A schedule can be applied to control timing of the opening.

The ventilation rate through the door opening is calculated based on the wind and stack pressure effects.

Scheduled

External door opening is not modelled explicitly with the Scheduled natural ventilation model data setting. Instead, the total natural ventilation flow rate and operation is defined for each zone on the [HVAC tab](#). *No operation data is entered on the Openings tab for external doors.*

Internal doors are modelled using the EnergyPlus 'Mixing' object which mixes air between the two adjacent zones. DesignBuilder uses a very approximate empirical relationship to calculate the mixing flow:

$$\text{Flow (m3/s)} = \text{Door area (m2)} * \% \text{ area door opens} * \% \text{ time door is open} * \text{Farea-flow}$$

where *Farea-flow* is a factor used to obtain the mixing flow from the opening area = 0.1.

A schedule can be applied to control timing of the mixing flow..

3.3.2.3.5 Vents and Holes

[Openings tab](#) in model data

Vents

DesignBuilder vents are used for modelling airflow through openings and are added to the model by navigating to the appropriate surface and checking the [Vents fitted](#) option. This adds a single vent under each of the windows (if the vent spacing is the same as the window spacing). Alternatively, for more control over the placement position of the vents, you can go to surface level and draw the vents using the [Draw vent](#) command. On surfaces where custom openings have been defined, any changes to vent layout model data on the [Opening tab](#) is ignored.

- [Vent Placement](#)
- [Vent Operation](#)

Note: if you have drawn custom vents at the surface level then these will be used even if the **Vents fitted** checkbox is not checked. The **Vents fitted** checkbox only controls the automatic generation of vents, not their use in the calculations.

See also [vent components](#) for more information.

Holes

[Holes](#) are modelled in a similar way to vents with some exceptions:

- Holes must be drawn at surface level
- Airflow through holes is uncontrolled, i.e. the airflow path is active all the time.
- Drawing holes can be used as a way to [merge](#) two zones when the [Merge zones connected by holes](#) Model option is set.
- Holes are used internally with DesignBuilder to model the heat transfer and airflow through [Virtual partitions](#).
- Discharge coefficient of 0.65 is used whereas with vents the vent component defines the discharge coefficient.

VENT MODELLING

Calculated Natural Ventilation (Simulations only)

Each vent is modelled using:

- An EnergyPlus 'Door'. The heat conduction through the vent 'door' component is displayed in results as **Internal Natural vent** and **External Natural vent**.
- An EnergyPlus 'AIRFLOWNETWORK:MULTIZONE:COMPONENT DETAILED OPENING' and other associated AIRFLOW components, providing a controllable flow path. You can define [Vent operation](#).

Scheduled Natural Ventilation (and Design Calcs)

Each vent is modelled using:

- An EnergyPlus 'Door'. The heat conduction through the vent 'door' component is displayed in results

as **Internal Natural vent** and **External Natural vent**.

- Internal vents have an EnergyPlus 'Mixing' object using [parameters](#) set in the [Model options](#) dialog. External vents .

HOLE MODELLING

Calculated Natural Ventilation (Simulations only)

Each hole is modelled using a sub-surface and an airflow connection:

- Sub-surface:
 - If using [1-Minimum shadowing](#) or [2-Full exterior](#) solar distribution the hole is represented using an EnergyPlus 'Door'. In this case the heat conduction through the vent 'Door' component is displayed in results as **Internal Natural vent** and **External Natural vent**.
 - If the [3-Full interior and exterior](#) solar distribution Model option is set then the hole is modelled using a 'perfectly clear' window which transmits solar radiation and visible light.
- EnergyPlus 'AIRFLOWNETWORK:MULTIZONE:COMPONENT DETAILED OPENING' and other associated AIRFLOW components, providing a controllable flow path. You can define [Vent operation](#).

Scheduled Natural Ventilation (and Design Calcs)

Each hole is modelled using a sub-surface and a 'mixing' flow:

- Sub-surface:
 - If using [1-Minimum shadowing](#) or [2-Full exterior](#) solar distribution the hole is represented using an EnergyPlus 'Door'. In this case the heat conduction through the vent 'Door' component is displayed in results as **Internal Natural vent** and **External Natural vent**.
 - If the [3-Full interior and exterior](#) solar distribution Model option is set then the hole is modelled using a 'perfectly clear' window which transmits solar radiation and visible light.
- Internal vents have an EnergyPlus 'Mixing' object using [parameters](#) set in the [Model options](#) dialog. External vents.

[Openings tab in model data under Vents](#)

On surfaces where no custom openings have been defined, you can create vents simply by checking the 'Vents fitted?' options under the External and Internal Vents headers. In this case vents are positioned on each surface using 'Vent spacing' and 'Vent height above floor' in the automatically generated facade layout. Typically, a single vent is positioned under each of the windows (if the vent spacing is the same as the window spacing).

[Openings tab in model data under Vents](#)

The operation of vents can be defined by entering timing data under Operation headers:

The way this data is used depends on the Natural ventilation model option set:

Calculated

A schedule can be applied to control timing of the vents.

The ventilation rate through the vent is calculated based on the wind and stack pressure effects.

Scheduled

External vent opening is not modelled explicitly with the Scheduled natural ventilation model data setting. Instead, the total natural ventilation flow rate and operation is defined for each zone on the [HVAC tab](#). *No operation data is entered on the Openings tab for external vents.*

Internal vents are modelled using the EnergyPlus 'Mixing' object which mixes air between the two adjacent zones. DesignBuilder uses a very approximate empirical relationship to calculate the mixing flow:

$$\text{Flow (m3/s)} = \text{Door area (m2)} * \% \text{ area door opens} * \% \text{ time door is open} * \text{Farea-flow}$$

where *Farea-flow* is a factor used to obtain the mixing flow from the opening area = 0.1.

A schedule can be applied to control timing of the mixing flow..

3.3.2.3.6 Wind Pressure Coefficients

[Openings tab in model data](#)


You can enter wind pressure coefficients (WPC) for wind incidence angles in 45° increments for each surface in the model. DesignBuilder sets up default WPC data for each surface using [Wind Pressure Coefficient template data](#) derived from the [AIVC Applications Guide: A guide to energy-efficient ventilation](#).

3.3.2.4 Lighting Data

[Lighting tab in model data](#)

Templates

You can load generic Lighting data by clicking on the Template option under Lighting Template and then by clicking on the '...' at the right of the line (below).

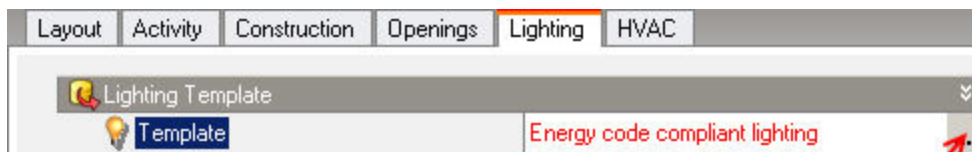

Select generic lighting template

When you make a selection from the list of [Lighting templates](#), data from selected template will be loaded to the model.

With 'Early' gains detail the lighting gains in the space are separated into Task and General lighting. You can also open the:

- [General Lighting](#)

- [Task Lighting](#)
- [Lighting Control](#)

headers to enter lighting details where they are different from those loaded from the template.

When you load lighting data from template, the actual lighting casual gain is calculated by dividing the W/m²/100 lux data in the template by the required [illuminance level](#) as set on the [Activity tab](#). Consequently you should make sure the correct activity data has been loaded in each zone before loading lighting templates. Also, you may need to explicitly load data in each zone by checking each zone in the Target tab of the 'Load data from template' dialog.

Lighting data generates simulation data at the **Zone level**.

3.3.2.4.1 General Lighting

[Lighting tab in model data](#)

General lighting accounts for the main lighting in the room. It is assumed to be able to be replaced by daylight through lighting control, if this option is selected.

Lighting energy

This is typically the maximum electrical power input (in Watts) to lighting in a zone, including ballasts, if present. This value is multiplied by a schedule fraction (see previous field) to get the lighting power in a particular time step.

Note that when you load lighting data from template, the actual lighting casual gain is calculated by dividing the W/m²/100 lux data in the template by the required [illuminance level](#) as set on the [Activity tab](#).


The electrical input to lighting ultimately appears as heat that contributes to zone loads or to return air heat gains. In EnergyPlus this heat is divided into four different fractions. Three of these are given by the input fields Return Air Fraction, Fraction Radiant and Fraction Visible. A fourth, defined as the fraction of the heat from lights convected to the zone air, is calculated by EnergyPlus as:

Convected Fraction = 1.0 – (Return Air Fraction + Radiant Fraction + Visible Fraction)

You will get an error message if Return Air Fraction + Radiant Fraction + Visible Fraction exceeds 1.0. These fractions depend on the type of lamp and luminaire, whether the luminaire is vented to the return air, etc.

Luminaire type

Select from:

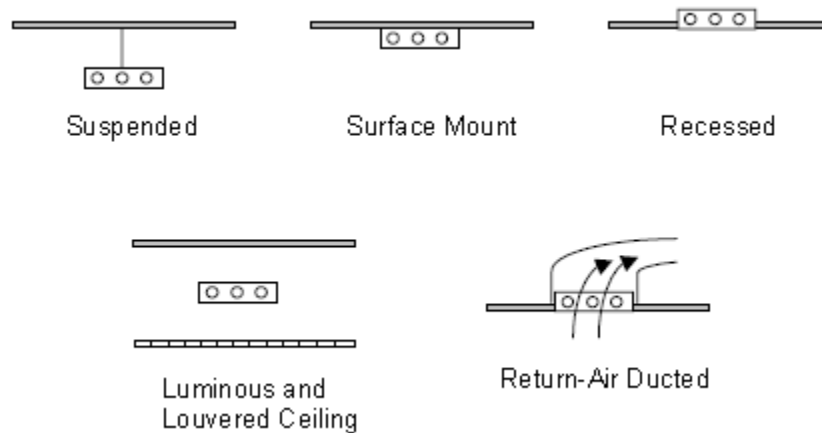

When you select using the drop-down list an appropriate set of defaults for the luminaire type is loaded according to the table below, assuming fluorescent lighting.

Data	1-Suspended	2-Surface Mount	3-Recessed	4-Luminous and Recessed Ceiling	5-Return-air Ducted
Return Air Fraction	0.0	0.0	0.0	0.0	0.54
Radiant Fraction	0.42	0.72	0.37	0.37	0.18
Visible Fraction	0.18	0.18	0.18	0.18	0.18
Convected Fraction	0.40	0.10	0.45	0.45	0.10

Approximate values of Return Air Fraction, Radiant Fraction and Visible Fraction for overhead fluorescent lighting for different luminaire configurations. These values assume that no light heat goes into an adjacent zone. Source: *Lighting Handbook: Reference & Application, 8th Edition, Illuminating Engineering Society of North America, New York, 1993, p. 355.*

Return air fraction

For Return Air Ducted luminaires this is the fraction of the heat from lights that is convected out of the room and into the zone return air (normally into a return plenum). If the return air flow is zero or the zone has no return air system, the program will put this fraction into the zone air. Return Air Fraction is only visible on the screen for **5-Return-air ducted** luminaires.

Radiant fraction

The fraction of heat from lights that goes into the zone as long-wave (thermal) radiation. The program calculates how much of this radiation is absorbed by the inside surfaces of the zone according to the area times thermal absorptance product of these surfaces.

Fraction visible

The fraction of heat from lights that goes into the zone as visible (short-wave) radiation. The program calculates how much of this radiation is absorbed by the inside surfaces of the zone according to the area times solar absorptance product of these surfaces.

Note: selecting an option from the Luminaire type drop-down list loads default Return Air Fraction, Radiant Fraction and Visible Fraction data from the table above.

Fraction convected

The fraction of the heat from lights convected to the zone air is calculated from:

$$\text{Fraction convected} = 1.0 - (\text{Return Air Fraction} + \text{Fraction Radiant} + \text{Fraction Visible})$$

You will get an error message if Return Air Fraction + Fraction Radiant + Fraction Visible exceeds 1.0.

This data is provided on screen for information purposes.

Operation

If 'Internal gains operate with occupancy' under model options is not set General lighting has a specific operation schedule set under General Lighting, otherwise these gains are synchronised with occupancy.

3.3.2.4.2 Task and Display Lighting

[Lighting tab in model data](#)

Task and Display Lighting accounts for lighting used for specific tasks (e.g. desk lamps) or for displaying items (e.g. display lighting for goods in shops). Task and Display Lighting is not offset by lighting control.

The following other data is assumed:

Data	Value
Radiant fraction	0.42
Visible fraction	0.18
Return air fraction	0

Internal gain

Note that when you load lighting data from template, the actual lighting casual gain is calculated by dividing the W/m2/100 lux data in the template by the required [illuminance level](#) as set on the [Activity tab](#).

Operation

If 'Internal gains operate with occupancy' under model options is not set Task lighting has a specific operation schedule set under Task Lighting, otherwise these gains are synchronised with occupancy.

3.3.2.4.3 Lighting Control

A typical perimeter area would be the areas of the zone that are close to a window. By convention perimeter areas are defined as the area within a fixed distance from a normal to the perimeter. In the UK NCM the fixed distance is 6m.

If you wish to create a separate thermal zone to model the different lighting and solar conditions in the perimeter area, you can use the [Offset snap](#) option to draw [Virtual partitions](#).

[Lighting tab in model data](#)

You can control the electric lights according to the availability of natural daylight. When Lighting control is

switched on, illuminance levels are calculated at every time step during the simulation and then used to determine how much the electric lighting can be reduced. The daylight illuminance level in a zone depends on many factors, including sky condition, sun position, photocell sensor positions, location, size, and glass transmittance of windows, window shades and reflectance of interior surfaces. Reduction of electric lighting depends on daylight illuminance level, illuminance set point, fraction of zone controlled and type of lighting control.

LIGHTING AREAS

When lighting control is switched on, by default all of the lights in the zone are controlled by the first (main) lighting sensor and **% Zone Controlled by Lighting Area 1** has value 100%. Some larger spaces may have 2 **Lighting Areas**, each area having its own lighting sensor and covering its own area of the zone. The area is not defined geometrically in DesignBuilder - it simply reflects the fraction of the total General overhead electric lighting that can be dimmed by its lighting sensor.

You may wish to use 2 Lighting Areas for these situations:

1. A large zone may need more than one sensor if the output from main sensor does not represent the daylight available in other parts of the zone. For example a zone having facades in both South and East directions would need 2 sensors (and 2 Lighting Areas), one on each facade.
2. The zone has 2 different activity areas which have been lumped into a single zone for convenience. The 2 activities have different visual illuminance requirements and the Lighting Areas for both can benefit from daylighting through daylighting control. An example would be a zone having both office and recreational space. The office space may have a lighting requirement of 500 lux and the recreational space may need 300 lux.

Note 1: if the zone has a different sensor for the back half (for example) you should check the **Second light sensor** option.

Note 2: if the zone has **perimeter and core areas**, perimeter lights having daylight control and core lights not, then you only need to use a single lighting sensor. The fact that the core lights are not controlled can be modelled using **% Zone Controlled by Lighting Area 1**. If 60% of the lights in the zone are located in the core zone and do not have daylight control then set **% Zone Controlled by Lighting Area 1** to 40.

Perimeter Area

Daylight illuminance on the 'working plane' is calculated for up to two locations in each zone during the simulation and [illuminance setpoints](#) are maintained where necessary by [electric lighting](#). The sensor is always located in the [working plane](#) which, by default, is 0.8m above the floor. By default, when lighting control is switched on, a single photo sensor monitors the daylight illuminance at the first sensor location and controls the lights for the whole of the zone. You can however set up 2 **Lighting Areas** in each zone, by checking the **Second lighting area** check box. In this case you can set a target illuminance for the second lighting area separately and also define the percentage of the zone covered by Lighting Area 2.

Note 1: the floor area covered by the 2 sensors does not need to add to 100%. The lights in the remaining floor area operate without daylight control.

Note 2: the target illuminance for Lighting Area 1 is set on the Activity tab under [Environmental Control](#).

If there is only one lighting area then a percentage equal to

$$100 - (\% \text{Zone covered by Lighting Area 1})$$

is assumed to have no lighting control..

% Zone Controlled by Lighting Area 2

The fraction of the zone floor-area whose electric lighting is controlled by the daylight illuminance on the second sensor. This data is required if Lighting Area 2 is being used. A percentage equal to

$$100 - [\%Zone\ Controlled\ by\ Lighting\ Area\ 1] - [\%Zone\ Controlled\ by\ Lighting\ Area\ 2]$$

is assumed to have no lighting control (i.e. in this uncontrolled area of the space, the lights operate purely according to the schedule without any dimming/switching).

PROCEDURE


The procedure for introducing the lighting control is:

1. Check the **Lighting Control On** checkbox (at building level if all zones are to have lighting control).
2. Select the type of control as described below.
3. [Position the first sensor](#) in each zone having lighting control. The z-position is set by the [Working plane height](#) on the Advanced tab of the Model options dialog.
4. Set the **% Zone covered by Lighting Area 1**. If all the lights in the zone are in Lighting Area 1 (i.e. they are controlled by the 1st (main) lighting sensor) then enter 100%.
5. If there are two lighting areas then [position the second sensor](#).
6. Set the **% Zone covered by Lighting Area 2**. If all the lights in the zone are in Lighting Area 2 (i.e. they are controlled by the 2nd lighting sensor) then enter $100 - \%Zone\ covered\ by\ Lighting\ Area\ 1$.

Note: by default the main lighting sensor is positioned in the geometric centre of the zone. It is important that you check the position of all lighting sensors to obtain accurate results. For example, if the lighting sensor is positioned right next to a window receiving large amounts of daylight, the lighting sensor will signal 'enough daylight' even if the rest of the zone is only dimly lit and electric lighting energy will be under-estimated (daylight savings over-estimated).

Continuous Control

With **Continuous** control, the overhead lights dim continuously and linearly from maximum electric power, maximum light output to minimum electric power, minimum light output as the daylight illuminance increases. The lights stay at the minimum point with further increase in the daylight illuminance.

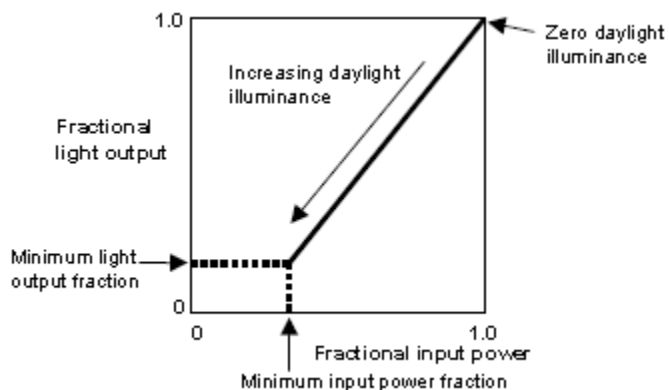

The **Minimum input power fraction** for **Continuous** control type is the lowest power the lighting system can dim down to, expressed as a fraction of maximum input power. For **Continuous/off** lighting control, this is the power fraction reached just before the lights switch off completely.

The **Minimum output fraction** for **Continuous** control type, is the lowest lighting output the lighting system can dim down to, expressed as a fraction of maximum light output. This is the fractional light output that the system produces at minimum input power. For **Continuous/off** lighting control, this is the power fraction reached just before the lights switch off completely.

Note: **Continuous** control provides an idealised lighting control mechanism which can be useful for calculating upper limits on the potential for savings using natural daylight.


Continuous/Off Control

Continuous/off control is the same as continuous control except that the lights switch off completely when the minimum dimming point is reached.

Stepped Control

Stepped control allows you to switch lighting on/off according to the availability of natural daylight in discrete steps. Whereas the Continuous control described above provides precisely controlled illuminance by dimming the lights, the stepped control models blocks of lights switching on/off according to the electric lighting requirement.

The electric power input and light output vary in discrete, equally spaced steps. The number of steps can be set.

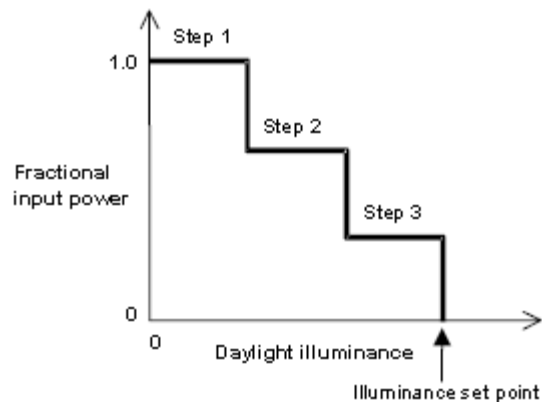

See also [EnergyPlus Daylight Calculations](#).

GLARE

Maximum allowable glare index

If a daylight zone has windows with [Window shading devices](#), the shades will be deployed if the daylight glare at sensor 1 exceeds the value of Maximum allowable glare index. To get this type of glare control you have to specify [Shading control type](#) as **5-Glare** for one or more windows in the zone (see [Window Shading Control](#)).

View angle relative to y-axis

Daylight glare from a window depends on occupant view direction. It is highest when you look directly at a window and decreases as you look away from a window. This field specifies the view direction for calculating glare. It is the angle, measured clockwise in the horizontal plane, between the positive y-axis and the occupant view direction, i.e. it is the bearing of the persons line of sight. For example, with [Site orientation](#) = 0, in the Northern Hemisphere, 90 = Facing East, 180 = Facing South etc).

ALGORITHMS


DesignBuilder uses the EnergyPlus DAYLIGHTING:DETAILED object to model the control of electric lighting according to daylight illumination levels. You can find more information on the algorithms used in the EnergyPlus documentation.

3.3.2.5 HVAC Data

HVAC tab in model data

Templates

You can load generic HVAC data by clicking on the Template option under HVAC Template and then by clicking on the '...' at the right of the line (below).

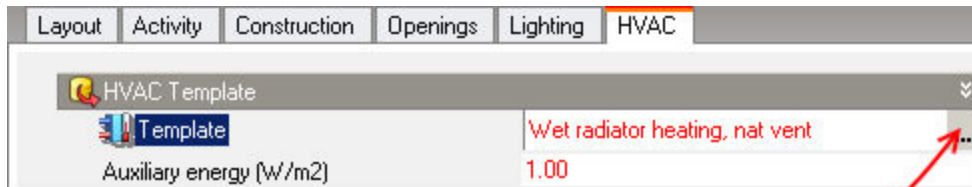

Select generic HVAC template

When you make a selection from the list of [HVAC templates](#), data from selected template will be loaded to the model.

You can also open headers to enter HVAC details where they are different from those loaded from the template:

- [Mechanical Ventilation](#),
- [Heating](#),
- [Cooling](#),
- [Natural Ventilation](#),
- [Air Temperature Distribution](#)
- [Domestic Hot Water \(DHW\)](#)
- [Plenums](#)

See [Compact HVAC System Types](#) for details on Compact HVAC systems.

System type

When using [Compact HVAC](#) data, the HVAC Type is displayed beneath the Template. This cannot be edited directly - if you want to choose a different HVAC system type you should do this by selecting an appropriate template.

Auxiliary energy

When using [Simple HVAC](#) data, the Auxiliary energy can be entered as kWh/m2/year (SI units) or Btu/ft2 (IP units). Auxiliary energy accounts for any additional energy consumption due to fans, pumps, control gear etc. It is specified per floor area and is modelled as being consumed 24/7 during the simulation.

SYSTEM AVAILABILITY

When using Compact HVAC data, the system availability schedule can be defined to control the overall operation of the HVAC system, including heating, cooling and ventilation. This schedule is used at the building level for **2-Unitary multizone**, **3-VAV** and **5-CAV** systems and at the zone level for **1-Unitary single zone** and **5-Fan coil**.

System availability schedule


The **System availability schedule** defines the operation of the air system fans. For Compact Unitary systems the [Fan operation](#) mode can be set to **2-Cycling** in which case air distribution only occurs when there is heating or cooling demand.

Night cycle control (VAV/CAV)

The Night cycle control manager is used for cycling on CAV and VAV air systems when one or more zones become too hot or too cold. The usual situation is that the central air handler is turned off at night. However if the building gets too cold there might be condensation on the walls and other damage. Thus the control system is usually programmed to turn the system on if one control thermostat or any thermostat shows a zone temperature of less than a night time set point. Similarly there might be a concern about a building getting too hot. Again the control system is programmed to turn the air handler back on if one or any zone temperature exceeds a night time cooling set point. This data gives the user flexibility in determining how the night time on/off decision will be made. The manager can look at the temperature in one **Night cycle control zone** or it can sample all the zones connected to the air handler (**Cycle on any**).

Enter the system behavior during times when the **System availability schedule** (above) is zero (off). The possible inputs are:

- **Stay Off** - the system will remain off, no matter how hot or cold the zones may be.
- **Cycle on any** - if any zone served by this system has an air temperature outside the cooling or heating set points the central fan will turn on even though the System availability schedule indicates the fan is off.
- **Cycle on control zone** - same as **Cycle on any** except the availability manager looks at the temperature in only the zone specified by the **Night cycle control zone**. Note that when using this option you must select one zone as being the **Night cycle control zone**. Do this by checking the option at zone level in the zone used as the control zone (below).

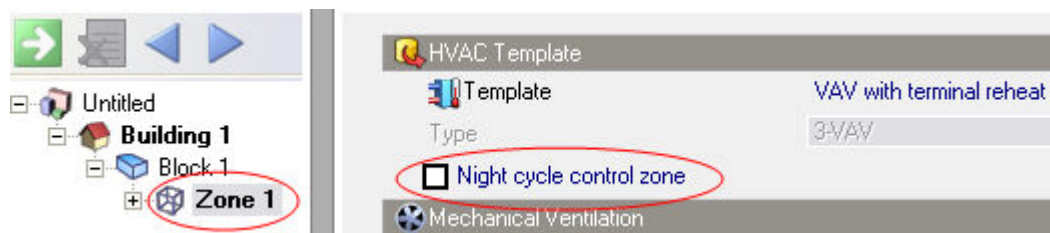

The default is **1-Stay off**.

The On cycle period is the time for which the system will run after it has cycled on. This is hard-set to 1 hour.

3.3.2.5.1 Compact HVAC System Types

[HVAC tab in model data](#)

Compact HVAC systems are a powerful entry way into EnergyPlus HVAC modelling because they allow you to model HVAC systems in quite some detail without the need to draw an air flow network and deal with the complexities of control systems and node connections. You can model many common HVAC systems including VAV with terminal reheat, VAV with PIU, Constant volume, Fan coil units, Packaged DX units and Mechanical ventilation.

Simulations are carried out on detailed HVAC component models automatically generated from the compact descriptions.

When the HVAC model option is set to Compact, there are 5 HVAC system types:

- [Unitary single zone](#)
- [Fan Coil Units](#)
- [Unitary multizone](#)
- [VAV](#)
- [CAV](#)

Rules

1. Only one CAV, VAV or Unitary multizone system can be defined per building.
2. If you select Unitary multizone, CAV or VAV at zone level, then the same selection must be made at building level.
3. You can enter Fan coil and Unitary single zone systems in any zone without concern for the selection at building level.
4. Up to 400 zones can be modelled simultaneously using Compact HVAC systems. It is possible to model more zones than this by making changes to the [IDD file](#) (contact DesignBuilder or EnergyPlus Support desks for more information about this).
5. Pumps are modelled using typical default data.
6. Unitary multizone and Fan coil units cannot be used in same building.
7. Fan coil units are incompatible with [Calculated](#) natural ventilation.

The Unitary single zone option allows you to model simple single constant volume direct-expansion (DX) based HVAC configurations with several different heating options. Direct expansion includes single packaged rooftop systems commonly seen in commercial buildings and split systems commonly seen in residential buildings. In this system, local cooling coils are used to condition air which is supplied to the zone through a local air delivery system. Air delivery can be set up to ensure minimum fresh air supply and there are options for economisers to provide free cooling and heat recovery.

Note: With Unitary single zone systems each zone has its own 'AHU' and so, unlike the **Unitary multizone, CAV** and **VAV** Compact HVAC types, Unitary single zone systems take all their data from the zone level.


System availability

You can model unitary single zone systems with or without outside air. If you include [Air distribution](#) with your Unitary single zone system then heating and cooling will only operate when the [Air distribution operation schedule](#) is on.

If you do not want to include outside air in your system, you should uncheck the Mechanical ventilation

'On' check box. In this case heating/cooling availability is determined entirely from the heating/cooling operation schedules under the [Heating](#) and [Cooling](#) headers.

Unitary Single Zone Compact HVAC Airflow Schematic

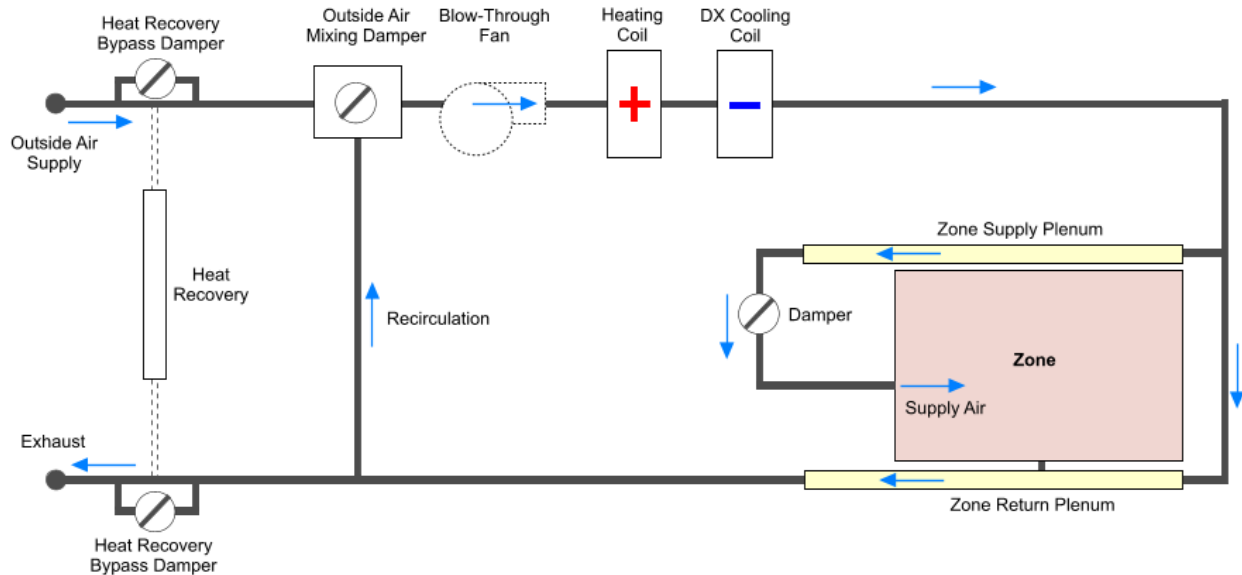

Notes:

1. The Unitary Single Zone system supplies one zone only.
2. The diagram shows the zone with its *Zone* supply and return plenums. These are optional as are Heat recovery, Cooling coil, Heating coil.

Technical EnergyPlus

EnergyPlus needs both the heating coil and cooling DX coil to be defined so even if heating or cooling is not selected in the input, DesignBuilder will include both coils in the IDF data supplied to EnergyPlus and schedule the appropriate coil to be off.


The Fan coil unit Compact option simulates a 4 pipe fan coil unit with hot water heating coil, chilled water cooling coil, and an outside air mixer.

You can model Fan coil unit systems with or without outside air. If you include [Mechanical ventilation](#) with your Fan coil unit system then heating and cooling will only operate when the [Mechanical ventilation operation schedule](#) is on.

If you do not want to include outside air in your system, you should uncheck the Mechanical ventilation 'On' check box. In this case heating/cooling availability is determined entirely from the heating/cooling operation schedules under the [Heating](#) and [Cooling](#) headers.

Unlike the [Unitary multizone](#) and [CAV](#) and [VAV](#) Compact HVAC types, Fan coil unit zone systems take all their data from the zone level.

Fan Coil Compact HVAC Airflow Schematic

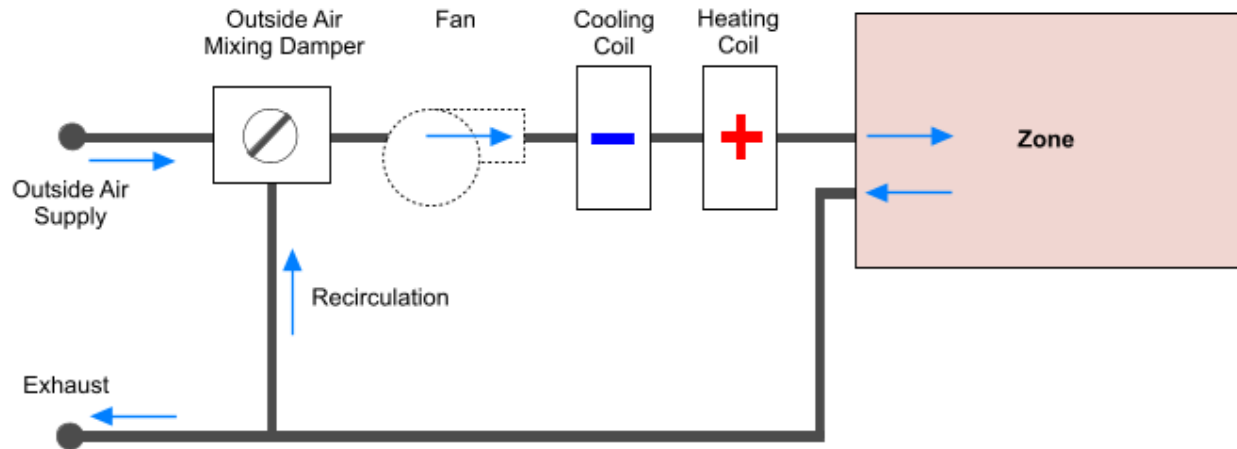

Notes:

1. The Fan Coil Unit system supplies one zone only.
2. Cooling coil and Heating coil are optional.

Note 1: Fan coil supply fans run continuously at full speed whenever the availability schedules are > 0 so fan coil outside air flow can be 'fully on' or 'fully off' but cannot reduce to fractional values in between. You may therefore get higher outside air delivery rates than with other systems if you are using [Schedules](#) and your Mechanical ventilation operation schedule has fractional values.

Limitations

1. Fan coil units cannot be used in the same simulation as Unitary multizone Compact HVAC type.
2. Outside air flow rate is either off, or on at a fixed flow rate depending on the value of the Fan operation schedule..
3. Fan coil units cannot incorporate economisers and variable speed fans.

Technical EnergyPlus


EnergyPlus needs both the heating coil and cooling coil to be defined so even if heating or cooling is not selected in the input, DesignBuilder will schedule the appropriate coil to be off to mimic a 2-pipe system.

The Unitary multizone option allows you to model constant volume direct-expansion (DX) based HVAC configurations with several different heating options. Direct expansion includes single packaged rooftop systems commonly seen in commercial buildings and split systems commonly seen in residential buildings. In this system, central heating and cooling coils are used to condition air which is delivered to the each of the zones in the system through an air delivery system. Air delivery can be set up to ensure minimum fresh air supply and there are options for economisers to provide free cooling and heat recovery.

For a multizone system, only one zone is specified as the control zone. The thermostat is located in this control zone as set by the 'Thermostatic control zone for unitary system' at the top of the HVAC tab at zone level. So when using the system you should be careful to locate the thermostat in a zone which will have a representative temperature for the whole building, otherwise some zones will become over/under heated/cooled.

Only one Unitary multizone system can be defined per building and it can serve up to 400 zones.

Unitary Multizone Compact HVAC Airflow Schematic

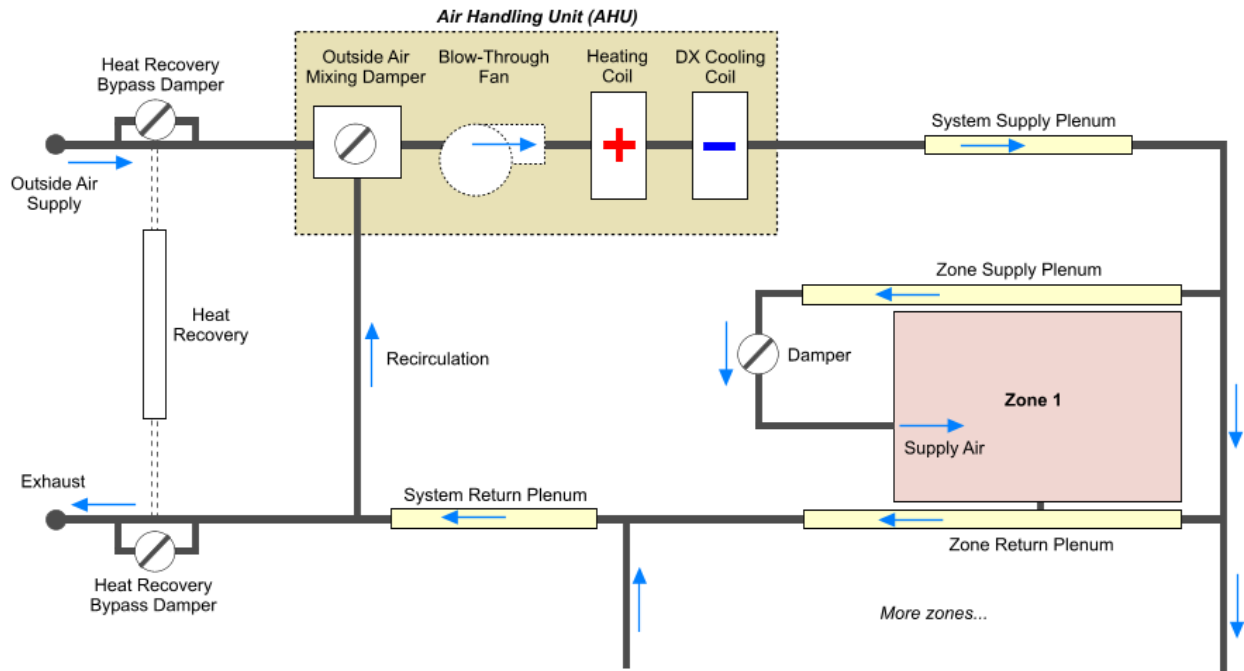

Notes:

1. The AHU is illustrated connected to a single zone. Up to 400 zones can be served by the Unitary Multizone AHU.
2. The diagram shows each zone with its Zone supply and return plenums and also System supply and return plenums. These are optional.
3. Also optional are Heat recovery, Cooling coil, Heating coil.

Limitations

1. The Compact HVAC type must be set to Unitary multizone at building level and in all zones which are part of the system. Other zones can have HVAC type **Unitary single zone** or **Fan coil units** but not **VAV** or **CAV**.
2. Unitary multizone cannot currently be used in the same simulation as Fan coil unit Compact HVAC type.

Technical EnergyPlus


EnergyPlus needs both the heating coil and cooling DX coil to be defined so even if heating or cooling is not selected in the input, DesignBuilder will include both coils in the IDF data supplied to EnergyPlus and schedule the appropriate coil to be off.

The VAV option allows you to model Variable Air Volume (VAV) HVAC configuration with optional preheat, main heating coils and reheat and several different heating coil options. You can select series or parallel fan powered terminal units (also known as powered induction units or PIU). There are options to control the air distribution system in various ways including the ability to ensure minimum fresh air delivery to each zone, set VAV box minimum flow fraction and various outside air options including an economiser to provide free cooling when appropriate. You can also model heating and cooling coil temperature reset.

Only one VAV system can be defined per building and it can serve up to 400 zones.

Note: the Compact HVAC type must be set to **VAV** at building level and in all zones which are part of the VAV system. Other zones can have HVAC type **Unitary single zone** or **Fan coil units** but not **Unitary multizone** or **CAV**.

VAV Compact HVAC Airflow Schematic

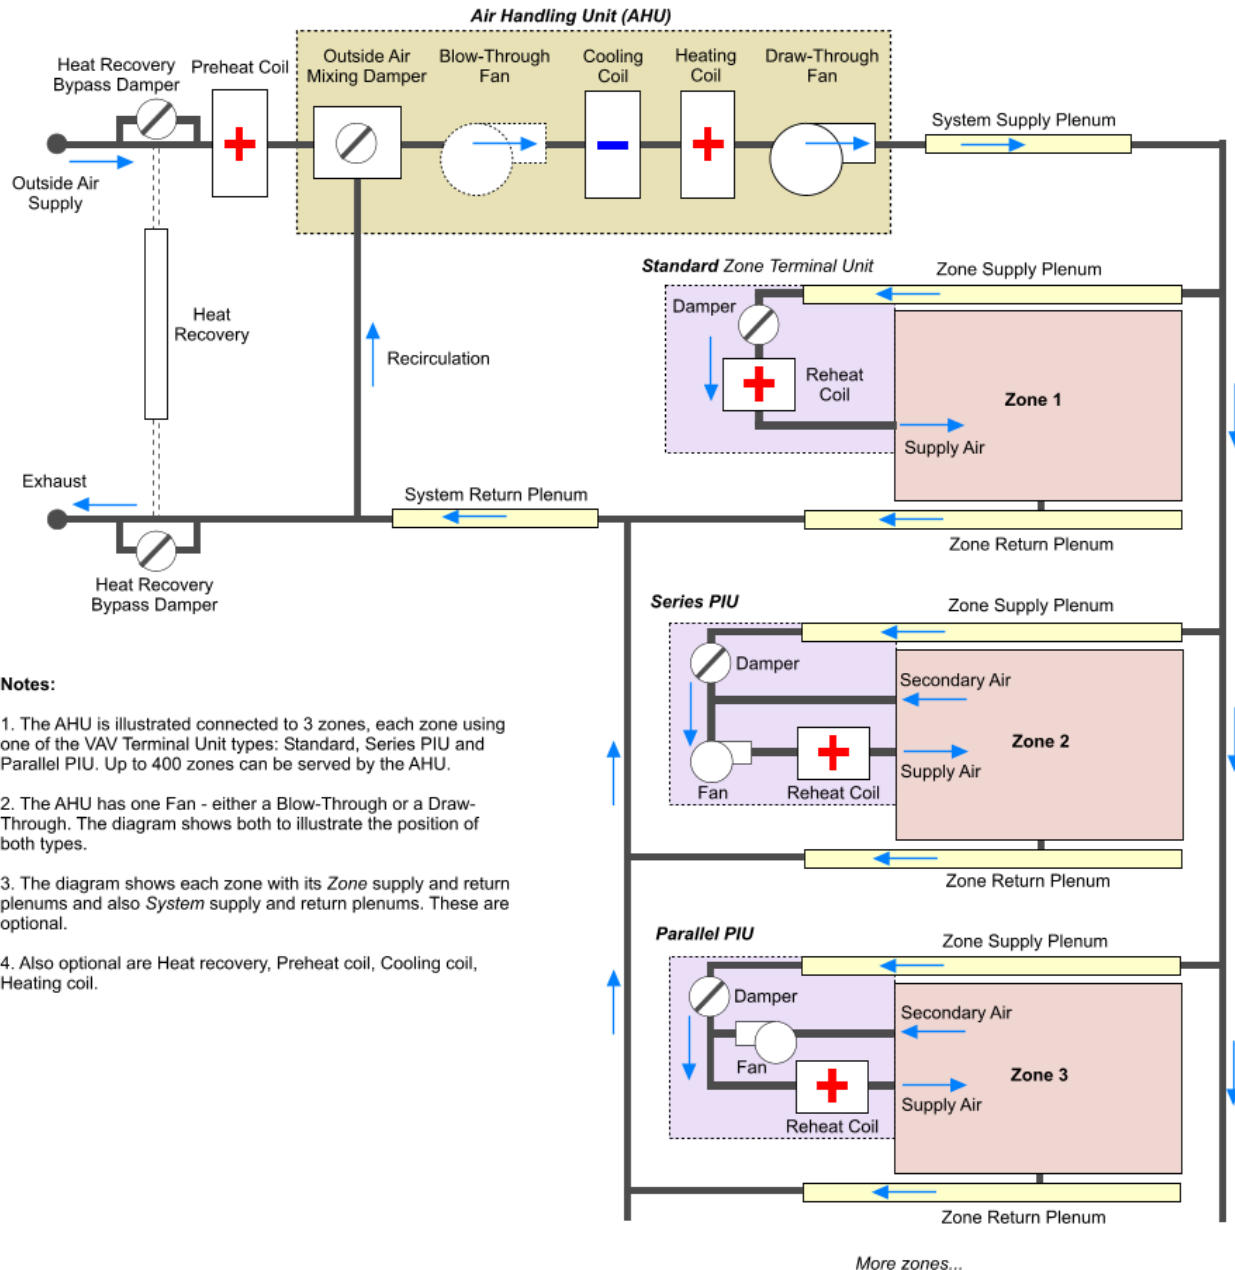

Notes:

1. The AHU is illustrated connected to 3 zones, each zone using one of the VAV Terminal Unit types: Standard, Series PIU and Parallel PIU. Up to 400 zones can be served by the AHU.
2. The AHU has one Fan - either a Blow-Through or a Draw-Through. The diagram shows both to illustrate the position of both types.
3. The diagram shows each zone with its *Zone* supply and return plenums and also *System* supply and return plenums. These are optional.
4. Also optional are Heat recovery, Preheat coil, Cooling coil, Heating coil.

See also [Zone Terminal Units](#) for more on VAV systems.


The CAV option allows you to model Constant Air Volume HVAC configuration with optional preheat, main AHU heating coils and zone terminal reheat and several different heating coil options. There are options to control the air distribution system in various ways including the ability to ensure minimum fresh air

delivery to each zone, set various outside air options including an economiser to provide free cooling when appropriate and heating and cooling coil temperature reset .

Only one CAV system can be defined per building.

Note: the Compact HVAC type must be set to **CAV** at building level and in all zones which are part of the CAV system. Other zones can have HVAC type **Unitary single zone** or **Fan coil units** but not **Unitary multizone** or **VAV**.

CAV Compact HVAC Airflow Schematic

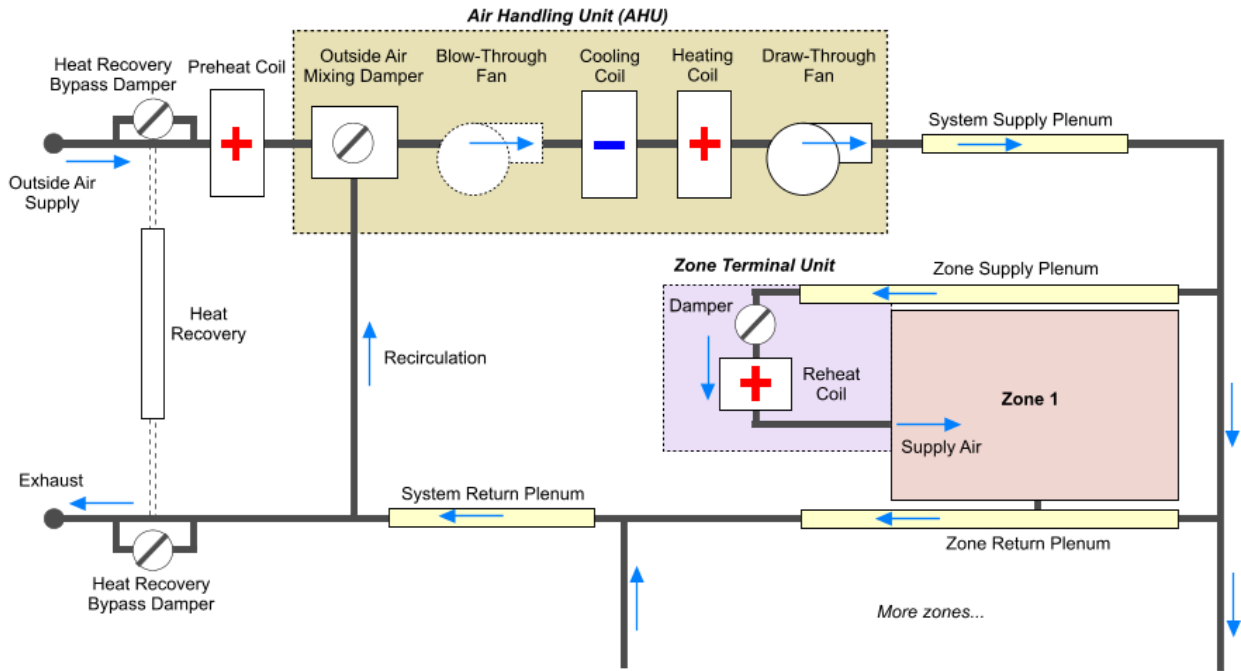

Notes:

1. The AHU is illustrated connected to a single zone. Up to 400 zones can be served by the CAV AHU.
2. The AHU has one Fan - either a Blow-Through or a Draw-Through. The diagram shows both to illustrate the position of both types.
3. The diagram shows each zone with its Zone supply and return plenums and also System supply and return plenums. These are optional.
4. Also optional are Heat recovery, Preheat coil, Cooling coil, Heating coil.

See also [Zone Terminal Units](#) for more on VAV systems.

3.3.2.5.2 Mechanical Ventilation and Air Distribution

HVAC tab in model data

Check the mechanical ventilation checkbox to indicate that outside air and/or recirculated air is delivered to the zone. You can use this setting to define mechanical ventilation and air delivered through centrally

ducted air conditioning systems. Simple and Compact HVAC options share many of the same data fields. Data which applies only to Compact systems is indicated in the text below.

Note that **Mechanical Ventilation** data refers to the fan-powered air delivery through the main HVAC system and not a separate mechanical ventilation system.

See also:

- [Outside Air](#)
- [Fans](#)
- [Economisers](#)
- [Heat Recovery](#)
- [Plenums](#)
- [VAV Terminal Units](#)

HVAC tab in model data under Mechanical Ventilation header

You can set the amount, timing and control of outside air delivery through the HVAC air distribution system on the HVAC tab.

- **Outside air requirement** data is set at the **zone** level on the HVAC tab for all HVAC configurations and options.
- **Outside air flow control through the AHU** (when using **2-Unitary multizone**, **3-VAV** and **5-CAV** Compact HVAC) is set at **building** level on the HVAC tab.
- **Outside air flow control through zone units** (**1-Unitary single zone** and **4-Fan coil** Compact HVAC) is set at **zone** level on the HVAC tab with the rest of the zone unit data.

The **Mech Vent + Nat Vent + Infiltration** data can displayed on the [Heating design](#), [Cooling design](#) and [Simulation](#) screens when you select **1-All** or **3-Comfort** data. This is the sum of fresh air delivered through the HVAC system, infiltration and natural ventilation outside airflow in air changes per hour (ac/h) and when used together with the other environmental output it can be very useful in checking for occupant discomfort.

Outside air definition method

Defines the method used to set the maximum **outside air** delivery rate. The options are:

- **1-By zone** - enter the zone **outside air** delivery rate in air changes per hour in the control directly below. The air flow rate in m3/s is calculated from the ac/h data using:

$$\text{m3/s} = \text{ac/h} \times \text{ZoneVolume} / 3600$$

where `ZoneVolume` is the actual air volume of the space calculated according to Model options for [excluding floor/ceiling constructions](#).

Note: this zone volume may be different from the value used for the purposes of calculating air flow rates for [infiltration](#) which uses the *total* zone volume.

- **2-Min fresh air (Per person)** - maximum natural ventilation rate is defined using [Minimum fresh air requirements](#) per person as set on the [Activity](#) tab. The air flow rate in m3/s is calculated as:

$$\text{m3/s} = \text{MinFreshAir} \times \text{NumberPeople} / 1000$$

`NumberPeople` = Occupancy density (people / m2) * Zone floor area (m2).

MinFreshAir is the minimum fresh air rate per person (l/s/person or CFM).

- **3-Min fresh air (Per area)** - maximum natural ventilation rate is defined using [Minimum fresh air requirements](#) as set on the [Activity](#) tab. The air flow rate in m3/s is calculated as:

$$\text{m3/s} = \text{l/s-m2} \times \text{ZoneFloorArea} / 1000$$

where ZoneFloorArea is the actual floor area of the space.

MinFreshAir is the minimum fresh air rate per floor area (l/s-m2 or CFM/ft2).

- **4-Min fresh air (Sum per person + per area)** - maximum natural ventilation rate is defined using [Minimum fresh air requirements](#) for both as set on the [Activity](#) tab. The air flow rate in m3/s is calculated as:

$$\text{m3/s} = (\text{l/s-m2} \times \text{ZoneFloorArea} + \text{MinFreshAir} \times \text{NumberPeople}) / 1000$$

where ZoneFloorArea is the actual floor area of the space.

MinFreshAir is the minimum fresh air rate per floor area (l/s-m2 or CFM/ft2).

NumberPeople = Occupancy density (people / m2) * Zone floor area (m2).

MinFreshAir is the minimum fresh air rate per person (l/s/person or CFM).

- **5-Min fresh air (Max per person and per area)** - maximum natural ventilation rate is defined using [Minimum fresh air requirements](#) for both as set on the [Activity](#) tab. The air flow rate in m3/s is calculated as:

$$\text{m3/s} = \text{Maximum of } (\text{l/s-m2} \times \text{ZoneFloorArea} / 1000) \text{ and } (\text{MinFreshAir} \times \text{NumberPeople} / 1000)$$

where ZoneFloorArea is the actual floor area of the space.

MinFreshAir is the minimum fresh air rate per floor area (l/s-m2 or CFM/ft2).

NumberPeople = Occupancy density (people / m2) * Zone floor area (m2).

MinFreshAir is the minimum fresh air rate per person (l/s/person or CFM).

Outside air flow rate

Enter the minimum zone **outside air** delivery rate in air changes per hour when **Outside air definition method** (above) is **1-By zone**.

The actual minimum amount of outside air entering the AHU can be modified by the **Minimum AHU outside air requirement schedule** (below).

Note: in Compact HVAC systems, the *total* mixed air flow rate into the zone is calculated by EnergyPlus and will often be higher than the outside air flow rate due to the mixing of recirculated air to provide enough airflow to delivery any additional heating/cooling.

Minimum AHU outside air requirement schedule

You can modify the total outside airflow using the **Minimum AHU outside air requirement schedule**. Whatever the outside air flow would have been without the schedule is multiplied by the current schedule value. So, for example, if you select a schedule which is always 0.5, then the system will supply half the outside air flow at all times vs. the same run without the schedule. You can also use this schedule to switch off outside air during unoccupied periods.

Maximum supply air flow rate

The **maximum supply air flow rate** is the total flow rate of air entering the zone (not necessarily all fresh air). It can be defined at the zone level when using Compact HVAC or it can be left in the default state (

Auto), in which case the maximum supply air flow rate is calculated based only on the maximum heating and cooling capacities.

This data is available at the zone level when using Unitary single zone, Unitary multizone or VAV Compact HVAC and the [plant sizing](#) options **Autosize when not set** or **Manual**.

System availability schedule

The **System availability schedule** defines the operation of the air system fans. For Compact Unitary systems the Fan operation mode (below) can be set to **2-Cycling** in which case air distribution only occurs when there is heating or cooling demand.

OUTSIDE AIR MIXING

This data is defined for CAV/VAV air handling units (AHU) at building level.

Outside air mixing

Select the way outside air is used:

- **1-Recirculation** - the outside airflow supply to the AHU is mixed with recirculated return air from the zones. This is done to save energy often in conjunction with an economiser to ensure that optimal use is made of outside air. When [heat recovery](#) is used with the **1-Recirculation** outside air mixing option, the [economiser](#) must be switched on selected in the interface for the heat recovery to be by-passed.
- **2-Full fresh air** - the airflow into the AHU is 100% outside air, without any recirculation. This is modelled in EnergyPlus by setting the supply airflow rate to the outside air flow rate. Note that when using this option, fixing the supply air flow rate to the outside air rate will in many cases mean that the system will not be capable of meeting the design cooling load. To increase the maximum cooling capacity of a Full fresh air VAV/CAV system you can increase the outside air flow rate (such systems could be very inefficient in energy use without heat recovery). When [heat recovery](#) is used with the **2-Full fresh air** outside air mixing option, the heat recovery is by-passed when this is advantageous in reducing AHU cooling coil loads. The heat recovery also operates when the outside air temperature is less than 12°C.

Outside air control minimum flow type

This option allows you to specify the way minimum outside air flow rate is controlled for **3-VAV** and **5-CAV** Compact HVAC types when the **Outside air mixing type** (above) is **1-Recirculation**:

- **1-Fixed** - the minimum outside air flow rate is fixed as set above no matter what the actual system flow rate is. In practice even with 'Fixed' outside air control minimum it is possible for the outside air flow rate into individual zones to be slightly different from the requested value. This is because the minimum outside air is controlled at the AHU level to ensure that the total fresh air entering the AHU is the total required for the building (the sum of the individual zone outside air requirements). But depending on the cooling loads in each zone, some zones will require more supply air to meet the cooling load than others. So the total fresh air entering the building will be correct but the distribution around the building may not be perfectly maintained.
- **2-Proportional** - the minimum outside air flow rate varies in proportion to the total system air flow rate.

The minimum outside air flow rate through the AHU outside air inlet is automatically calculated as the sum of the individual zone ventilation requirements. This is the 'design minimum'. During the simulation, 'minimum' and 'maximum' represent the limits for economizer operation. If there is no economizer, then the minimum flow of outside air is delivered. If **1-Fixed** is selected, then this value will remain fixed

(unless the total VAV system flow rate falls below this value, in which case, the system will deliver 100% outside air at whatever the system flow rate is). If, **2-Proportional** is specified, then the operating minimum falls as system flow rate falls. This simulates a typical system with a fixed lower stop on the outside air supply damper. Delivering **1-Fixed** requires enhanced control systems.

Note: To ensure minimum outside air is delivered to all zones you should use **1-Fixed**.

If you select **2-Manual** HVAC sizing you can enter the **Outside air control minimum flow rate** manually at building level.

Outside air sizing

When the Outside air definition method is **2-Min fresh air per person**, sizing for minimum Outside air (OA) flow rate is done using the 'Number of People' value (see above) with no regard for the schedules. The total OA requirement for each zone on the air handler is summed and used to set the minimum OA flow rate for the air handler. The OA controller sets an OA flow rate for the air handler each time step. After that, each zone receives a pro-rated share of the total OA flow proportioned by the current supply flow rate to each zone. There is no further zone-by-zone allocation of OA quantities, which is what happens in a real system as well.

HVAC tab in model data under Mechanical Ventilation header

Fan operation mode (Compact, Unitary systems only)

In Compact Unitary HVAC systems the supply fan has two different possible operating modes. The choices for this field are:

- **1-Continuous** - fan operates using air distribution availability schedule (above)
- **2-Cycling** - fan operates when heating or cooling is delivered.

For most commercial buildings, continuous fan operation will continue to supply outside air to the zones as typically required by code. For continuous fan operation, the 'System Availability Schedule' (see above) is the supply fan operating schedule. For systems where the supply fan only runs when either cooling or heating needs to be supplied to the zone such as for many residential systems, cycling should be specified.

Fan Type

When using Simple HVAC, enter the type of fan. Select from:

- **1-Intake** - fan blows outside air into the zone and the zone receives heat from the fan if **Fan in air** (below) > 0
- **2-Exhaust** - fan exhausts air from the zone. In this case there is no fan heat pickup. It is assumed that makeup air comes from outside.

Note that in Simple HVAC the Auxiliary energy data accounts for all fan, pump and other electrical energy use.

Fan pressure rise

Enter the pressure rise at full flow and standard conditions. Standard conditions are considered 20C at sea level, 101325 Pa.

You can calculate the approximate fan pressure rise from Specific Fan Power (SFP) data using:

$$\Delta P = 1000 * SFP * \text{Fan total efficiency}$$

Where SFP is fan power per flow rate in W/l/s.

Typical values for various system types are shown in the table below.

System Type	Specific Fan Power (Watts/litre/second)
Central mechanical ventilation including heating, cooling and heat recovery	2.5
Central mechanical ventilation including heating and cooling	2.0
All other systems	1.8
Local ventilation units within the local area, such as window/wall/roof units, serving one room/area	0.5
Local ventilation units remote from the local area, such as ceiling void or roof mounted units, serving one room/area	1.2
Fan coil units (rating weighted average)	0.8

Source ESTA: <http://www.esta.org.uk/>

Fan total efficiency (%)

Enter the product of the fan motor and impeller efficiency of the supply fan. This is the ratio of the power delivered to the air to the electrical input power at maximum flow expressed as a percentage. The motor efficiency is the power delivered to the shaft divided by the electrical power input to the motor. The fan efficiency is power delivered to the air divided by the shaft power. The power delivered to the fluid is the mass flow rate of the air multiplied by the pressure rise divided by the air density. Must be greater than 0 and less than or equal to 100.

Fan in air (%)

Enter the percentage of the motor heat that is added to the air stream. A value of 0 means that the motor is completely outside the air stream. A value of 100 means that all of the motor heat will go into the air stream and act to cause a temperature rise. Must be between 0 and 100.

Fan placement

Enter the supply fan placement type. There are two choices:

- **1-Draw through** models a system where the supply air fan is after the cooling and heating coils.
- **2-Blow through** where the supply air fan is before the cooling and heating coils.


The default is **1-Draw through**.

Fan part-load power coefficients

Select the set of generic pre-defined coefficients to use for the supply fan part-load power consumption. Choices are:

- Inlet Vane Dampers
- Outlet Dampers
- Variable Speed Motor
- ASHRAE 90.1-2004 Appendix G

The resulting power curves are shown in the graph below. The ASHRAE 90.1-2004 Appendix G coefficients are from TABLE G3.1.3.15, Method 2. The other sets of coefficients are from the EnergyPlus Input Output Reference, Fan Coefficient Values table.

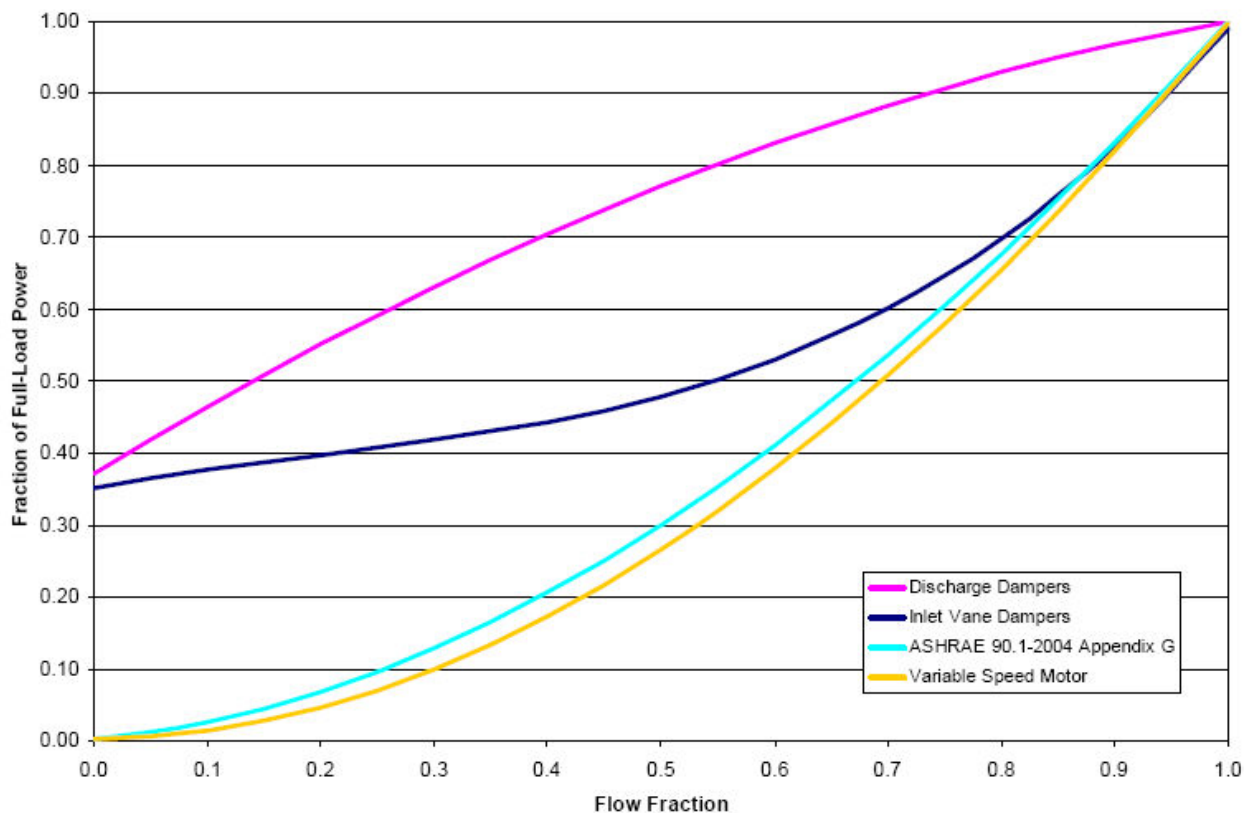

[HVAC tab](#) in model data under [Mechanical Ventilation](#) header

HVAC Economisers are useful for facilities which require some cooling even when the outdoor temperature is lower than the indoor temperature. An economizer is a damper opening that draws up to 100% outside air when the outside air is cooler than the temperature inside the building, thereby providing **free cooling**. Economisers can reduce energy use by 15 percent or more, and are often required by energy codes for larger air conditioning units.

Economisers can be modelled when using Compact HVAC but not Simple HVAC.

See under [Heat recovery](#) for information about how economisers interact with heat recovery.

Note: economiser operation applies to the overall HVAC system and so for Unitary multizone and VAV systems its data is set at building level. For Unitary single zone systems the data is used at zone level.

There are four options:

- **1-None** - no economizer operation will be simulated.
- **2-Return air temperature** - whenever the outside air temperature is greater than the **Economiser upper temperature limit** or less than the **Economiser lower temperature limit** the outside air flow rate is set to the minimum.
- **3-Return air enthalpy** - when the outside air enthalpy is greater than the **Economiser upper enthalpy limit** or less than the **Economiser lower enthalpy limit** the outside air flow rate is set to the minimum.
- **4-Return air temperature and enthalpy** - either temperature or enthalpy limit is used.

The economiser setpoints below are limits on temperature and enthalpy of the outside air. When the outside air conditions go beyond these limits the EnergyPlus economiser switches to 'minimum outside air mode' (i.e. the outside air damper is closed to its minimum position).

Economiser upper temperature limit

Enter the outside air temperature high limit for economizer operation. If the outside air temperature is above this limit, the outside air flow rate will be set to the minimum and heat recovery will be enabled if available. Zero in this field means that there is no outside air temperature high limit control.

Economiser lower temperature limit

Enter the outside air temperature low limit for economizer operation. If the outside air temperature is below this limit, the outside air flow rate will be set to the minimum and heat recovery will be enabled if available. Zero in this field means that there is no outside air temperature low limit control.

Economiser upper enthalpy limit

Enter the outside air upper enthalpy limit for economizer operation. If the outside air enthalpy is above this value, the outside air flow rate will be set to the minimum and heat recovery will be enabled if available. Zero in this field means that there is no outside air enthalpy limit control.

Lockout

Unitary systems can also have lockout control:

- **1-No lockout** - default option.
- **2-Lockout with heating** - when the packaged unit is in heating mode, the economiser is locked out – i.e., the economiser dampers are closed and there is minimum outside air flow.
- **3-Lockout with compressor** - in addition to locking out the economizer when the unit is in heating mode the economizer is locked out when the DX unit compressor is on. In other words, when the DX coil is off, the economizer must meet the entire cooling load – it isn't allowed to operate in conjunction with the DX cooling coil. Similarly, when the DX coil is operating, the economizer is not allowed to operate. The Lockout with compressor option is sometimes called a 'non-integrated economizer'.

HVAC tab in model data under Mechanical Ventilation header

With Compact HVAC, you can specify air-to-air heat recovery which is available between the relief air stream and the outside air inlet stream. Heat recovery is selected for Unitary multizone, CAV and VAV systems by checking Heat Recovery On under the Mechanical Ventilation header at building level. For Unitary single zone make the selection at the zone level.

Heat recovery type

Enter the type of air-to-air heat recovery. The choices are:

- **1-Sensible** - recovers sensible heat
- **2-Enthalpy** - recovers sensible and latent heat.

Sensible heat recovery effectiveness

Enter the sensible heat recovery effectiveness. This is applied as a constant effectiveness at all conditions. The valid range is from 0.0 to 1.0, and the default is 0.70.

Latent heat recovery effectiveness

Enter the latent heat recovery effectiveness if Heat Recovery Type is Enthalpy. This is applied as a constant effectiveness at all conditions. The valid range is from 0.0 to 1.0, and the default is 0.65.

Heat recovery heating setpoint temperature

When no economiser is selected this data defines the heating setpoint temperature of the heat recovery device. Note that the single value is applied throughout the year. For example enter 15C to model a system which heats outside air up to 15C and no higher. A high setpoint value will provide optimal heating but this may add to cooling loads in the summer.

Heat recovery + economizer

If an [economiser](#) option is selected, the heat recovery is bypassed whenever the economiser operates and the heat recovery is always bypassed if economiser operation would be beneficial.

The heat recovery will operate when:

- Heat recovery is switched on at the building level for VAV and unitary multizone systems and at zone level for Unitary single zone and Fan coil systems AND
- When economiser operation is off.

You can have heat recovery and no Economiser action by switching on Heat recovery and setting economiser to **1-None**. In this case the heat recovery units heats outside air using the [Heat recovery heating setpoint temperature](#) above. It also cools outside air when return air temperature is lower than outside air temperature.

When heat recovery is used with the **2-Full fresh air** outside air mixing option in CAV/VAV systems, the heat recovery is by-passed when this is advantageous in reducing AHU heating/cooling coil loads. Otherwise, when using the **1-Recirculation** option, the economiser must be selected in the interface for the heat recovery to be by-passed in this way.

[HVAC tab in model data under Mechanical Ventilation header](#)

Variable air volume (VAV) systems control the dry bulb temperature inside a zone by varying the supply air volume instead of the air temperature. At full cooling the VAV terminal unit damper is fully open supplying the specified maximum air flow rate. As the cooling load decreases, the damper closes until it reaches the minimum stop specified by the turndown ratio (zone minimum air flow fraction). VAV systems can be used for interior or perimeter zones with a common fan system, air temperature control, and reheating devices. Heating is provided by use of reheat coils.

Note: Zone Terminal unit data is used at the **zone** level.

Turndown ratio (supply air minimum flow fraction)

The fraction that the zone VAV box can reduce to based on the supply air maximum flow rate. The

minimum flow rate to the zone while the system is operating is specified as a fraction of the maximum air flow rate. The turndown ratio is normally specified to meet the minimum ventilation requirement for the occupants. The reheat coil operates only when the damper is at this minimum flow rate when **Zone damper heating action** is set to **1-Normal** (the default).

A value of 0 means the VAV box can completely shut off flow into the zone and a value of 1.0 means that the VAV box cannot reduce supply air at all (i.e. it is a constant volume system). For **CAV** systems this data is fixed at 1 and is not available for edit.

Turndown ratio is typically in range **0.3 - 0.5**. Minimum is 0 and maximum is 1.

Note: in EnergyPlus v.2.0 and earlier a turndown ratio of zero (unusual value) has a special meaning as the reheat coils can never operate in this case even if the **Zone damper heating action** is set to **2-Reverse**.

VAV terminal unit type

DesignBuilder provides 3 different VAV zone terminal unit types:

1-Standard - The VAV terminal unit contains a damper and optionally a reheat coil. During heating the VAV unit can either work in Normal mode where the supply air flow into the zone is the minimum air flow rate of the VAV system, essentially acting like a constant volume system or in Reverse action mode the air flow rate through the VAV box may increase above the minimum air flow when the heating demand cannot otherwise be satisfied. This is also the terminal type used for CAV systems.

2-Series PIU - The Series Powered Induction Unit is an air system terminal unit that mixes varying amounts of secondary (recirculated) air and primary (conditioned supply) air to produce a fixed flow of air to a zone. The unit contains a small fan that acts to induce the secondary air and a heating coil for heating the mixed secondary and primary air. The fan runs at a constant volume flow rate whenever the unit is on. The fan is downstream of the primary and secondary air inlets. The variable mixing is accomplished by a damper in the unit's primary air supply inlet duct. This damper can move from fully open (100% primary air, 0% secondary air) to a minimum stop that can be specified in the input description. At full cooling the damper will be fully open. At minimum cooling and for heating the damper will be at the minimum stop and the secondary air flow will be at its maximum. It uses the EnergyPlus SINGLE DUCT:SERIES PIU:REHEAT data.

3-Parallel PIU - The Parallel Powered Induction Unit is an air system terminal unit that mixes varying amounts of secondary (recirculated) air and primary (conditioned supply) air to produce a variable total flow of air to a zone. The unit contains a small fan that acts to induce the secondary air and a heating coil for heating the mixed secondary and primary air. The secondary and primary air streams enter the unit in parallel. The fan sits in the secondary air stream and runs only when secondary air is needed. The primary air inlet contains a damper that can move from fully open (maximum primary air) to a minimum stop (minimum primary air). At full cooling load the primary air damper is fully open and the fan is off. The primary air flow is at maximum and there is little or no secondary air flow. As the cooling load decreases, the primary air damper gradually closes and the secondary air flow remains close to zero. At some point, usually when the primary air flow has reached the minimum, the fan switches on and secondary air is induced. The heating coil will switch on as needed to meet any heating demand. It uses the EnergyPlus SINGLE DUCT:PARALLEL PIU:REHEAT data.

See **VAV** for a schematic diagram showing the 3 Zone terminal unit types connected to an air distribution system.

Parallel fan on flow fraction

For parallel PIUs, this data specifies the fraction of the primary air flow at which fan turns on. In the parallel PIU the fan operation is intermittent. If the primary air flow is above this fraction of the maximum, the fan is off. Otherwise it is on.

This data is available when using VAV Compact HVAC with the **Parallel PIU** VAV terminal unit type and

the [plant sizing](#) options **Autosize when not set** or **Manual**.

Terminal Unit Fans

When using fan powered terminal units (PIU) you can specify the characteristics of the terminal unit fans.

Terminal Unit Fan Total Efficiency

Enter the total efficiency of the zone induction fan. This is the ratio of the power delivered to the air to the electrical input power at maximum flow. This is also the product of the fan motor efficiency and fan (impeller) efficiency. The motor efficiency is the power delivered to the shaft divided by the electrical power input to the motor. The fan efficiency is the power delivered to the air divided by the shaft power. The power delivered to the fluid is the mass flow rate of the air multiplied by the pressure rise divided by the air density. Must be greater than 0 and less than or equal to 1.


Terminal Unit Fan Delta Pressure

Enter the pressure rise of the zone induction fan in Pa at full flow and standard conditions. Standard conditions are considered 20C at sea level, 101325 Pa.

[HVAC tab](#) in model data under [Mechanical Ventilation](#) header

A plenum is an air compartment or chamber including uninhabited crawl spaces, areas above ceilings or below a floor, including air spaces below raised floors of computer/data processing centers, or attic spaces, to which one or more ducts are connected and which forms part of either the supply air, return air or exhaust air system, other than the occupied space being conditioned.

DesignBuilder Compact HVAC Unitary multizone, Unitary single zone and VAV systems can have air supplied and returned via plenums. The system supply and return plenums in the diagram below serve each of the 3 zones.

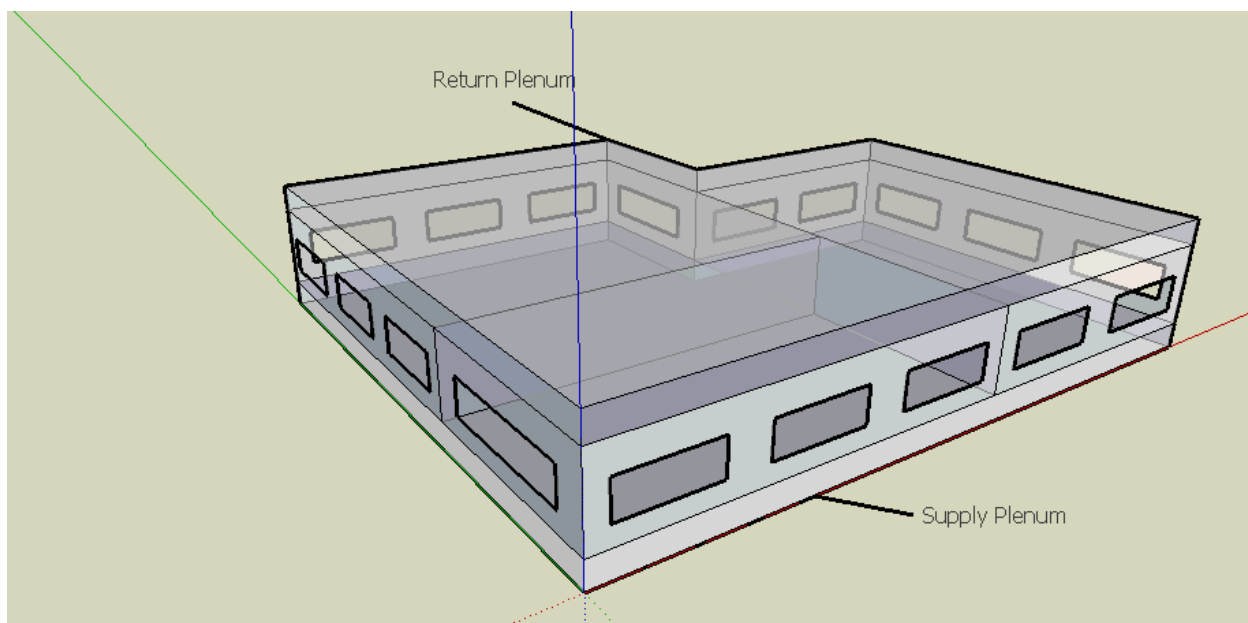

There are 4 types of plenum:


1. **System supply plenum** - a supply air plenum serving *all zones* in 3-VAV and 2-Unitary multizone system. If any zone supply plenums have been specified, the outlet from the system supply plenum will flow through the zone supply plenum to the zone terminal unit. The system supply plenum is defined at building level and only one is allowed per simulation.
2. **System return plenum** - return air plenums serving *all zones* in 3-VAV and 2-Unitary multizone systems. If any zone return plenums have been specified, the return air from the zone will flow through the zone return plenum and then into the system return plenum. The system return plenum is defined at building level and only one is allowed per simulation.
3. **Zone supply plenum** - a supply air plenum serving *only this zone* in 3-VAV, 2-Unitary multizone and 1-Unitary single zone systems. The plenum zone is added to the supply air path after the system splitter or system-level supply plenum and before the zone terminal unit. The zone supply plenum is defined at zone level. A zone supply plenum can serve only one zone.
4. **Zone return plenum** - return air plenums serving *only this zone* in 3-VAV, 2-Unitary multizone and 1-Unitary single zone systems. The plenum zone is added to the return air path immediately after the zone and before the system mixer or system-level return plenum. The zone supply plenum is defined at zone level. A zone return plenum can serve only one zone.

When specifying a system or zone supply or return plenum you should enter a *unique zone name*. The zone does not need to be in the same block.

Plenum modelling

- Maximum of 1 *system* supply plenum allowed per simulation
- Maximum of 1 *system* return plenum allowed per simulation
- Each *zone* plenum can only serve one zone
- Set the [Zone type](#) of any plenum zones to 4-Plenum. This makes the necessary changes (remaining requirements and recommendations in bullet list)
- Plenum zones cannot be controlled. Use the HVAC template **<None>** to switch off heating, cooling and mechanical ventilation in all plenum zones.
- Remember to ensure plenum zones have no internal gains, occupancy, lighting etc.
- We recommend using the [4-Ceiling diffuser](#) interior convection heat transfer coefficient for plenum zones to model the effect of fast moving air on surface heat transfer.
- You will probably find it easiest to use the [Combined](#) method for Floor/slab/ceiling definition for models using plenums as each surface element in the model has just a single construction and you don't have the confusion of Model data referring to 'raised floors' and 'suspended ceilings'.
- The floor of a ceiling plenum is the ceiling of the zone below so you will often define the plenum floor as 'Ceiling tiles' construction or similar.

If the building you are modelling has more than one plenum zone, each serving multiple zones you should use *zone* plenums. Use virtual partitions to partition the large plenum zones (which in reality serve multiple zones) into multiple plenum zones, each serving a single zone. See image below.

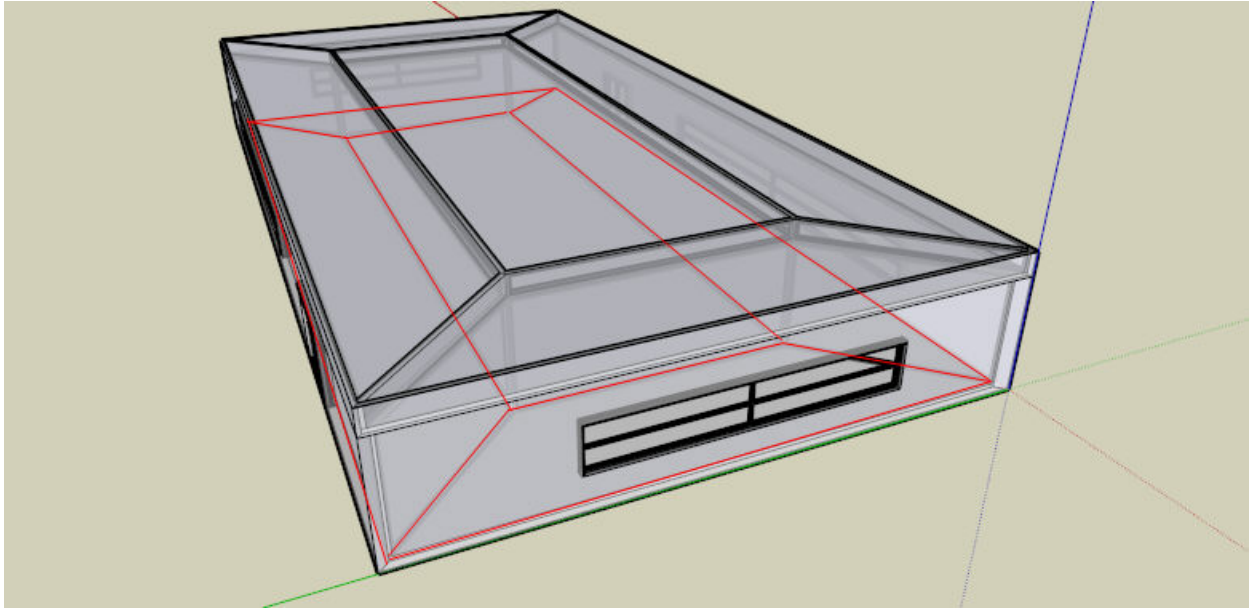

Red lines show the 5 zones of the occupied space. Each zone has its own return-air ceiling plenum.

This technique is also illustrated in the example file supplied with DesignBuilder **Zone vs System Plenums Example.dsb**.

Note: it is not possible in DesignBuilder v.1 to use the [suspended ceiling/floor](#) (as set on the Constructions tab when using [Separate](#) constructions) as a plenum - the plenum must be a completely separate zone.

3.3.2.5.3 Cooling

[HVAC tab](#) in model data

You can enter details on the cooling system including the maximum capacity (at zone level).

Cooling capacity

The Cooling capacity can either be entered by hand or can be Autosized using the [Cooling Design Calculations](#). If, immediately prior to a [Simulation](#) the Cooling capacity has not been entered (neither by hand nor from a previous Cooling Design Calculation) then a Cooling design autosizing simulation is started to calculate the capacity. The [Plant sizing](#) building model option controls the way this works.

You can change cooling capacities by hand if you wish but you should bear in mind that, by default, if Model Options change, all heating and cooling capacities are reset to zero. Set the [Plant sizing](#) model option to '2-Manual' to avoid this happening.

SUPPLY AIR CONDITIONS

When using [Simple HVAC](#) you can specify the cooling supply air conditions of the air. This data is used for simulations only - cooling design calculations have a specific equivalent setting.

Supply air delivery temperature

The constant dry-bulb air temperature of the air supplied for cooling the zone.

Supply air humidity ratio

The constant humidity ratio (mass of water per mass of dry air) of the cold supply air to be delivered when cooling is required. The default humidity ratio is 0.009.

COOLING PLANT

Fuel

Select the type of fuel used to generate the cooling energy - choose from:

- 1-Electricity
- 2-Gas
- 3-Oil
- 4-Solid fuel
- 5-Bottled gas
- 6-Other

Cooling system CoP (Simple HVAC only).

The cooling system coefficient of performance is used to calculate the fuel consumption required to meet cooling demand. The value represents the total seasonal efficiency of the entire cooling system and should include the effect of all energy consumption associated with building cooling such as fan and pump energy, chiller inefficiency, control equipment etc.

Cooling system CoP data is specified by zone so you can model different cooling efficiencies in each zone. But generally you should access this data from the building level and allow zones to take on building default.

Chiller CoP (Compact HVAC only).

The chiller coefficient of performance is used to calculate the fuel consumption required to meet cooling demand. It represents the total seasonal efficiency of the chiller excluding losses/consumption due to external pumps and fans but including all energy consumed by such ancillary devices within the chiller.

Chiller CoP data is specified for the whole building.

Cooling distribution loss (%)

The cooling distribution loss is the loss of heat (cooling energy) due to the distribution of cold water/air around the building. It is used to increase the cooling load prior to calculating chiller energy consumption.

VAV CENTRAL COOLING COILS

The central AHU cooling coil data is specified for the whole building and is not accessible at zone level.

Cooling coil type

The cooling coil must be one of:

- **1-None** i.e. there is no cooling coil
- **2-Chilled water** to model a chilled water coil.

The default is **2-Chilled water**.

Note: you can achieve 'free cooling' without a cooling coil by selecting **1-None** but you will only get the cooling effect of the HVAC air on the zone if the outside air + any fan pickup is cooler than the zone air temperature.

The difference between switching cooling off altogether (by unchecking the **Cooled** checkbox) and setting cooling coil type to **1-None** is that in the latter case controlled free cooling is possible due to relatively cool outside air being introduced to the building but when cooling is switched off altogether there is no possibility of controlled cooling through the HVAC system.

Off-coil air temperature set point

This data defines the temperature of the air coming off the coils assuming idealised control. Cooling coils are automatically sized by EnergyPlus before the simulation to provide this off coil temperature given the flow rates in the air handling unit.

Cooling coil setpoint reset type

Select the type of automatic reset control for the central cooling supply air temperature. The choices are:

- **1-None** – no reset, use the **Off-coil air temperature set point** in conjunction with the Zone setpoint schedule.
- **2-Outdoor air temperature reset** – reset the cooling supply air temperature based on the following default rules. When the outdoor dry bulb temperature (ODB) is at or below 15.6C the setpoint is 18C. When the ODB is at or above 26.7C the setpoint is the **Off-coil air temperature set point**. In between, the setpoint is varied linearly. These control parameters are from ASHRAE 90.1 Appendix G par. G3.1.3.9.
- **3-Warmest** - reset the cooling supply air temperature to the highest supply air temperature that will meet the cooling requirements of all the zones (i.e. according to the cooling demand of the warmest zone). The minimum setpoint allowed is the **Off-coil air temperature set point** (above). The maximum setpoint allowed is defaulted to 18C. For each zone in the system at each system time step the EnergyPlus set-point manager calculates a supply air temperature that will meet the zone cooling load at the maximum zone supply air flow rate. The lowest of the possible supply air temperatures becomes the new supply air temperature set point, subject to minimum and maximum supply air temperature constraints. The resulting temperature set point is the highest supply air temperature that will meet the cooling requirements of all the zones. When compared to a fixed cooling supply air temperature set point, this strategy minimizes zone reheat coil energy (or overcooling) and central chiller energy consumption (if the chilled water temperature is also reset) at the cost of possible increased fan energy.

The 2003 ASHRAE Applications Handbook discusses warmest reset control for constant volume systems (p.41.27) and calls it "Supply Air Temperature Reset for Constant Air Volume (CAV)". A requirement is set out in ASHRAE Std 90.1-2004, Appendix G, paragraph G3.1.3.12: *Supply air temperature shall be reset based on zone demand from the design temperature difference to a 10° F temperature difference under minimum load conditions. Design air flow rates shall be sized for the reset supply air temperature, i.e., a 10°F temperature difference.*

Tip: using **Warmest** or **Outside air temperature** cooling coil setpoint reset can drastically improve energy efficiency by reducing the cooling energy delivered to the airstream to the minimum required for occupant comfort.

The DesignBuilder HVAC template default is **3-Warmest** for constant volume systems and **1-None** for other system types.

OPERATION

Unitary Multizone and VAV

When using the **2-Unitary multizone 5-CAV** and **3-VAV** Compact HVAC system types, the **AHU cooling coil operation** is defined by AHU cooling coil operation data.

Note: only one set of zone thermostatic control data is used per Unitary multizone system - this is the zone for which **Thermostatic control zone for unitary system** is selected.

Unitary Single zone and Fan Coil Units

Cooling operation schedules are set at zone level and there is no central plant apart from the chiller.

Note: for all systems, [cooling setpoint temperatures](#) are defined on the [Activity tab](#).

Zone setpoint schedule

This schedule data is used in conjunction with the [cooling setpoint temperatures](#) on the [Activity tab](#) to define the cooling demand in the zone by creating a cooling setpoint schedule. The schedule defines the times when full and setback setpoints should be met and the setpoint data on the Activity tab define the actual setpoint values. See [Defining setpoint temperature schedules](#) for more on this.

3.3.2.5.4 Heating

[HVAC tab in model data](#)

The data required to define the heating system will depend on whether the [HVAC model option](#) is set to Simple or Compact and if set to Compact the [type of Compact HVAC system](#) selected.

Heating capacity

The heating capacity can either be entered by hand or can be Autosized using the [Heating Design Calculations](#). By default, if immediately prior to a [Simulation](#) the heating capacity has not been entered (neither by hand nor from a previous Heating design calculation) then a Heating design autosizing simulation is started to calculate the capacity. The [Plant sizing](#) building model option controls the way this works.

You can change heating capacities by hand if you wish but you should bear in mind that, by default, if Model Options change, all heating and cooling capacities are reset to zero. Set the [Plant sizing](#) model option to '2-Manual' to avoid this happening.

If the HVAC system is Unitary multizone then the central heating coil capacity is calculated as the sum of the individual zone heating energy requirements.

HEATING PLANT

Fuel

Select the type of fuel used to generate the heating energy - choose from:

- 1-Electricity
- 2-Gas
- 3-Oil
- 4-Solid fuel
- 5-Bottled gas
- 6-Other

Heating system CoP (Simple HVAC only).

The heating system coefficient of performance is used to calculate the fuel consumption required to meet heating demand. The value represents the total seasonal efficiency of the entire heating system and should include the effect of all energy consumption associated with building heating such as fan and pump energy, boiler inefficiency, control equipment etc.

Heating system CoP data is specified by zone so you can model different heating efficiencies in each zone. But generally you should access this data from the building level and allow zones to take on building default.

Heat generator CoP (Compact HVAC only).

Heat generators are devices such as boilers and heat pumps used to heat water for distribution to heating coils, radiators and DHW systems. The heat generator coefficient of performance is used to calculate the fuel consumption required to meet heating demand. It represents the total seasonal efficiency of the boiler excluding losses/consumption due to external pumps and fans but including all energy consumed by such ancillary devices within the boiler.

CoP is entered as a fractional value (not % value). So a boiler might have a CoP of 0.89.

Heat generator CoP data is specified for the whole building, i.e. a single hot water circuit (served by one boiler) is simulated.

Part-load boiler/heat pump performance cannot be calculated in DesignBuilder v.1.

Heating distribution loss (%)

The heating distribution loss is the loss of heat due to the distribution of hot water/air around the building. It is used to increase the heating load prior to calculating boiler heating energy consumption.

VAV OUTSIDE AIR PREHEAT COILS

AHU preheat data is specified for the whole building and is not accessible at zone level.

Coil type

The preheat coil is located in the outside air stream, upstream of the outside air mixing box and tempers the outside air. If no preheat coil is used in the VAV system, then the option 1-None should be specified here. Otherwise this indicates the type of preheat coil. It is unlikely that both a heating coil and a preheat coil would be used at the same time. The options are:

- **1-None** - no preheat.
- **2-Electric** - preheat coils powered by electricity (assumed 100% efficient, 0 distribution loss).
- **3-Gas** - gas-fired preheat coils (assumed 80% efficient, 0 distribution loss).

Off-coil air temperature set point

When preheat is specified, this data defines the temperature of the air coming off the preheat coils assuming idealised control. Preheat coils are automatically sized by EnergyPlus before the simulation to provide this off coil temperature given the flow rates in the air handling unit.

VAV AND CAV CENTRAL HEATING COILS

The central AHU heating coil data is specified for the whole building and is not accessible at zone level.

Coil type

The main central heating coil is located in the supply air stream, upstream of the cooling coil and after the outside air mixing box. If no central heating coil is used in the VAV system, then the option 1-None should be specified here. Otherwise this indicates the type of heating coil. It is unlikely that both a heating coil and a preheat coil would be used at the same time. The options are:

- **1-None** - no heating.
- **2-Electric** - heating coils powered by electricity (assumed 80% efficient, 0 distribution loss).
- **3-Hot water** - heating coils supplied with hot water generated by a boiler.
- **4-Gas** - gas-fired heating coils (assumed 80% efficient, 0 distribution loss).

If you select 3-Hot water main heating coils, the program generates data to simulate the boiler and the pumps required to serve the heating coil.

Off-coil air temperature set point

When main heating coils are specified, this data defines the temperature of the air coming off the coils assuming idealised control. Heating coils are automatically sized by EnergyPlus before the simulation to provide this off coil temperature given the flow rates in the air handling unit.

Heating coil setpoint reset type

Select the type of automatic reset control for the central heating supply air temperature for CAV and VAV system. The choices are:

- **1-None** – no reset, use the **Off-coil air temperature set point** in conjunction with the Zone setpoint schedule.
- **2-Outdoor air temperature reset** – reset the heating supply air temperature based on the following default rules. When the outdoor dry bulb temperature (ODB) is at or below -6.7C the setpoint is the **Off-coil air temperature set point**. When the ODB is at or above 10.0C the setpoint is 20.0C . In between, the setpoint is varied linearly. These control parameters are from ASHRAE 90.1 Appendix G.

The default is **1-None**.

Note: you should be aware when using **2-Outdoor air temperature reset** that the effective off-coil setpoint for the AHU heating coil used in the simulation will be between 20C and the value you enter for the **Off-coil air temperature set point**. If you also have an AHU cooling coil you must make sure that it does not operate simultaneously with the AHU heating coil by making the appropriate AHU coil operation schedules.

VAV TERMINAL REHEAT COILS

Reheat data is specified for individual zones.

Coil type

Use this data to either switch reheat off or select either electric or hot water reheat coils. The options are:

- **1-None** - no heating.
- **2-Electric** - heating coils powered by electricity (assumed 100% efficient, 0 distribution loss).
- **3-Hot water** - heating coils supplied with hot water generated by a boiler.

If you select **3-Hot water** main heating coils, DesignBuilder generates data to simulate the boiler and the pumps required to serve the reheat coil.

Zone damper heating action

During heating operation, there are two control options for the damper controlling the air flow in the VAV terminal unit as the zone moves above or below the zone setpoint. With both control options, the damper is at the minimum air flow rate whenever the zone temperature is between the cooling and heating setpoints.

- **1-Normal** - the damper will remain at the minimum air flow rate during heating operation. As the heating load increases, the water flow rate in the reheat coil will be increased to maintain temperature in the zone until the maximum water flow rate is reached. The system essentially acts like a constant volume system during heating.
- **2-Reverse** - the air flow rate through the VAV box may increase above the minimum air flow when the heating demand cannot be satisfied unless greater air flow is provided. As the heating load increases, the unit starts at minimum air flow and minimum hot water flow. The hot water flow is increased until it reaches maximum flow, then the air damper starts to open to meet the load. This option is used if the minimum air flow rate is not adequate to serve the peak heating load.

Note: you should switch heating 'on' if you want the zone to be heated to the [heating setpoint temperature](#) specified on the Activity tab.

LOCAL HEATING UNITS

Heating type (Simple HVAC only)

There are currently two heating types:

- **1-Convective** - the space is heated by an air system and controlled to the air temperature set point. The system is modelled using EnergyPlus 'purchased air'.
- **2-Radiative/convective units** - used for modelling general systems where a radiant heat is a factor. Allows modelling of convective systems, hot water radiator systems, underfloor heating systems, baseboard heating etc. using EnergyPlus radiant heating system.

1-CONVECTIVE

When using [Simple HVAC](#) you can specify the heating supply air conditions of the air.

Supply air delivery temperature

The constant dry-bulb air temperature of the air supplied for heating the zone.

Supply air humidity ratio

The constant humidity ratio (mass of water per mass of dry air) of the warm supply air to be delivered when heating is required. The default humidity ratio is 0.01.

2-RADIANT UNITS

When the [Simple HVAC](#) model option is set you can model radiant heating systems. Set the heating system type as '2-Radiant units' (above) and enter the heating radiant fraction, control method and the way radiant heat is distributed through the space:

Heating radiant fraction

The fraction of the power input to the radiant heater that is actually radiant heat transfer. The fraction should be between 0 and 1. In conjunction with the Radiant distribution option, it defines the breakdown of how the power input to the heater is distributed to the rest of the zone.

Control method

Radiant units can be controlled in one of three ways:

- **1-MAT** - control the room mean air temperature to the [heating setpoint temperature](#) specified on the [Activity tab](#).
- **2-Operative** - control the room operative temperature (MAT+MRT) / 2 to the heating setpoint temperature specified on the Activity tab.
- **3-MRT** - control the room mean radiant temperature to the heating setpoint temperature specified on the Activity tab.

This option overrides the overall simulation control radiant fraction option.

Note: You should ideally use **Operative** control if you want to calculate realistic heating energy because heating systems controlled using the operative temperature continue to heat the building until comfort conditions are met (just that they are in the real building). Also, the default [heating temperature set points](#) from the [Activity templates](#) are derived from sources quoting Operative temperatures. With MAT control the room **air** temperature is controlled to the heating set point temperature, which (depending on internal radiant temperatures) may not necessarily be comfortable.

Radiant distribution

The Radiant distribution allows you to control how the radiant heat from the Radiant unit is distributed around the room. Options are:

- **1-Uniform** - radiant heat is distributed uniformly around the zone.
- **2-Floor** - heat is distributed uniformly across all floors in the zone. Use this for modelling floor heating systems.
- **3-Wall** - heat is distributed uniformly across all walls in the zone. Use this for modelling hot water radiators and other radiant heaters close to wall surfaces.

Technical Note: DesignBuilder uses the EnergyPlus 'HIGH TEMP RADIANT SYSTEM' to model radiant heating systems. This system type is intended for modelling 'high-temperature' radiant sources but it can equally well be used for low temperature radiant sources.

OPERATION

VAV

When using the **1-VAV** system type, you can set the operation schedule for the central air handling unit heating coils separately from the schedules for the local reheat coils. The operating schedule for the central heating coils is set under the **AHU Heating Coil Operation** header at building level. Local reheat coils are controlled using **Operation** data at zone level.

Unitary Multizone

When using the **2-Unitary multizone** system type, the operating schedule for the central heating coils is set under the **AHU Heating Coil Operation** header at building level.

Note: only one set of zone thermostatic control data is used per Unitary multizone system - this is the zone for which **Thermostatic control zone for unitary system** is selected.

Unitary Single zone

Heating operation schedules are set at zone level and there is no central plant apart from the boiler.

Note: for all systems, [heating setpoint temperatures](#) are defined on the [Activity tab](#).

Zone setpoint schedule

This schedule data is used in conjunction with the [heating setpoint temperatures](#) on the [Activity tab](#) to define the heating demand in the zone by creating a heating setpoint schedule. The schedule defines the times when full and setback setpoints should be met and the setpoint data on the Activity tab define the actual setpoint values. See [Defining setpoint temperature schedules](#) for more on this.

3.3.2.5.5 Natural Ventilation

[HVAC tab](#) in model data

You can control the operation of natural ventilation using the data under the Natural Ventilation header on the HVAC tab. When using [Calculated](#) natural ventilation model option there is additional data on the [Openings](#) tab to control the timing and extent of operation of openings.

SCHEDULED

When the [Natural ventilation model option](#) is set to **Scheduled**, natural ventilation is defined simply as follows:

- Check the 'On' checkbox under the Natural Ventilation header.
- Select the flow type
- Set the maximum zone natural ventilation rate in air changes per hour (if flow type is **1-By zone**).
- Enter the operation information.

Find out more about [Natural Ventilation Modelling](#) under [Modelling Issues](#).

Flow type

Defines the method used to set the maximum outside air natural ventilation rate. The options are:

- **1-By zone** - enter the zone natural ventilation rate in air changes per hour in the control directly below. The air flow rate is calculated from the ac/h data using:

$$\text{m}^3/\text{s} = \text{ac}/\text{h} \times \text{ZoneVolume} / 3600$$


where `ZoneVolume` is the actual air volume of the space calculated according to options for optionally [excluding floor/ceiling constructions](#).

Note: this zone volume may be different from the value used for the purposes of calculating air flow rates for [infiltration](#) which uses the *total* zone volume.

- **2-Min fresh air per person** - maximum natural ventilation rate is defined using [Minimum fresh air requirements](#) as set on the [Activity](#) tab. The air flow rate in m³/s is calculated as:

$$\text{m}^3\text{s} = \text{MinFreshAir} \times \text{NumberPeople} / 1000$$

`NumberPeople` = Occupancy density (people / m²) * Zone floor area (m²)
`MinFreshAir` is the minimum fresh air rate per person (l/s/person)

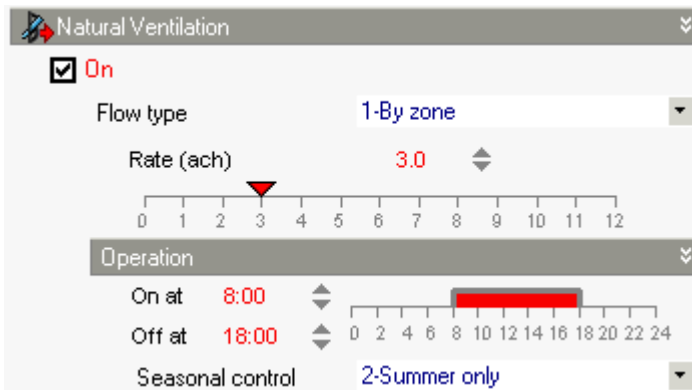

Scheduled natural ventilation is active at any time in the simulation when:

- The air temperature in the zone is higher than the Ventilation cooling set-point temperature (as set on the [Activity tab](#) under the '[Environmental Comfort](#)' header) AND ...
- The difference between inside and outside air temperatures ($T_{in} - T_{out}$) is less than '[Max ventilation in-out delta T](#)' (below the Ventilation cooling setpoint data on the [Activity tab](#)) AND ...
- The operation schedule is on at that time in the simulation.

Note: to avoid **temperature control** of natural ventilation set a very low Ventilation cooling setpoint temperature and to avoid **temperature difference control** of natural ventilation set a high negative value of [Max ventilation in-out delta T](#).

The actual natural ventilation rate at any one time in the simulation is calculated by multiplying the maximum natural ventilation rate (ac/h) by the value of the operation schedule.

When using the '**Typical workday**' Timing option, natural ventilation can be either on or off. When it is on, the ventilation rate is the 'maximum natural ventilation rate'.

When using the **7/12** Timing option, it is possible to vary the natural ventilation rate between 0 and the maximum value by using daily profiles which have values between 0 and 100%.

Internal Windows, Doors and Vents

Airflow through *external* windows, vents, doors and holes are not modelled with **Scheduled** natural ventilation because the natural ventilation airflow from outside is explicitly defined (above). Internal windows, vents, doors and holes cause air to be exchanged between the two adjacent zones using the EnergyPlus 'Mixing' object. You can override operation of *internal* windows, vents, doors be **off** as follows:

Window, Vent, Door position

Internal adjacent to unconditioned semi-exterior

Other internal

Override Off Action

Switch off the Natural ventilation 'On' checkbox in the occupied zone

Unaffected by the Natural ventilation 'On' checkbox. Use the operation schedules on the Openings tab to switch off

CALCULATED

When the [Natural ventilation model option](#) is set to **Calculated**, natural ventilation is defined as follows:

- Check the 'On' checkbox under the Natural Ventilation header.
- On the [Openings tab](#) by setting window, door and vent opening sizes and operation times.

You can override operation of windows, vents, doors be **off** as follows:

Window, Vent, Door position

External

Internal adjacent to unconditioned semi-exterior

Other internal

Override Off Action

Switch off the Natural ventilation 'On' checkbox

Switch off the Natural ventilation 'On' checkbox in the occupied zone

Unaffected by the Natural ventilation 'On' checkbox. Use the operation schedules on the Openings tab to switch off

Note that even when operation is switched off as described above (or because operation schedules on the Openings tab are off) windows, vents and doors still provide a small flow path through the crack between the opening and the surrounding surface if the [Model infiltration](#) data is switched on.

Note 1: for Cooling **design simulations**, natural ventilation is always handled as **Scheduled** even when the Natural ventilation model option is set to **Calculated**. In this case you can still enter natural ventilation data on the HVAC tab and it is used only for design simulations.

Note 2: Natural ventilation is *not included* in Heating design calculations as it is considered to be a cooling mechanism - windows and vents will be closed during the coldest winter periods.

3.3.2.5.6 Air Temperature Distribution

Air Temperature Distribution	
Distribution mode	2-Dynamic gradient
Interpolation mode	3-Inside-outside DeltaT
Upper Conditions	
Temperature (°C)	10.00
Temperature gradient (°C/m)	4.00
Lower Conditions	
Temperature (°C)	0.00
Temperature gradient (°C/m)	0.00
Operation	
Schedule	Office_OpenOff_Occ
Heights	
Thermostat height (m)	1.50
Return air height (m)	3.50

[HVAC tab in model data](#)

By default EnergyPlus assumes that air temperature within a zone is completely uniform (i.e. the air is fully mixed). The Air Distribution model data allows you to model stratification within a zone by setting up a temperature gradient which varies dynamically depending on:

- Outside temperature.
- Inside temperature.
- Inside-outside temperature difference.
- Heating load.
- Cooling load.

How it works

Changing the Distribution mode to **2-Dynamic gradient** reveals the air temperature distribution data. By default the Interpolation mode is **2-Inside-outside DeltaT**. This means that the temperature gradient within the space is modelled as varying according to the inside-outside temperature difference. The Upper conditions define the most extreme temperature gradient, typically under design conditions. In the screenshot above right, the upper temperature difference is 10°C and the corresponding temperature gradient is 4°C/m. This means that when the temperature difference between inside and outside is 10°C or more the internal temperature gradient is 4°C/m. The Lower conditions data shows that when the temperature difference between inside and outside is zero there is no temperature gradient, i.e. the air is fully mixed. EnergyPlus calculates the temperature gradient for other inside-outside temperature differences by linear interpolation.

Operation schedule

The operation schedule defines the times when air temperature distribution is to be calculated. When the value of the schedule is 1, the distribution calculations take place, when the value is 0, the zone air temperature is fully mixed.

Thermostat height

Thermostat height specifies the distance above the floor where the thermostat for HVAC control is situated. This height is used by the model to determine the thermostat temperature relative to the mean air temperature by applying the gradient.

Return air height

Return air height specifies the distance above the floor where the air leaves the zone and returns to the air system. This height is used by the model to determine the return air temperature relative to the mean air temperature by applying the gradient.

Range of applicability

The air temperature distribution within the zone is used as follows:

1. To calculate boundary conditions for conduction through surfaces (walls, roofs, glazing etc).
2. To include the effects of extracting relatively warmer air at the ceiling level when using Compact HVAC.
3. To include the vertical position of the thermostat sensor for HVAC control.

Limitations

The air temperature distribution mechanism does not include:

1. The effects of extracting relatively warmer air at the ceiling level when using Scheduled and Calculated natural ventilation.
2. The vertical position of the sensor for ventilation control.

3.3.2.5.7 Domestic Hot Water (DHW)

[HVAC tab in model data](#)

The effect of hot water consumption (hot water taps, showers etc) on building energy use can be included in your thermal model by switching on [DHW](#) on the HVAC tab.

Domestic Hot Water (DHW) is modelled in DesignBuilder by using hot water consumption rates based on the [activity](#) in each zone. DHW hot water consumption is defined on the [Activity tab](#) and the definition of the hot water generating equipment is described below) is defined on the [HVAC tab](#).

Type

Three types of DHW are available:

1-Boiler - heat is supplied by the same boiler used for heating the building

2-Gas - gas-fired hot water system

3-Electric - electric immersion heater

Delivery hot water temperature

The temperature of the water supplied to the taps.

Mains supply temperature

The temperature of the water delivered to the building. This can be approximated to the annual average outside air temperature.

Operation

The operation schedules define the timing of the hot water draw off when the [Timing HVAC + natural ventilation operates with occupancy](#) option model option is not selected. The profile of hot water consumption in the EnergyPlus simulation is calculated from l/person/day data (gal/person/day in IP units)

entered on the [Activity tab](#) by first estimating a typical number of hours per day. When typical workday schedules are used, this is simply the number of hours occupied during the working day. When 7/12 schedules are used the typical occupancy hours per day is determined from **January Monday** data.

Note: When using a [Compact schedule](#) to define DHW operation DesignBuilder assumes a **fixed 8 hours per day** operation when calculating the maximum m3/s hot water draw off for passing to EnergyPlus.

DHW volumetric consumption supplied to EnergyPlus is calculated as:

$$\text{DHW (m3/s)} = \text{DHW (l/day/m2)} \times 0.001 \times \text{m2} / (\text{Typical hours per day} \times 3600)$$

3.3.2.6 Detailed Equipment

Equipment tab in model data (zone level only)

When the [Gains model option](#) is set to **Detailed** you can enter data on individual items of equipment in each zone.

[Details on editing Equipment data](#)

This option is intended for modelling existing buildings where individual items of equipment have been recorded as part of a detailed survey. DesignBuilder has a software utility for recording and calibrating this data available on the [Prerelease and beta test versions](#) Downloads page of the DesignBuilder website.

Note: For other modelling applications you should use the [Early gains model option](#) because data can be set at the building level and/or loaded from template with much less effort.


Number	Rated power ...	Schedule	Radiant fraction	Latent fraction	Fraction heat lost
Computer accessories					
1	0,0000	On	0,10	0,00	0,00
Computers					
10	150,0000	8:00 - 18:00 ...	0,10	0,00	0,00
Fluorescent lights					
36	32,0000	On	0,10	0,00	0,05

Edit Equipment

- [Detailed gains](#)
- Use this screen to edit the equip for the current zone
- With 'Detailed' gains detail, infor each item of energy using equip its' operation is listed in detail.
- This mode must be used with 7/ Operation Schedules.
- [Add equipment](#)
- [Edit selected equipment](#)
- [Delete selected equipment](#)

3.3.2.6.1 Edit Detailed Equipment

You can model time-varying internal gains and energy consumption of individual items of equipment in each zone by adding equipment data at the zone level on the [Equipment tab](#). To add an item of equipment click on the Add toolbar icon, or if you are running DesignBuilder in Learning mode you can use the link in the Info panel to the right of the screen. This opens the **Edit Equipment** dialog:

Type	Fluorescent lights
Number	36
Rated power per item (W)	32,0000
 Schedule	On
Radiant fraction	0,10
Latent fraction	0,00
Fraction heat lost	0,05

You can define the category of internal gain (below), the number of items of equipment, the rated power per item of equipment as well as the operational schedule.

The **Radiant fraction** is the fraction of heat emitted by the device as long-wave radiation. The rest of the heat is considered to be convective i.e. it is modelled as heating up the zone air directly.

The **Latent fraction** is the fraction of the rated power which is converted to latent energy and affects the moisture balance in the zone instead of the sensible heat balance.

Fraction heat lost is the fraction of the sensible heat emitted which is lost or vented directly to outside without affecting the zone heat balance. This can be used for modelling equipment such as fluorescent lighting with control gear which can have different higher energy consumption than heat gain into the space.

A number of categories of gains are available. These are listed below together with the output data with which they are associated:

- **Fluorescent lights** - General lighting
- **Tungsten lights** - Task lighting
- **Office equipment** - Computer + equipment
- **Computers** - Computer + equipment
- **Computer accessories** - Computer + equipment
- **Telecoms** - Computer + equipment
- **Lifts** - Miscellaneous
- **Catering** - Catering
- **Small power** - Miscellaneous
- **Heating** - Miscellaneous
- **Cooling** - Miscellaneous
- **Pumps** - Miscellaneous
- **Fans** - Miscellaneous
- **DHW** - Miscellaneous.
- **Process** - Miscellaneous
- **External lighting** - Task lighting
- **Other external** - Miscellaneous
- **Miscellaneous** - Miscellaneous

Note that all of the above gains are modelled as scheduled gains in the zone and the data is reported as such in the program output. So for example categorising an item of equipment as DHW does not affect in any way [DHW modelling](#) as defined on the [HVAC tab](#). Likewise data for Heating, Cooling, Pumps and Fans is simply modelled as a scheduled gain in the zone, completely unconnected with HVAC modelling.

3.3.3 Model Data Management

The DesignBuilder building Model Data inheritance mechanism is a powerful way to edit building models. Tools are provided to help manage and manipulate this data.

- [Load data from template](#)
- [Clear data to default](#)

3.3.3.1 Load Data from Template

[Model Data Management](#)




Access the Load Data from Template from:

1. The Toolbar
2. The Edit menu
3. Mouse right-click in the Model Data.

Use it to load template data into the model. You can select one or more data sources from the following template libraries:

- Construction
- Glazing
- Facade
- Activity
- Lighting
- HVAC

When you select one of the above templates as a source of data you must also set the template from which to load:

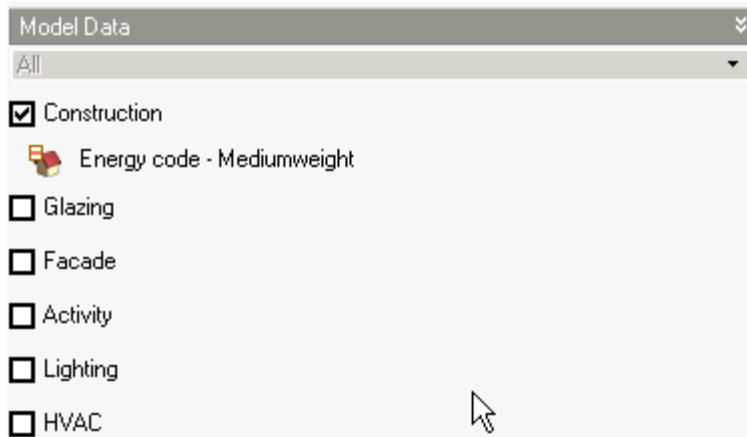

Target Object(s)

On the Target tab you can select the way you want to set data and, where appropriate, which model objects to load to.

- Selected object(s) - choose this option if you want to load the same data to one or more building, block, zone or surface. Check the boxes next to the target objects to select them as targets.
- Reload templates - reloads template data for the current building and all blocks, zones and surfaces in the building. Data is only loaded if the template selection is non-default. If the template inherits from the hierarchical level above, data is not loaded.
- Search & replace - allows you to search the model for particular data and replace with data from a template.

Selection tools are available to allow you to control the selection of building objects:

- Select all.
- Select all down to zone level.
- Select none.

Making global lighting settings

When you load lighting data from template you should consider that DesignBuilder sets the lighting output from the lights based on:

- a) [Lighting system efficiency](#) (W/m²/100 lux) using data from the [lighting template](#) and,
- b) [Illuminance levels](#) required in the zone as set on the [Activity tab](#).

If you have many types of activity in the building you can load lighting data for each zone taking into account the required illuminance level in the zone by selecting the appropriate zones in the Target tab.

3.3.3.2 Clear Data to Default

[Model Data Management](#)




The Clear Data to Default dialog allows you to:

- Clear Model Data
- Clear custom openings and revert back to default facades.

'Clearing to default' removes any 'user data' (shown in red) from the current object and instead default data is passed from the 'parent' object in the [hierarchy](#) (Model Data shown in blue).

You can control the extent of the 'clearance' by setting the 'Clear Down to' data at the bottom. Leave this data as 'Surface level' if you want all data in the currently selected model object (including child objects) to be returned to a default state.

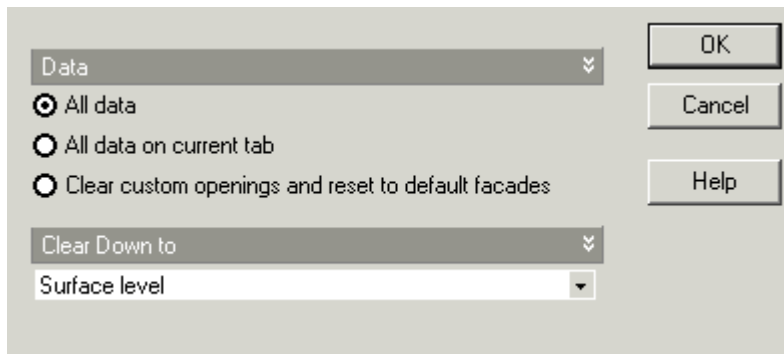

3.4 Model Options



All Model Options are stored in the DesignBuilder dsb file and so any changes you make to the model configuration will not affect other models.

You can open the Model Options dialog by:

- Pressing F11.
- Clicking on the spanner icon on the toolbar.
- From the Edit menu.

All Model Options are stored in a single dialog but the options you can access depend on where you are in the [model hierarchy](#).

Some model options are stored at the **site level**:

- All options on the [Display](#) tab

Most are stored at the **building level**:

- Options on the [Data](#), [Advanced](#), [Heating design](#), [Cooling design](#), [Simulation](#) tabs

and some are stored at **block level**:

- All options on the [Block](#) tab.

So if you open the Model Options dialog when you are at building level you will not be able to access the Block Model Options. Likewise if you are at site level you will only be able to access the Display tab.

3.4.1 Model Data Options

Data tab on [Model Options](#) dialog.

Use this dialog to customise the Model Data Options for the current building.

You can edit the amount of detail in various aspects of the model:

- [Model scope](#)
- [Construction and Glazing](#)
- [Gains](#)
- [Timing](#)
- [HVAC](#)
- [Natural ventilation](#)

The descriptions to the right of the sliders, taken together, provide a summary of the current model options.

Scope		
Scope		Whole building Analyse the whole building.
Construction and Glazing Data		
Construction and glazing data		Pre-design construction templates Construction default data is defined using insulation and thermal mass settings.
Gains Data		
Gains data		Early gains Internal gains are separated into various categories (e.g. occupancy, lighting, computing etc.)
Timing		
Timing		Typical workday Timing is defined as a single profile having a start and end time for a typical workday. Days/week and summer and/or winter options
<input type="checkbox"/> HVAC + natural ventilation operates with occupancy <input checked="" type="checkbox"/> Internal gains operate with occupancy		
HVAC		
HVAC		Simple HVAC HVAC systems are defined using plant seasonal efficiency data and are modelled outside EnergyPlus
Plant sizing		4-Autosize when not set
Ventilation		
Ventilation		Scheduled ventilation Ventilation is defined as an air-change rate modified by an operation schedule and controlled using a set-point temperature.

3.4.1.1 Model scope

[Data tab on Model Options dialog.](#)

You can use the scope control to switch between 'whole building' and 'single zone' modes. To model a single-zone within a building, make sure you are editing the zone you want to model and change the scope to 'Zone'.

If you want to include building self-shading effects in a single-zone analysis you should select the 'Single zone + shading' option. Note that if the single zone is part of a large complex building, simulations using this option are often no quicker to complete than the full building simulation. This is because the shading calculations required for the large number of shading elements used to model the rest of the building are slow.

3.4.1.2 Construction and glazing

(Exception: ground floors can optionally have a ground construction added)

[Data tab on Model Options dialog.](#)

Construction and glazing

The **Construction and glazing** model option controls the way construction templates are loaded on the construction model data tab. When the option is set to **Pre-design** you can load construction templates using the Insulation and Thermal mass slider controls. When set to **General**, templates are loaded by selection from a list in the usual way.

Floor/slab/ceiling representation

You can choose to model floors, ceilings and flat roofs each having a single construction or by combining separate constructions for floor, slab and ceiling. The options are:

- **1-Combined** - all wall, floor and roof constructions are defined using a series of single constructions without the complication of understanding how layers are combined. This can be easier to understand for new users and requires less input model data. You may also find it easier to use this option when assessing your building for compliance with energy codes because by default the combined constructions used have exactly the maximum U-values allowed by the local code. See the [Combined Constructions](#) section for more details.

With **Combined** constructions, the volume of the floor constructions can be included or excluded from the zone air volume by making the appropriate setting under **Include constructions in zone volume**.

- **2-Separate** - internal floors are defined in model data by selecting constructions for floor, slab and ceiling with air gaps. Likewise flat roofs are defined by separately defining the ceiling and roof details etc. This approach can be more economical in the number of different construction components required, but requires more input model data and more careful planning. When using this option you must first familiarise yourself with the meaning on the data as described in the [Separate Constructions](#) section. Choosing this option configures constructions in the same way as DesignBuilder version 1.2 and earlier.

With **Separate** constructions, the volume of the floor constructions + floor void and ceiling constructions + ceiling void can be included or excluded from the zone air volume by making the appropriate setting under **Include constructions in zone volume**.

Note: the zone air volume referred to above is for calculating air flow rates for *natural ventilation and mechanical ventilation* not for *infiltration* which always uses the total volume (including the volume of all floor/ceiling constructions). The rationale is that infiltration will find it's way into all corners of the building but natural and mechanical ventilation is specifically delivered to the occupied space.

3.4.1.3 Gains

[Data tab on Model Options dialog.](#)

There are three levels of gains model detail:

- **Lumped** - all internal gains including occupancy, computer, office equipment, miscellaneous, catering process and lighting gains are lumped together into a single value. Solar gains are still calculated in the usual way.
- **Early** - gains can be defined separately under various categories (see above).
- **Detailed** - gains are specified by defining each individual item of equipment in each zone on the [Equipment tab](#). If you select this option then DesignBuilder will automatically set the [Timing model option](#) to **Schedules**. Note that this option was developed for creating very detailed models of existing buildings based on survey data. Entering this data for a large building is very time-consuming and in most cases you will be better served by the **Early** gains option above.

Internal gains operate with occupancy

Check this option if you wish the timing of internal gains to be the same as occupancy. Unchecking the option allows you to set the timing of each type of gain individually. For example there may be low levels of emergency lighting and some IT equipment usage while the building is unoccupied.

3.4.1.4 Timing

[Data tab on Model Options dialog.](#)

You can specify schedules in DesignBuilder using two approaches:

- **Typical workday** - where the timing is defined by a start time, end time, working days per week and seasonal variation. This approach is intended for easy early stage modelling of non-domestic buildings.
- **Schedules** - where [Schedules](#) can either be defined for each day of the week and each month of the year using daily [Profiles](#) or by using [Compact Schedule](#) format. Schedules are more flexible and can be used in other projects but they take longer to set up.

Generally if you start to find the Typical workday timing mode too restrictive you should switch to Schedules mode.

You can also request:

Timing HVAC + natural ventilation operates with occupancy

Select this option if all heating, cooling, natural ventilation and DHW operation follows occupancy.

*This option is only available if Timing is set to **Typical workday**.*

Note that HVAC operation data can modify the occupancy patterns even when **Timing HVAC + natural ventilation operates with occupancy** is set. For example :

- **Simple HVAC** - Mechanical ventilation, Heating and Cooling operation have additional Days / week and seasonal operation data. Heating operation also has Preheat hours and Cooling operation also has Precool hours.
- **Compact HVAC:**
 - **Fan-coil units, Unitary single zone** - Mechanical ventilation, Heating and Cooling operation have additional Days / week and seasonal operation data. Heating operation also has Preheat hours and Cooling operation also has Precool hours.
 - **VAV/CAV/Unitary multizone** - Min AHU outside air, AHU heating/cooling, Zone setpoint schedules have additional Days / week and seasonal operation data. Heating operation also has Preheat hours and Cooling operation also has Precool hours.

These differences are applied as 'modifiers' to the basic occupancy schedule because HVAC systems

generally switch on and off based on the occupancy time but with differences. e.g. Heating systems are often switched off in summer, they may operate during weekends when the building is unoccupied and they will often have a preheat period to get the building up to temperature before occupancy.

Internal gains operate with occupancy

Select this option if lighting and other internal gains operation follows occupancy. If you wish to enter specific schedules for lighting and/or other internal gains you should uncheck this option.

3.4.1.5 Natural Ventilation

[Data tab on Model Options dialog.](#)

Natural ventilation can either be 'Scheduled' or 'Calculated'

- Scheduled - the ventilation rates are predefined using a [maximum air change rate](#) modified by [operation schedules](#).
- Calculated - the ventilation rates are calculated using wind and buoyancy-driven pressure, opening sizes and [operation](#), crack sizes etc.

You should generally use the 'Scheduled' natural ventilation model option because it is quicker and easier to enter the related model data and also because the simulations run more quickly. However if you need to calculate natural ventilation rates which can be achieved with a particular configuration then you should use the 'Calculated' option.

[More on Natural Ventilation modelling.](#)

3.4.1.6 HVAC

[Data tab on Model Options dialog.](#)

HVAC can be defined in DesignBuilder using:

- **Simple** - the heating/cooling system is modelled using basic loads calculation algorithms and the corresponding energy consumption is calculated from loads as a post-process.
- **Compact** - the heating/cooling systems are defined in DesignBuilder using [Compact HVAC](#) descriptions but modelled in detail in EnergyPlus.

Note: you can force all HVAC systems to have the same operation schedule as occupancy by checking the 'HVAC + natural ventilation operate with occupancy' option under 'Timing'.

Plant Sizing- Autosizing

DesignBuilder can be used to automatically calculate heating and cooling capacity in each zone based on the output from the Heating and Cooling design calculations. The Plant sizing model option provides control over how [heating](#) and [cooling](#) capacities are set for Simulations. Select from:

- **1-Adequate** - The effect of this option depends on the HVAC model option. When using Simple HVAC, equipment is modelled as having adequately large capacity to meet any heating or cooling demand and setpoint temperatures are always maintained. This option can cause extremely large

peaks in heating and cooling delivery to zones and will tend to over-predict heating and cooling energy and under predict discomfort hours. When using Compact HVAC this option is equivalent to **3-Autosize** and the Compact HVAC autosizing mechanism is used to size the components and flow rates to ensure that the required comfort conditions are met.

- **2-Manual** - heating and cooling capacity Model Data must be entered manually. Choose this option if you have specific heating and cooling capacity data you wish to use and do not want it to be overwritten when model data or model options change.
- **3-Autosize** - the default option where heating and cooling capacities are always calculated prior to each simulation and the heating and cooling capacity Model data is not displayed. When using Simple HVAC the heating and cooling design calculations will be run as required before the simulation to calculate the required sizes. When using Compact HVAC the components and flow rates are sized using the EnergyPlus autosizing mechanism to ensure that the required comfort conditions are met.
- **4-Autosize when not set** - heating and cooling capacities are [Autosized](#) and loaded into model data following heating and cooling design simulations. If Capacity model data is not present before a simulation, it is generated by automatically by carrying out heating and cooling design calculations and is written into the HVAC model data.

Note: Heating and Cooling design calculations assume that heating and cooling loads are always met and so do not use this option.

Important Note About Using '4-Autosize when not set'


You should be aware that when using the default **4-Autosize when not set** option, the heating/cooling zone capacity model data is not treated the same way as other calculated results. In general, calculated results are deleted when any edit is made to the building model, but this is not the case for zone capacity model data. This is only updated when:

1. There is no heating/cooling capacity data (the value is either blank or zero when heating/cooling is switched on) and a simulation is requested. In this case the appropriate design calculations are carried out to fill in the capacity data, before the simulation.
2. The appropriate design calculation is carried out by clicking on the Heating/Cooling design tab.
3. Model Options change. In this case zone HVAC capacity is deleted.

If you always want the heating capacity to be kept up-to-date with your model and do not have any specific capacity sizes you wish to use, you should consider using the **3-Autosize** option. This will cause autosizing to be carried out prior to every simulation.

You can change heating capacities by hand if you wish but you should bear in mind that, if Model options change, all heating and cooling capacities are reset to zero. Set the option to **2-Manual** to avoid this happening.

3.4.2 Advanced Concepts

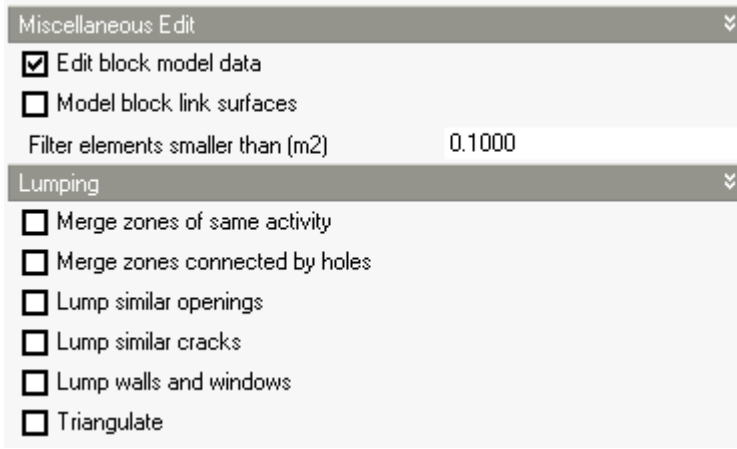

Advanced tab on [Model Options](#)

dialog.

- [Simplification](#) - options to allow zones to be merged and for controlling lumping of similar windows, openings and cracks and eliminating unnecessary zones and elements from the model.
- [Natural ventilation](#) - options to control the operation of natural ventilation.
- [Miscellaneous Edit](#) - options for controlling data displayed.
- [Lighting](#) - options for lighting.
- [Filters](#) - excluding elements from the model.

This data applies to the current building.

3.4.2.1 Simplification

When generating data for the calculations, surfaces between zones are defined twice, once from each side. Surfaces between 2 zones that have been merged are called **Surfaces within zone**. By default these are modelled in the same way as standard surfaces but with both sides adjacent to the same zone. If the [Surfaces within zone treated as adiabatic](#) option is set, the 'other side' in each of the 2 surfaces is modelled as adiabatic.

[Advanced tab on Model Options](#) dialog.

You can simplify and speed up simulations (sometimes quite significantly) by lumping zones, walls and windows and/or eliminating unnecessary zones and elements from the model. The following options are available:

Merge zones of same activity

Option reduces the number of zones by merging all zones of same activity. See below for more on merging zones.

Merge zones connected by holes

Merges zones which are connected by [holes drawn at surface level](#) or by [virtual partitions](#). You can merge one or more zones within the same block or across multiple blocks. See below for more on merging zones.

Lump similar windows on surface

Causes all windows on a zone surface having the same area, construction, frame/dividers, shading etc to be lumped into a single opening. Lumping only occurs in zones which have no lighting control. The EnergyPlus Window Multiplier mechanism is used. For models having surfaces with many similar windows this option can provide a worthwhile reduction in simulation times.

DesignBuilder does not allow a multiplier for windows to be used for [daylighting calculations](#) or **3-Full interior and exterior [Solar distribution](#)** calculations. This is because EnergyPlus does not know where each of the individual windows is located, and so cannot properly calculate the solar and visible light transmitted through these windows into a space. So in either of these cases the simulation takes place as if this option is switched off.

This is currently the only 'Simplification' option switched on by default for new models.

Lump similar cracks

Causes all cracks in a zone which are facing the same direction and have similar height to be lumped into a single crack. This option applies only when the natural ventilation model option is **Calculated**.

Lump walls and windows (developer option)

Reduces the number of walls and windows. *This is currently a **research only** tool because it has **undocumented restrictions**. It is not available for general users*

Generate fully enclosed zones

Check the **Generate fully enclosed zones** checkbox to model [Link surfaces](#). This has 2 main effects on the model:

1. Extra [Link surfaces](#) are generated to connect adjacent blocks together for both visual continuity and to allow fully closed zones to be generated.
2. The volume enclosed by the link surfaces and the inter-block partition is included in the zone volume. This volume is essentially the thickness of the block wall x inter-block partition area).

Model 'semi-exterior unconditioned' zones as simple R-value to outside

Including complex roof structures in the model can sometimes cause simulations to run slowly for little benefit in accuracy. This option allows you to exclude such spaces from the calculations adding in their place a single R-value resistance to outside. The resistance can be used as a way to include the 'buffering' of the occupied space by the semi-exterior zones without sacrificing simulation speeds.

This option can be very useful for speeding data entry for simple calculation methods like SBEM.

Openings in semi-exposed surfaces

Any openings (window, doors, vents, sub-surfaces and holes) in [semi-exposed](#) surfaces do not include the additional R-Value when this option is selected.

By default this option is off and roofspace zones (and all other [semi-exposed unconditioned](#) zones) are modelled as separate zones in calculations.

R-Value to outside

The R-value added to the outside of semi-exposed elements when **Model 'semi-exterior unconditioned'**


zones as simple R-value to outside option (above) is set.

You can enter an R-Value of 0 if you don't want to include a resistance between semi-exposed elements and outside. In this case it your responsibility to include the effect of the adjacent semi-exterior unconditioned zone in the semi-exposed constructions themselves.

Tip: You can calculate approximations for **R-Value to outside** by adjusting the R-Value until the results match those of the equivalent simulation with **Model 'semi-exterior unconditioned' zones as simple R-value to outside** switched off.

MERGING ZONES

When zones are merged using **Merge zones of same activity** or **Merge zones connected by holes**, combined merged zones are treated as a single zone in thermal calculations. When zones are merged, DesignBuilder marks one of the zones as being the 'parent' zone, and the other zones 'child' zones. The child zones are marked in blue in the Navigator together with the parent zone they have been merged into as shown below.

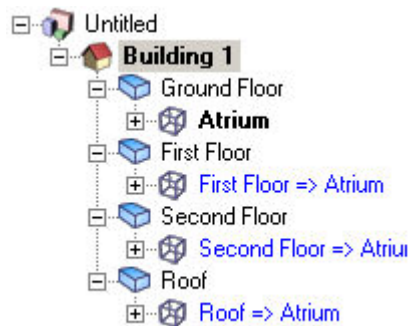

This screenshot of the Navigation list shows the First floor zone, Second floor zone and Roof zones all merged into the Atrium zone.

The parent zone is the zone that is used for defining Activity, HVAC, Lighting (and all other zone related data) for itself and all it's child zones. You therefore cannot access this zone-related Model data for merged child zones. You must go to the parent zone to edit the Model data for the combined zone. The internal gains are calculated based on the data set on the Activity tab for the parent zone but using the combined total floor area of all of the merged zones.

Constructions, glazing and other surface level data can be defined separately in each of the parent and child zones in the normal way.

Important: when merging 2 or more stacked zones using holes in the floor and the **Merge zones connected by holes option**, you should be aware that the *combined floor area used to calculate internal gains in the simulations will exclude the area of any holes in the floor*. In this case, if you have any gains calculated using the combined floor area you should either ensure that the area of the hole is very small or else use the **Merge zones of same activity** option instead and avoid using holes.

Why merge zones?

You may want to merge zones for various reasons:

- Speed up simulations.
- A geometrically complex space in the actual building is to be modelled using more than one block in DesignBuilder (e.g. [Dormer windows](#), Atria).
- To reduce the number of zones and simplify HVAC system descriptions when exporting EnergyPlus IDF data for use outside DesignBuilder.
- If you have created a tall merged zone, you may want to use the Air distribution model data on the HVAC tab to create a dynamic vertical temperature gradient. This approach to modelling tall spaces is preferred over connecting a number of horizontal slices with air flow openings, because it does not rely on getting correct airflow conductances between the horizontal slices.

Technical note

Disadvantages of merging

Merging zones can reduce cooling load peaks resulting in an underestimate of cooling equipment required to condition the building. To understand this consider a building in the Northern hemisphere with two zones, a North zone and a South zone connected to each other along the E-W axis. When solar gains are highest, the South zone may experience a cooling load and the North Zone not. Now imagine the same 2 spaces merged into a single zone. The combined zones will probably now have a lower cooling load than the load in the original South zone because the air from the South side of the merged space is cooled by the shaded North side.

In most cases merging zones will speed up simulations but sometimes simulations can slow down, especially the initialisation stage. This may be because any very large zones generated through merging can have many windows which can slow down solar and daylighting initialisation.

Merging rules

1. When merging zones using the **Merge zones of same activity** or **Merge zones connected by holes** zones connected by the merge option are lumped together into a single 'parent' zone, which in a vertical stack of zones, will be the lowest zone in the stack.
2. The zone surfaces are generated in exactly the same way as they would have been without the merging but are associated with the parent zone rather than the original zone.
3. In child merged zones, you can access Constructions and Openings surface-based Model data but not space related data such as Activity, Lighting, HVAC. This is accessed from the parent zone only.

Merging buildings

You can merge 2 existing buildings (including component blocks) using the [Transfer blocks](#) command from the Edit menu.

3.4.2.2 Natural Ventilation

[Advanced tab](#) on [Model Options](#) dialog.

Model holes (including holes in virtual partitions)

You can optionally switch off all [holes](#) in the model including those holes generated by defining partitions as [virtual partitions](#). In this case the building is modelled as if no holes were defined.

Tip: Unchecking this data can be a quick way to model virtual partitions as standard partitions.

CALCULATED NATURAL VENTILATION OPTION

Wind Factor

When carrying out conservative design simulations you may prefer to exclude (or reduce) the effects of wind from Calculated natural ventilation. To exclude wind-driven airflow from the analysis altogether set the Wind factor to 0. For full treatment of wind effects set it to 1 and for intermediate treatment of wind set to a number between 0 and 1.


Modulation of Openings

You can modulate the window/door openings when Calculated natural ventilation is being used by making appropriate settings to:

- **Limit value of opening modulation factor** - gives the reduction on opening area for low outside air temperatures.
- **Lower value of Tin-Tout** - lower value on inside/outside temperature difference for modulating the venting open factor.
- **Upper value of Tin-Tout** - upper value on inside/outside temperature difference for modulating the venting open factor (defines 'low outside air temperatures')

Note: if **Modulate calculated opening sizes** is switched on then airflow will be switched off if the difference between inside and outside air temperatures is greater than **Upper value of Tin-Tout**

This data is used within EnergyPlus/AIRNET to calculate a factor between 0 and 1 that multiplies the opening factor of each window and door in the building. Modulation of the openings can reduce the large temperature swings that can occur if the windows/doors are too far open when they are venting, especially when there is a large inside-outside temperature difference.

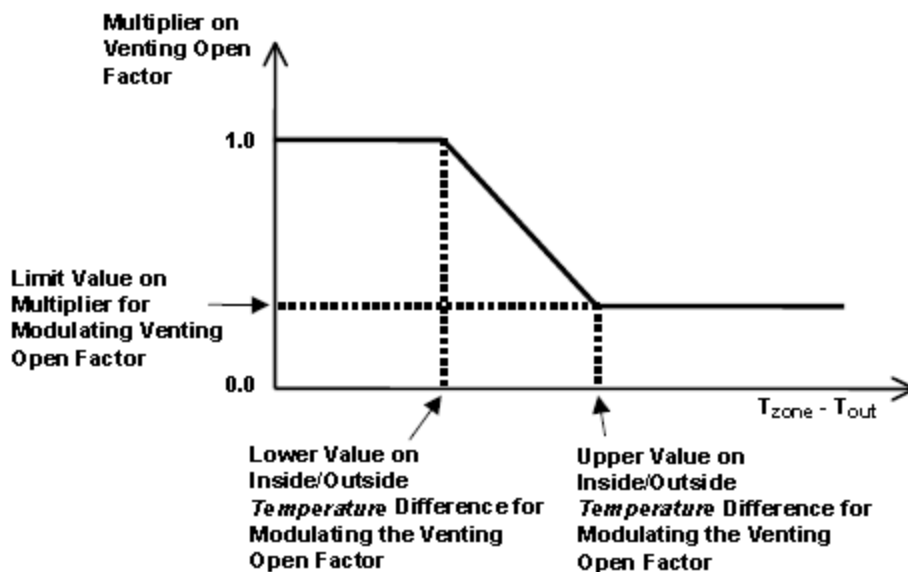

Temperature difference ($T_{in} - T_{out}$)
 $T_{in} - T_{out} \leq [\text{Lower value of } T_{in} - T_{out}]$

Opening Multiplier
 1.0

[Lower value of Tin - Tout] < **Tin - Tout** < [Upper value of Tin - Tout] Factor varies linearly from 1.0 to Limit value of Opening modulation factor.

Tin - Tout >= [Upper Value of Tin - Tout] Factor = Limit value of opening modulation factor.

For example if the Lower value of Tin - Tout is 0, the Upper value is 15 and the Limit value of opening modulation factor is 0.05, the windows and doors are only opened 5% of their full opening area when the outside air is 15 degC or more colder than inside.

SCHEDULED NATURAL VENTILATION OPTION

Airflow through internal openings

When using Scheduled natural ventilation, windows, vents, doors and holes in internal partitions can be modelled by mixing a predefined amount of air from one zone with the adjacent zone by selecting the **Airflow through internal openings** option and entering the **Airflow rate per opening area**.

Technical note: this airflow is modelled using the EnergyPlus *Mixing* option.

Warning: In EnergyPlus v.2.1.0 there is a bug in internal airflow reports for zones having 2 or more internal openings. In such zones Internal Natural ventilation typically has very large values.

3.4.2.3 Miscellaneous Edit

[Advanced tab on Model Options dialog.](#)

Automatic block zoning

By default DesignBuilder automatically generates zones as [partitions](#) are drawn. You can change this behaviour by unchecking the **Automatic block zoning** option. In this case partitions are shown in blue as they are drawn and are referred to as [outline partitions](#). Outline partitions do not create new zones and are modelled in the same way in simulations as [hanging partitions](#). To convert any outline partitions to standard partitions and to rezone the block use the [Rezone block](#) command accessed from the [Tools](#) menu. Note that outline partitions that do not connect at both ends (known in DesignBuilder as [hanging partitions](#)) will remain in blue even after the Rezone block command.

Alternatively to convert *all* outline partitions in the *building* to standard partitions and hence rezone the whole building you can use the [Rebuild](#) command. This will take longer to process than the [Rezone block](#) command as it recalculates the surface and adjacency geometry as well rezoning.

Note: switching **Automatic block zoning** off also prevents rezoning following other partition edit commands such as delete, copy and undo/redo.

Automatically include voids from lower blocks

Select this option if you would like DesignBuilder to automatically punch voids through new blocks drawn on top of existing blocks having voids. If you leave this option switched off (default state) you can still [draw voids](#) at the block level using the ghosted outline of adjacent voids in a block below as a guide.

Edit block model data

Use this option to allow editing of block level model data.

Note: If you disable block editing you will no longer be able to edit Model Data at the block level in the current building and so will not be able to set different defaults for different blocks.

3.4.2.4 Lighting

[Advanced tab on Model Options dialog.](#)

Working plane height

You can set the height of the working plane (and hence the z-position of the lighting sensor). The x-y coordinate is set by placing the [Lighting sensor](#) marker(s) at zone level.

3.4.2.5 Filters

[Advanced tab on Model Options dialog.](#)

Exclude surface elements smaller than

You can also filter out very small surfaces from the simulations (and from the Navigator panel) by defining a minimum area.

Experience suggests that a value of 0.05 is a good default. If you set the limit much lower than this you will run the risk of including very small surface slivers in the calculations. These can cause problems with EnergyPlus.

3.4.2.6 Component Blocks

[Advanced tab on Model Options dialog.](#)

Flat component block surface selection

For flat component blocks DesignBuilder uses the selection made here to decide which of the 2 largest surfaces of the component block is used in the simulation as a shading surface. Choose from:

- **1-Highest** - the upper of the 2 largest surfaces is used.
- **2-Lowest** - the lower of the 2 largest surfaces is used.

Definition of a flat component block

A component block is considered 'flat' when the 2 largest surfaces have the same area and constitute at least 95% of the total surface area of the component block.

3.4.3 Heating Design Calculation Options

Heating Design tab on [Model Options](#) dialog.

Data on this tab allows you to control the Heating Design calculations.

- [Winter Design Day](#)
- [Calculation Options](#)
- [Heating system sizing](#)
- [Advanced Calculation Options](#)
- [Output Options](#)

This data is also shown before Heating Design Calculations.

3.4.3.1 Winter Design Day

Schedule types for Compact HVAC Autosizing (Compact and Typical workday Schedules)

[7/12 Schedules](#) can be categorised using the following categories when using the **End-use defaults** option:

- **General** - include general purpose schedules in Compact HVAC heating [autosizing](#) calculations - on by default.
- **Occupancy** - include occupancy schedules - off by default
- **Lighting** - include lighting schedules - off by default.
- **Equipment** - include equipment schedules - off by default.
- **Heating demand** - include heating demand schedules - on by default.
- **Cooling demand** - include cooling demand schedules - on by default.
- **HVAC** - HVAC schedules - on by default.
- **Natural ventilation demand** - natural ventilation schedules - off by default.
- **DHW** - DHW schedules - on by default.

For example, occupancy gains should normally be excluded when sizing heating plant to ensure that the design heating plant meets all heating loads itself. So leave the Occupancy check box unchecked. Heating and cooling demand schedules must be included to ensure the system operates so the Heating demand and Cooling demand options should normally left selected.

These options are also used for [Typical workday](#) schedules.

3.4.3.2 Calculation Options

[Heating Design](#), [Cooling Design](#) and [Simulation](#) tabs on [Model Options](#) dialog and [Options](#) tab on [Simulation Options](#) dialog.

Calculation description

Enter some text to identify the calculation. This will be used in reports and in the filename for [automatically](#)

[generated ESO files.](#)

Number of time steps per hour (*Simulation only*)

The 'time steps per hour' is the number of times the building thermal network is solved per hour in the simulations. When the HVAC portion of the simulation begins it's solution for the current time step, it uses the basic time step as its maximum but then can reduce the time step, as necessary, to reach the solution.

The technical details of the approach are explained in the EnergyPlus Engineering Documentation under 'Integrated Solution Manager'.

Advanced EnergyPlus users can obtain and view data at intervals of the HVAC time step used if they select the 'detailed' option on an HVAC report variable (e.g. Zone/Sys Air Temp).

The time step entered here is also known in the EnergyPlus documentation as the Zone Time Step.

Though many buildings can be successfully simulated with 1 or 2 time steps per hour, EnergyPlus suggest 4 for non-HVAC simulations and 6 for simulations with HVAC.

Hourly data (such as outdoor conditions expressed by Design Days or Weather data) are interpolated to the Zone Time Step. This is discussed the EnergyPlus documentation under: Weather Data Hourly Interpolation.

Note: In general, increasing the number of time steps improves accuracy but slows the simulation (and generates more data if output is requested at the 'sub-hourly' interval).

Temperature Control

Heating and cooling systems control internal temperatures to meet the setpoint temperatures specified on the [Activity tab](#). These setpoint temperatures can be interpreted as air, operative or some other radiant fraction and DesignBuilder provides corresponding options to allow HVAC systems to be controlled by:

- **1-Air temperature** - control the room mean air temperature to the [heating and cooling setpoint temperatures](#) specified on the [Activity tab](#).
- **2-Operative temperature** - control the room temperature using 0.5 radiant fraction. See notes of operative temperature control below if you plan to use this option.
- **3-Other**- you can enter the radiant temperature control fraction.

The radiant fraction should be less than 0.9 and the minimum is 0.0. A value of 0.0 is the same as controlling on only zone air temperature. If air velocities are higher than 0.2 m/s, then lower values for radiative fraction might apply. Niu and Burnett (1998) cite International Standard ISO 77300 in recommending the values for this fraction listed in the following table.

Radiative Fraction vs Air Velocity

Air Velocity (m/s)	<0.2	0.2 - 0.6	0.6 - 1.0
Radiant fraction	0.5	0.4	0.3

Reference: J. Niu and J. Burnett. 1998. Integrating Radiant/Operative Temperature Controls into Building Energy Simulations. ASHRAE Transactions Vol. 104. Part 2. page 210. ASHRAE. Atlanta, GA.

You can think of the Temperature control option as:

- The radiant fraction sensed by the room thermostat, or,
- Given a room thermostat that mainly senses air temperature, the extent of automatic modification of the setpoint temperature to ensure occupant comfort.

Notes

1. This option is overridden when using radiant heating systems by the [radiant heating system control setting](#).
2. This option does not affect natural and mechanical [ventilation setpoints](#) - these always use **air temperature** set points.

Operative vs Air temperature control - Advanced discussion

There has been much debate amongst simulation experts over the years on the extent to which radiant effects should be included on the simulated thermostat. Most real-world thermostats probably don't actually sense more than about 20% radiant heat transfer - mostly the temperature sensor will be sensitive to the temperature of room air nearby. So apparently we should air temperature (or 20% radiant) control. But Operative control (radiant fraction = 0.5) can be useful for calculating realistic heating and cooling energy based on published summer and winter temperature requirements for the activities in each zone. This is because HVAC systems controlled using the operative temperature continue to condition the building until comfort conditions are met (just like they are in the real building). Also, the default [temperature set points](#) from the [Activity templates](#) are generally derived from sources quoting operative temperatures. With Air temperature control the room *air* temperature is controlled to the set point temperature, which (depending on internal radiant temperatures) may not necessarily be comfortable.

The disadvantage of **Operative** temperature control is that start up loads can be unrealistically high due to the lag in thermal response of the walls, floor, ceilings. The slow temperature response of the building fabric part governs the output of the operative thermostat and hence the operation of the heating/cooling equipment. If this effect dominates it can lead to an overestimate of the required design cooling load. You should be familiar with this issue before using operative temperature control to size heating and cooling equipment. In our experience using Operative temperature control usually leads to higher peak loads in Heating and Cooling design calculations and higher energy consumption in Simulations.

Caution

Operative temperature control can cause [EnergyPlus Error 3](#) when using Simple HVAC, or Cooling design calculations with Operative control in zones with strong radiant heat gains causing high radiant temperatures (e.g. uninsulated roof or zone is highly glazed). The error is caused by the fixed supply air temperature being higher than the zone air temperature required to give the operative setpoint (.e.g. 24 °C). The solution may be to use Air temperature control and to manage the high radiant temperatures using solar shading/insulation as appropriate.

Air temperature control is easier to use as none of the aforementioned problems apply, but it can lead to inadequate equipment sizes peak loads in Heating and Cooling design calculations when not used with a design safety factor. Also the calculations may underestimate energy consumption in Simulations of buildings with poor insulation.

Note: as a general rule you should prioritise checking building *comfort* levels when using Air temperature control and *realistic plant operation* (oversized equipment, supply temperatures very low) when using Operative temperature control.

3.4.3.3 Heating System Sizing

[Heating Design](#) tab on [Model Options](#) dialog.

Design margin

The Heating Design margin is used to multiply calculated steady state heating loads in each zone to give a recommended heating plant size. It accounts for the additional heat required to bring the building up to

temperature in a reasonably short preheat period and allows you to be confident that comfort conditions will be maintained in all but the most extreme winter conditions.

3.4.3.4 Advanced Calculation Options

[Heating Design](#), [Cooling Design](#) and [Simulation](#) tabs on [Model Options](#) dialog, [Options](#) tab on [Simulation Options](#) dialog and [General](#) tab on the [Heating](#) and [Cooling](#) Design Calculation options dialogs.

Maximum warmup days (*not heating/cooling design*)

The maximum number of 'warmup' days that might be used in the simulation before 'convergence' is achieved. A warning message will occur when the simulation 'runs out of days':

```
Loads Initialization did not Converge (CheckWarmupConvergence)
```

You may be able to increase the Maximum Number of Warmup Days and get convergence, but some anomalous buildings may still not converge. Simulation proceeds for x warmup days until convergence is reached (see Temperature and Loads Convergence above).

Inside and Outside convection algorithms

You can select from a range of EnergyPlus inside convection algorithms for calculating the convection between internal zone surfaces and the rest of the zone air in the simulation calculations. More details on this and external convection can be found under [Constructions](#) Model Data > [Surface Convection](#) header.

Solution Algorithm

Select from:

- **CTF** - sensible heat only solution not taking into account moisture storage or diffusion in the construction elements. The method used in EnergyPlus for CTF calculations is known as the state space method (Ceylan and Myers 1980; Seem 1987; Ouyang and Haghighat 1991).
- **Finite Difference** - currently research only because [instabilities](#) can occur with complex constructions.

Temperature and Loads convergence

The temperature and loads convergence values represent the maximum difference in zone temperature/loads between successive iterations before "convergence" is reached.

Convergence of the simultaneous heat balance/HVAC solution is reached when either the loads or temperature criterion is satisfied. Both tolerances work the same way, one looks at temperatures and one looks at heating and cooling loads. After the second warm-up day, the program compares the maximum temperature experienced in a space with the maximum temperature from the previous day. If those two temperatures are within the tolerance, then it has passed the first warm-up check. It does a similar comparison with lowest temperatures experience within all the zones. If the current simulation day and the previous day values are within the tolerance, then it has passed the second warm-up check. A similar comparison is carried with the loads tolerance and the maximum heating and cooling loads that are experienced within the spaces. Those are compared individually to the values for the previous day. If they are both in tolerance, then the simulation has passed the third and fourth warm-up check. The simulation stays in the warm-up period until ALL FOUR checks have been passed.

Maximum shadow overlap (*not heating design*)

Enter the maximum number of figures per shadow overlap. The shadow overlaps is a measure of the amount of complexity in the shading calculation and this maximum value allows you to limit the amount of time spent in the solar initialisation calculations.

Note: entering a small value here can speed up simulations in complex buildings. If you plan to use **Maximum shadow overlaps** below the default value of 15000 you should check accuracy of solar gains relative to results using default value

Surfaces within zone treated as adiabatic

EnergyPlus support recommend modelling surfaces wholly contained within a zone as adiabatic and this option allows you to follow this advice. We have found that in practice this option not make much difference in results or in simulation speed so for most cases you can leave it in its default state.

Note: 'surfaces contained within a zone' are frequently generated when one of the [zone merging](#) options is used where a partition or floor which would have separated two zones actually sits within the merged zone. These surfaces *do not* refer to [hanging partitions](#) which are modelled using [Internal thermal mass](#).

COMPACT HVAC SIMULATION AUTOSIZING OPTIONS

The following 2 data items are used when autosizing Compact HVAC systems before simulations.

Sizing factor (*not heating/cooling design*)

This ratio is applied at the zone level to all of the zone heating and cooling loads and air flow rates. These new loads and air flow rates are then used to calculate the system level flow rates and capacities and are used in all of the component sizing calculations.


Default value is 1.2.

Design averaging window period (*not heating/cooling design*)

The time in the zone design flow sequence averaging window during EnergyPlus Compact HVAC autosizing calculations. The default is 1 hour, in which case the calculated zone design flow rates are averaged over an hour. The autosizing zone design air flow rate calculation is performed assuming a potentially infinite supply of heating or cooling air at a fixed temperature. Thus the calculated design air flow rate will always be able to meet any load or change in load no matter how large or abrupt. In reality air flow rates are limited by duct sizes and fan capacities. The idealized zone design flow calculation may result in unrealistically large flow rates, especially if the user is performing the sizing calculations using thermostat schedules with night setup or setback. The calculated zone design flow rates are always averaged over the load timestep. You may want to perform a broader average to mitigate the effect of thermostat setup and setback and prevent the warm up or cool down flow rates from dominating the design flow rate calculation. Specifying the width of the averaging window allows the user to do this.

INCLUDE IDF DATA (*NOT HEATING/COOLING DESIGN*)

You can include up to 2 custom IDF data in your EnergyPlus simulations by checking the **IDF File 1** or **IDF File 2** check boxes and entering the name of the IDF data source file. The contents of any files specified are copied to the end of the IDF dataset generated by DesignBuilder before simulation.

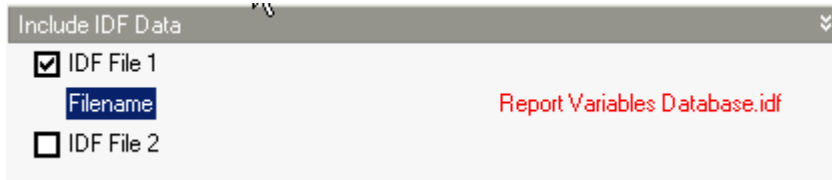

Note: Included IDF files must be located in the [EnergyPlus folder](#).

3.4.3.5 Output Options

Include unoccupied zones in block and building totals and averages

By default data for unoccupied zones is *excluded* from block and building totals and averages. Check this option to include data for unoccupied zones.

A zone is defined as unoccupied if it has:

- No occupancy and,
- No cooling and,
- No heating and,
- No mechanical ventilation

3.4.4 Cooling Design Calculation Options

Cooling Design tab on [Model Options](#) dialog.

Data on this tab allows you to control the Cooling Design calculations:

- [Summer Design Day](#)
- [Calculation Options](#)
- [Cooling system sizing](#)
- [Solar Options](#)
- [Advanced Calculation Options](#)
- [Output Options](#)

This data is also shown before Cooling Design Calculations.

3.4.4.1 Summer Design Day

Day

Select the day of the month for the design day

Month

Select the month for the design day

Day of week

Select the day of week. This is used to identify the appropriate daily profile.

3.4.4.2 Calculation Options

[Heating Design](#), [Cooling Design](#) and [Simulation](#) tabs on [Model Options](#) dialog and [Options](#) tab on [Simulation Options](#) dialog.

Calculation description

Enter some text to identify the calculation. This will be used in reports and in the filename for [automatically generated ESO files](#).

Number of time steps per hour (*Simulation only*)

The 'time steps per hour' is the number of times the building thermal network is solved per hour in the simulations. When the HVAC portion of the simulation begins it's solution for the current time step, it uses the basic time step as its maximum but then can reduce the time step, as necessary, to reach the solution.

The technical details of the approach are explained in the EnergyPlus Engineering Documentation under 'Integrated Solution Manager'.

Advanced EnergyPlus users can obtain and view data at intervals of the HVAC time step used if they select the 'detailed' option on an HVAC report variable (e.g. Zone/Sys Air Temp).

The time step entered here is also known in the EnergyPlus documentation as the Zone Time Step.

Though many buildings can be successfully simulated with 1 or 2 time steps per hour, EnergyPlus suggest 4 for non-HVAC simulations and 6 for simulations with HVAC.

Hourly data (such as outdoor conditions expressed by Design Days or Weather data) are interpolated to the Zone Time Step. This is discussed the EnergyPlus documentation under: Weather Data Hourly Interpolation.

Note: In general, increasing the number of time steps improves accuracy but slows the simulation (and generates more data if output is requested at the 'sub-hourly' interval).

Temperature Control

Heating and cooling systems control internal temperatures to meet the setpoint temperatures specified on the [Activity tab](#). These setpoint temperatures can be interpreted as air, operative or some other radiant fraction and DesignBuilder provides corresponding options to allow HVAC systems to be controlled by:

- **1-Air temperature** - control the room mean air temperature to the [heating and cooling setpoint temperatures](#) specified on the [Activity tab](#).
- **2-Operative temperature** - control the room temperature using 0.5 radiant fraction. See notes of operative temperature control below if you plan to use this option.
- **3-Other**- you can enter the radiant temperature control fraction.

The radiant fraction should be less than 0.9 and the minimum is 0.0. A value of 0.0 is the same as controlling on only zone air temperature. If air velocities are higher than 0.2 m/s, then lower values for radiative fraction might apply. Niu and Burnett (1998) cite International Standard ISO 77300 in recommending the values for this fraction listed in the following table.

Radiative Fraction vs Air Velocity

Air Velocity (m/s)	<0.2	0.2 - 0.6	0.6 - 1.0
Radiant fraction	0.5	0.4	0.3

Reference: J. Niu and J. Burnett. 1998. Integrating Radiant/Operative Temperature Controls into Building Energy Simulations. ASHRAE Transactions Vol. 104. Part 2. page 210. ASHRAE. Atlanta, GA.

You can think of the Temperature control option as:

- The radiant fraction sensed by the room thermostat, or,
- Given a room thermostat that mainly senses air temperature, the extent of automatic modification of the setpoint temperature to ensure occupant comfort.

Notes

1. This option is overridden when using radiant heating systems by the [radiant heating system control setting](#).
2. This option does not affect natural and mechanical [ventilation setpoints](#) - these always use **air temperature** set points.

Operative vs Air temperature control - Advanced discussion

There has been much debate amongst simulation experts over the years on the extent to which radiant effects should be included on the simulated thermostat. Most real-world thermostats probably don't actually sense more than about 20% radiant heat transfer - mostly the temperature sensor will be sensitive to the temperature of room air nearby. So apparently we should air temperature (or 20% radiant) control. But Operative control (radiant fraction = 0.5) can be useful for calculating realistic heating and cooling energy based on published summer and winter temperature requirements for the activities in each zone. This is because HVAC systems controlled using the operative temperature continue to condition the building until comfort conditions are met (just like they are in the real building). Also, the default [temperature set points](#) from the [Activity templates](#) are generally derived from sources quoting operative temperatures. With Air temperature control the room *air* temperature is controlled to the set point temperature, which (depending on internal radiant temperatures) may not necessarily be comfortable.

The disadvantage of **Operative** temperature control is that start up loads can be unrealistically high due to the lag in thermal response of the walls, floor, ceilings. The slow temperature response of the building fabric part governs the output of the operative thermostat and hence the operation of the heating/cooling equipment. If this effect dominates it can lead to an overestimate of the required design cooling load. You should be familiar with this issue before using operative temperature control to size heating and cooling equipment. In our experience using Operative temperature control usually leads to higher peak loads in Heating and Cooling design calculations and higher energy consumption in Simulations.

Caution

Operative temperature control can cause [EnergyPlus Error 3](#) when using Simple HVAC, or Cooling design calculations with Operative control in zones with strong radiant heat gains causing high radiant temperatures (e.g. uninsulated roof or zone is highly glazed). The error is caused by the fixed supply air temperature being higher than the zone air temperature required to give the operative setpoint (.e.g. 24 °C). The solution may be to use Air temperature control and to manage the high radiant temperatures using solar shading/insulation as appropriate.

Air temperature control is easier to use as none of the aforementioned problems apply, but it can lead to inadequate equipment sizes peak loads in Heating and Cooling design calculations when not used with a design safety factor. Also the calculations may underestimate energy consumption in Simulations of buildings with poor insulation.

Note: as a general rule you should prioritise checking building *comfort* levels when using Air temperature control and *realistic plant operation* (oversized equipment, supply temperatures very low) when using Operative temperature control.

3.4.4.3 Cooling System Sizing

[Cooling Design](#) tab on [Model Options](#) dialog.

Design margin

The Cooling Design margin is a 'safety factor' used to multiply calculated cooling loads in each zone to give a recommended maximum cooling equipment capacity. It accounts for the additional cooling required to cool the building down in a reasonably short precool period and allows you to be confident that comfort conditions will be maintained in all but the most extreme summer conditions (risk depends on the [Summer Design Weather Data](#) options selected at site level).

Sizing method

Sizing methods available are:

- [1-ASHRAE](#) - standard Heat Balance method implemented in EnergyPlus.
- [2-Unitary DX](#) - calculations are made through a detailed EnergyPlus simulation using Unitary DX equipment.
- [3-VAV](#) - detailed EnergyPlus simulation using VAV equipment.
- [4-Fan coil](#) - detailed EnergyPlus simulation using Fan coil equipment.

Note: you do not need to have the Compact HVAC model option set to use the detailed cooling load sizing options 2, 3 and 4 above.

3.4.4.3.1 ASHRAE Cooling Sizing

In the ASHRAE cooling sizing method the cooling design load calculations are carried out using the standard ASHRAE Heat Balance method implemented in EnergyPlus using the 'Purchased air' system type. You can define the conditions of the supply air delivered to cooled zones using Design supply temperature and Supply air humidity ratio. The total (sensible + latent) load is calculated as the enthalpy change between the zone return air and the specified supply air condition for the current load.

The ASHRAE system is modelled assuming:

- No [economiser](#),
- No heat recovery,
- No heating,
- Zero pressure rise fan,
- No humidification/dehumidification,
- Zone [plenums](#) will not be used if specified,
- Outside airflow rate and operation schedule defined by the data under the [Mechanical Ventilation](#) header on the [HVAC](#) tab at the zone level,
- Cooling coil availability defined by the schedule under the [Cooling](#) header on the [HVAC](#) tab at the zone level,
- Zone design cooling temperature setpoints are defined by the data under [Environmental Control](#) on the [Activity](#) tab.

Unlike the other 3 cooling sizing options, **1-ASHRAE** *cannot* be used in conjunction with [Natural ventilation](#).

Design supply temperature

The constant dry-bulb air temperature of the air supplied for cooling the zone.

Supply air humidity ratio

The constant humidity ratio (mass of water per mass of dry air) of the cold supply air. The default humidity ratio is 0.009.

3.4.4.3.2 Unitary DX Cooling Sizing

When using the Unitary DX cooling sizing method the Cooling design calculation is made through a detailed EnergyPlus simulation using Compact HVAC Single zone Unitary DX equipment. A diagram of the system layout used is shown in the [Unitary Single Zone](#) topic.

Each zone has it's own Unitary system with a fan (generating no pickup), a DX cooling coil, an outside air controller and a damper to reduce supply air flow. More specifically:

- No [economiser](#),
- No heat recovery,
- No heating coil,
- Zero pressure rise fan,
- No humidification/dehumidification,
- Zone [plenums](#) will be used if specified,
- Outside airflow rate and operation schedule defined by the data under the [Mechanical Ventilation](#) header on the [HVAC](#) tab at the zone level,
- Cooling coil availability defined by the schedule under the [Cooling](#) header on the [HVAC](#) tab at the zone level,
- Zone design cooling temperature setpoints are defined by the data under [Environmental Control](#) on the [Activity](#) tab.

Unlike the [ASHRAE](#) cooling sizing option, **Unitary DX** can be used in conjunction with [Natural ventilation](#).

Note: **Unitary DX** will tend to calculate higher latent loads than the other 3 cooling sizing methods and the zone air humidity will generally be lower. This is because DX coils run colder than water-cooled coils and will condense out more water from the supply air. Unitary DX can be used to provide a conservative calculation for the latent cooling loads.

3.4.4.3.3 VAV Cooling Sizing

When using the VAV cooling sizing method, the Cooling design calculation is made through a detailed EnergyPlus simulation using Compact HVAC VAV equipment. A diagram of the system layout used is shown in the [VAV](#) topic.

Each zone has it's own VAV AHU with a fan (generating no pickup), a water-cooled AHU cooling coil, an outside air controller and a zone terminal box with a damper to reduce supply air flow. More specifically:

- No [economiser](#),
- No heat recovery,
- No AHU heating coil,
- No reheat coil,
- No preheat coil,
- Zero pressure rise fan,
- No humidification/dehumidification,
- Standard [zone terminal unit](#),
- Zone [plenums](#) will be used if specified,
- Outside airflow rate and operation schedule defined by the data under the [Mechanical Ventilation](#) header on the [HVAC](#) tab at the zone level,
- Cooling coil availability defined by the schedule under the [Cooling](#) header on the [HVAC](#) tab at the zone level,
- Zone design cooling temperature setpoints are defined by the data under [Environmental Control](#) on the [Activity](#) tab.

Unlike the [ASHRAE](#) cooling sizing option, **VAV** can be used in conjunction with [Natural ventilation](#).

Design supply temperature

The constant dry-bulb air temperature of the air supplied for cooling the zone

Design turndown ratio (supply air minimum flow fraction)

The Design turndown ratio is the fraction that the zone VAV box can reduce to based on the supply air maximum flow rate. It is normally specified to meet the minimum ventilation requirement for the occupants. A value of 1.0 means that the VAV box cannot reduce supply air at all (i.e. it is a constant volume system).

Turndown ratio is typically in range **0.3 - 0.5**. Minimum is 0 and maximum is 1.

3.4.4.3.4 Fan Coil Cooling Sizing

When using the Fan coil cooling sizing method, the Cooling design calculation is made through a detailed EnergyPlus simulation using Compact HVAC Fan coil equipment. A diagram of the system layout used is shown in the [Fan Coil Units](#) topic.

Each zone has it's own Fan coil unit with a fan (generating no pickup), a water-cooled cooling coil, an outside air controller and a zone terminal box with a damper to reduce supply air flow. More specifically:

- No [economiser](#),
- No heat recovery,
- No heating coil,
- Zero pressure rise fan,
- No humidification/dehumidification,
- Outside airflow rate and operation schedule defined by the data under the [Mechanical Ventilation](#) header on the [HVAC](#) tab at the zone level (*see note below about outside air flow rates*),
- Cooling coil availability defined by the schedule under the [Cooling](#) header on the [HVAC](#) tab at the zone level,
- Zone design cooling temperature setpoints are defined by the data under [Environmental Control](#) on the [Activity](#) tab.

Unlike the [ASHRAE](#) cooling sizing option, **Fan coil** can be used in conjunction with [Natural ventilation](#).

Design supply temperature

The constant dry-bulb air temperature of the air supplied for cooling the zone

Note: the Fan coil outside air flow can be fully on or fully off but cannot reduce to fractional values in between. You may therefore get higher outside air delivery rates than with the other methods if you are using [Schedules](#) and your Mechanical ventilation [operation schedule](#) has fractional values.

3.4.4.4 Solar Options

[Cooling Design](#) and [Simulation](#) tabs on [Model Options](#) dialog and [Options](#) tab on [Simulation Options](#) dialog.

Solar Options allow you to control aspects of the model related to solar gains.

Include all buildings in shading calcs

Use this option to include other buildings on the site as shading obstructions.

Note: there is no way to simulate > 1 building at a time. All external surfaces in buildings other than the current one are modelled as shading surfaces. If you need to model the adjacency of another building in contact with the current one, you can use the [adiabatic](#) adjacency option to model the touching surfaces.


Cooling Design Calculations and Simulations both use this option but have separate Model option data.

Note: if one or more 'other buildings' are large/complex then you could generate a large number of shading elements and the [simulation could be slow](#) (even if the current building being simulated is simple).

Model reflections

If using reflections, the program calculates beam and sky solar radiation that is reflected from exterior surfaces and then strikes the building. These reflecting surfaces fall into 3 categories:


1. Shadowing surfaces. These are surfaces like overhangs or neighboring buildings (see below). These surfaces can have diffuse and specular (beam-to-beam) reflectance values derived from the material properties of the wall/windows.

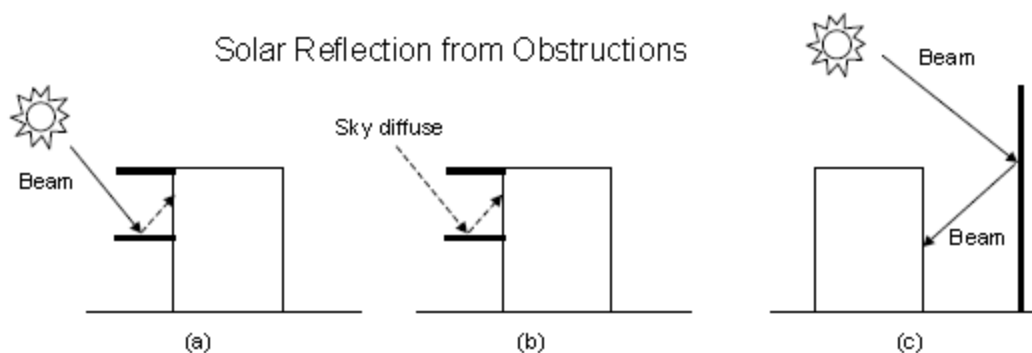

Solar reflection from shadowing surfaces. Solid arrows are beam solar radiation; dashed arrows are diffuse solar radiation. (a) Diffuse reflection of beam solar radiation from the top of an overhang. (b)

Diffuse reflection of sky solar radiation from the top of an overhang. (c) Beam-to-beam (specular) reflection from the façade of an adjacent highly-glazed building represented by a vertical shadowing surface.


2. Exterior building surfaces. In this case one section of the building reflects solar radiation onto another section (and vice-versa). See below. The building surfaces are assumed to be diffusely reflecting if they are opaque (walls, for example) and specularly reflecting if they are windows or glass doors. The reflectance values for opaque surfaces are calculated by the program from the [Solar Absorptance](#) and [Visible Absorptance](#) of the outer material layer of the surface's construction. The reflectance values for windows and glass doors are calculated by the program from the reflectance properties of the [individual glass layers](#) that make up surface's construction assuming no shading device is present and taking into account inter-reflections among the layers.

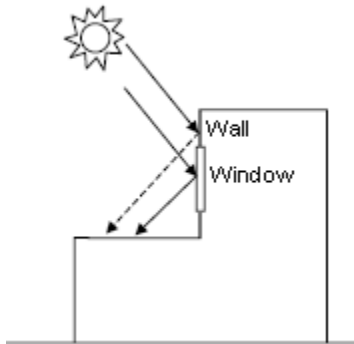

Solar reflection from building surfaces onto other building surfaces. In this example beam solar reflects from a vertical section of the building onto a roof section. The reflection from the window is specular. The reflection from the wall is diffuse.

3. The ground surface.

Reflection from the ground is calculated even if the reflections option is not used. But in this case the ground plane is considered unobstructed, i.e., the shadowing of the ground by the building itself or by obstructions such as neighboring buildings is ignored. This shadowing is taken into account if the reflections option is used. This is shown in diagrammatically below.

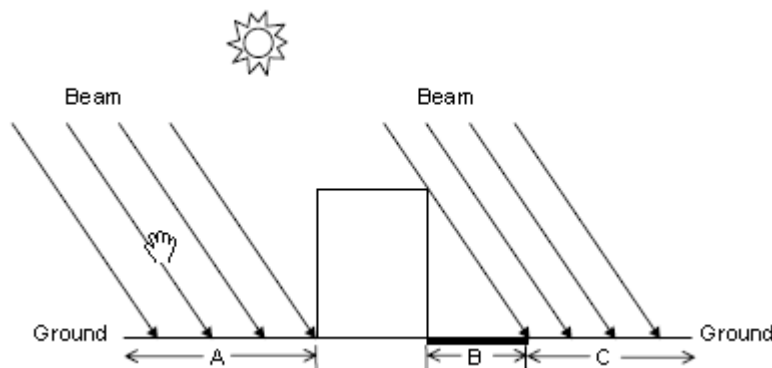

Shadowing from building affects beam solar reflection from the ground. Beam-to-diffuse reflection from the ground onto the building occurs only for sunlit areas, A and C, not from shaded area, B.

If reflections option is used for the ground surface then the ground view factor is NOT used.

Solar distribution

This option determines how EnergyPlus treats beam solar radiation and reflectance from exterior surfaces that strike the building and, ultimately, enter the zone. There are five choices:

 
 

 
1-Minimal shadowing - In this case, there is no exterior shadowing except from window and door reveals. All beam solar radiation entering the zone is assumed to fall on the floor, where it is absorbed according to the floor's solar absorptance. Any reflected by the floor is added to the transmitted diffuse radiation, which is assumed to be uniformly distributed on all interior surfaces. If no floor is present in the zone, the incident beam solar radiation is absorbed on all interior surfaces according to their absorptances. The zone heat balance is then applied at each surface and on the zone's air with the absorbed radiation being treated as a flux on the surface.

2-Full Exterior - in this case, shadow patterns on exterior surfaces caused by detached shading, wings, overhangs, and exterior surfaces of all zones are computed. As for Minimal shadowing, shadowing by window and door reveals is also calculated. Beam solar radiation entering the zone is treated as for 'Minimal shadowing' - all beam solar radiation entering the zone is assumed to fall on the floor, where it is absorbed according to the floor's solar absorptance. Any reflected by the floor is added to the transmitted diffuse radiation, which is distributed among interior surfaces according to view factors. If no floor is present in the zone, the incident beam solar radiation is absorbed on all interior surfaces according to their absorptance.

If you use **2-Full Exterior** you should make sure that all of your zones have a floor. If your building model has any zones of unusual shape without floors then the EnergyPlus simulation may not work because it will not have a surface to apportion solar gains to.

3-Full interior and exterior - this is the same as 'Full exterior' except that instead of assuming all transmitted beam solar falls on the floor the program calculates the amount of beam radiation falling on each surface in the zone, including floor, walls and windows, by projecting the sun's rays through the exterior windows, taking into account the effect of exterior shadowing surfaces and window shading devices. If this option is used, you should be sure that the surfaces of the zone totally enclose a space. This can be determined by viewing the [eplusout.dxf](#) file with an external DXF viewer program.

You should also be sure that the zone is convex. Examples of convex and non-convex zones are shown below. The most common non-convex zone is an L-shaped zone. (A formal definition of convex is that any straight line passing through the zone intercepts at most two surfaces.) If the zone's surfaces do not enclose a space or if the zone is not convex you should use 'Full exterior' instead.

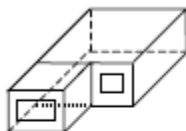

Convex zones

Non-Convex zones

If you use **3-Full Interior and exterior** the program will also calculate how much beam radiation falling on the inside of an exterior window (from other windows in the zone) is absorbed by the window, how much is reflected back into the zone, and how much is transmitted to the outside. In this calculation the effect of a

shading device, if present, is accounted for.

Important!

You must use **3-Full Interior and exterior** to account for solar and light transmission through internal windows.

Check for non-convex zones

When the solar distribution selection is **3-Full interior and exterior** (above) you can choose whether DesignBuilder is to check for non-convex zones. By default the option is to carry out the check to prevent invalid results, but if the zones are only slightly non-convex you can switch off this check and allow EnergyPlus to continue calculations. You will probably receive [error message 2](#) if you switch this option off and have non-convex zones. The EnergyPlus simulation may or may not fail.

Shadowing interval (Simulation only)

Enter the number of days (1-365) covered by each shadowing calculation.

Enter 1 if you want shadowing to be calculated every day (for greater detail but slower calculations).

3.4.4.5 Advanced Calculation Options

[Heating Design](#), [Cooling Design](#) and [Simulation](#) tabs on [Model Options](#) dialog, [Options](#) tab on [Simulation Options](#) dialog and [General](#) tab on the [Heating](#) and [Cooling](#) Design Calculation options dialogs.

Maximum warmup days (*not heating/cooling design*)

The maximum number of 'warmup' days that might be used in the simulation before 'convergence' is achieved. A warning message will occur when the simulation 'runs out of days':

```
Loads Initialization did not Converge (CheckWarmupConvergence)
```

You may be able to increase the Maximum Number of Warmup Days and get convergence, but some anomalous buildings may still not converge. Simulation proceeds for x warmup days until convergence is reached (see Temperature and Loads Convergence above).

Inside and Outside convection algorithms

You can select from a range of EnergyPlus inside convection algorithms for calculating the convection between internal zone surfaces and the rest of the zone air in the simulation calculations. More details on this and external convection can be found under [Constructions](#) Model Data > [Surface Convection](#) header.

Solution Algorithm

Select from:

- **CTF** - sensible heat only solution not taking into account moisture storage or diffusion in the construction elements. The method used in EnergyPlus for CTF calculations is known as the state space method (Ceylan and Myers 1980; Seem 1987; Ouyang and Haghighat 1991).
- **Finite Difference** - currently research only because [instabilities](#) can occur with complex

constructions.

Temperature and Loads convergence

The temperature and loads convergence values represent the maximum difference in zone temperature/loads between successive iterations before “convergence” is reached.

Convergence of the simultaneous heat balance/HVAC solution is reached when either the loads or temperature criterion is satisfied. Both tolerances work the same way, one looks at temperatures and one looks at heating and cooling loads. After the second warm-up day, the program compares the maximum temperature experienced in a space with the maximum temperature from the previous day. If those two temperatures are within the tolerance, then it has passed the first warm-up check. It does a similar comparison with lowest temperatures experience within all the zones. If the current simulation day and the previous day values are within the tolerance, then it has passed the second warm-up check. A similar comparison is carried with the loads tolerance and the maximum heating and cooling loads that are experienced within the spaces. Those are compared individually to the values for the previous day. If they are both in tolerance, then the simulation has passed the third and fourth warm-up check. The simulation stays in the warm-up period until ALL FOUR checks have been passed.

Maximum shadow overlap (*not heating design*)

Enter the maximum number of figures per shadow overlap. The shadow overlaps is a measure of the amount of complexity in the shading calculation and this maximum value allows you to limit the amount of time spent in the solar initialisation calculations.

Note: entering a small value here can speed up simulations in complex buildings. If you plan to use **Maximum shadow overlaps** below the default value of 15000 you should check accuracy of solar gains relative to results using default value

Surfaces within zone treated as adiabatic

EnergyPlus support recommend modelling surfaces wholly contained within a zone as adiabatic and this option allows you to follow this advice. We have found that in practice this option not make much difference in results or in simulation speed so for most cases you can leave it in its default state.

Note: 'surfaces contained within a zone' are frequently generated when one of the [zone merging](#) options is used where a partition or floor which would have separated two zones actually sits within the merged zone. These surfaces *do not* refer to [hanging partitions](#) which are modelled using [Internal thermal mass](#).

COMPACT HVAC SIMULATION AUTOSIZING OPTIONS

The following 2 data items are used when autosizing Compact HVAC systems before simulations.

Sizing factor (*not heating/cooling design*)

This ratio is applied at the zone level to all of the zone heating and cooling loads and air flow rates. These new loads and air flow rates are then used to calculate the system level flow rates and capacities and are used in all of the component sizing calculations.

Default value is 1.2.


Design averaging window period (*not heating/cooling design*)

The time in the zone design flow sequence averaging window during EnergyPlus Compact HVAC autosizing calculations. The default is 1 hour, in which case the calculated zone design flow rates are

averaged over an hour. The autosizing zone design air flow rate calculation is performed assuming a potentially infinite supply of heating or cooling air at a fixed temperature. Thus the calculated design air flow rate will always be able to meet any load or change in load no matter how large or abrupt. In reality air flow rates are limited by duct sizes and fan capacities. The idealized zone design flow calculation may result in unrealistically large flow rates, especially if the user is performing the sizing calculations using thermostat schedules with night setup or setback. The calculated zone design flow rates are always averaged over the load timestep. You may want to perform a broader average to mitigate the effect of thermostat setup and setback and prevent the warm up or cool down flow rates from dominating the design flow rate calculation. Specifying the width of the averaging window allows the user to do this.

INCLUDE IDF DATA (NOT HEATING/COOLING DESIGN)

You can include up to 2 custom IDF data in your EnergyPlus simulations by checking the **IDF File 1** or **IDF File 2** check boxes and entering the name of the IDF data source file. The contents of any files specified are copied to the end of the IDF dataset generated by DesignBuilder before simulation.

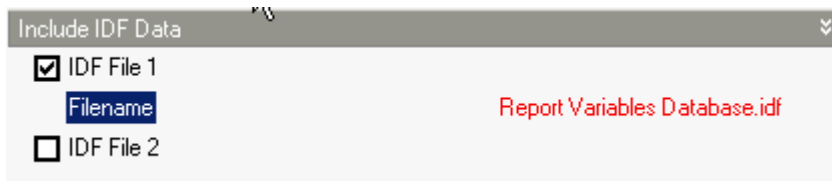

Include IDF Data

IDF File 1
Filename Report Variables Database.idf

IDF File 2

Note: Included IDF files must be located in the [EnergyPlus folder](#).

3.4.4.6 Output Options

Include unoccupied zones in block and building totals and averages

By default data for unoccupied zones is *excluded* from block and building totals and averages. Check this option to include data for unoccupied zones.

A zone is defined as unoccupied if it has:

- No occupancy and,
- No cooling and,
- No heating and,
- No mechanical ventilation

3.4.5 Simulation Calculation Options

Simulation tab on [Model Options dialog](#).

Data on this tab allows you to control the simulations:

- [Simulation Period](#)
- [Calculation options](#)
- [Solar options](#)
- [Advanced Calculation Options](#)
- [Output options](#)

This data is also shown before simulations in the [Simulation Calculation Options](#) dialog.

3.4.5.1 Simulation Period

[Simulation tab](#) on [Model Options](#) dialog and [General tab](#) on [Simulation Options](#) dialog.

Simulation Period

Select the start and end days for the simulation, or select a typical period using the links on the Info panel:

- **Annual simulation** - all 365 days of the year.
- **Summer design week** - a week identified by the weather data translator as being the hottest of the year.
- **Summer typical week** - a week identified by the weather data translator as being typical of the summer.
- **All summer** - simulate the whole summer (as identified by the weather data translator).
- **Winter design week** - a week identified by the weather data translator as being the coldest of the year.
- **Winter typical week** - a week identified by the weather data translator as being typical of the winter.
- **All winter** - simulate the whole winter (as identified by the weather data translator).

The above typical simulation periods are derived from the [Statistics data](#) from the currently selected [Hourly weather data](#).

3.4.5.2 Calculation Options

[Heating Design](#), [Cooling Design](#) and [Simulation](#) tabs on [Model Options](#) dialog and [Options](#) tab on [Simulation Options](#) dialog.

Calculation description

Enter some text to identify the calculation. This will be used in reports and in the filename for [automatically generated ESO files](#).

Number of time steps per hour (*Simulation only*)

The 'time steps per hour' is the number of times the building thermal network is solved per hour in the simulations. When the HVAC portion of the simulation begins it's solution for the current time step, it uses the basic time step as its maximum but then can reduce the time step, as necessary, to reach the solution.

The technical details of the approach are explained in the EnergyPlus Engineering Documentation under 'Integrated Solution Manager'.

Advanced EnergyPlus users can obtain and view data at intervals of the HVAC time step used if they select the 'detailed' option on an HVAC report variable (e.g. Zone/Sys Air Temp).

The time step entered here is also known in the EnergyPlus documentation as the Zone Time Step.

Though many buildings can be successfully simulated with 1 or 2 time steps per hour, EnergyPlus suggest 4 for non-HVAC simulations and 6 for simulations with HVAC.

Hourly data (such as outdoor conditions expressed by Design Days or Weather data) are interpolated to the Zone Time Step. This is discussed the EnergyPlus documentation under: Weather Data Hourly Interpolation.

Note: In general, increasing the number of time steps improves accuracy but slows the simulation (and generates more data if output is requested at the 'sub-hourly' interval).

Temperature Control

Heating and cooling systems control internal temperatures to meet the setpoint temperatures specified on the [Activity tab](#). These setpoint temperatures can be interpreted as air, operative or some other radiant fraction and DesignBuilder provides corresponding options to allow HVAC systems to be controlled by:

- **1-Air temperature** - control the room mean air temperature to the [heating and cooling setpoint temperatures](#) specified on the [Activity tab](#).
- **2-Operative temperature** - control the room temperature using 0.5 radiant fraction. See notes of operative temperature control below if you plan to use this option.
- **3-Other**- you can enter the radiant temperature control fraction.

The radiant fraction should be less than 0.9 and the minimum is 0.0. A value of 0.0 is the same as controlling on only zone air temperature. If air velocities are higher than 0.2 m/s, then lower values for radiative fraction might apply. Niu and Burnett (1998) cite International Standard ISO 77300 in recommending the values for this fraction listed in the following table.

Radiative Fraction vs Air Velocity

Air Velocity (m/s)	<0.2	0.2 - 0.6	0.6 - 1.0
Radiant fraction	0.5	0.4	0.3

Reference: J. Niu and J. Burnett. 1998. Integrating Radiant/Operative Temperature Controls into Building Energy Simulations. ASHRAE Transactions Vol. 104. Part 2. page 210. ASHRAE. Atlanta, GA.

You can think of the Temperature control option as:

- The radiant fraction sensed by the room thermostat, or,
- Given a room thermostat that mainly senses air temperature, the extent of automatic modification of the setpoint temperature to ensure occupant comfort.

Notes

1. This option is overridden when using radiant heating systems by the [radiant heating system control setting](#).
2. This option does not affect natural and mechanical [ventilation setpoints](#) - these always use **air temperature** set points.

Operative vs Air temperature control - Advanced discussion

There has been much debate amongst simulation experts over the years on the extent to which radiant effects should be included on the simulated thermostat. Most real-world thermostats probably don't actually sense more than about 20% radiant heat transfer - mostly the temperature sensor will be sensitive to the temperature of room air nearby. So apparently we should air temperature (or 20% radiant) control. But Operative control (radiant fraction = 0.5) can be useful for calculating realistic heating and cooling energy based on published summer and winter temperature requirements for the activities in each zone. This is because HVAC systems controlled using the operative temperature continue to condition the building until comfort conditions are met (just like they are in the real building). Also, the default [temperature set points](#) from the [Activity templates](#) are generally derived from sources quoting operative temperatures. With Air temperature control the room *air* temperature is controlled to the set point

temperature, which (depending on internal radiant temperatures) may not necessarily be comfortable.

The disadvantage of **Operative** temperature control is that start up loads can be unrealistically high due to the lag in thermal response of the walls, floor, ceilings. The slow temperature response of the building fabric part governs the output of the operative thermostat and hence the operation of the heating/cooling equipment. If this effect dominates it can lead to an overestimate of the required design cooling load. You should be familiar with this issue before using operative temperature control to size heating and cooling equipment. In our experience using Operative temperature control usually leads to higher peak loads in Heating and Cooling design calculations and higher energy consumption in Simulations.

Caution

Operative temperature control can cause [EnergyPlus Error 3](#) when using Simple HVAC, or Cooling design calculations with Operative control in zones with strong radiant heat gains causing high radiant temperatures (e.g. uninsulated roof or zone is highly glazed). The error is caused by the fixed supply air temperature being higher than the zone air temperature required to give the operative setpoint (.e.g. 24 °C). The solution may be to use Air temperature control and to manage the high radiant temperatures using solar shading/insulation as appropriate.

Air temperature control is easier to use as none of the aforementioned problems apply, but it can lead to inadequate equipment sizes peak loads in Heating and Cooling design calculations when not used with a design safety factor. Also the calculations may underestimate energy consumption in Simulations of buildings with poor insulation.

Note: as a general rule you should prioritise checking building *comfort* levels when using Air temperature control and *realistic plant operation* (oversized equipment, supply temperatures very low) when using Operative temperature control.

3.4.5.3 Advanced Calculation Options

[Heating Design](#), [Cooling Design](#) and [Simulation](#) tabs on [Model Options](#) dialog, [Options](#) tab on [Simulation Options](#) dialog and [General](#) tab on the [Heating](#) and [Cooling](#) Design Calculation options dialogs.

Maximum warmup days (*not heating/cooling design*)

The maximum number of 'warmup' days that might be used in the simulation before 'convergence' is achieved. A warning message will occur when the simulation 'runs out of days':

```
Loads Initialization did not Converge (CheckWarmupConvergence)
```

You may be able to increase the Maximum Number of Warmup Days and get convergence, but some anomalous buildings may still not converge. Simulation proceeds for x warmup days until convergence is reached (see Temperature and Loads Convergence above).

Inside and Outside convection algorithms

You can select from a range of EnergyPlus inside convection algorithms for calculating the convection between internal zone surfaces and the rest of the zone air in the simulation calculations. More details on this and external convection can be found under [Constructions](#) Model Data > [Surface Convection](#) header.

Solution Algorithm

Select from:

- **CTF** - sensible heat only solution not taking into account moisture storage or diffusion in the construction elements. The method used in EnergyPlus for CTF calculations is known as the state space method (Ceylan and Myers 1980; Seem 1987; Ouyang and Haghghat 1991).
- **Finite Difference** - currently research only because [instabilities](#) can occur with complex constructions.

Temperature and Loads convergence

The temperature and loads convergence values represent the maximum difference in zone temperature/ loads between successive iterations before “convergence” is reached.

Convergence of the simultaneous heat balance/HVAC solution is reached when either the loads or temperature criterion is satisfied. Both tolerances work the same way, one looks at temperatures and one looks at heating and cooling loads. After the second warm-up day, the program compares the maximum temperature experienced in a space with the maximum temperature from the previous day. If those two temperatures are within the tolerance, then it has passed the first warm-up check. It does a similar comparison with lowest temperatures experience within all the zones. If the current simulation day and previous day values are within the tolerance, then it has passed the second warm-up check. A similar comparison is carried with the loads tolerance and the maximum heating and cooling loads that are experienced within the spaces. Those are compared individually to the values for the previous day. If they are both in tolerance, then the simulation has passed the third and fourth warm-up check. The simulation stays in the warm-up period until ALL FOUR checks have been passed.

Maximum shadow overlap (*not heating design*)

Enter the maximum number of figures per shadow overlap. The shadow overlaps is a measure of the amount of complexity in the shading calculation and this maximum value allows you to limit the amount of time spent in the solar initialisation calculations.

Note: entering a small value here can speed up simulations in complex buildings. If you plan to use **Maximum shadow overlaps** below the default value of 15000 you should check accuracy of solar gains relative to results using default value

Surfaces within zone treated as adiabatic

EnergyPlus support recommend modelling surfaces wholly contained within a zone as adiabatic and this option allows you to follow this advice. We have found that in practice this option not make much difference in results or in simulation speed so for most cases you can leave it in its default state.

Note: 'surfaces contained within a zone' are frequently generated when one of the [zone merging](#) options is used where a partition or floor which would have separated two zones actually sits within the merged zone. These surfaces *do not* refer to [hanging partitions](#) which are modelled using [Internal thermal mass](#).

COMPACT HVAC SIMULATION AUTOSIZING OPTIONS

The following 2 data items are used when autosizing Compact HVAC systems before simulations.

Sizing factor (*not heating/cooling design*)

This ratio is applied at the zone level to all of the zone heating and cooling loads and air flow rates. These new loads and air flow rates are then used to calculate the system level flow rates and capacities and are used in all of the component sizing calculations.


Default value is 1.2.

Design averaging window period (*not heating/cooling design*)

The time in the zone design flow sequence averaging window during EnergyPlus Compact HVAC autosizing calculations. The default is 1 hour, in which case the calculated zone design flow rates are averaged over an hour. The autosizing zone design air flow rate calculation is performed assuming a potentially infinite supply of heating or cooling air at a fixed temperature. Thus the calculated design air flow rate will always be able to meet any load or change in load no matter how large or abrupt. In reality air flow rates are limited by duct sizes and fan capacities. The idealized zone design flow calculation may result in unrealistically large flow rates, especially if the user is performing the sizing calculations using thermostat schedules with night setup or setback. The calculated zone design flow rates are always averaged over the load timestep. You may want to perform a broader average to mitigate the effect of thermostat setup and setback and prevent the warm up or cool down flow rates from dominating the design flow rate calculation. Specifying the width of the averaging window allows the user to do this.

INCLUDE IDF DATA (*NOT HEATING/COOLING DESIGN*)

You can include up to 2 custom IDF data in your EnergyPlus simulations by checking the **IDF File 1** or **IDF File 2** check boxes and entering the name of the IDF data source file. The contents of any files specified are copied to the end of the IDF dataset generated by DesignBuilder before simulation.

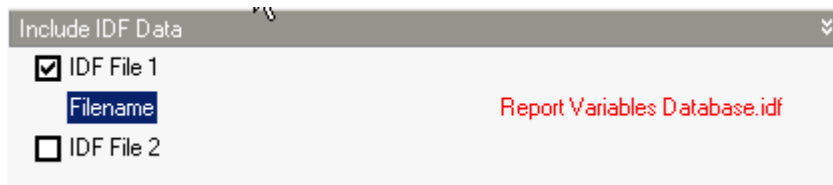

Note: Included IDF files must be located in the [EnergyPlus folder](#).

3.4.5.4 Output Options

[Simulation](#) tab on [Model Options](#) dialog and [Output](#) tab on [Simulation Options](#) dialog.

You can control the data generated from simulations by making selections on the Simulation tab of the Model options dialog and on the Advanced tab of the Simulation calculation options dialog.

Zone environmental and comfort reports

You can restrict the simulation comfort output to just occupied periods by selecting **2-Just occupied periods**. Options are:

- **1-All periods** - comfort data is generated for all periods including times when the zone is unoccupied.
- **2-Just occupied periods** - comfort data is only output during times when the zone is occupied so daily and monthly comfort statistics become more meaningful.

Default is **1-All periods**.

Building and block output of zone data

This option causes average and total zone data to be generated for building and blocks. For example average temperatures, comfort conditions, total solar radiation, internal gains, fabric transmission losses etc. It does not affect the generation of energy consumption and CO2 data at the building level.

Include unoccupied zones in block and building totals and averages

By default data for unoccupied zones is *excluded* from block and building totals and averages. Check this option to include data for unoccupied zones.

A zone is defined as unoccupied if it has:

- No occupancy and,
- No cooling and,
- No heating and,
- No mechanical ventilation

Surface heat transfer incl. solar

Select this option to generate heat flow at surface boundaries. The following EnergyPlus reports are generated:

- Opaque Surface Inside Face Conduction
- Window Heat Gain
- Window Heat Loss
- Window Transmitted Solar

Environmental

This option generates temperatures and humidity data. The following EnergyPlus reports are generated:

- Zone Mean Air Temperature
- Zone Mean Radiant Temperature
- Zone Air Relative Humidity
- Outdoor Dry Bulb

Comfort

Select this option to generate [Comfort output](#). The following EnergyPlus reports are generated:

- FangerPMV
- PiercePMVET
- PiercePMVSET
- PierceDISC
- PierceTSENS
- KsuTSV
- Time Not Comfortable Summer Clothes
- Time Not Comfortable Winter Clothes
- Time Not Comfortable Summer or Winter Clothes

Internal gains

Select this option to generate internal gains-related output. The following EnergyPlus reports are generated:

- Zone Lights Total Heat Gain
- Zone Task Lights Total Heat Gain
- Zone People Sensible Heat Gain
- Zone Electric Equipment Cat02 Electric Consumption
- Zone Electric Equipment Cat03 Electric Consumption

- Zone Electric Equipment Cat04 Electric Consumption
- Zone Electric Equipment Cat05 Electric Consumption
- Zone Transmitted Solar
- Zone Infiltration Sensible Heat Loss
- Zone Infiltration Sensible Heat Gain
- Zone Ventilation Sensible Heat Loss
- Zone Ventilation Sensible Heat Gain

Energy, HVAC etc

Select this option to generate energy consumption data.

Temperature distribution

Select this option to generate [Temperature distribution](#) data for each zone (distribution data for Blocks and Buildings not available).


DXF model output

This option causes EnergyPlus to generate a DXF file summarising the building model. The file is called [eplusout.dxf](#) and it is stored in the [EnergyPlus folder](#). This option can be useful for checking that the correct geometry has been generated.

Construction and surface details

This option causes EnergyPlus to generate a comma separated value file summarising the building model. The file is called [eplusout.eio](#) and it is stored in the [EnergyPlus folder](#).

3.4.6 Drawing Tools

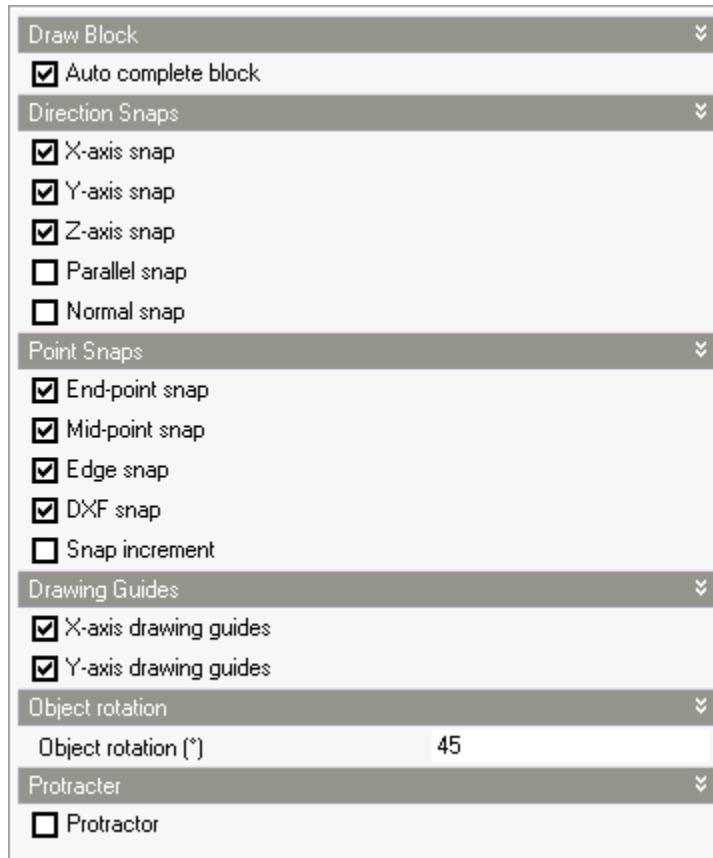

[Drawing Tools tab on Model Options](#)

dialog.

Options for:

- [Draw Block](#)
- [Direction Snaps](#)
- [Point Snaps](#)
- [Drawing Guides](#)
- [Object Rotation](#)
- [Protractor](#)

To learn more about Drawing Tools go to the [Block Creation Options](#) and [Snaps, Drawing Guides & Protractor](#) sections.

3.4.6.1 Solar Options

[Cooling Design](#) and [Simulation](#) tabs on [Model Options](#) dialog and Options tab on [Simulation Options](#) dialog.

Solar Options allow you to control aspects of the model related to solar gains.

Include all buildings in shading calcs

Use this option to include other buildings on the site as shading obstructions.

Note: there is no way to simulate > 1 building at a time. All external surfaces in buildings other than the current one are modelled as shading surfaces. If you need to model the adjacency of another building in contact with the current one, you can use the [adiabatic](#) adjacency option to model the touching surfaces.


Cooling Design Calculations and Simulations both use this option but have separate Model option data.

Note: if one or more 'other buildings' are large/complex then you could generate a large number of shading elements and the [simulation could be slow](#) (even if the current building being simulated is simple).

Model reflections


If using reflections, the program calculates beam and sky solar radiation that is reflected from exterior surfaces and then strikes the building. These reflecting surfaces fall into 3 categories:

1. Shadowing surfaces. These are surfaces like overhangs or neighboring buildings (see below). These surfaces can have diffuse and specular (beam-to-beam) reflectance values derived from the material properties of the wall/windows.

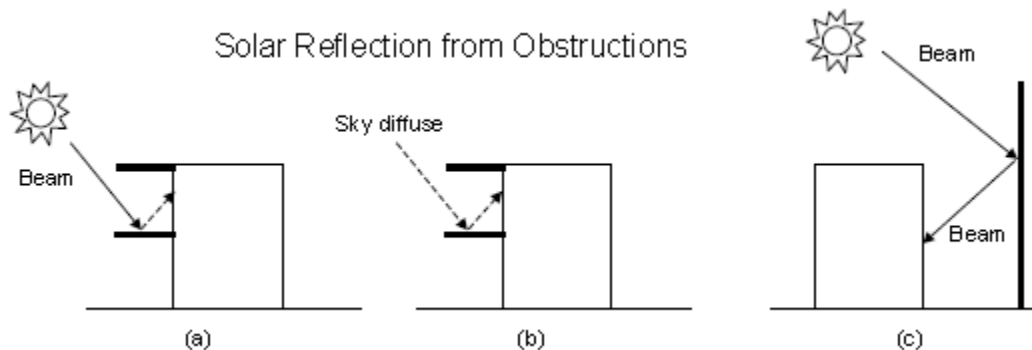

Solar reflection from shadowing surfaces. Solid arrows are beam solar radiation; dashed arrows are diffuse solar radiation. (a) Diffuse reflection of beam solar radiation from the top of an overhang. (b) Diffuse reflection of sky solar radiation from the top of an overhang. (c) Beam-to-beam (specular) reflection from the façade of an adjacent highly-glazed building represented by a vertical shadowing surface.


2. Exterior building surfaces. In this case one section of the building reflects solar radiation onto another section (and vice-versa). See below. The building surfaces are assumed to be diffusely reflecting if they are opaque (walls, for example) and specularly reflecting if they are windows or glass doors. The reflectance values for opaque surfaces are calculated by the program from the [Solar Absorptance](#) and [Visible Absorptance](#) of the outer material layer of the surface's construction. The reflectance values for windows and glass doors are calculated by the program from the reflectance properties of the [individual glass layers](#) that make up surface's construction assuming no shading device is present and taking into account inter-reflections among the layers.

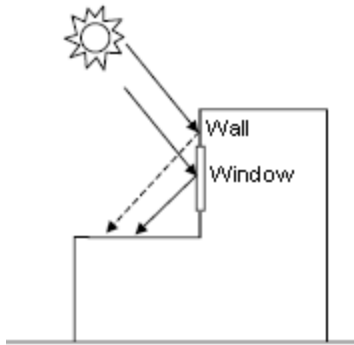

Solar reflection from building surfaces onto other building surfaces. In this example beam solar reflects from a vertical section of the building onto a roof section. The reflection from the window is specular. The reflection from the wall is diffuse.

3. The ground surface.

Reflection from the ground is calculated even if the reflections option is not used. But in this case the ground plane is considered unobstructed, i.e., the shadowing of the ground by the building itself or by obstructions such as neighboring buildings is ignored. This shadowing is taken into account if the reflections option is used. This is shown in diagrammatically below.

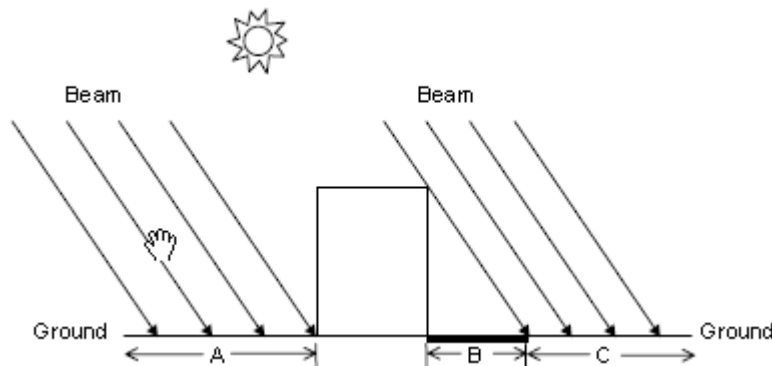

Shadowing from building affects beam solar reflection from the ground. Beam-to-diffuse reflection from the ground onto the building occurs only for sunlit areas, A and C, not from shaded area, B.

If reflections option is used for the ground surface then the ground view factor is NOT used.

Solar distribution

This option determines how EnergyPlus treats beam solar radiation and reflectance from exterior surfaces that strike the building and, ultimately, enter the zone. There are five choices:

1-Minimal shadowing - In this case, there is no exterior shadowing except from window and door reveals. All beam solar radiation entering the zone is assumed to fall on the floor, where it is absorbed according to the floor's solar absorptance. Any reflected by the floor is added to the transmitted diffuse radiation, which is assumed to be uniformly distributed on all interior surfaces. If no floor is present in the zone, the incident beam solar radiation is absorbed on all interior surfaces according to their absorptances. The zone heat balance is then applied at each surface and on the zone's air with the absorbed radiation being treated as a flux on the surface.

 
 

 
2-Full Exterior - in this case, shadow patterns on exterior surfaces caused by detached shading, wings,

overhangs, and exterior surfaces of all zones are computed. As for Minimal shadowing, shadowing by window and door reveals is also calculated. Beam solar radiation entering the zone is treated as for 'Minimal shadowing' - all beam solar radiation entering the zone is assumed to fall on the floor, where it is absorbed according to the floor's solar absorptance. Any reflected by the floor is added to the transmitted diffuse radiation, which is distributed among interior surfaces according to view factors. If no floor is present in the zone, the incident beam solar radiation is absorbed on all interior surfaces according to their absorptance.

If you use **2-Full Exterior** you should make sure that all of your zones have a floor. If your building model has any zones of unusual shape without floors then the EnergyPlus simulation may not work because it will not have a surface to apportion solar gains to.

3-Full interior and exterior - this is the same as 'Full exterior' except that instead of assuming all transmitted beam solar falls on the floor the program calculates the amount of beam radiation falling on each surface in the zone, including floor, walls and windows, by projecting the sun's rays through the exterior windows, taking into account the effect of exterior shadowing surfaces and window shading devices. If this option is used, you should be sure that the surfaces of the zone totally enclose a space. This can be determined by viewing the [eplusout.dxf](#) file with an external DXF viewer program.

You should also be sure that the zone is convex. Examples of convex and non-convex zones are shown below. The most common non-convex zone is an L-shaped zone. (A formal definition of convex is that any straight line passing through the zone intercepts at most two surfaces.) If the zone's surfaces do not enclose a space or if the zone is not convex you should use 'Full exterior' instead.

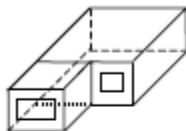

Convex zones

Non-Convex zones

If you use **3-Full Interior and exterior** the program will also calculate how much beam radiation falling on the inside of an exterior window (from other windows in the zone) is absorbed by the window, how much is reflected back into the zone, and how much is transmitted to the outside. In this calculation the effect of a shading device, if present, is accounted for.

Important!

You must use **3-Full Interior and exterior** to account for solar and light transmission through internal windows.

Check for non-convex zones

When the solar distribution selection is **3-Full interior and exterior** (above) you can choose whether DesignBuilder is to check for non-convex zones. By default the option is to carry out the check to prevent invalid results, but if the zones are only slightly non-convex you can switch off this check and allow EnergyPlus to continue calculations. You will probably receive [error message 2](#) if you switch this option off and have non-convex zones. The EnergyPlus simulation may or may not fail.

Shadowing interval (Simulation only)

Enter the number of days (1-365) covered by each shadowing calculation.

Enter 1 if you want shadowing to be calculated every day (for greater detail but slower calculations).

3.4.6.2 Draw Block

[Drawing Tools tab on Model Options dialog.](#)

Auto complete block

See [Auto-complete block](#) entry under [Block Creation Options](#).

3.4.6.3 Direction Snaps

[Drawing Tools tab on Model Options dialog.](#)

See [Direction Snaps](#) entry under [Snaps, Drawing Guides & Protractor](#).

3.4.6.4 Point Snaps

[Drawing Tools tab on Model Options dialog.](#)

See [Point Snaps](#) entry under [Snaps, Drawing Guides & Protractor](#).

3.4.6.5 Drawing Guides

[Drawing Tools tab on Model Options dialog.](#)

See [Drawing Guides](#) entry under [Snaps, Drawing Guides & Protractor](#).

3.4.6.6 Object Rotation

[Drawing Tools tab on Model Options dialog.](#)

You can change the rotation increment to control the angular increments for the object rotation process.

See [Rotation](#) entry under [General Operations](#).

3.4.6.7 Protractor Tool

[Drawing Tools tab on Model Options dialog.](#)

See [Protractor](#) entry under [Snaps, Drawing Guides & Protractor](#).

3.4.7 Display

[Display tab on Model Options dialog.](#)

Options related to the display of data:

- [Show Data for Calculations](#)
- [Edit Screen](#)
- [Visualisation Display](#)

3.4.7.1 Show Data for Calculations

[Display tab on Model Options dialog.](#)

Analysis type

DesignBuilder user interface adapts to the currently selected Analysis type as set under Show Data for Calculations. This ensures that the Model data displayed in the UI is relevant to the calculation results. You can change the Analysis type at any time to carry out different calculations.

The list of Analysis type options available will depend on the [Location](#) of the site. For example when the site is located in the UK, it possible to set the Analysis type to SBEM Part-L Compliance Checking mode.

New Analysis type options will be available in future versions.

3.4.7.2 Edit Screen

[Display tab on Model Options dialog.](#)

Show zone labels

Select this option to display the name of each zone in the Edit screen while at block level. Zone labels are shown by default.

Show shading devices

Select this option to display shading devices while in the Edit screen. Shading devices are shown by default.

Show windows


You can speed up display in the edit screen by switching off window display. Windows are shown by default.

Zone floor shading at block level

Zone floors can be shaded by:

- **1-Activity Template**, where zone floors are shaded according to the Activity Template selection allowing different areas of the block to be easily identified.
- **2-HVAC Template**, where zone floors are shaded according to the HVAC Template selection to show the distribution of HVAC systems in the block.
- **3-None**

The image below illustrates shading by Activity Template.

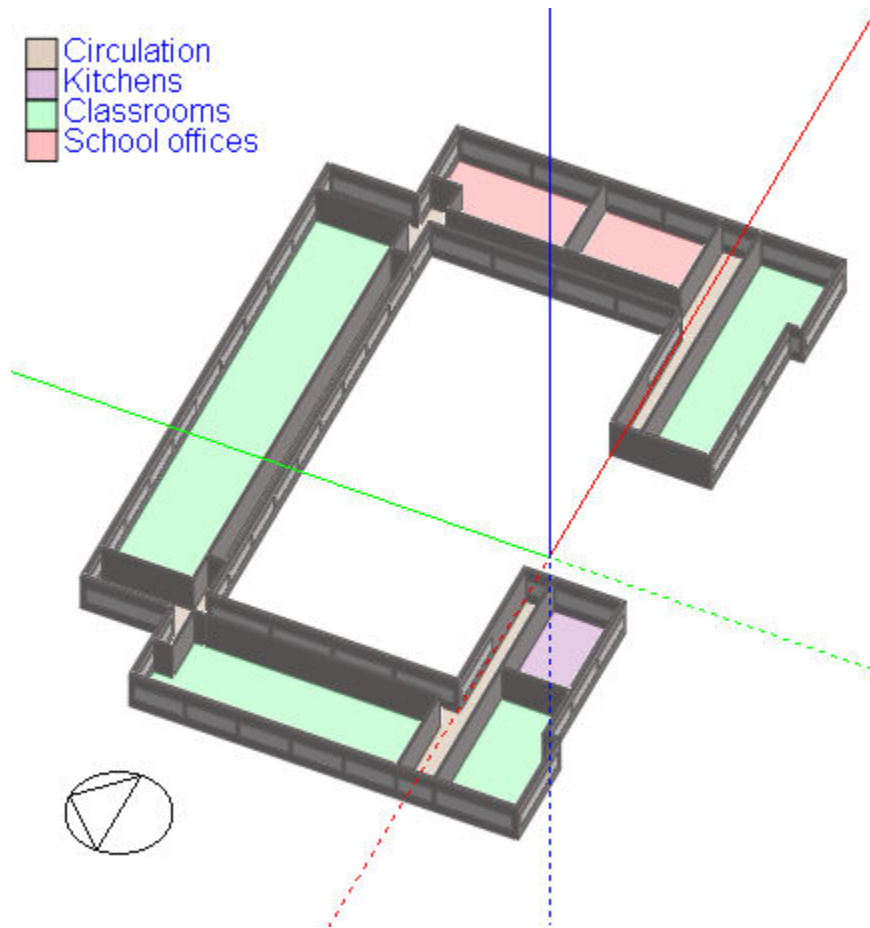

3.4.7.3 Visualisation Display

[Display tab](#) on [Model Options](#) dialog.

Dynamics

This option affects the display of the model when orbiting and zooming in the Edit and Visualisation Screens:

- **1-Rendered** - the default setting where the whole building image is retained during the operation. For a large models/slow graphic adapters, this can result in a jerky motion in which case you should use...
- **2-Wire-frame** - where the building is represented using a wire frame which moves smoothly even for large models/slow graphic adapters.

Show shadows

Use this option to display shadows in the Visualisation Screen.

Show North arrow

You can display the North Arrow in the Visualisation Screen.

Show ground plane

You can choose to show/hide the plane used to represent the ground in the Visualisation Screen. You may wish to hide the ground plane if you have used component blocks to represent the ground.

Note: when displayed, the ground plane extents just beyond the x-y size of the model and hides any other building object situated at or below $z=0$.


Antialiasing

Antialiasing is the process used to remove 'jaggy' edges of lines which are not horizontal or vertical. Most modern medium-high-end graphics adapters allow effective antialiasing to be automatically applied to OpenGL screens using hardware acceleration. If you have one of these cards you should be getting sharp lines already and you can switch the DesignBuilder software antialiasing off. See [hardware](#) requirements for more on this.

If you switch on software antialiasing you can select a quality setting from 1-4 where 4 gives the smoothest edges and takes longest time to generate.

Note: some low-end graphics adapters are not suited to software antialiasing because they lack hardware acceleration for this feature.

3.4.8 Block Options

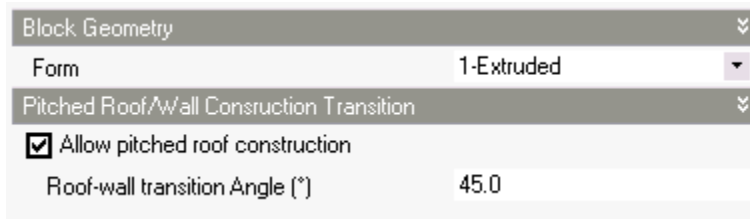

Block tab on [Model Options](#) dialog.

Data on the Block tab of the Model options dialog allows you to edit the form and related properties of the current block:

- [Block geometry](#)
- [Roof-wall transition](#)

See also [Edit Block Geometry Dialog](#).

3.4.8.1 Block Geometry

[Block tab on Model Options](#) dialog.

Wall thickness

You can change the **Wall thickness** of the current block by entering the new thickness here. The thickness must be in the range 0.01m - 2.0m (0.39 - 78 inches).

Display external walls

You can choose to switch on/off display of external walls for each block. Generally for extruded blocks it is best to show external walls to help reference location within the block with respect to existing openings etc. For roof blocks and other non-plan extrusion blocks the external walls can obscure the internal space and so the default for these block types is to hide the external walls. You can override the defaults using this option.

Block form

Once a block has been created it's form can usually be changed to one of:

- **1-General**,
- **2-Sloped walls** or
- **3-Pitched roof**

For more on [block forms](#) see help on creating blocks.

3.4.8.2 Roof-Wall Transition

[Block tab on Model Options dialog.](#)

You can enter the angle which defines the surface tilt below which a wall becomes a roof. For example if the roof-wall transition angle for a particular block is 45°, a surface in this block having tilt 40° is modelled as being a roof (using roof constructions, glazing layout etc). And a surface having tilt 50° is modelled as being a wall (using wall constructions, glazing layout etc).

You can force all non-horizontal surfaces to be walls by unchecking the 'Allow pitched roof construction' option.

3.4.9 Project Details and Notes

Use the Notes tab to record General information about the building model:

- [Project Details](#)
- [Owner Details](#)
- [Analyst Details](#)
- [Notes](#)

The Project, Owner and Analyst Details data is used as a header in UK Part-L2 Compliance Check reports.

3.4.9.1 Project Details

Enter the building Sector, Project name and address.

3.4.9.2 Owner Details

Enter the name and contact details for the building owner/client.

3.4.9.3 Analyst Details

Enter your own name and contact details.

3.4.9.4 Notes

You can enter any information about the building model in free text format.

Note: If you want to add hard carriage returns in the text you should hold the CTRL key down while pressing ENTER. Pressing ENTER on its own will save and close the dialog.

Section

4

**Library
management**

DesignBuilder is supplied with libraries of [Templates](#) and [Components](#) and these can be managed from the opening screen (i.e. when no dsb file is loaded).



Click on [Component Libraries](#) or [Templates](#) tabs (above) to manage library data.

Tip: you can load the latest library components and templates into your model using the **Import library data to model** command from the Tools menu when a model is loaded. Any new data that has been added to the library since the model file was created will be imported to the model. Also if there have been any changes to library component and template data, this new data will overwrite the original data.

Keeping Templates and Component Libraries


You may build up a large database of your own templates and components and to avoid losing this data between version upgrades, DesignBuilder backs up your library data in a series of .dat files which you can access from the **File > Folders > Library data** menu command. These files are retained when the software is uninstalled. When you install a new version of DesignBuilder and run it for the first time, any data you entered in the old libraries is merged with the new libraries. This ensures that you keep any data you created, while receiving the latest DesignBuilder system template and component data.

Note: DesignBuilder keeps separate program options and template and component libraries for each user on the computer system.

4.1 Opening Screen - Component Libraries

From the Component Library screen you can add, clone (copy), delete, view, edit, [import](#), [export](#), [backup](#), [restore](#) components as shown below. You can also save the libraries by clicking on the Save toolbar icon (libraries are also saved when the program exits).

Library [Components](#) are automatically loaded into the model *at the time the file is created* and from then on, they are associated specifically with this model and so are known as 'Model Components'. Any change made to the Library Components does not affect existing building models because they reference their own set of Model Components.

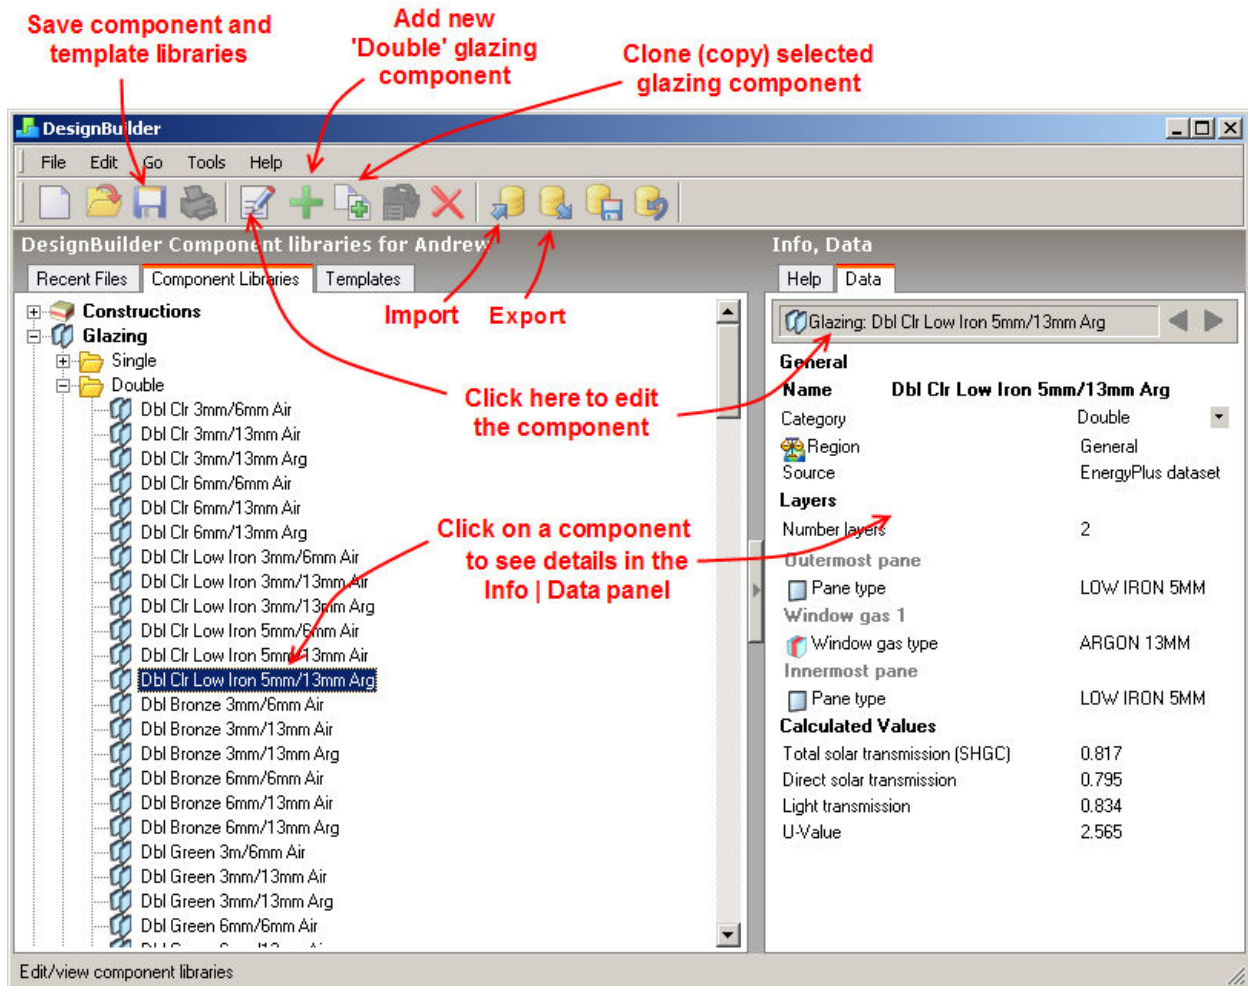

Add New Component

To add a component:

1. Click on the + to the left of the component type (Glazing in the above screen shot).
2. Click on the category (folder icon) or on a component within a category.
3. Click on the green + on the toolbar to create a new component of the selected category.
4. Fill in the details on the dialog and press OK.

The component has been added.

Clone (Copy) Component

Cloning a component creates an exact copy of the selected component gives the copy name 'Copy of ...' followed by the name of the original component.

1. Click on the + to the left of the component type (Glazing in the above screen shot).
2. Click on the component you wish to copy.
3. Click on the clone icon on the toolbar to create a new component identical to the selected one. This creates the copy and selects it,
4. To edit the new component click on the Edit toolbar button
5. Fill in the details on the dialog and press OK.


View Component

You can view the details of a component in the Info | Data panel on the right of the screen as shown in the diagram above. Note that icons in the View panel indicate that you can click on the component to see its' details. You can also use the Previous and Next Navigation buttons above the Info panel to navigate through previously viewed components and templates.

4.2 Opening Screen - Template Libraries

Use the opening screen to work with [template libraries](#). The whole screen is dedicated to the job and you get access to the Info Data panel which allows you to review the data for the currently selected template (screen shot below).

You can add, clone (copy), delete, view, edit, [import](#), [export](#), [backup](#), [restore](#) library templates as shown below. You can also save the libraries by clicking on the Save toolbar icon (libraries are also saved when the program exits)

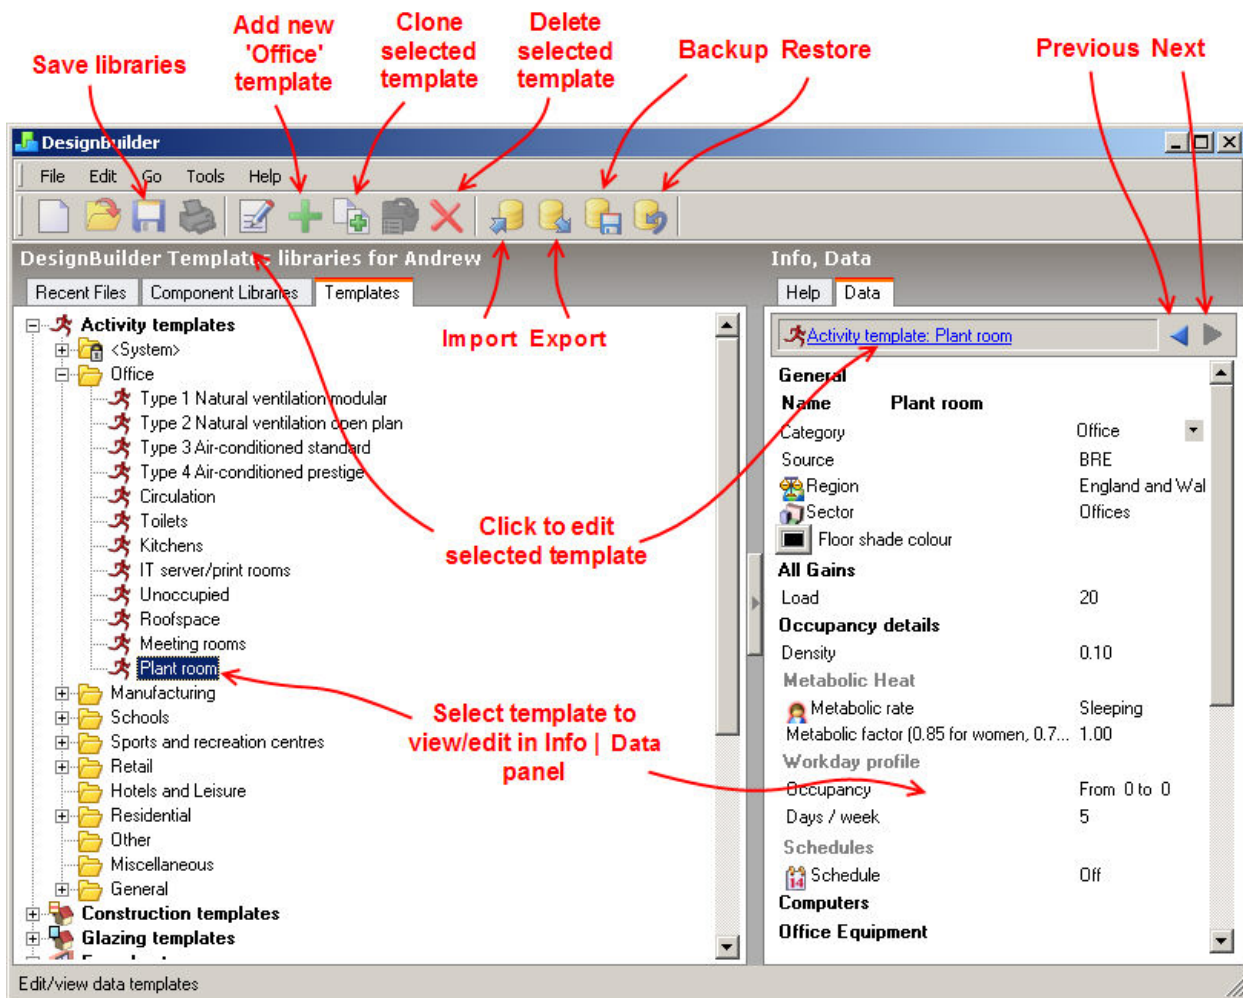

Add New Template

To add a template:

1. Click on the + to the left of the template type (Activity templates in the above screen shot).
2. Click on the category (folder icon) or on a template within a category.
3. Click on the green + on the toolbar to create a new template of the selected category.
4. Fill in the details on the dialog and press OK.

The template has been added.

Clone (Copy) Template

Cloning a template creates an exact copy of the selected template gives the copy name 'Copy of ...' followed by the name of the original template.

1. Click on the + to the left of the template type (Activity templates in the above screen shot).
2. Click on the template you wish to copy.
3. Click on the clone icon on the toolbar to create a new template identical to the selected one. This creates the copy and selects it,
4. To edit the new template click on the Edit toolbar button
5. Fill in the details on the dialog and press OK.

View Template

You can view the details of a template in the Info | Data panel on the right of the screen as shown in the diagram above. Note that icons in the View panel indicate that you can click on the template to see its' details. You can also use the Previous and Next Navigation buttons above the Info panel to navigate through previously viewed components and templates.

Note: You can work with templates with a file open from the Templates tab on the Navigator panel but in this case you're working with [Model Templates](#), i.e. templates specifically associated with a particular model not the library.

4.3 Import Components/Templates


Import component/template [.DDF](#) files previously [exported](#) using the **File > Import > Library data** menu command:

- Import the data to the *model* by selecting the Import menu command with a file open.
- Import to *libraries* by working from the Opening screen.


This command imports **all** components/templates in the DDF file.

4.4 Export Components/Templates

You can export your user DesignBuilder Component/Template libraries by selecting the **File > Export > Library data** menu command to create a [.DDF](#) file. This file can be shared with other users, [imported](#) on other computers in your office or simply used as a backup.

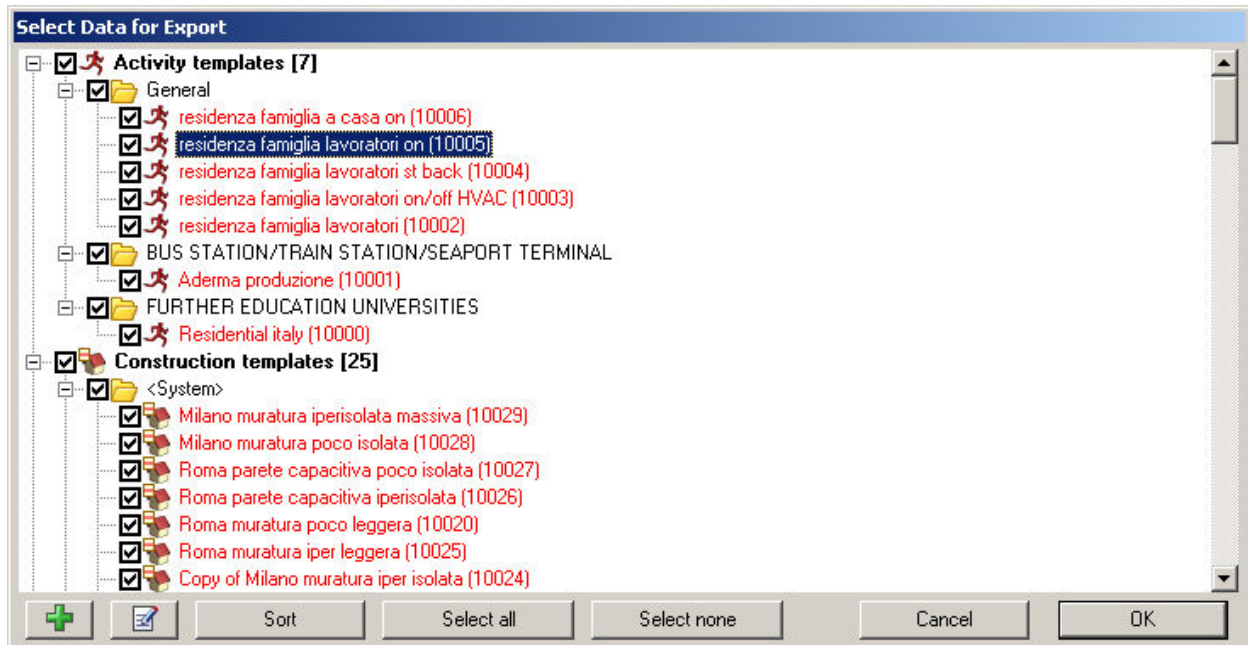

When exporting a complex set of data, DesignBuilder will check that where user data references other user components, these referenced components are also selected. For example, if you select a construction for export which uses your own materials, you must make sure that all materials used in this construction are also selected. If any required user components are not selected DesignBuilder displays a dialog showing the missing components. See below.

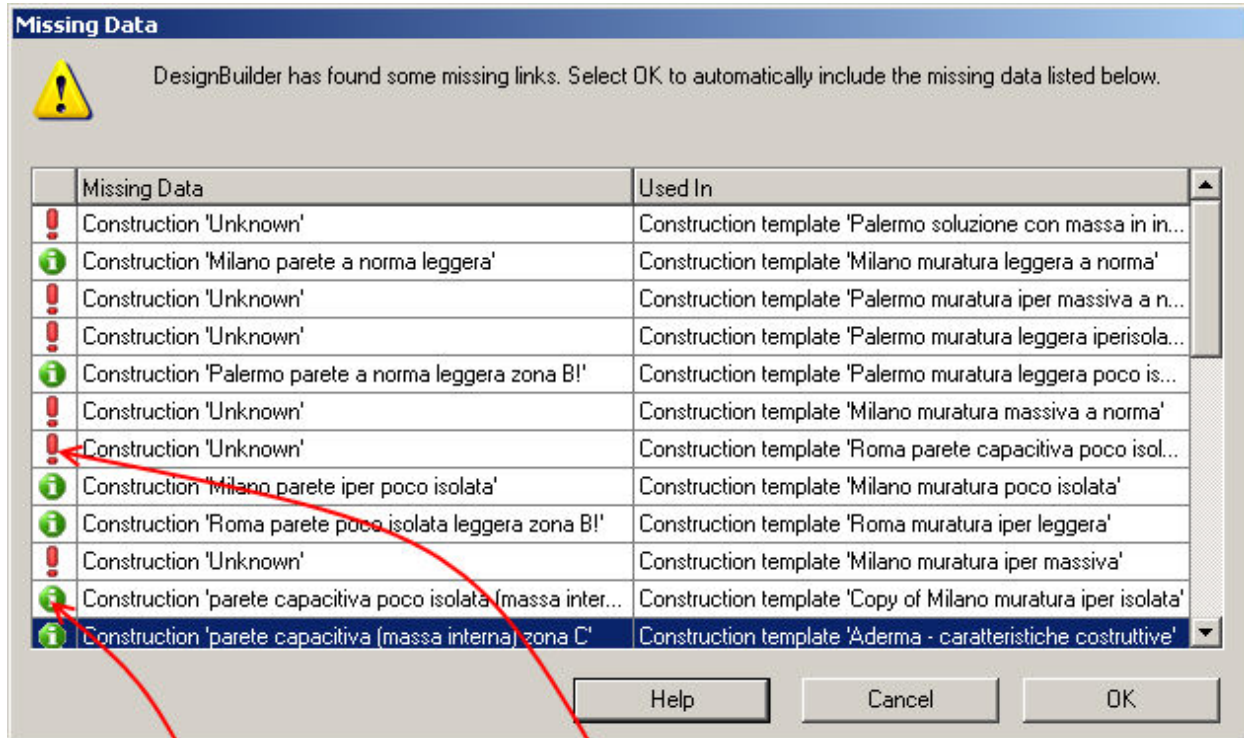

Data marked with a green 'info' icon is automatically included

Data marked with a red '!' icon is missing and should be either recreated or the selection changed

Press the OK button to continue with the export automatically including the missing data.

Note: if there is any data that is referenced but does not exist it is flagged with a red '!' icon (above). In this case you should press the Cancel button and make the necessary edits to ensure that all referenced data exists. DesignBuilder will not prevent you from continuing so it is possible to create DDF files with missing data.

When you use the library data **Export** command *with a model data file open*, the data exported will be user **Model components/templates**, not **Library components/templates**.

From the [Opening](#) screen you can also export entire data tables as **csv-spreadsheet files** suitable for viewing in a spreadsheet. This data cannot be read back into DesignBuilder.

4.5 Backup Component/Template Libraries



Back up your Component and Template libraries by clicking on the Backup toolbar icon. Backups created in this way are stored in the 'Backup\Manual' folder beneath the rest of the [library data](#).


As well as backing up the compiled .dbt files, DesignBuilder also exports the files in .dat format and packages the whole backup into a zip file. If you have problems with your libraries you may find it helpful to send this zip file to DesignBuilder Support for analysis.

You can use this data as a backup of your library data and can restore it at a later date using the [Restore libraries](#) command.

4.6 Restore Component/Template Libraries



Click on the Restore icon to open the Restore Data dialog which allows you to Restore previously backed up Component/Template libraries. Select the source of the restore - you can either restore the libraries to their state when you first installed DesignBuilder or you can restore library data from a [previous backup](#) (if one exists). In the screenshot below, no backup had been made so the [Previous backup](#) option is not available.

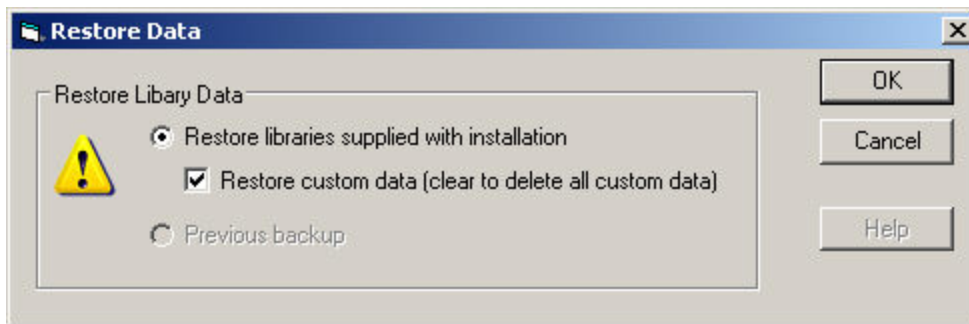

If you choose to restore libraries supplied with installation you can use the **Restore custom data (clear to delete all custom data)** option to either:

1. Restore the custom data which existed on the computer at the time the software was installed, or,
2. Clear all custom data to keep only the data supplied by DesignBuilder.

Note to restore the libraries supplied with the installation and clear any custom data select **Restore libraries supplied with installation** and uncheck the **Restore custom data (clear to delete all custom data)** option.

Section

5

**Component
Data**

Components represent individual building elements and can be referenced from other components, templates or model data. The following components are available:

- [Constructions](#)
- [Glazing](#)
- [Materials](#)
- [Panes](#)
- [Profiles](#)
- [Schedules](#)
- [Textures](#)
- [Window gas](#)
- [Local shading](#)
- [Window blinds](#)
- [Vents](#)
- [Holidays](#)

Library components are loaded into the model at the time the file is created and from then on they are associated specifically with the model and so are known as **Model components**. Any later change made to the Library components does not affect existing building models because they reference their own set of Model components.

Managing component data

You can edit and move component data around in various ways:

1. Add, Edit, Delete, [Import](#) and [Export](#) Component library data from the [Opening Screen - Component Library](#) tab.
2. If a model file is loaded you can edit Model components from the Components tab in the Navigator panel ([Learning mode](#) switched off) or by using the Data management panel on the right of the screen ([Learning mode](#) switched on).
3. In either case, **to add a component** open up the component type you wish to define by clicking on the + to the left of the component icon, then click on the category of component you wish to define. Now click on the Green '+' to add a component of the selected category.
4. Import/export Model component using the **File > Export > Library data** menu command to create a .ddf file with the .dsb model file open.
5. To import the previously exported Model component data to the Component library close the .dsb file and [import](#) the .ddf file to the library.
6. Load the latest library components into your model using the **Import library components and templates to model** command from the Tools menu when a model is loaded. Any new data that has been added to the library since the model file was created will be imported to the model. Also if there have been any changes to library component data, this new data will overwrite the original data.

Important Note: any component you add while a model is open will be added to Model components and not to the Component library. It will only be added to the library and hence to new models if you export the new component model data in .ddf form and import the .ddf file to the library before creating the new model.

Colour code

Components are coded by colour in the Navigator panel and selection lists as follows:

Red shows user data, i.e. data that was not supplied by DesignBuilder.

Green indicates that the data is derived from a reputable national or international source.

Blue indicates that the data is generated internally by DesignBuilder.

Black is used for other data.

5.1 Constructions

The thermal properties of the construction are calculated based on [layers](#), each layer having a [material](#) reference and thickness. The combination of thickness and material gives the thermal characteristics of the layer.

Construction Components also store [derived](#) data on the thermal properties of the overall layered construction for example U-value, convective heat transfer coefficients etc.

There are three tabs on Constructions dialogs:

- [Layers](#)
- [Image](#)
- [Calculated](#)

Construction component data can be accessed:

- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by double-clicking on the construction icon in the model data,
- by clicking on the Edit button when selecting constructions from a list.

5.1.1 Layer Data

[Layers tab on Constructions Dialog.](#)

Set the number of layers first, then select the material and thickness for each layer. Use the Controls in the Info Panel to insert and delete layers. For example to delete a layer, first click on the material for the layer to identify which layer you want to delete, then click on Delete layer.

You can create constructions with up to 6 layers.

You should define the layers in the same order they appear in the actual construction starting with the outermost layer and finishing with the innermost. The outermost layer will be positioned adjacent to outside (or in the case of [Semi-exposed walls](#)) adjacent to the [semi-exposed unconditioned](#) zone.

Note: You should not include surface resistance (film coefficient) layers to represent the resistance of the air films adjacent to the inner and outer surfaces. These are [included automatically by DesignBuilder](#).

Thickness

This field characterizes the thickness of the material layer. This is the dimension of the layer in the direction perpendicular to the main path of heat conduction. This value must be a positive.

Note: If the material referenced is defined as a [simple R-value](#) then the construction thickness does not have to be entered.

Bridging

You can also add bridging to any layer to model the effect of a relatively more conductive material bridging a less conductive material. For example wooden joists bridging an insulation layer.

Note: bridging effects are NOT yet used in EnergyPlus, but are used in energy code compliance checks requiring U-values to be calculated according to BS EN IOS 6946.

5.1.2 Image

Image tab on [Constructions Dialog](#).

This tab shows the construction to scale (except for very thin layers) using material textures as specified.

Outer surface



Inner surface

Bridging elements are ignored

5.1.3 Calculated Data

Calculated tab on [Constructions Dialog](#).

This tab provides further information on the heat transmission properties of the construction.

Inner surface <<	
Convective heat transfer coefficient (W/m ² -K)	2.152
Radiative heat transfer coefficient (W/m ² -K)	5.540
Surface resistance (m ² -K/W)	0.130
Outer surface <<	
Convective heat transfer coefficient (W/m ² -K)	19.870
Radiative heat transfer coefficient (W/m ² -K)	5.130
Surface resistance (m ² -K/W)	0.040
No Bridging <<	
U-Value surface to surface (W/m ² -K)	0.372
R-Value (W/m ² -K)	2.858
U-Value (W/m²-K)	0.350
With Bridging (BS EN ISO 6946) <<	
Upper resistance limit (m ² -K/W)	2.858
Lower resistance limit (m ² -K/W)	2.858
U-Value surface to surface (W/m ² -K)	0.372
R-Value (W/m ² -K)	2.858
U-Value (W/m²-K)	0.350

U-values and R-Values are shown including and excluding the effect of surface resistance and are calculated with and without bridging effects.

Note that when working with **library constructions**, the outer surface resistance is calculated assuming a 'typical' exposure to wind. When working with **model constructions** the outer surface resistance is calculated using the wind exposure as defined on the Location tab at site level.

Convective heat transfer coefficients

The calculated convective heat transfer coefficients are used in EnergyPlus when the 'CIBSE' Inside/Outside convection algorithm is selected. Otherwise EnergyPlus uses its' own convection algorithm as set in the simulation options and the transmission data displayed here is not used.

5.2 Glazing

General	
Name	DbI Clr Low Iron 3mm/6mm Air
Category	Double ▾
Region	General
Source	EnergyPlus dataset
Layers	
Number layers	2
Outermost pane	
Pane type	LOW IRON 3MM
Window gas 1	
Window gas type	AIR 6MM
Innermost pane	
Pane type	LOW IRON 3MM
Calculated Values	
Total solar transmission (SHGC)	0.827
Direct solar transmission	0.813
Light transmission	0.839
U-Value	3.187

Each Glazing Component consists of a series of [glazing layers \(Panels\)](#) separated from each other by Window Gas layers.

There are two tabs on the Glazing data dialog:

- [Layers](#)
- [Calculated](#)

Glazing component data can be accessed:


- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by double-clicking on the glazing icon on the Openings tab in the model data,
- by clicking on the Edit button when selecting glazing components from a list.

5.2.1 Layers

Layer tab on [Glazing Dialog](#).

Set the number of layers first, then select the pane and window gas material for each layer. The DesignBuilder Glazing data simply consists of layers of panes interspersed with layers of window gases. Other data such as internal and external surface heat transfer coefficients, U-values etc can be calculated and stored on the [Calculated](#) tab.

Note that you can define **low emissivity glazing systems** by specifying an appropriate 'LoE' Pane type for the Innermost Pane. You can find some typical low emissivity panes under the 'Clear ' Panes category.

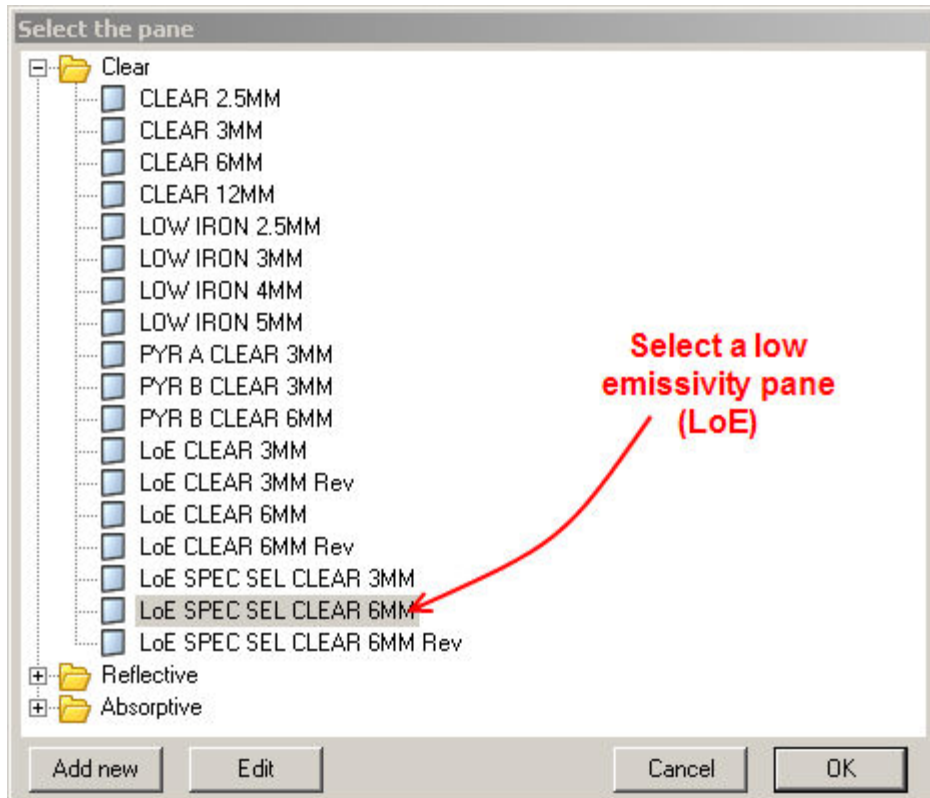

Note that the Info Panel contains information on the naming convention used with EnergyPlus glazing and pane data.

5.2.2 Calculated

Calculated tab on [Glazing Dialog](#).

The Calculated data on the Glazing tab has been calculated by EnergyPlus using the [Layer data](#) on the previous tab. You can refresh the Calculated data by clicking on the Update link in the Info panel on the right of the dialog.

The data can be useful for setting up glazing model descriptions in cases where global glazing system data is known rather than data on individual panes and window gases. The Calculated data is used in DBSim and 3TC simulations*.

The U-value is determined by doing a heat balance calculation on the glazing layers for the following standard ASHRAE winter conditions:

- Inside air temperature = 21.1C (70F)
- Outside air temperature = -17.8C (0F)
- Wind speed = 6.71 m/s (15 mph)
- Outside convective air film conductance = 25.47 W/m²-K (4.486 Btu/h-ft²-F)
- Inside convective air film conductance: calculated by EnergyPlus
- No solar radiation

The 'Total solar transmission (SHGC)' (Solar Heat Gain Coefficient) is the fraction of incident beam solar radiation that enters the zone. This includes the transmitted solar radiation and the inward flowing heat from the solar radiation that is absorbed by the glazing. SHGC applies only to the center of the glazed part of a window construction; it does not include the effect of beam solar radiation absorbed by a window frame or divider. SHGC is calculated for the following standard summer condition:

- Inside air temperature = 23.9C (75F)
- Outside air temperature = 31.7C (89F)
- Wind speed = 3.35 m/s (7.5 mph)
- Incident beam solar radiation normal to glazing = 783 W/m² (248 Btu/h-ft²)

* DBSim and 3TC are alternative calculation methods which are still under development.

5.3 Materials

General

Name Brickwork (Outer Leaf)
Category Brick and bloc ▾
Source

Detailed properties

Thermal Bulk Properties

Conductivity 0.840
 Specific Heat 800.0000
 Density 1700.00

Surface Properties

Thermal absorptance (emissivity) 0.900
 Solar absorptance 0.700
 Visible absorptance 0.700
 Roughness Rough

 Colour

 Texture Red brick with ligh

Materials components hold [thermophysical data](#) on

building materials.

Material component data can be accessed:

- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by double-clicking on the material icon in the model data,
- by clicking on the Edit button when selecting a material from a list.

5.3.1 Material Properties

General tab on [Materials Dialog](#).

Materials are used to define the properties of construction layers. There are 2 types of material:

1. **Detailed properties** including the thermophysical properties, surface properties and visual appearance for the material.
2. **Simple resistive material** with no thermal mass. This option will typically be used to model air gaps.

DETAILED PROPERTIES

Thermal bulk properties

Thermal conductivity

This field is used to enter the thermal conductivity of the material layer. Thermal conductivity must be greater than zero.

Specific heat

This field represents the specific heat of the material layer. Only positive values of specific heat are allowed.

Density

This field is used to enter the density of the material layer. Density must be a positive quantity.

SIMPLE RESISTANCE

Thermal resistance

This field is used to enter the thermal resistance (R-value) of the material layer.

Note: Materials defined using an R-value do not contribute to construction (and hence building) thermal mass in the calculations and so should be used with care, especially if you plan to use the model for dynamic thermal simulations.

SURFACE PROPERTIES

Surface properties are only used in simulations when the material is located on an inner or outer surface of the construction.

Thermal absorptance (emissivity)

The thermal absorptance represents the fraction of incident long wavelength radiation that is absorbed by the material. This parameter is used when calculating the long wavelength radiant exchange between various surfaces and affects the surface heat balances (both inside and outside as appropriate). Values for this field must be between 0.0 and 1.0 (with 1.0 representing "black body" conditions).

Solar absorptance

The solar absorptance field in the Material input syntax represents the fraction of incident solar radiation that is absorbed by the material. Solar radiation includes the visible spectrum as well as infrared and ultraviolet wavelengths. This parameter is used when calculating the amount of incident solar radiation absorbed by various surfaces and affects the surface heat balances (both inside and outside as appropriate). Values for this field must be between 0.0 and 1.0.

Visible absorptance

The visible absorptance field in the Material input syntax represents the fraction of incident visible wavelength radiation that is absorbed by the material. Visible wavelength radiation is slightly different than solar radiation in that the visible band of wavelengths is much more narrow while solar radiation includes the visible spectrum as well as infrared and ultraviolet wavelengths. This parameter is used when calculating the amount of incident visible radiation absorbed by various surfaces and affects the surface heat balances (both inside and outside as appropriate) as well as the daylighting calculations. Values for this field must be between 0.0 and 1.0.

Roughness

This field is a character string that defines the relative roughness of a particular material layer. This parameter only influences the the calculated exterior convection coefficient. A special keyword is expected in this field with the options being "VeryRough", "MediumRough", "Rough", "Smooth", "MediumSmooth", and "VerySmooth" in order of roughest to smoothest options.

Colour

The colour data is used for display purposes when the texture is not available for any reason. It is not used in any of the calculations.

Texture

The texture is used to represent this material when it is specified as either the inside or outside material of a construction which is selected in the building model. It is also used to represent the material in diagrams of any construction using this material.

5.4 Panes

General

Name LOW IRON 3MM

Category Clear ▾

Source EnergyPlus dataset

Thermal Properties

Thickness 3.000

Conductivity 0.900

Solar Properties

Solar transmittance 0.899

Outside solar reflectance 0.079

Inside solar reflectance 0.079

Visible Properties

Visible transmittance 0.913

Outside Visible reflectance 0.082

Inside Visible reflectance 0.082

Infra-Red Properties

Infra red transmittance 0.000

Outside Infra Red reflectance (emissi... 0.840

Inside Infra Red reflectance (emissivity) 0.840

Pane components holds data on the [thermal](#), [solar](#), [visible](#) and [infrared](#) properties of individual window panes.

Note that the Info Panel on the right of the Dialog contains information on the naming convention is used with EnergyPlus glazing data.

There are five tabs on the Pane dialog:

- [General](#)
- [Thermal](#)
- [Solar](#)
- [Visible](#)
- [Infra-red](#)

Pane component data can be accessed:

- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by clicking on the Edit button when selecting panes from a list.

5.4.1 General

General tab on [Panels Dialog](#).

Enter the name and category of the pane.

5.4.2 Thermal Data

Thermal Data tab on [Panels Dialog](#).

Thickness

Enter the thickness of the pane.

Thermal conductivity

This field is used to enter the thermal conductivity of the material layer. Thermal conductivity must be greater than zero.

5.4.3 Solar Data

Solar transmittance

The solar transmittance at normal incidence averaged over the solar spectrum.

Solar reflectance

The inside (back-side) and outside (front-side) solar reflectance properties of the pane at normal incidence averaged over the solar spectrum.

Note, For uncoated glass, when alternative optical properties (thickness, solar index of refraction, and solar extinction coefficient) are available, they can be converted to equivalent solar transmittance and reflectance values using the equations given in 'Conversion from Alternative Specification of Glass Optical Properties' in the EnergyPlus documentation).

5.4.4 Visible Data

Visible Data tab on [Panels Dialog](#).

Visible transmittance

The visible transmittance at normal incidence averaged over the solar spectrum, and weighted by the response of the human eye.

Visible reflectance

The inside (back-side) and outside (front-side) visible reflectance properties of the pane at normal incidence averaged over the solar spectrum, and weighted by the response of the human eye.

Note, For uncoated glass, when alternative optical properties (thickness, visible index of refraction, and visible extinction coefficient) are available, they can be converted to equivalent visible transmittance and reflectance values using the equations given in 'Conversion from Alternative Specification of Glass Optical Properties' in the EnergyPlus documentation).

5.4.5 Infra-red Data

Infra-red tab on [Panels Dialog](#).

Long-wave transmittance

The long wave transmittance at normal incidence.

Emissivity (long wave reflectance)

Enter the inside (back-side) and outside (front-side) hemispherical emissivity (long wave reflectance) properties of the pane.

5.5 Schedules

Schedules are used in DesignBuilder to define:

- Occupancy times
- Equipment, lighting HVAC operation
- Heating and Cooling temperature setpoints
- Transparency of component blocks (usually seasonal)

Apart from their use for defining [Transparency of component blocks](#), Schedules are only used in simulations when the [Timing](#) model option is set to 'Schedules'

You can define schedules in one of 2 ways:

- [7/12 Schedules](#) - where each day of the week and each month of the year has a unique daily variation defined using profiles.
- [Compact Schedules](#) - more flexible definition using EnergyPlus **Schedule:Compact** text-based data format.

Use the **Schedule type** drop list on the Schedules dialog to make the selection.

When Schedules are used to define heating and cooling equipment temperature setpoint temperatures the following convection is used:

[Click here](#) for more detailed information on temperature setpoint schedule definition.

Schedule data can be accessed:

- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by double-clicking on the schedules icon in the model data,
- by clicking on the Edit button when selecting schedules from a list.

5.5.1 7/12 Schedules - Defined Using Profiles

General tab on [Schedules Dialog](#).

7/12 Schedules reference Profiles, one Profile for each day of the week and for each month of the year (hence 7/12).

You can select multiple rows (months) or columns (days) and edit the data by clicking on the **Edit selected cells** link in the Info Panel. Likewise, you can select individual profiles by clicking on the appropriate cell and clicking **Edit selected cells**.

Design days

Winter and summer design day simulations are carried out when required for [autosizing](#) heating and cooling equipment prior to a Compact HVAC simulation.

Design day definition method

With 7/12 Schedules there are 2 ways to define the schedule output during these winter design day simulations:

1. End-use defaults - use the default heating [autosizing](#) behaviour defined on the [Heating design](#) tab of the Model option dialog.

In this case for summer design, the profile for Wednesday is used. If Wednesday is not a good choice for Summer design autosizing then you can instead define the profile explicitly using the Profiles design day definition method below.

Use End use default - apply the [behaviour](#) for the selected category as defined on the Model options on the [Heating design tab](#).

2. Profiles - define both heating and cooling design day operation as a [Profile](#). This option is more flexible and clearer than **End-use defaults** but can take slightly longer to set up.

Heating design day profile - the profile defining the schedule output during the heating autosizing design day.

Cooling design day profile - the profile defining the schedule output during the cooling autosizing design day.

Weekly and monthly variations

Other tools are available for rapid selection/deselection and setting of schedule data:

- Select all weekdays
- Select all weekends
- Set all weekends 'Off'
- Select all
- Deselect all

General							
Name	Office_OpenOff_Occ						
Description	Building: OFFICE Area: OPEN PLAN OFFICE Occupancy schedule						
Source	UK NCM						
Category	OFFICE						
Region	General						
Schedule type	1-7/12 Schedule						
Design Days							
Design day definition method	1-End use defaults						
Use end-use default	2-Occupancy						
Profiles							
M...	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday
Jan	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off
Feb	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off
Mar	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off
Apr	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off
May	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off
Jun	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off
Jul	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off
Aug	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off
Sep	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off
Oct	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off
Nov	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off
Dec	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	8:00 to 18:00	Off

See also [EnergyPlus Compact Schedules](#)

5.5.2 Compact Schedules

General tab on [Schedules Dialog](#).

Compact Schedules are defined using a slightly modified version of the standard EnergyPlus **Schedule: Compact** format documented below.

Using the Compact Schedule definition all the features of the schedule components are accessed in a single command. Each Compact Schedule must cover all the days for a year and it must have values for all 24 hours and all values for all day types.

Tip: When entering the text for the Compact Schedule, to start a new line you should hold the <CTRL> key down while pressing <ENTER>. Just pressing <ENTER> will save and close the dialog.

Name

This field is for your own use and is replaced by DesignBuilder with the name of the Schedule when generating data for EnergyPlus.

ScheduleType

ScheduleType should generally be **Fraction** even for schedules to be used for [temperature setpoint](#) definition.

You can enter **Any Number** to enter values greater than 1 but please bear in mind:

- The maximum gains values (e.g. people/m²) are multiplied by the values in the schedule to obtain the actual value to use at each time step in the simulation. So if you enter large schedule values the actual maximum value in the simulation will be higher than the 'maximum' value entered in DB. There is no problem with this, just a methodological concern that if the Interface indicates that the maximum occupancy density is say 0.1 people/m² but the schedule has values > 1 then the simulation results will, at first sight, appear incorrect. If you come back to the model 6 months later you may not remember the reason.
- [Temperature set-point schedules](#) should only have values 0, 0.5 or 1.0.

So generally we recommend using **Fraction** Compact schedules for clarity.

Field-Set (Through, For, Interpolate, Until, Value)

Each Compact Schedule must contain the elements **Through** (date), **For** (days), **Interpolate** (optional), **Until** (time of day) and **Value**.

Field: Through

This field starts with 'Through:' and contains the [ending date](#) for the schedule period. You may define multiple schedule periods in this way, for example to define seasonal variations. If there are no seasonal variations then enter: Through: 31 Dec, to indicate that the data that follows applies to the whole year.

Note that only Month-Day combinations are allowed for this field.

Field: For

This field starts with 'For: ' and contains the applicable days. Multiple choices may be combined on the line.

Choices are:

- Weekdays,
- Weekends,
- [Holidays](#),
- Alldays,
- SummerDesignDay,
- WinterDesignDay,
- Sunday,
- Monday,
- Tuesday,
- Wednesday,
- Thursday,
- Friday,
- Saturday,
- CustomDay1,

- CustomDay2.

In fields after the first 'For', 'AllOtherDays' may also be used.

Note: EnergyPlus has limit of line length of about 60 characters so lines like:

```
For: Weekdays SummerDesignDay WinterDesignDay Weekends Holidays  
AllOtherDays,
```

should be changed to:

```
For: AllDays,
```

Field: Interpolate (optional)

Schedule values are input to the simulation at the zone time step, so there is also a possibility of 'interpolation' from the entries used in this object to the value used in the simulation. This field, if used, starts with 'Interpolate:' and contains the word 'Yes' or 'No'.

Field: Until

This field contains the ending time for the current days and day schedule being defined. The data should represent clock time (standard) in the format HH:MM. 24 hour clock format (i.e. 1pm is 13:00). Note that 'Until: 7:00' includes all times up through 07:00 (7am).

Field: Value

Finally, the value field is the schedule value for the specified time interval.

Note: you can use 0 for Temperature type Compact Schedules to indicate that the heating/cooling system is switched off during the specified period. See Example 2 below.

Example 1 - Operation Schedule

```
SCHEDULE:COMPACT,  
Office_CellOff_Light,  
Fraction,  
Through: 31 Dec,  
For: Weekdays SummerDesignDay WinterDesignDay,  
Until: 07:00, 0,  
Until: 19:00, 1,  
Until: 24:00, 0,  
For: Weekends,  
Until: 24:00, 0,  
For: Holidays AllOtherDays,  
Until: 24:00, 0;
```

This schedule is intended to be used to describe the lighting operation in an office. It indicates:

- Schedule is a fraction (0-1).
- No seasonal variation.
- Weekdays and cooling and heating design days the schedule is 1 (i.e. 'on') between 7am and 7pm and 0 (i.e. 'off') other times.
- Weekends, holidays and all other days the schedule is 'off'.

Example 2 - Temperature Setpoint Schedule

```
SCHEDULE:COMPACT,  
Bedroom_Cool,  
Temperature,  
Through: 31 Dec,  
For: Weekdays SummerDesignDay WinterDesignDay,  
Until: 05:00, 0.5,  
Until: 09:00, 1,  
Until: 17:00, 0.5,  
Until: 24:00, 1,  
For: Weekends,  
Until: 05:00, 0.5,  
Until: 24:00, 1,  
For: Holidays AllOtherDays,  
Until: 05:00, 0;
```


This schedule is intended to be used to describe the cooling temperature setpoint and setback in a bedroom. It indicates:

- Schedule is a temperature (degC).
- No seasonal variation.
- Weekdays and cooling and heating design days the [main temperature setpoint](#) data (Activity tab) is used between 5am and 9am and also between 5pm and midnight. Cooling operates at [setback temperature setpoint](#) data at all other times on these days.
- Weekends the cooling setpoint is [main temperature setpoint](#) between 5am and midnight. Cooling operates at [setback temperature setpoint](#) data at all other times on these days.
- Holidays and all other days the cooling is off.

More on [Temperature setpoint schedules](#).

5.6 Profiles

Profiles define the variation in occupancy, equipment usage or temperature over the course of a single day. They are used as building blocks in the definition of [Schedules](#).

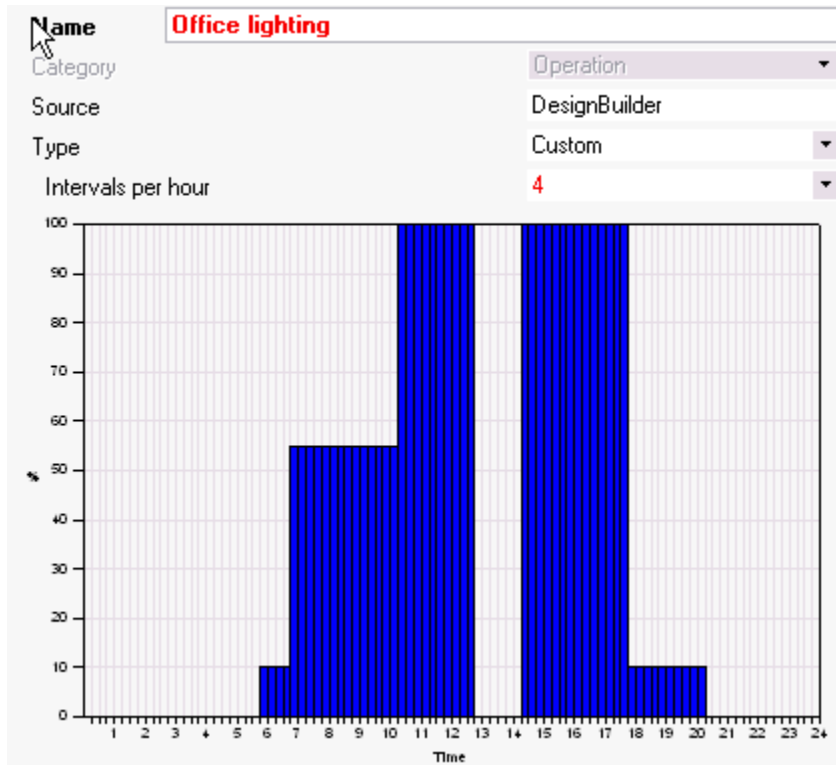

There are 3 types of profile:

1. **Constant** - has the same value all day. Enter the constant value for the profile
2. **Single period** - define the 'on' period by setting the start and end times for the profile using the mouse. The operation is assumed to be 'off' for the rest of the day
3. **Custom** - the profile is defined by a number of intervals, each of which can have a different value. There are two ways to set interval values:
 - 3.a. To change the value for a single interval (single histogram bar) select the top of the histogram bar and drag up/down using the LEFT mouse button.
 - 3.b. To apply a constant value over a range of intervals select the top of the histogram bar which has the required value and drag left/right over the range of intervals to be set using the RIGHT mouse button.

The figure above shows an example custom profile.

Profile data can be accessed:

- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by clicking on the Edit button when selecting profiles from a list in the [Schedules dialog](#).

5.7 Defining setpoint temperature schedules

SCHEDULES TIMING MODEL OPTION

Operation of heating and cooling equipment is defined by selecting a [Schedule](#) under the Heating,

Cooling and Operation headers on the HVAC tab. These schedules are used to generate both the heating/cooling availability schedule and the temperature setpoint schedules used in the simulations. Schedule values greater than 0.5 indicate the system is in full operation controlling temperature to the [main heating/cooling setpoint](#), values between 0 and 0.5 indicate the equipment in [setback](#) mode and values of 0 indicate that the equipment is switched off. See Table below.

Value	Heating/Cooling Equipment Operation
0	Equipment is off
> 0.5	Equipment is controlled using the main temperature setpoint data (Activity tab)
0 < Value <= 0.5	Equipment is controlled using the setback temperature setpoint data (Activity tab)

Notes

1. When using [7/12 Schedules](#), for 0.5 read 50% etc.
2. When using [2-Single period](#) profiles with [7/12 Schedules](#) to generate temperature setpoints the 'Off' periods are modelled using setback temperatures, i.e. the system is not switched off. If you wish the system to switch off outside main heating/cooling hours use the [3-Custom](#) profile type.
3. If the setback temperature set does not appear to affect results, this may be because the heating/cooling operation schedule selected uses only 0 and 1, not the 0.5 required to access setback temperature (see table above).


TYPICAL WORKDAY TIMING MODEL OPTION

You can define the operation of heating and cooling equipment by entering [Typical workday](#) start and end times and seasonal operation under the Heating and Operation headers on the HVAC tab.

This data is used to generate both the heating/cooling availability schedule and the temperature setpoint schedule used in the simulations.

The equipment is switched on between the On and Off times (8am and 6pm in the example below). During this time the equipment is controlled using the [main temperature setpoint](#) (Activity tab). At other times and during weekends the equipment is controlled using the [setback temperature setpoint](#). Weekends are defined on the Activity tab at the building level under [Occupancy](#) by setting the number of working days per week.

The Seasonal control data allows you to set times when the equipment is switched off altogether. For example the heating system data shown below indicates that the heating system will be switched on during the winter only and switched off in the summer.

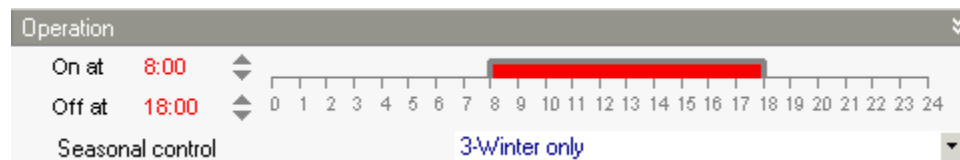


5.8 Textures

General

Name	Beige decorative brick
Category	Brick <input type="text"/>
Source	ImageCELS
Filename	brick07
Width	0.81
Height	0.81

Image

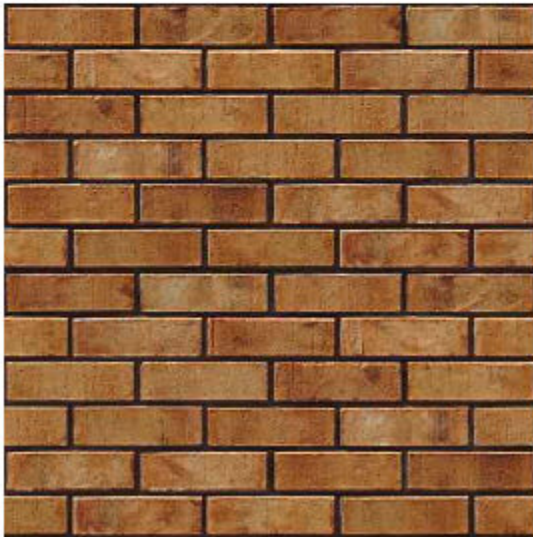

Textures are used to represent the external surface of building [constructions](#) in the rendered views in the [Visualisation](#) Screen.

Select the texture file and the real-world width and height represented by the texture. Textures are associated with materials and used to render the model in the Visualisation Screen.

DesignBuilder comes with a library of textures. Future versions of the software will allow user-defined textures to be added to the library but version 1.0 does not allow this.

Note: If an image does not appear under the Image header this means that the selected file is not installed.

Texture data can be accessed:

- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by double-clicking on the texture icon in the model data,
- by clicking on the Edit button when selecting textures from a list.

5.9 Window Gas

Window Gas component data is used to define the thermal properties of the cavity fill gas between window [Panels](#) in [Glazing components](#).

The gas which fills the inter-glazing cavity affects the heat transfer through the assembly but has almost no effect on the solar heat gain or the visible light transmission. Air, of course, is the most common cavity fill gas, but the use of an inert gas (typically argon or krypton) can significantly reduce window heat transfer. Krypton and argon are colourless, odourless and non-toxic. Argon is the most commonly-used fill gas because it offers good thermal performance at low cost. Krypton is more effective at reducing heat loss, but is roughly 200 times more expensive than argon per unit volume. Because krypton works best at smaller pane spacings (8 mm), it is often used in triple and quadruple-glazed windows to minimize the overall thickness of the unit. Other types of gases are used (e.g. sulphur hexafluoride (SF6) and carbon dioxide (CO2)) to reduce sound transmission, but these gases do not offer the improved thermal performance of the inert gases.

Category

This is the gas type. Select from:

- Air
- Argon
- CO2
- Krypton
- Other
- SF6
- Xenon

The window gas you are defining does not fit with the available options select **Other**. Select **Air** for an air gap.

Thickness

Enter the thickness of the inter-glazing cavity.

Custom material properties

The window gas properties of the gases Air, Argon, Krypton, Xenon are known by EnergyPlus and so no further data is required for these gases.

For CO2, Other and SF6 you must enter custom properties.

CUSTOM GASES ONLY

If you elect to enter custom material properties then you must enter the details. The A and B coefficients are those in the following expression that gives a property value as a function of temperature in degrees K:

Property = Coefficient_A + Coefficient_B * Gas_Temperature (K)

Conductivity Coefficient A

The A coefficient for gas conductivity (W/m-K).

Conductivity Coefficient B

The B coefficient for gas conductivity (W/m-K²).

Viscosity Coefficient A

The A coefficient for gas viscosity (kg/m-s).

Viscosity Coefficient B

The B coefficient for gas viscosity (kg/m-s-K).

Specific Heat Coefficient A

The A coefficient for gas specific heat (J/kg-K).

Specific Heat Coefficient B

The B coefficient for gas specific heat (J/kg-K²).

Molecular Weight

The molecular weight (mass) of the gas (Kg/kmol).

Window gas component data can be accessed:

- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by clicking on the Edit button when selecting window gases from a list.


5.10 Local Shading

General tab on [Local Shading Dialog](#).

Local Shading Components are used to define simple generic shading devices to apply to the Windows in the model.

Enter the name and category for the local shading data set.

[Overhangs](#), [louvres](#) and [sidefins](#) can be specified either individually (e.g. just overhangs) or in combination (e.g. sidefins combined with louvres).

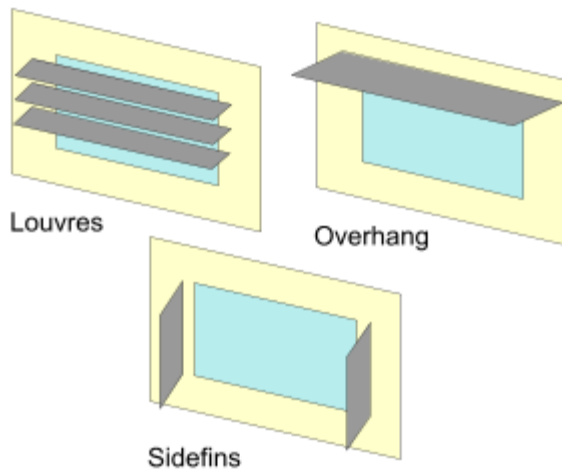

Local Shading component data can be selected from the [Openings tab](#) in Model Data and is applied to all windows on the surface, including custom windows.

The data applies only to external glazing - roof and internal glazing do not use local shading data.

Overhang, louvre and sidefin blades are all assumed to be 100% opaque and made of the material specified on this tab.

Note: the DesignBuilder Local shading devices allow a range of different overhangs, side fins and louvres to be defined, but if you need to model a shading device not covered by the standard mechanism, you can draw custom shading devices using [Component blocks](#).

There are four tabs on the Local Shading dialog:

- [General](#)
- [Louvres](#)
- [Sidefins](#)
- [Overhangs](#)



Local shading data can be accessed:

- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by double-clicking on the local shading icon on the Openings tab in the model data,
- by clicking on the Edit button when selecting local shading devices from a list.

5.10.2 Louvres

Louvres tab on [Local Shading Dialog](#).

Enter details on the louvres, if fitted.

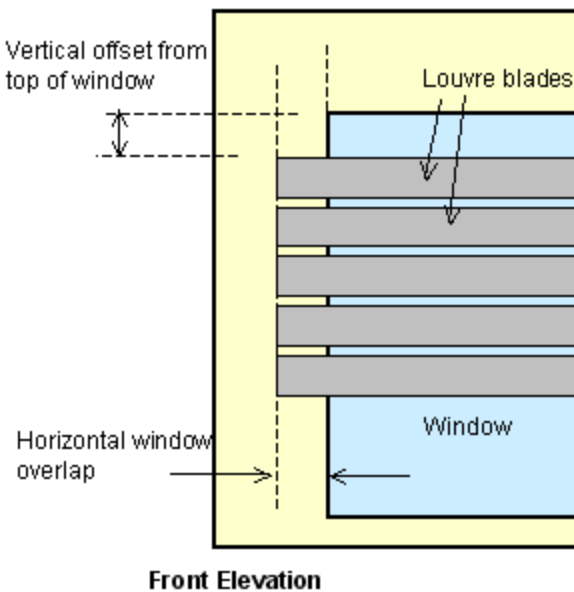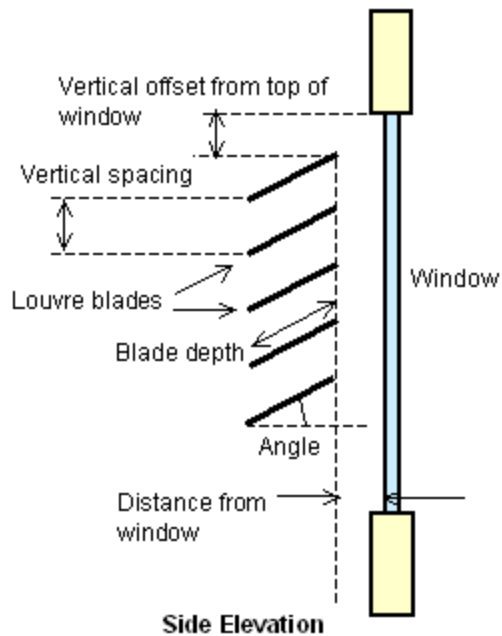


The number of louvres is a maximum value and if the window is not high enough to accommodate the requested number of louvres blades, any louvres blades which would be positioned below the window are not added.

5.10.3 Sidesfins

Sidesfins tab on [Local Shading Dialog](#).


Enter details on the sidesfins, if fitted.

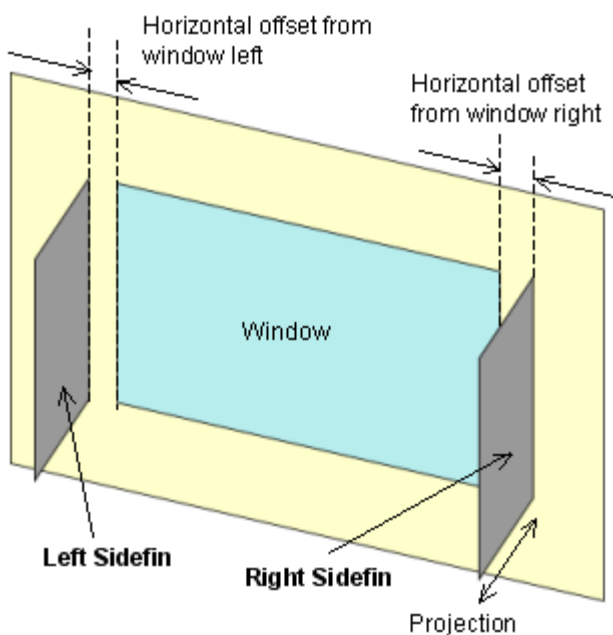


5.10.4 Overhangs

Overhangs tab on [Local Shading Dialog](#).

Enter details on the overhangs if fitted.

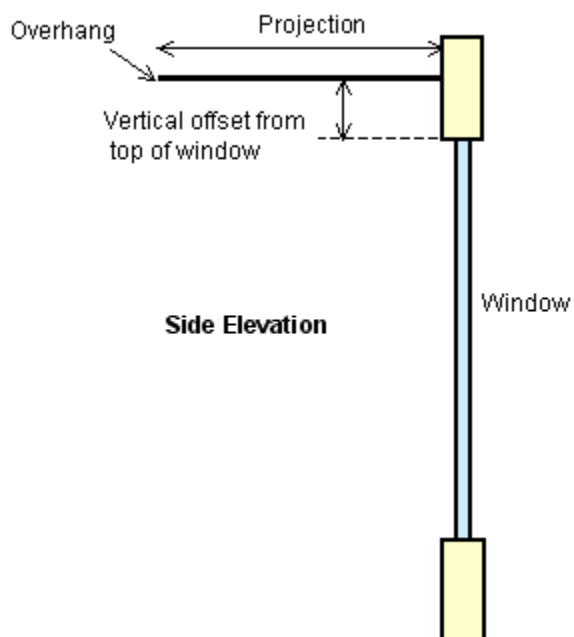

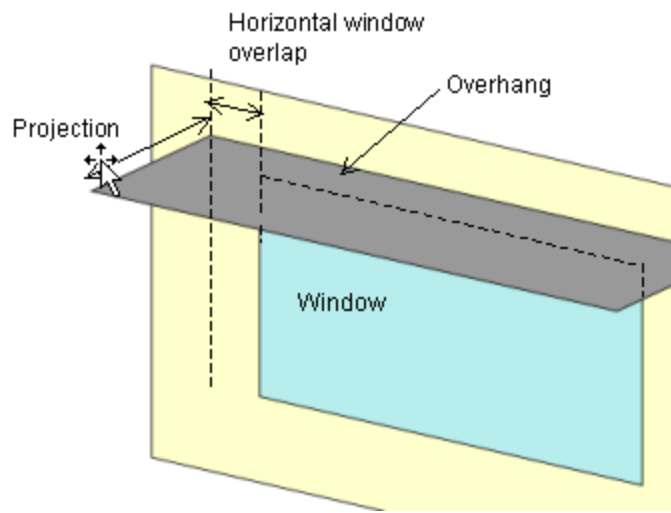

5.11 Window Blinds

General	
Name	Blind with medium reflectivity sl
Category	Slatted blind ▾
Slat Properties	
Slat orientation	Horizontal
Slat width	0.025
Slat separation	0.019
Slat thickness	0.001
Slat angle	45.0
Slat conductivity	0.900
Minimum slat angle	0
Maximum slat angle	180
Slat Beam Solar Properties	
Slat beam solar transmittance	0.000
Slat beam solar reflectance, front s...	0.500
Slat beam solar reflectance, back ...	0.500
Slat Diffuse Solar Properties	
Slat diffuse solar transmittance	0.000
Slat diffuse solar reflectance, front ...	0.500
Slat diffuse solar reflectance, back...	0.500
Slat Beam Visible Properties	
Slat beam visible transmittance	0.000
Slat beam visible reflectance, front...	0.500
Slat beam visible reflectance, bac...	0.500
Slat Diffuse Visible Properties	
Slat diffuse Visible transmittance	0.000
Slat diffuse visible reflectance, fro...	0.500
Slat diffuse visible reflectance, ba...	0.500
Slat IR (Thermal) Properties	
Slat hemispherical transmittance	0.000
Slat hemispherical emissivity, front si...	0.900
Slat hemispherical emissivity, back ...	0.900
Openings	
Blind-to-glass distance	0.050
Blind top opening multiplier	0.500
Blind bottom opening multiplier	0.500
Blind left-side opening multiplier	0.500
Blind right-side opening multiplier	0.500

Window blind components can be selected for external glazing, roof glazing and interior glazing from the Openings tab in the Model Data.

There are four types of window blinds, as selected in the Category data on the [General tab](#):

- [Slat](#) - slatted blinds which have different transmission properties with solar position.
- [Shade](#) - assumed perfectly diffusing.
- [Transparent insulation](#) - transparent insulation material to be positioned on the outer surface of an external wall.
- [Electrochromic switching](#) - switchable visible and solar properties based on solar gain.

Window blind component data can be selected from the [window shading data](#) on the [Openings tab](#) in Model Data and is applied to all windows on the surface, including custom windows.

The data applies only to external, internal and roof glazing.

Window blinds component data can be accessed:

- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by double-clicking on the window blinds icon on the Openings tab in the model data,
- by clicking on the Edit button when selecting window blinds from a list.

5.11.1 General


General tab on [Window Blinds Dialog](#).

Enter the name and category for this Window blinds data set.

5.11.2 Slat Data

Slat data tab on [Window Blinds Dialog](#).

Enter details on the slats

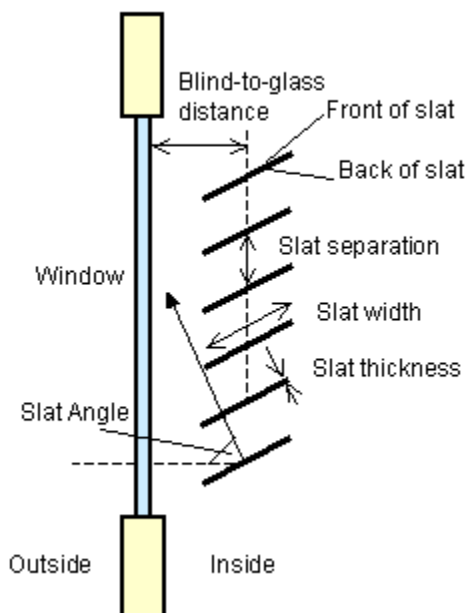

The slat angle is the angle between the glazing outward normal to the slat outward normal. A slat angle of 0° sets slats to be vertical and an angle of 90° sets them to be horizontal.

The openings data allows you to define the distance between the blind and the window and also define the fraction of the shade surface that is open to air flow on each side of the blind

A slatted blind can be applied inside, outside or mid-pane. Note that if the Blind is applied mid-pane, the gap between the inner pane and the second pane must be at least large enough to accommodate the slat width.

5.11.3 Shade/Transparent Insulation Data

Shade data tab on [Window Blinds Dialog](#).

Enter the shade material properties.

A diffusing blind can be applied inside, outside or mid-pane.

5.11.4 Electrochromic Switching

Electrochromic tab on [Window Blinds Dialog](#).


Enter the electrochromic switchable pane material.

This pane will be used in place of the standard outer glazing pane according to the control data in the Model Data.

[More information on Electrochromic glazing](#).

Note: that the blind position in Openings Model Data must be 'Switchable' to use electrochromic switchable shading

5.12 Vents

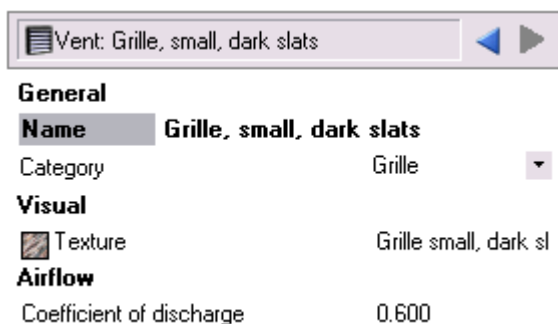

Vent Components have a [coefficient of discharge](#) and a [texture](#) (used to represent a vent in the rendered view).

[More information about vents.](#)

There are two tabs on the Vents dialog:

- [General](#)
- [Airflow](#)

Vent component data can be accessed:

- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by double-clicking on the vent icon on the Openings tab in the model data,
- by clicking on the Edit button when selecting vents from a list.

5.12.1 General

General tab on [Vents Dialog](#).

Enter the name and category for this vent component.

The texture is used to represent the vent in rendered views.

5.12.2 Airflow

Airflow tab on [Vents Dialog](#).

Enter the discharge coefficient for this vent component.

You can select this [vent](#) from the [Openings](#) model data.

Note: The discharge coefficient is only used in thermal simulations when the [Natural ventilation Model](#) option is set to **Calculated**.

5.13 Holidays

A 'Holiday schedule' is a list of intervals of one or more day which identify the days the building may be unoccupied. The [holiday intervals](#) are listed in order, with holidays most likely to be taken at the top of the list. The [Holidays per year](#) Model Data on the [Activities](#) tab at building level defines how many holidays are taken and this 'Holiday schedule' defines which days are holidays. Days are selected from the top of the list working downwards. The data is used to specify EnergyPlus 'SpecialDayPeriods'.

There are two tabs on the Holidays dialog:

- [General](#)
- [List](#)

Holiday data can be accessed:

- from the [Components tab on the opening screen](#) (to view/edit library components if no file is open),
- from the [Components tab in the Navigator panel](#) (to view/edit model components if a file is open),
- by double-clicking on the holidays icon on the Activity tab in the model data,
- by clicking on the Edit button when selecting holidays from a list.

5.13.1 General

General tab on [Holidays Dialog](#).

Enter the [Region](#) and Category for the Holiday Schedule.

5.13.2 Holiday List

List tab on [Holidays Dialog](#).

Name	Start date	Number of days
Autumn half term	27 Oct	7
Christmas holidays	22 Dec	14
Spring half term	16 Feb	6
Easter holidays	5 April	14
May Day	1st Monday in May	1
Whitsun half term	31 May	7
Summer holidays	19 July	42

Holidays are selected from the top of the list, so holidays which are most likely to be taken should be defined first (so they are positioned at the top of the list).

Use the controls in the Info panel to add, edit and delete holidays.

Valid holiday date formats are defined in [Compact Schedules: EnergyPlus Date Definition](#)

Section



**Template
Data**

Note that the behaviour of templates changed starting with version 1.3. In previous versions templates were always associated with the application and never with the model. In version 1.3 templates are loaded to the model in the same way that components are.

DesignBuilder templates allow you to quickly load data into your model in bulk. If you often work with similar types of buildings you may find it useful to create your own templates. This will allow you to load the same data into any models you work with in the future.

DesignBuilder Templates are databases of typical generic data. The following templates are available:

- [Activity templates](#)
- [Construction templates](#)
- [Glazing templates](#)
- [Facade templates](#)
- [HVAC templates](#)
- [Location Templates](#)
- [Hourly weather data](#)
- [Pressure coefficients](#)
- [Metabolic rates](#)
- [Cracks](#)
- [Legislative regions](#)
- [Energy codes](#)
- [Sectors](#)
- World time zones (predefined, not editable)

Library Templates are loaded into the model at the time the dsb file is created and from then on, they are associated specifically with this model and so are known as **Model Templates**. Any changes made to the Library Templates do not affect existing building models because they reference their own set of Model Templates. The latest set of library templates can be loaded into a model using the Import library components and templates to model command.

Also templates are used for loading data into models, so ***a change to a template will not affect the model until the data is loaded.***

New Template functionality in version 1.3

Managing template data

You can edit and move template data around in various ways:

1. Add, Edit, Delete, [Import](#) and [Export](#) Template library data from the [Opening Screen - Template Libraries](#) tab.
2. If a model file is loaded you can edit Model templates from the Templates tab in the Navigator panel ([Learning mode](#) switched off) or by using the Data management panel on the right of the screen ([Learning mode](#) switched on).
3. In either case, **to add a template**, open up the template type you wish to define by clicking on the + to the left of the template icon, then click on the category of template you wish to define. Now click on the Green '+' to add a template of the selected category.
4. Import/export Model template using the **File > Export > Library data** menu command to create a .ddf file with the .dsb model file open.
5. To import the previously exported Model template data to the Template library close the .dsb file and [import](#) the .ddf file to the library.
6. Load the latest library templates into your model using the **Import library components and templates to model** command from the Tools menu when a model is loaded. Any new data that has been added to the library since the model file was created will be imported to the model. Also if there have been any changes to library template data, this new data will overwrite the original data.

Important Note: any template you add while a model is open will be added to Model templates and not to the Template library. It will only be added to the library and hence to new models if you export the new component model data in .ddf form and import the .ddf file to the library before creating the new model.


Loading to Model Data

Each tab in the Model data has the name of the template last used to load the data at the top (shown in bold). At the top of the HVAC tab is the HVAC Template, at the top of the Lighting tab is the Lighting Template etc. This is the template that was previously used to load the default data, but you can load different data from a different template by clicking on the template data, then clicking again on the '...' to the right of the template data and making a new selection. When you make the selection, the appropriate data is loaded from the template into the model.

Note 1: It is important to understand that the template data itself does not contribute to the model until it is loaded in.

Note 2: Changes to the model data relative to the data in the template last loaded are highlighted in bold to show that it overrides the template data previously loaded.

Note 3: Another way to load data to a model from templates is to use the [Load Data From Template](#) tool.

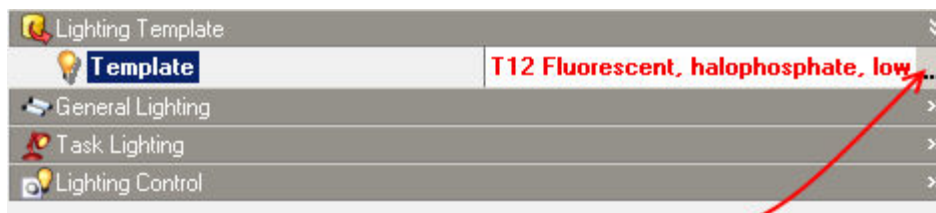

Template selection in Model data

Colour code

Templates are coded by colour in the Navigator panel and selection lists as follows:

Red shows user data, i.e. data that was not supplied by DesignBuilder.

Green indicates that the data is derived from a reputable national or international source.

Blue indicates that the data is generated internally by DesignBuilder.

Black is used for other data.

6.1 Activity Templates

Activity template: Type 1 Natural ventilation m...

General

Name Type 1 Natural ventilation modular

Category Office

Source BRE

Region England and Wales

Sector Offices

Floor shade colour

All Gains

Load 30

Occupancy details

Density 0.20

Metabolic Heat

Metabolic rate Typing

Metabolic factor (0.85 for women, 0.7... 0.90

Workday profile

Occupancy From 8 to 18

Days / week 5

Schedules

Schedule 8:00 - 18:00 Mo

Computers

On

Load 10

Workday profile

Computers From 8 to 18

Schedules

Schedule 8:00 - 18:00 Mo

Office Equipment

On

Load 10

Workday profile

Equipment From 8 to 18

Schedules

Schedule 8:00 - 18:00 Mo

Activity templates are used as a source of default activity (building usage) data for building models.

The data covers occupancy, equipment usage and suitable design internal temperatures, illuminance levels and ventilation rates per person.

There are five tabs on the Activity Template dialog:

- [General](#)
- [All gains](#)

- [Occupancy](#)
- [Other gains](#)
- [Environmental](#)

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.1.1 Activity Templates - General

General tab on [Activity Templates Dialog](#).

Enter the name, category, sector and region for this activity template.

Enter the region as 'General' if you want the data to be generally available (i.e. not restricted to a particular region).

The floor shade colour is used to shade the floor of the model at block and zone levels to give a quick indication of the usage of the building in various areas.

6.1.2 Activity Templates - All Gains

All Gains tab on [Activity Templates Dialog](#).

The lumped gains into the space from people, equipment, lights etc. Data on this tab is only used when the Gains option is set to 'Lumped'.

6.1.3 Activity Templates - Occupancy

Occupancy tab on [Activity Templates Dialog](#).

Occupancy levels and times, metabolic activity on this tab is used when the 'Gains' option is set to 'Early' or 'Detailed'.

Set the metabolic rate according to the level of activity within the space. The metabolic factor accounts for people of various sizes. Enter 1.00 for men, 0.85 for women, 0.75 for children, or you can use an average value if there is a mix of sizes.

The Workday profile is used when the 'Timing' option is set to 'Typical workday' and the Schedule data is used when the Timing option is set to '7/12 Schedules'.

6.1.4 Activity Templates - Other Gains

Other Gains tab on [Activity Templates Dialog](#).

Data on this tab is used when the 'Gains' option is set to 'Early'. DHW Data is always used.

The default gains into the space from computers, office equipment, catering, process and miscellaneous equipment for this activity.

Also hot water consumption rate per person per day and the operation schedules are defined here.

6.1.5 Activity Templates - DHW

Enter the Domestic Hot Water (DHW) volumetric consumption per unit of floor area per day and the operation schedule.

In DesignBuilder the amount of DHW consumed is considered to be a function of the activity. For example, there is a demand assumed to arise from the occupants of an office for activities such as washing hands and washing up cups. This demand is associated with the office rather than the toilet or tea room. Thus the demand from each space needs to be assigned to a DHW system even if the system itself is not present in the space.

6.1.6 Activity Templates - Environmental

Environmental tab on [Activity Templates Dialog](#).


Enter the data related to the environmental and comfort requirements of this activity:

- Heating set-point temperature (if the space is heated).
- Cooling set-point temperature (if the spaces cooled).
- Ventilation set-point temperature
- Illuminance levels required.
- Fresh air levels required per person - defines mechanical ventilation air change rates.

If there is never any heating or cooling, you can leave these set-points.

See [Environmental Control](#) under [Activity](#) Model Data for more details.

6.2 Construction Templates

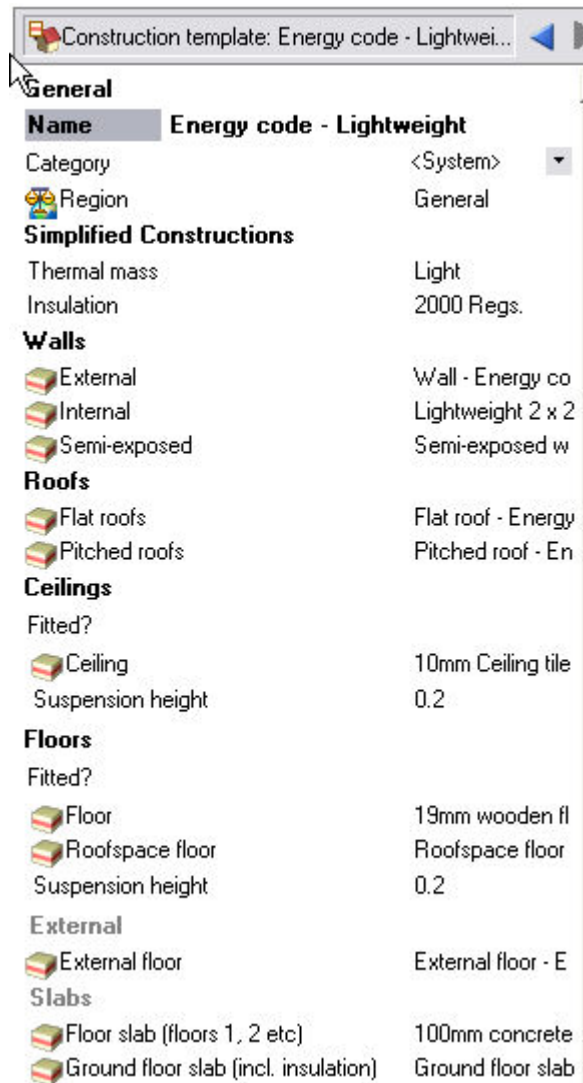

Construction templates are used as a source of generic construction data for loading into building models.

The template provides data on the [construction](#) of external walls, roofs, floors, partitions, roofs etc and [air-tightness](#) data.

There are four tabs on the Construction template dialog:

- [General](#)
- [Simple](#)
- [Standard](#)
- [Airtightness](#)

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),

- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.2.1 Construction Templates - General

General tab on [Construction Templates Dialog](#).

Enter the name, source, category and region for this construction template.

6.2.2 Construction Templates - Simple

Simple tab on [Construction Templates Dialog](#).

Data on this tab is used when the Construction model detail is set to **Pre-design**.

Enter default levels of insulation and thermal mass for this construction type.

6.2.3 Construction Templates - Walls

Walls tab on [Construction Templates Dialog](#).

Data on this tab is used when the [Construction](#) model detail is set to **Pre-design** or **General** (i.e. it is always used).

Select default walls, partitions for exposed and semi-exposed surfaces for this Construction template.

You can also select the external and internal wall sub-surface constructions here.

6.2.4 Construction Templates - Roofs/Floors/Slabs/Ceilings

Roofs/Floors/Slabs/Ceilings tab on [Construction Templates Dialog](#).

Data on this tab is used when the [Construction](#) model detail is set to **Pre-design** or **General** (i.e. it is always used).

Select default constructions for roofs, floors, slabs and ceiling surfaces for this Construction template.

You can also select the roof sub-surface construction here.

6.2.5 Construction Templates - Doors

Doors tab on [Construction Templates](#) Dialog.

Data on this tab is used when the [Construction](#) model detail is set to **Pre-design** or **General** (i.e. it is always used).

Select default door constructions for internal and external doors for this Constructions template.

You can also select the external and internal wall sub-surface constructions here.

6.2.6 Construction Templates - Airtightness

Airtightness tab on [Construction Templates](#) Dialog.

Cracks template

The Cracks template setting indicates the Cracks data template to use as a source for crack data when the [Calculated](#) Natural ventilation model option is selected.

Infiltration

The default infiltration rate used when the 'Natural ventilation' model detail level is 'Simple'.

6.2.7 Construction Templates - Thermal mass

Thermal mass tab on [Construction Templates](#) Dialog.

Data on this tab is used when the [Construction](#) model detail is set to **Pre-design** or **General** (i.e. it is always used).

Enter the default thermal mass construction for this construction template.

See [Internal Thermal Mass](#) for more information on defining thermal mass in a model.

6.3 Glazing Templates



Glazing templates are used as a source of default [glazing](#), frame and [shading](#) construction data for building models.

There are three tabs on the Glazing Template dialog:

- [General](#)
- [Glazing](#)
- [Shading](#)

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.3.1 Glazing Templates - General

General tab on [Glazing Templates Dialog](#).

Enter the name, category and region for this glazing template.

Enter the region as 'General' if you want the data to be generally available (i.e. not restricted to a particular region). Glazing templates with category '<System>' have their data set up at the time a file is created or when the Legislative region is changed.

6.3.2 Glazing Templates - Glazing

Glazing tab on [Glazing Templates Dialog](#).

 
Enter data on the glazing construction, frame and opening area for external glazing, internal glazing and roof glazing.

6.3.3 Glazing Templates - Shading

Shading tab on [Glazing Templates Dialog](#).

Select any shading devices to be applied when this glazing templates is loaded to the model.

6.4 Facade Templates



General

Name Preferred height 1.5m, 40% glazed

Category <Wall Facade t ▾

Glazing

Layout 3-Preferred height

Glazing (%) 40

Preferred window width 3.000

Preferred window height 1.500

Sill height 0.800

Window spacing 5.000

Vent spacing 5.000

Frame

Has a frame

Number of horizontal dividers 1

Number of vertical dividers 1

Frame width 0.040

Divider width 0.020

Facade templates are used to provide a choice of typical simple facade layouts and frame definitions which can be easily loaded into a building model.

There are two tabs on the Facade Template dialog:

- [General](#)
- [Openings](#)

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),

- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.4.1 Facade Templates - General

General tab on [Facade Templates Dialog](#).

Enter the name and category for this Facade Template.


6.4.2 Facade Templates - Openings

Openings tab on [Facade Templates Dialog](#).

Enter the glazing and frame data for the facade. There are a number of standard facade types:

- None - there is no glazing.
- Continuous horizontal - glazing is generated in a continuous horizontal strip using sill height and % glazing.
- Fixed height - glazing is generated with a fixed height at the specified sill height, and width is calculated based on the % glazing. This option uses % glazing but prioritises window height.
- Preferred height - glazing is generated using the window height data and the % glazing, but the window height may be adjusted to achieve the required % glazing. This option uses window and sill height but prioritises % glazing.
- Fixed width and height - windows have fixed width and height. This option uses % glazing but prioritises window width and height.
- Fill surface (100%) - the entire surface is filled with glazing and there is no frame.
- If the glazing does not have a frame, uncheck the 'Has a frame?' box.

6.5 Lighting Templates

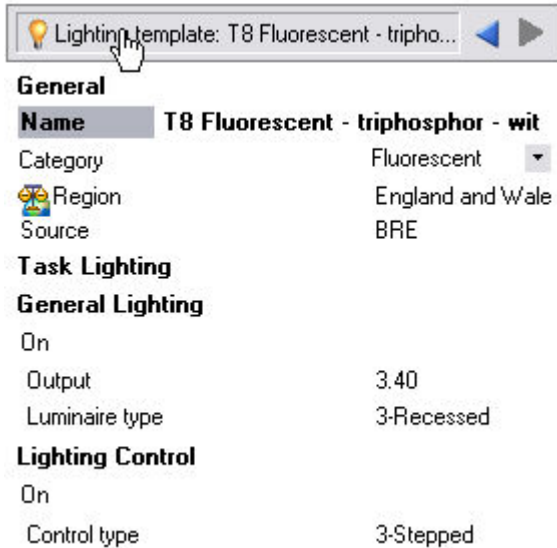

Lighting templates data sets are used as a source of generic lighting systems for loading into the building data.

There are three tabs on the Lighting Template dialog:

- [General](#)
- [Output](#)
- [Control](#)

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.5.1 Lighting Templates - General

General tab on [Lighting Templates Dialog](#).

Enter the name, category and region for this Lighting Template.

Enter the region as 'General' if you want the data to be generally available (i.e. not restricted to a particular region).

See also Building Model [Lighting Data](#) for more information on the use of this template data in the model.

6.5.2 Lighting Templates - Output

Output tab on [Lighting Templates](#) Dialog.

Enter the lighting energy for task and general lighting in W/m²/100 lux (W/ft²/100 lux). This data is used for setting up the actual Lighting energy W/m² data in each zone using:

$$\text{Lighting energy (W/m}^2\text{)} = \text{Lighting (W/m}^2\text{/100 lux)} \times \text{Design lux level (Activity tab)} / 100$$

Substitute ft² for m² for equation in IP units.

The 'Output' data is used for generating default lighting loads based on lighting type and required illuminance levels as set in Activity data.

See [General Lighting](#) under Building Model [Lighting Data](#) for more information on the use of this template data in the model.


6.5.3 Lighting Templates - Control

Control tab on [Lighting Templates](#) Dialog.

If the lighting is to be controlled by the availability of natural daylight, check the 'control' option box and select the type of control.

Continuous Control

For 'continuous' control, the overhead lights dim continuously and linearly from maximum electric power, maximum light output to minimum electric power, minimum light output as the daylight illuminance increases. The lights stay at the minimum point with further increase in the daylight illuminance.

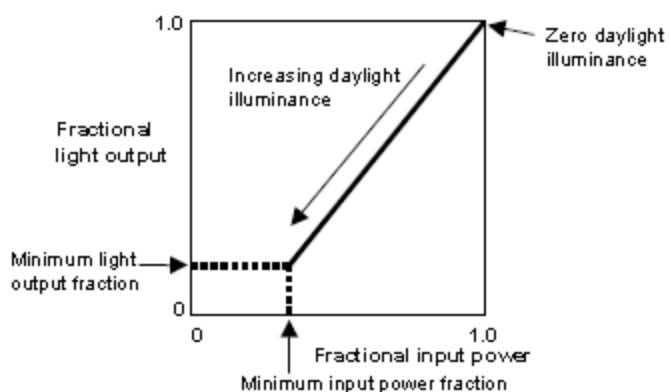

The minimum input power fraction for 'continuous' control type is the lowest power the lighting system can dim down to, expressed as a fraction of maximum input power. For 'continuous/off' lighting control, this is the power fraction reached just before the light switch off completely.

The minimum output fraction for 'continuous' control type, is the lowest lighting output the lighting system can dim down to, expressed as a fraction of maximum light output. This is the fractional light output that


the system produces at minimum input power. For 'continuous/off' lighting control, this is the power fraction reached just before the light switch off completely.

Continuous/Off Control

'Continuous/off' control is the same as continuous control except that the lights switch off completely when the minimum dimming point is reached.

Stepped Control

For 'stepped' control, the electric power input and light output vary in discreet, equally spaced steps. The number of steps can be set.

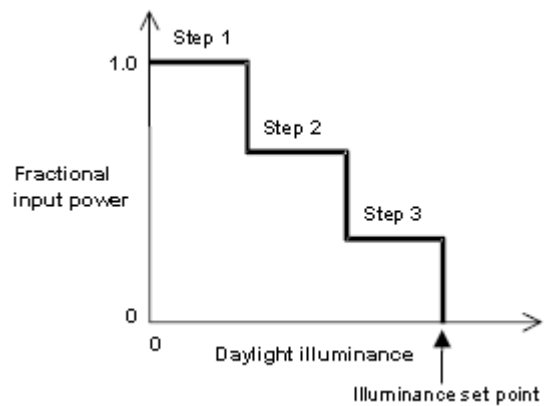

6.6 HVAC Templates

HVAC template: VAV

General

Name VAV

Category <Generic>

Region England and Wales

Source BRE

Floor shade colour

Natural Ventilation

Mechanical Ventilation

On

Rate 3.0

Fans

Fan type 1.0

Fan operation mode 1.0

Pressure rise 1000.0

Total efficiency (%) 70.0

Fan motor efficiency (%) 85.0

Fan in air (%) 100.0

System

Simple

Auxiliary energy 5.96

Compact

Type 3-VAV

Outside air minimum flow control ... 1-Fixed

Supply air min flow fraction 0.30

Central heating coil type 3-Hot water

Cooling coil setpoint 13.00

Heating coil setpoint 35.00

Zone damper heating action 1-Normal

Reheat type 3-Hot water

Preheat type 1-None

Preheat coil setpoint 10.00

Economiser

Economiser type 1-Return air te

Economiser lockout 1-No lockout

Economiser upper temperature limit 100.0

Economiser lower temperature limit -50.0

Economiser upper enthalpy limit 10000.0

HVAC templates data sets are used as a source of generic [heating/cooling](#) and [ventilation](#) systems for loading into the building data.

There are four tabs on the HVAC Template dialog:

- [General](#)
- [Ventilation](#)
- [System](#)
- [Air temperature distribution](#)

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.6.1 HVAC Templates - General

[General tab on HVAC Templates Dialog.](#)

Enter the name, category, sector and region for this HVAC template.

Enter the region as 'General' if you want the data to be generally available (i.e. not restricted to a particular region).

The floor shade colour is used to shade the floor of the model at block and zone levels to give a quick indication of the system type fitted in various areas.

6.6.2 HVAC Templates - Ventilation

[Ventilation tab on HVAC Templates Dialog.](#)

Enter the maximum natural/mechanical ventilation rates as appropriate.

6.6.3 HVAC Templates - System

[System tab on HVAC Templates Dialog.](#)

The data on this tab is divided into 'System' (i.e. whole system data), 'Heating' and 'Cooling'.

Auxiliary energy - defines the energy consumption of fans, pumps and other auxiliary equipment when using the 'Simple' HVAC model option. This energy is assumed to be consumed during periods when either heating or cooling systems are operating.

Type - defines the EnergyPlus compact system type when the 'Compact' HVAC model option is set. Select from:

- Unitary single zone - for modelling 'window' air conditioning units and any other system which does not use ducted air
- Unitary multizone - for modelling constant volume air conditioning systems.
- VAV - for modelling variable air volume air conditioning systems.

When using the VAV compact system type you can define the system in more detail using:

- Outside air control type - select either 'Fixed' or 'Proportional'. 'Fixed' means that the minimum outside air flow rate is fixed no matter what the actual system flow rate is. Proportional means the minimum outside air flow rate varies in proportion to the total system air flow rate.
- Supply air min flow fraction - is the fraction that the zone VAV box can reduce to based on the supply air maximum flow rate.

Heating/cooling system CoP is the whole system seasonal coefficient of performance including distribution losses when using the 'Simple' HVAC model option.

Boiler/chiller CoP is the seasonal coefficient of performance of the boiler/chiller, excluding any energy consumption by fans, pumps etc and excluding distribution losses..

6.6.4 HVAC Templates - Air Temperature Distribution


Air temperature distribution tab on [HVAC Templates Dialog](#).

By default EnergyPlus assumes that air temperature within a zone is completely uniform (i.e. the air is fully mixed). The data on this tab allows you to set up a temperature gradient which varies dynamically depending on:

- Outside temperature.
- Inside temperature.
- Inside-outside temperature difference.
- Heating load.
- Cooling load.

See [Air Temperature Distribution](#) for more information on defining vertical zone temperature profiles (temperature gradients).


6.7 Location Templates

 Location template: ANCHORAGE


General

Name	ANCHORAGE
Country	UNITED S ▼
Source	ASHRAE/TMY
WMO	702730
Climatic region	7
Koppen classification	Dfc
Latitude	61.17
Longitude	-150.02
Elevation	35.0
Standard pressure	100.9

Time and Daylight Saving

 Time zone	(GMT-09:00) AI
Start of Winter	Oct
End of Winter	Mar
Start of summer	Apr
End of summer	Sep

Energy Codes

 Legislative region	Alaska
--	--------

Heating 99.6%

Outside design temperature	-23.7
Wind speed	11.9
Wind direction	0.0

Heating 99%

Outside design temperature	-21.0
Wind speed	10.2
Wind direction	0.0

Cooling Design Weather (0.4% based on d...

Max DB temperature	21.5
WB temperature at Max DB	14.7
Min night design temperature	14.9

Cooling Design Weather (1% based on dry...

Max DB temperature	20.0
WB temperature at Max DB	13.9
Min night design temperature	13.4

Cooling Design Weather (2% based on dry...

Max DB temperature	18.6
WB temperature at Max DB	13.2
Min night design temperature	12.0

Location Templates are a database of locations from around the world based on ASHRAE design weather data including daylight savings.

Each Location data set is located within a 'Legislative Region'. Most Regions in Europe include some

basic data on the energy codes which apply.

There are four tabs on the Location Template dialog:

- [Location](#)
- [Winter design weather](#)
- [Summer design weather](#)
- [Simulation weather](#)

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.7.1 Location Templates - Location

[Location tab on Location Templates Dialog.](#)

DesignBuilder Location Templates are located within 'Legislative Regions'. Most regions in Europe include some basic data on the energy codes which apply.

6.7.2 Location Templates - Winter Design Weather

[Winter design weather tab on Location Templates Dialog.](#)

The weather data used in winter design calculations is:

- Minimum outside dry-bulb temperature
- Co-incident wind speed and direction.

There are options for 99.6 or 99% confidence (i.e. 0.4 or 1% chance of more extreme winter weather occurring).

6.7.3 Location Templates - Summer Design Weather

[Summer design weather tab on Location Templates Dialog.](#)

The weather data used in summer design calculations is:

- Maximum outside dry-bulb temperature
- Minimum outside dry-bulb temperature
- Wet-bulb temperature at the time of the maximum dry-bulb temperature.

Risk can be specified based on dry or wet-bulb temperatures, for 99.6, 99 and 98% confidence (i.e. 0.4, 1 or 2% chance of more extreme weather occurring).


6.7.4 Location Templates - Simulation Weather

Simulation weather tab on [Location Templates](#) Dialog.

DesignBuilder will only use hourly weather data for simulations (winter and summer design calculations use design weather data).

You can [add your own Hourly Weather data](#).

6.8 Hourly Weather Data

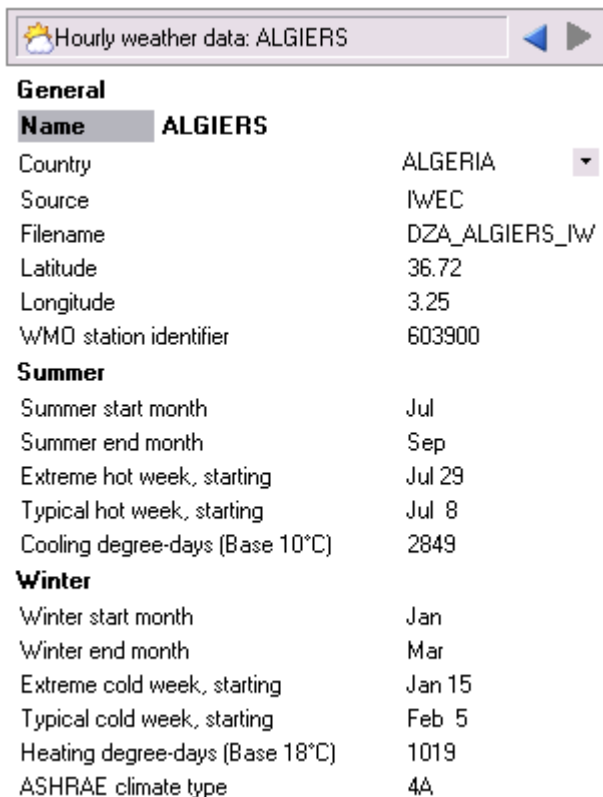

General	
Name	ALGIERS
Country	ALGERIA
Source	IWEC
Filename	DZA_ALGIERS_IW
Latitude	36.72
Longitude	3.25
WMO station identifier	603900
Summer	
Summer start month	Jul
Summer end month	Sep
Extreme hot week, starting	Jul 29
Typical hot week, starting	Jul 8
Cooling degree-days (Base 10°C)	2849
Winter	
Winter start month	Jan
Winter end month	Mar
Extreme cold week, starting	Jan 15
Typical cold week, starting	Feb 5
Heating degree-days (Base 18°C)	1019
ASHRAE climate type	4A

DesignBuilder is supplied with a large database of hourly weather data sets from around the world. When you select an hourly weather data set on the [Location tab](#) at [Site level](#), you do not select the file directly, but rather an hourly weather data template, which in turn references the actual file. It works this way so that we can supply you with a database of hourly weather data locations without needing to include hundreds of large hourly weather files.

There are two tabs on the Hourly Weather Data dialog:

- [General](#)
- [Statistics](#)

If you select an [Hourly weather file](#) from the DesignBuilder database which does not yet exist on your computer, the program will [automatically download](#) it from the DesignBuilder server. You must be connected to the Internet for this option to work.

You can [add new hourly weather data](#) sets to the DesignBuilder database.

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.8.1 Hourly Weather Data - General

General tab on [Hourly Weather data](#) Dialog.

Select the Hourly weather data filename and the rest of the data is loaded directly from the .epw and .stat files.

Each file is named using the ISO standard three-letter country abbreviation (i.e. CUB for Cuba), followed by the location name, and the source format (CityUHK, CSWD, CTYW, CTZ2, CWEC, ISHRAE, IWEC, IGDG, INETI, KISR, SWEC, SWERA, TMY2, or TMY).

Thus, **CUB_Havana_IWEC.epw** is the EnergyPlus weather file (epw) from the ASHRAE International Weather for Energy Calculations (IWEC) data for Havana, Cuba (CUB).

There are three files associated with each location:

- **epw** - EnergyPlus weather files
- **stat** - a summary report on the data. Data from this file is loaded into the [Statistics tab](#) when an hourly weather data file is selected.
- **ddy** - design conditions.

Note: the above hourly weather data and associated statistics files are located in the [Weather data folder](#).

6.8.2 Hourly Weather Data - Statistics

Statistics tab on [Hourly Weather data](#) Dialog.

Simulation Options

These options control the simulation and the output produced.

Simulation Period

Select the start and end days for the simulation, or select a typical period:

- [Annual simulation](#)
- [Summer design week](#)
- [Summer typical week](#)
- [All summer](#)
- [Winter design week](#)
- [Winter typical week](#)
- [All winter](#)

Interval

Monthly and annual output is always generated and daily, hourly and sub-hourly data can be selected by checking the appropriate boxes.

Note that selecting output at hourly or data translation utility.

The statistics displayed are generated by the EnergyPlus weather

The statistics data is used to identify useful simulation periods:

Summer start month, Summer end month define the summer simulation period in **mmm** format.

Winter start month, Winter end month define the winter simulation period in **mmm** format.

Extreme hot week, starting defines the first day of the hottest week of the year.

Typical hot week, starting defines the first day of a typical summer week.

Extreme cold week, starting defines the first day of the coldest week of the year.

Typical cold week, starting defines the first day of a typical winter week.

Note: week starting dates must be in the format **mmm dd** - any other format will generate an error when clicking on the links in the Simulation Options dialog.

This data can be accessed from the [Simulation Calculation options dialog](#) to set up typical simulation periods (screenshot right) .

6.9 Crack Templates

Crack: Excellent

General

Name Excellent

Category <Airtightness ▾

Windows

External

Flow coefficient (kg/m crack @ 1Pa)	0.000200
Flow exponent	0.70

Internal

Flow coefficient (kg/m crack @ 1Pa)	0.000200
Flow exponent	0.70

Doors

External

Flow coefficient (kg/m crack @ 1Pa)	0.000200
Flow exponent	0.70

Internal

Flow coefficient (kg/m crack @ 1Pa)	0.020000
Flow exponent	0.70

Vents

External

Flow coefficient (kg/m crack @ 1Pa)	0.001000
Flow exponent	0.66

Internal

Flow coefficient (kg/m crack @ 1Pa)	0.001000
Flow exponent	0.60

Walls

Internal

Flow coefficient (kg/s.m2 @ 1Pa)	0.001000
Flow exponent	0.75

Crack data is used when the 'Calculated' natural ventilation option is set. In this case every surface in the model has a crack and its size (characterised by flow coefficient and exponent) is determined by [Airtightness](#) as set on the [Constructions tab](#) in the Model Data. The value of Airtightness is used as a key to look up corresponding crack sizes in the Cracks database.

The cracks database has been set up empirically to give typical air change rates for each of the five Airtightness categories in a range of building types.

There are five tabs on the Crack Template data dialog:

- [General](#)
- [Openings](#)
- [Walls](#)
- [Floors/ceilings](#)
- [Roofs](#)

6.9.1 Crack Templates - General

General tab on [Crack Templates Dialog](#).

Tab contains the name and category of the crack template.

6.9.2 Crack Templates - Openings

Openings tab on [Crack Templates Dialog](#).

Enter the characteristics of the cracks around internal and external windows, vents and doors.

Note that the opening crack characteristics are normalised by opening perimeter *lengths*.

6.9.3 Crack Templates - Walls

Walls tab on [Crack Templates Dialog](#).

In reality the porosity of walls is caused by a very large number of small cracks and holes.

DesignBuilder models this porosity using a single equivalent crack. Enter the characteristics this equivalent single crack for internal and external walls.

Note that the crack characteristics are normalised by *surface area*.

6.9.4 Crack Templates - Floors/Ceilings

Floors/Ceilings tab on [Crack Templates Dialog](#).

In reality the porosity of floors is caused by a very large number of small cracks and holes.

DesignBuilder models this porosity using a single equivalent crack. Enter the characteristics this equivalent single crack for internal and external floors.

Note that the crack characteristics are normalised by *surface area*.

6.9.5 Crack Templates - Roofs


Roofs tab on [Crack Templates Dialog](#).

In reality the porosity of roofs is caused by a very large number of small cracks and holes.

DesignBuilder models this porosity using a single equivalent crack. Enter the characteristics this equivalent single crack for roofs.

Note that the crack characteristics are normalised by *surface area*.

6.10 Legislative Region Templates

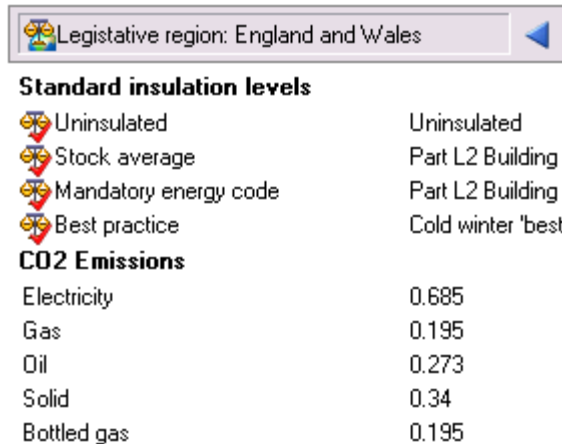

A Legislative region in DesignBuilder is typically a whole country or a region, province or state within a country which has its own building control powers.

In current versions of the software a Legislative Region contains information on:

- Local energy codes/building regulations.
- Carbon dioxide emission factors are provided for a range of fuels.

The current regions database is only sparsely populated with useful data (most of that is from countries within Europe). But we expect to expand this in time.

There are three tabs on the Legislative Region Template dialog:

- [General](#)
- [Standard insulation](#)
- [Emissions](#)

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.10.1 Legislative Region Templates - General

General tab on [Legislative Region Templates Dialog](#).

Enter the name of the Legislative region, the category (country) and a description of the Region.

6.10.2 Legislative Region Templates - Standard Insulation

Standard insulation tab on [Legislative Region Templates Dialog](#).

Data on this type specifies 4 standard insulation levels which apply to this region:

- Uninsulated - typical U-values for buildings in the region which are not insulated
- Stock average - Average (estimated) insulation standards for real buildings in the region. This data is used in some asset rating calculations.
- Mandatory energy code - Defines the maximum U-values allowed in the energy code/building regulations in force in the region.
- Best practice - Defines the U-values to be expected in a state-of-the-art building in the region.

The data on this tab indicates the required maximum U-values.

6.10.3 Legislative Region Templates - Emissions

Emissions tab on [Legislative Region Templates Dialog](#).

The factors on this tab define the amount of carbon dioxide emitted per unit of energy consumed for each of the major fuel types in the region. The CO2 emission factors depend on the mix of technology used to generate the electricity, the quality of the fuel and other factors such as production carbon cost.

6.11 Energy Code Templates

🏠 Energy code: Part L2 Building Regulatio...
 ◀ ▶

General

Name Part L2 Building Regulations 2002

Category UNITED KING ▼

Description

Building Regulations 2002 - Conservation of fuel and po

Sectors

Non-domestic

Units

Number system Metric

Envelope component heat loss

Maximum U-Values (Exposed Elements)

Wall	0.350
Flat roof	0.250
Pitched roof	0.160
Roofspace floor	0.250
Floor	0.250
Solid floor to ground	0.250
Window	2.000
Rooflight	2.200
Large doors	0.700

Maximum U-Values (Semi-Exposed Elements)

Window	2.200
Wall	0.350
Floor	0.250

Energy code data is used within DesignBuilder to indicate the mandatory energy performance of building components and/or the whole building.

There are three types of heat transmission code:

1. Envelope component performance
2. Whole building envelope performance
3. Whole building energy performance

You can define the type of energy code by making selections on the next 3 tabs.

If this energy code requires for example that minimum component performance and whole building energy performance then check both these options.

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.11.1 Energy Code Templates - General

General tab on [Energy Code Templates Dialog](#).

Enter a name and description of this Energy code.

6.11.2 Energy Code Templates - Envelope (component)

Envelope (component) tab on [Energy Code Templates Dialog](#).

Specifies mandatory maximum U-values through the individual components (walls, windows, roofs etc.).

The data on this tab indicates the required maximum U-values.

6.11.3 Energy Code Templates - Envelope (building)

Envelope (building) tab on [Energy Code Templates Dialog](#).


Sets a limit on the rate of heat transfer through the overall building envelope. The limit is typically set as an average U-value for the overall building envelope.

6.11.4 Energy Code Templates - Energy Performance

Energy performance tab on [Energy Code Templates Dialog](#).

Sets a limit on the rate of heat transfer through the overall building envelope. The limit is typically set as an average U-value for the overall building envelope.

6.12 Sector Templates

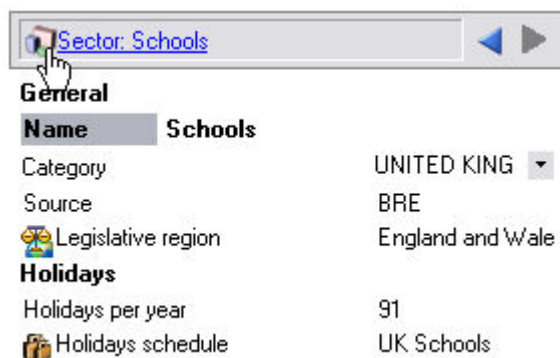

Sectors are used to categorise buildings according to their use/activity.

A sector is located within a legislative region and can only be accessed if the building is situated within the region containing the sector.

The 'General' sector is an exception to this rule as it can be accessed from all regions if the 'List region data' Program Options setting is 'All' or 'General+Local'.

You can also associate a holiday schedule with the sector.

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.13 Times Zone Templates

DesignBuilder comes with a database of all of the world's time zones including information on daylight savings. This data is sourced from ASHRAE.

If the time zone does not have daylight saving then the text **N/A** is entered in the **Daylight saving from** field.

The time zone is selected in model data under [Time and Daylight Saving](#) on the [Location tab](#) at site level.

Note: you can override daylight savings to be off in the model data by unchecking the [Use daylight saving](#).

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.14 Wind Pressure Coefficient Templates

[Wind pressure coefficients](#) are used when [Natural ventilation model option](#) is set to 'Calculated'. EnergyPlus/AIRNET uses pressure coefficients when calculating [wind-induced pressure](#) on each surface during simulations when the Calculated Natural ventilation option is selected.

 
DesignBuilder is supplied with a database of wind pressure coefficients based on data from AIVC Applications Guide: A guide to energy-efficient ventilation. The Cp data is buildings of 3 storeys or less, with square surfaces and for 3 levels of site exposure. The data is given in 45° increments.

Note: The AIVC wind pressure coefficient data provides a good first level of approximation for basic design purposes. However, ideally you would override this default data with pressure coefficient data specific to your application. This data might be calculated from CFD simulations or measured from wind tunnel studies using physical models.

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

6.15 Metabolic Rate Templates



General

Name	Seated quiet
Category	Resting
Source	ASHRAE
Metabolic rate per person	108.0

Metabolic rate Templates define a category of human metabolic output. The metabolic rate can be selected in Model Data on the Activity tab by choosing a Metabolic rate template.

The metabolic rate per person data is supplied to EnergyPlus which multiplies it by the number of people in the zone as the starting point for occupancy heat emission calculations.

Metabolic rate data can be found in the ASHRAE Handbook of Fundamentals, Chapter 8, Table 5.

DesignBuilder data is derived from this data and is for adult males having typical surface area of 1.8m². For women multiply the adult male value by 0.85 and for children multiply by 0.75.

Template data can be accessed:

- from the [Templates tab on the opening screen](#) (if no file is open),
- from the [Templates tab in the Navigator panel](#) (if a file is open),
- by double-clicking on the template icon in the model data,
- by clicking on the Edit button when selecting templates from a list.

Background

Heat is generated in the human body by oxidation at a rate called the metabolic rate. This heat is dissipated from the body surface and respiratory tract by a combination of radiation, convection and evaporation. The relative proportions of sensible and latent heat from people is a complex function of the metabolic rate and the environmental conditions.

EnergyPlus uses a polynomial function to divide the heat gain into sensible and latent portions. More details can be found in the EnergyPlus EngineeringDoc.pdf documentation.

Section



Calculations

There are four types of energy simulation:

- [Heating design simulation](#)
- [Cooling design simulation](#)
- [Simulation using real weather](#) (simply referred to as 'simulation' in DesignBuilder documentation)
- Energy Performance Indicator simulations (on the Check screen). This capability is still under development and is so far undocumented.

DesignBuilder has been set up to allow a choice of calculation method for each of these energy simulation types, but version 1.0 only allows EnergyPlus as the calculation method. The range of options will be expanded in future versions.

Display Options in the Panel in the bottom left of the screen allow you to change the data displayed and the presentation style.

Results can be [exported](#) in a variety of file formats or they can added as a [Report topic](#).

7.1 Heating Design

Heating design calculations are carried out to determine the size of heating equipment required to meet the coldest [winter design weather](#) conditions likely to be encountered at the site location. These design calculations are traditionally carried out using steady-state methods such as those offered by ASHRAE and CIBSE. You can use DesignBuilder to carry out effectively the same calculation using the [EnergyPlus](#) dynamic thermal simulation engine.

Click on the Heating Screen tab to view Heating Design data. If the necessary data has not yet been generated, a Heating Design calculation is automatically started to generate the data.

Heating design simulations using EnergyPlus have the following characteristics:

- Constant (Steady-state) external temperature set to the [winter design external temperature](#).
- [Wind speed and direction](#) set to design values.
- No solar gain.
- No internal gains (lighting, equipment, occupancy etc).
- Heated zones are heated constantly to achieve the heating temperature set point using a simple convective heating system.
- Includes consideration of heat conduction and convection between zones of different temperatures.

Simulation continues until temperatures/heat flows in each zone have converged. If convergence does not occur then simulation continues for the maximum number of days as specified in the [calculation options](#).

The simulation calculates heating capacities required to maintain the temperature set points in each zone and displays the total heat loss broken down as:

- Glazing
- Walls
- Partitions
- Solid floors
- Roofs
- External infiltration
- Internal natural ventilation (i.e. heat lost to other cooler adjacent spaces through windows, vents,

doors, holes)

The total heat loss in each zone is multiplied by a [Safety factor](#) (1.5 by default) to give a recommended heating [Design Capacity](#). This heating capacity can be written directly into the **Heating capacity** model data depending on the setting of the [Plant sizing](#) model option on the Data tab under HVAC.

Customise the data displayed and display style using the Display Options panel.

Note: heating design calculations do not use any Natural ventilation data.

EnergyPlus IDF data

You can view the EnergyPlus IDF data used to carry out the calculation by clicking on the 'View the input data' link in the info panel (Learning mode only) or from the Tools menu.

7.1.1 Calculation Options

These calculation options can be accessed from the [Heating design](#) calculation options tab of the [Model Options](#) dialog and from the Heating design calculation options dialog.

- [Calculation Options](#)
- [Heating system sizing](#)
- [Advanced Calculation Options](#)

Calculation description

Enter some text to identify the calculation. This will be used in reports and in the filename for [automatically generated ESO files](#).

Click on the OK button to start the Heating design calculation.

7.1.2 Display Options

You can review heating design output in 2 ways:

- [Heat loss breakdown](#) - on the Steady State tab.
- [Summary table](#) - heating capacity data for each zone on the Summary tab.

To update the data using different calculation options, click Update (Ctrl-U).

The General tab on the Display Options panel provides options for controlling the data displayed in the Heating design data display screen. General Display Options are grouped under three headers:

- Data - control the data displayed.
- Y-axis - for customising the layout of the Y-axis.
- Appearance - for customising the style and appearance of the graphics.

The Detailed tab on the Display Options panel provides controls which allow you to select exactly the data items you wish to display.

DATA OPTIONS

Data

Select an option to indicate the data you wish to display:

- **1-All** - fabric and ventilation heat gains/losses, internal gains (not Heating Design), temperatures and outside dry-bulb air temperature.
- **2-Site data** - all site data.
- **3-Comfort** - inside air, the radiant and comfort temperatures.
- **4-Internal gains** - internal gains including equipment, lighting, occupancy, solar and HVAC heating/cooling delivery.
- **5-Fabric and ventilation** - heat gains to the space from the surface element (walls, floors, ceilings etc.) and ventilation. Negative values indicate heat loss from the space.

Tip: to update the data using different calculation options, click [Update \(Ctrl-U\)](#).

Show as

You can display the data in one of four ways:

- Graph
- Grid
- Graph and table
- Table

Note: you must select the [Grid](#) option to export data in spreadsheet format.

Normalise by floor area

Check this option if you wish data to be displayed 'per floor area' i.e. /m² or /ft². You can select the area to use as the denominator from:

- **1-All areas** - Total area is used,
- **2-Occupied area** - just occupied areas are used.

Note: you can only select **1-All areas** if the building and block data *includes* occupied areas as set in [Include unoccupied zones in block and building totals and averages](#) option in Heating design [Output options](#). Likewise you can only select **2-Occupied area** if the building and block data *excludes* occupied areas.

Y-AXIS OPTIONS


These options give you control over how the Y-axis is displayed.

Lock min/max

Y-Axis	
<input checked="" type="checkbox"/> Lock min/max	
Temperature	
Max Y (°C)	28.08
Min Y (°C)	15.75
Heat Gain	
Max Y (kW)	58.55
Min Y (kW)	-56.84
Fuel	
Max Y (kWh)	62.41
Min Y (kWh)	0
System Energy	
Max Y (kWh)	0
Min Y (kWh)	0
CO2	
Max Y (kg)	42.75
Min Y (kg)	0

This option locks the extent of the Y-axes so that they keep their current maximum and minimum values. This allows consistent comparison with the future results display.

The Y-axis keeps its current settings until you unlock it again.

You can achieve the same effect by clicking on the 'Lock Y-axis min/max values' toolbar command. 

When you lock the Y-axis the current settings are stored and displayed for each of the available Y-axes. You can edit any of these to get a more precise setting. Remember to click on the Apply button when you are ready to register a change to any numeric display option data.

Overlap multiple axes

Option allows you to save space on the Y-axis allowing different axes to overlap.

Separate axes

Check this option to add a vertical space between each of the displayed axes.

Normalise by floor area

Check this option if you wish data to be displayed 'per floor area' i.e. /m² or /ft².

APPEARANCE

You can control the details of the presentation of the graphical output by making selections on the Display Options panel under the Appearance header.

ENERGYPLUS SCRIPT

You can view the input data script used to calculate these results by selecting the 'Tools | Display simulation input script' menu option. If you do not have the EnergyPlus IDF editor installed, then you should associate the [.idf file extension](#) with a text editor to make this option work.

Note: this shows the script stored with the model just before the simulation *not* the [in.idf](#) file stored in the [EnergyPlus](#) folder.

7.1.3 Summary table

The Summary screen shows Comfort temperature, Steady state heat loss and Design heating capacity:

- **Comfort temperature** - The mean of the internal air and radiant temperatures (also known as the 'operational' temperature)
- **Steady-state heat loss** - same as 'Heating delivered' on the Steady State tab - heat delivered to maintain the internal heating design temperature.
- **Design capacity** - is the [Steady-state heat loss](#) multiplied by the **Design margin** to give the design heating capacity of the equipment.

Untitled, House , Entrance block, Entrance

Steady State Summary

Zone	Comfort Temperature (°C)	Steady-State Heat Loss (kW)	Design Heating Capacity(kW)
[-] House (Total design heat loss = 28.160 (kWh))			
[-] Entrance block (Total design heat loss = 6.840 (kWh))			
Entrance	18.34	4.56	6.84
[-] Roof 1 (Total design heat loss = 0.000 (kWh))			
Zone 1	7.05	0.00	0.00
[-] Roof 2 (Total design heat loss = 1.740 (kWh))			
Zone 1	10.07	1.16	1.74
[-] Ground floor (Total design heat loss = 19.580 (kWh))			
Toilet	18.35	0.88	1.32
Kitchen	18.73	1.52	2.28
Bedroom	18.16	3.93	5.90
Sitting room	20.07	5.38	8.07
Cupboard	18.45	0.67	1.00
Bathroom	18.79	0.67	1.01

Use the [Export](#) command to export this data in spreadsheet format.

7.1.4 Heat loss breakdown results

The 'Steady-State' tab has detailed [heating design](#) results (displayed as a histogram and table by default).

For more on how the output is calculated see: [Calculation of DesignBuilder Output from EnergyPlus Report Variables](#).

- **Air Temperature** - the calculated average temperature of the air.
- **Radiant Temperature** - the calculated average Mean Radiant Temperature (MRT) of the zone, calculated assuming that the person is in the centre of the zone, with no weighting for any particular surface.
- **Operative Temperature** - The mean of the internal air and radiant temperatures.
- **Outside Dry-Bulb Temperature.**
- **Glazing** - heat loss through all glazing.
- **Walls** - heat loss through all external walls.
- **Ceilings (int)** - heat loss through internal ceilings (e.g. zone above is colder).
- **Floors (int)** - heat loss through internal floors (e.g. zone below is colder).
- **Floors (ext)** - heat loss through external floors (not ground floor, e.g. floor in cantilevered space, roof eaves etc).
- **Doors and Vents** - conduction heat loss through doors and vents.
- **Ground Floors** - heat loss through ground floors.
- **Partitions (int)** - heat loss through all internal partitions (e.g. adjacent zone is colder).
- **External Infiltration** - heat loss through air infiltration (non-unintentional air entry through cracks and holes in building fabric).
- **External Mechanical Ventilation** - is the heat loss due to the entry of outside air through the air distribution system. View can exclude mechanical ventilation from the heating design calculations by unchecking the 'Mechanical ventilation On' Model Data.
- **Internal Natural Ventilation** - heat loss due to air exchange through open internal windows, doors, vents, holes and virtual partitions to adjacent spaces.
- **Zone/Sys Sensible Heating** - heat delivered to maintain the internal heating design temperature.

Note: The Heating delivered is the sum of the component heat loss values.




Surface heat loss data (walls, ceilings, floors etc) refers to heat transfer from the zone to the inside surface of the building elements.

You can also customise the data displayed and display style using the Display Options panel.

EnergyPlus Output

Temperature and Heat Loss

Licensed

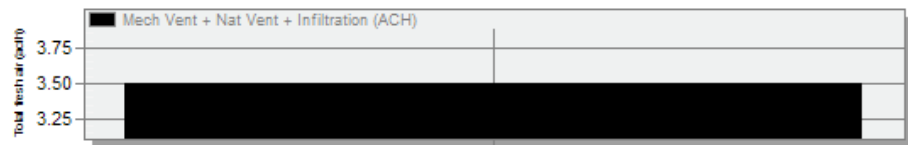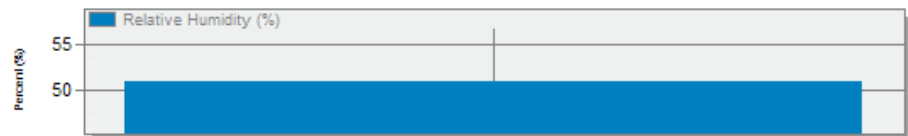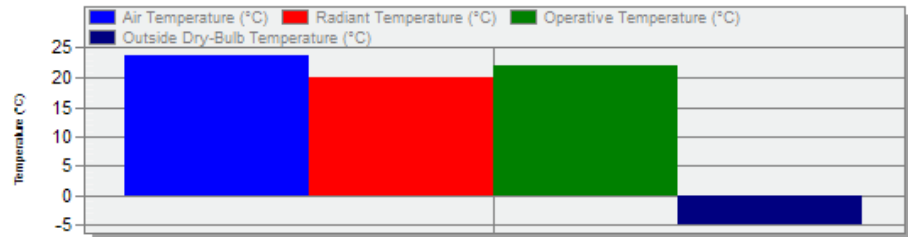

Air Temperature (°C)	23.96
Radiant Temperature (°C)	20.04
Operative Temperature (°C)	22.00
Outside Dry-Bulb Temperature (°C)	-4.80
Glazing (kW)	-4.53
Partitions (int) (kW)	0.01
External Infiltration (kW)	-8.54
External Mechanical Ventilation (kW)	-51.40
Zone/Sys Sensible Heating (kW)	70.78
Relative Humidity (%)	51.08
Mech Vent + Nat Vent + Infiltration (ACH)	3.50

7.2 Cooling Design

Cooling design calculations are carried out to determine the capacity of mechanical cooling equipment required to meet the hottest [summer design weather](#) conditions likely to be encountered at the site location. In zones which are not mechanically cooled free-floating temperatures are calculated including the effects of [natural](#) or [mechanical ventilation](#) if these options are selected on the zone [HVAC tab](#). These design calculations are traditionally carried out using periodic steady-state methods such as the admittance and response factor methods provided by CIBSE and ASHRAE. You can use DesignBuilder to carry out effectively the same calculation using the [EnergyPlus](#) dynamic thermal simulation engine.

Click on the Cooling Screen tab to view Cooling Design data. If the necessary data has not yet been generated, a Cooling Design calculation is automatically started to generate the data.

Cooling design simulations using EnergyPlus have the following characteristics:

- Periodic steady-state external temperatures calculated using maximum and minimum [design summer weather](#) conditions.
- No wind.
- Includes solar gains through windows and [scheduled](#) natural ventilation.
- includes internal gains from occupants, lighting and other equipment.
- Includes consideration of heat conduction and convection between zones of different temperatures.

For buildings situated in the Northern Hemisphere, Cooling Design calculations are made for the month of July and for buildings in the Southern Hemisphere they are made for the month of January.

Simulation continues until temperatures/heat flows in each zone have converged. If convergence does not occur then simulation continues for the maximum number of days as specified in the calculation options.

The simulation calculates half-hourly [temperatures and heat flows](#) for each zone and determines [cooling capacities](#) required to maintain any cooling temperature set points in each zone.

The maximum cooling load in each zone is multiplied by a [Safety factor](#) (1.5 by default) to give a Design Cooling Capacity. This [design cooling capacity](#) can be written directly into the **Cooling capacity** model data depending on the setting of the [Plant sizing](#) model option on the Data tab under HVAC.

Customise the data displayed and display style using the Display Options panel.

Note: Cooling Design calculations use Scheduled Natural ventilation model data set on the HVAC tab even when the [Calculated](#) natural ventilation option is set. This is to help you to document the input data for your Cooling Design calculations. Calculated natural ventilation data input is too complex to be adequately summarised.

7.2.1 Calculation Options

These calculation options can also be accessed from the [Cooling design calculation options](#) tab of the [Model Options](#) dialog.

- [Calculation Options](#)
- [Summer design day](#)
- [Cooling system sizing](#)

- [Solar Options](#)
- [Advanced Calculation Options](#)

Calculation description

Enter some text to identify the calculation. This will be used in reports and in the filename for [automatically generated ESO files](#).

Click on the OK button to start the Cooling design calculation.

7.2.2 Detailed results

The 'Analysis' tab has detailed half-hourly [cooling design](#) results (displayed as a line graph by default).

For more on how the output is calculated see: [Calculation of DesignBuilder Output from EnergyPlus Report Variables](#).

- **Air Temperature** - the calculated average temperature of the air.
- **Radiant Temperature** - the calculated average Mean Radiant Temperature (MRT) of the zone, calculated assuming that the person is in the centre of the zone, with no weighting for any particular surface.
- **Operative Temperature** - The mean of the mean internal air and mean radiant temperatures.
- **Outside Dry-Bulb Temperature**.
- **Glazing** - the total heat flow to the zone from the glazing, frame and divider of exterior glazing excluding transmitted short-wave solar radiation (which is accounted for in **Solar Gains Exterior Windows** below).

For windows **without an interior shading device** this heat flow is equal to:

- + [Convective heat flow to the zone from the zone side of the glazing]
- + [Net IR heat flow to the zone from zone side of the glazing]
- [Short-wave radiation from zone transmitted back out the window]
- + [Conduction to zone from window frame and divider, if present]

Here, short-wave radiation is that from lights and diffuse interior solar radiation.

For windows **with an interior shading device** this heat flow is equal to:

- [Convective heat flow to the zone from the air flowing through the gap between glazing and shading device]
- + [Convective heat flow to the zone from the zone side of the shading device]
- + [Net IR heat flow to the zone from the zone side of the glazing]
- + [Net IR heat flow to the zone from the zone side of the shading device]
- [Short-wave radiation from zone transmitted back out the window]
- + [Conduction to zone from window frame and divider, if present]

- **Walls** - heat gain due to conduction through all external walls, including the effect of solar radiation and longwave radiation to the sky.
- **Roofs** - heat gain due to conduction through all external roofs, including the effect of solar radiation and longwave radiation to the sky.
- **Ceilings (int)** - heat conduction gain through internal ceilings (e.g. zone above is colder).
- **Floors (int)** - heat conduction gain through internal floors (e.g. zone below is colder).
- **Floors (ext)** - heat conduction gain through external floors (not ground floor, e.g. floor in

cantilevered space, roof eaves etc).

- **Ground floors** - heat conduction gain through ground floors.
- **Partitions (int)** - heat conduction gain due to heat conduction through all internal partitions from adjacent zones at different temperatures.
- **Doors and vents** - conduction heat gain through doors and vents.
- **External Infiltration** - heat gain through air infiltration (non-unintentional air entry through cracks and holes in building fabric).
- **External Natural Ventilation** - heat gain due to the entry of outside air through natural ventilation (as defined on the HVAC tab).
- **Internal Natural Ventilation** - heat gain from other zones due to air exchange through open internal windows, doors, vents, holes and virtual partitions.
- **External Mechanical Ventilation** - heat gain due to the entry of outside air through the air distribution system. You can exclude mechanical ventilation from the cooling design calculations by unchecking the 'Mechanical ventilation On' Model data.
- **Task Lighting** - heat gain due to task lighting.
- **General Lighting** - heat gain due to general lighting.
- **Miscellaneous** - heat gain due to miscellaneous equipment.
- **Process** - heat gain due to process equipment.
- **Catering** - heat gain due to cooking.
- **Computer and Equipment** - heat gain due to computer and other IT-related equipment.
- **Occupancy** - sensible gain due to occupants. Please note that this can vary depending on the internal conditions. With very high temperatures the sensible gain can drop to zero with all cooling effects taking place through latent heat transfer.
- **Solar Gains Exterior Windows** - (used to be called 'Transmitted solar gains'). Short-wave solar radiation transmission through *external* windows. For a bare window, this transmitted radiation consists of solar radiation passing through the glass and diffuse radiation from solar reflected from the outside window reveal, if present. For windows with a shade, this transmitted radiation is totally diffuse (shades are assumed to be perfect diffusers). For windows with a blind, this transmitted radiation consists of beam + diffuse radiation that passes between the slats and diffuse radiation from beam-to-diffuse reflection from the slats. *Solar re-reflected back out of the external window and transmitted through interior windows is not subtracted.*
- **Solar Gains Interior Windows** - Total beam + diffuse solar radiation transmission through *interior* windows. Requires the [3-Full interior and exterior](#) solar model option to be set.
- **Zone/Sys sensible cooling** - is the sensible cooling effect *on the zone* of any air introduced into the zone through the HVAC system. It includes any 'free cooling' due to introduction of relatively cool outside air. Cooling always shows as a negative heat gain in the results. *It is best thought of as part of the zone heat balance.*

Airflow

- **Mech Vent + Nat Vent + Infiltration** - The sum of **outside air** (in ac/h) flowing into the zone through:
 - The HVAC air distribution system +
 - Infiltration +
 - Natural ventilation

System Heat Flows (Compact HVAC only)

These heat flows are plotted on the same axes as the Internal Gains but they should really have their own graph because they do not play a part in the zone heat balance.

- **Zone Heating** - energy supplied by local room heaters and reheat coils to maintain room internal heating temperature setpoint temperature when using Compact HVAC data.
- **Total Cooling** - at *building level*: sensible + latent cooling transfer to the supply air from the AHU cooling coil + any single zone unitary and fan coil units in the building. At *zone level*: sensible + latent cooling transfer to the supply air from a single zone unitary or fan coil unit.

- **Sensible Cooling** - sensible only cooling transfer from the cooling coil to the supply air. Latent coil heat can be calculated as the difference: **Total Cooling - Sensible Cooling**.

Surface heat gain data refers to heat transfer from the inside surface of the building elements to the zone.


You can also customise the data and the way it is displayed using the Display Options panel.

Temperature and Heat Gains - Site, Example Office

EnergyPlus Output

15 Jul, Sub-hourly

Licensed

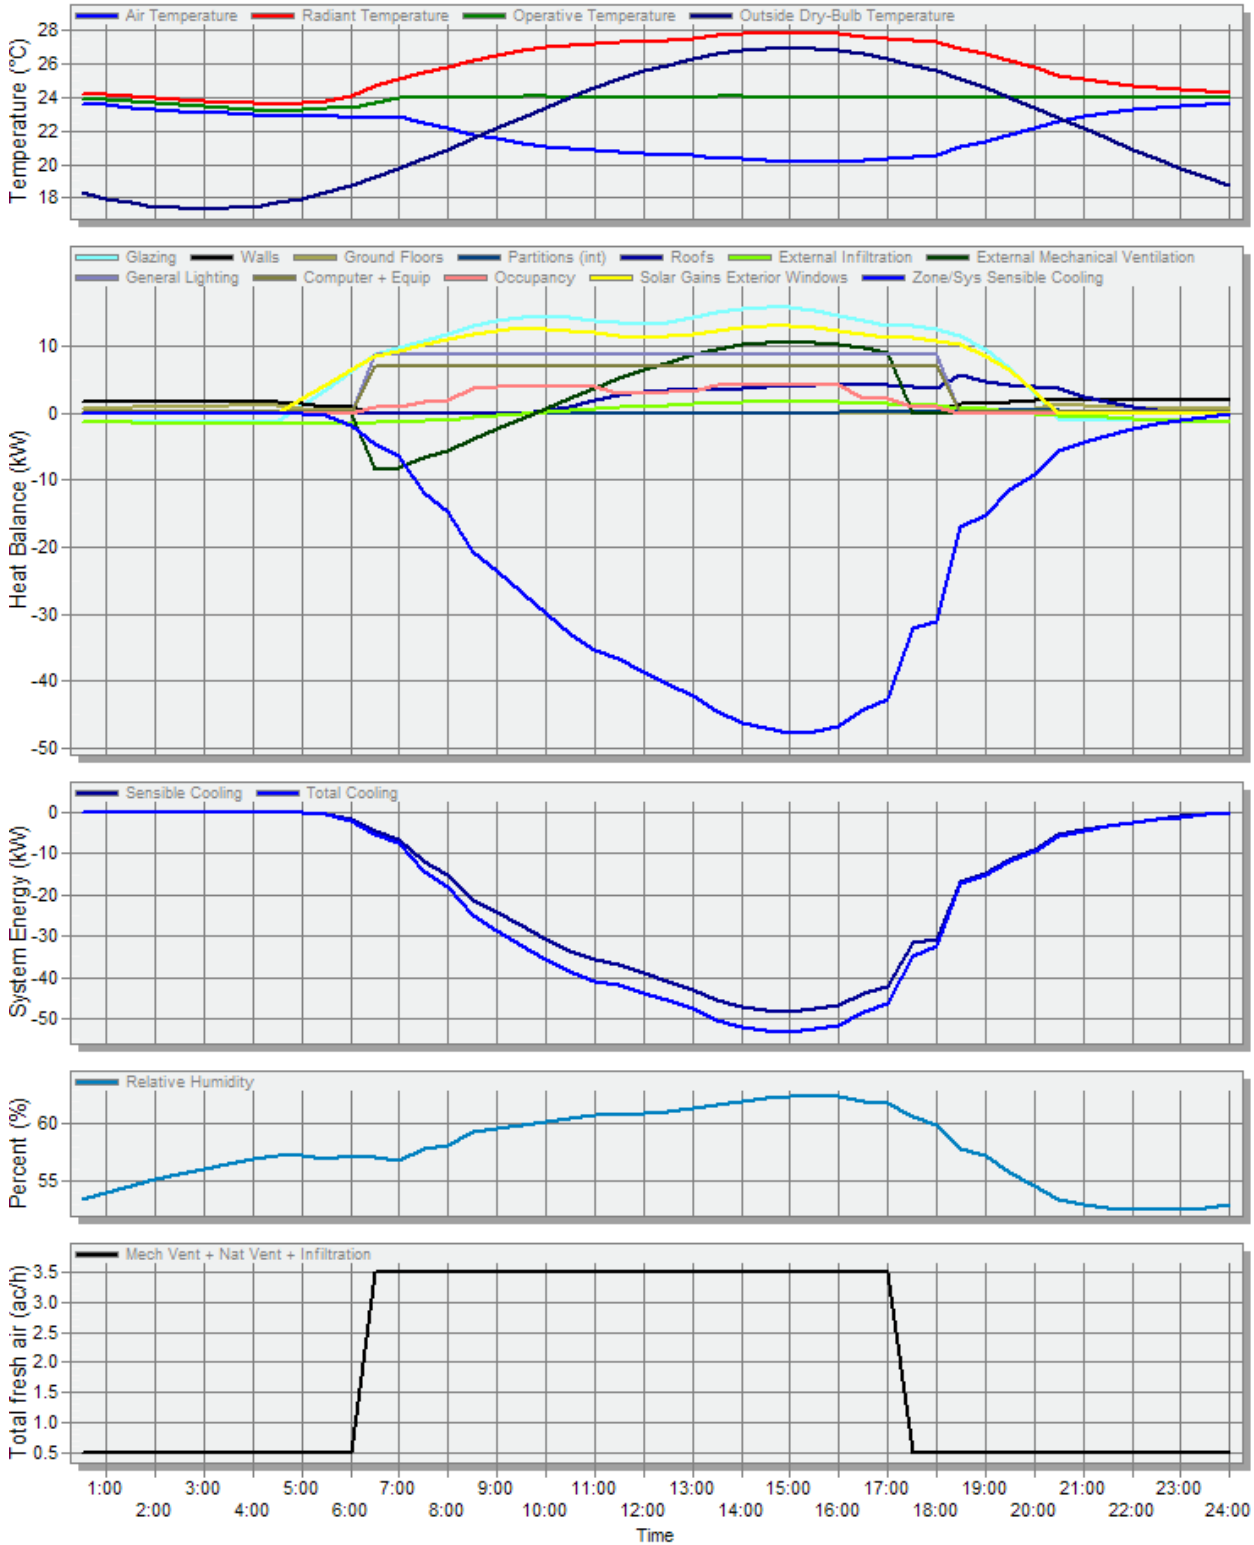

7.2.3 Display Options

You can review Cooling design output in 2 ways:

- [Detailed results](#) - half-hourly heat balance and inside conditions displayed on 'Analysis' tab.
- [Summary table](#) - cooling capacity data for each zone on the Summary tab.

To update the data using different calculation options, click Update (Ctrl-U).Data Options

The General tab on the Cooling design Display options panel provides options for controlling the data displayed in the Simulation data display screen. General Display options are grouped under three headers:

- Data - control the data displayed.
- Y-axis - for customising the layout of the Y-axis.
- Appearance - for customising the style and appearance of the graphics.

The Detailed tab on the Display Options panel provides controls which allow you to select exactly the data items you wish to display.

DATA OPTIONS

Data

Select an option to indicate the data you wish to display:

- **1-All** - fabric and ventilation heat gains/losses, internal gains (not Heating Design), temperatures and outside dry-bulb air temperature.
- **2-Site data** - all site data.
- **3-Comfort** - inside air, the radiant and comfort temperatures, relative humidity, ASHRAE 55 and various comfort indices.
- **4-Internal gains** - internal gains including equipment, lighting, occupancy, solar and HVAC heating/cooling delivery.
- **5-Fabric and ventilation** - heat gains to the space from the surface element (walls, floors, ceilings etc.) and ventilation. Negative values indicate heat loss from the space.

Tip: to update the data using different calculation options, click Update (Ctrl-U).

Show as

You can display the data in one of four ways:

- Graph
- Grid
- Graph and table
- Table

Note: you must select the Grid option to export data in spreadsheet format.

Normalise by floor area

Check this option if you wish data to be displayed 'per floor area' i.e. /m² or /ft². You can select the area

to use as the denominator from:

- **1-All areas** - Total area is used,
- **2-Occupied area** - just occupied areas are used.

Note: you can only select **1-All areas** if the building and block data *includes* occupied areas as set in [Include unoccupied zones in block and building totals and averages](#) option in Cooling design [Output options](#). Likewise you can only select **2-Occupied area** if the building and block data *excludes* occupied areas.


Y-AXIS OPTIONS

These options give you control over how the Y-axis is displayed.

Lock min/max

Y-Axis	
<input checked="" type="checkbox"/>	Lock min/max
Temperature	
Max Y (°C)	28.08
Min Y (°C)	15.75
Heat Gain	
Max Y (kW)	58.55
Min Y (kW)	-56.84
Fuel	
Max Y (kWh)	62.41
Min Y (kWh)	0
System Energy	
Max Y (kWh)	0
Min Y (kWh)	0
CO2	
Max Y (kg)	42.75
Min Y (kg)	0

This option locks the extent of the Y-axes so that they keep their current maximum and minimum values. This allows consistent comparison with the future results display. The Y-axis keeps its current settings until you unlock it again.

You can achieve the same effect by clicking on the 'Lock Y-axis min/max values' toolbar command. 

When you lock the Y-axis the current settings are stored and displayed for each of the available Y-axes. You can edit any of these to get a more precise setting. Remember to click on the Apply button when you are ready to register a change to any numeric display option data.

Overlap multiple axes

Option allows you to save space on the Y-axis allowing different axes to overlap.

Separate axes

Check this option to add a vertical space between each of the displayed axes.

Normalise by floor area

Check this option if you wish data to be displayed 'per floor area' i.e. /m² or /ft².

APPEARANCE

You can control the details of the presentation of the graphical output by making selections on the Display Options panel under the Appearance header.

ENERGYPLUS SCRIPT

You can view the input data script used to calculate these results by selecting the 'Tools | Display simulation input script' menu option. If you do not have the EnergyPlus IDF editor installed, then you should associate the [.idf file extension](#) with a text editor to make this option work.

Note: this shows the script stored with the model just before the simulation *not* the [in.idf](#) file stored in the EnergyPlus folder.

7.2.4 Summary table

The Summary screen shows design cooling loads and flow rates for each zone plus other related data.

- **Design Capacity**, shown in bold, is the maximum value of **Total Cooling Load** and **Sensible** multiplied by the **Design margin** to give the design cooling capacity of the equipment. This value is written into the Cooling capacity Model Data on the HVAC tab if the appropriate [Plant sizing](#) Model Option is set.
- **Design Flow Rate**, shown in bold, is the flow rate required to deliver the **Sensible** cooling load using the **Design supply temperature** and the zone air temperature at the time of the maximum load multiplied by the **Design margin**.
- **Total Cooling Load** is the total maximum **Sensible + Latent** loads for the zone at the time of maximum sensible load. If latent load is negative then it is ignored here and the Total Cooling Load is the same as the Sensible load.
- **Sensible** is the maximum sensible load for the zone in the Design day.
- **Latent** is the latent load for the zone at the time of maximum Sensible load.
- **Op Temperature** is the Operative temperature in the zone (using radiant fraction = 0.5) at the time of maximum Sensible load.
- **Humidity** is the humidity (%) in the zone at the time of maximum Sensible load.
- **Time of Max Cooling** - the time at which the maximum sensible cooling occurs.
- **Max Op Temp in Day** is the maximum operative temperature in the zone (using radiant fraction = 0.5) over the design day including periods when the zone may be unconditioned.
- **Floor area** is the [floor area](#) of the zone.
- **Volume** is the [volume](#) of the zone.
- **Flow/Floor area (MBH/ft² in IP units)** is the **Design Flow Rate** divided by the **Floor area** of the zone. It provides a useful check for the flow rates calculated.

Zone	Design Capacity (kW)	Design Flow Rate (m3/s)	Total Cooling Load...	Sensible...	Latent...	Op Tempera...	Humidity (%)	Time ...	Max Op Temp...	Floor Area (m2)	Volume (m3)	Flow/Floor Area (l/s-m2)
=S2_HVACTest Total Design Cooling Requirement = 67.030 (kW)												
=Block 1 Total Design Cooling Requirement = 31.850 (kW)												
Internal 1	9.87	0.58	9.87	8.67	1.20	25.4	49.2	15:00	27.5	162.8	488.4	3.59
East 1	4.76	0.23	4.76	4.39	0.36	29.0	49.1	09:00	29.0	39.2	117.7	5.76
West 1	5.69	0.26	5.69	5.30	0.39	29.7	49.1	16:00	30.9	39.2	117.7	6.65
North 1	5.67	0.32	5.67	4.99	0.68	26.1	49.2	14:00	27.8	93.2	279.7	3.42
South 1	5.86	0.33	5.86	5.17	0.69	26.2	49.2	15:00	28.7	93.2	279.7	3.51
=Plenum Block 1 Total Design Cooling Requirement = 0.000 (kW)												
Plenum East 1	0.00	0.00	0.00	0.00	0.00	0.0	0.0	15:00	29.5	41.4	24.9	0.00
Plenum Internal 1	0.00	0.00	0.00	0.00	0.00	0.0	0.0	15:00	28.9	162.8	97.7	0.00
Plenum West 1	0.00	0.00	0.00	0.00	0.00	0.0	0.0	15:00	29.8	41.4	24.9	0.00
Plenum South 1	0.00	0.00	0.00	0.00	0.00	0.0	0.0	15:00	29.2	97.7	58.6	0.00
Plenum North 1	0.00	0.00	0.00	0.00	0.00	0.0	0.0	15:00	29.1	97.7	58.6	0.00
=Block 2 Total Design Cooling Requirement = 35.180 (kW)												
Internal 2	11.54	0.61	11.54	9.98	1.56	26.6	49.1	06:30	28.8	162.8	488.4	3.74
East 2	4.57	0.22	4.57	4.23	0.33	28.9	49.0	09:00	29.5	39.2	117.7	5.59
West 2	5.33	0.25	5.33	4.97	0.35	29.4	49.0	16:00	31.3	39.2	117.7	6.36
North 2	6.71	0.37	6.71	6.03	0.68	26.7	49.0	14:00	28.6	93.2	279.7	3.92
South 2	7.03	0.37	7.03	6.13	0.90	26.8	49.0	06:30	29.0	93.2	279.7	3.97
=Plenum Block 2 Total Design Cooling Requirement = 0.000 (kW)												
Plenum East 2	0.00	0.00	0.00	0.00	0.00	0.0	0.0	06:30	38.5	41.4	24.9	0.00
Plenum Internal 2	0.00	0.00	0.00	0.00	0.00	0.0	0.0	06:30	38.4	162.8	97.7	0.00
Plenum West 2	0.00	0.00	0.00	0.00	0.00	0.0	0.0	06:30	38.8	41.4	24.9	0.00
Plenum South 2	0.00	0.00	0.00	0.00	0.00	0.0	0.0	06:30	38.5	97.7	58.6	0.00
Plenum North 2	0.00	0.00	0.00	0.00	0.00	0.0	0.0	06:30	38.4	97.7	58.6	0.00

Use the [Export](#) command to export this data in spreadsheet format.

7.3 Simulation

You can generate detailed building energy performance data based on simulations using real weather data.

Click on the Simulation Screen tab to view simulation data. If the necessary data has not yet been generated, a simulation is automatically started to generate the data.

Simulations using EnergyPlus have the following characteristics:

- Weather data comes from [Hourly weather data](#) file.
- Includes consideration of heat conduction and convection between zones of different temperatures.
- Includes solar gain through windows.
- Simulation of HVAC equipment ([options](#))
- Includes one or more 'warmup' days to ensure correct distribution of heat in building thermal mass and the start of the simulation. Warmup continues until temperatures/heat flows in each zone have converged. If convergence does not occur then simulation continues for the maximum number of days as specified in the calculation options.

Customise the data displayed and display style using the Display Options panel.

7.3.1 Calculation Options

These options control the simulation and the output produced.

Click on the OK button to start the Simulation.

GENERAL

Calculation description

Enter some text to identify the calculation. This will be used in reports and in the filename for [automatically generated ESO files](#).

Simulation Period

The [simulation period](#) is described in the help for the [Model options](#).

Interval

Monthly and annual output is always generated and daily, hourly and sub-hourly data can be selected by checking the appropriate boxes.

Note: selecting output at hourly or sub-hourly intervals can produce large amounts of data which slows processing and results in large file sizes. If you want to generate hourly or sub-hourly data you may wish to consider switching off some of the [Output options](#) to ensure you are only generating the data you require.


Auto-Update

This dialog is always shown when you select 'Update' and will also be shown before all simulations if 'Don't show this dialog' at the bottom is cleared.

OPTIONS

See Help for [Simulation calculation options](#) tab of the [Model Options](#) dialog.

7.3.2 Display Options

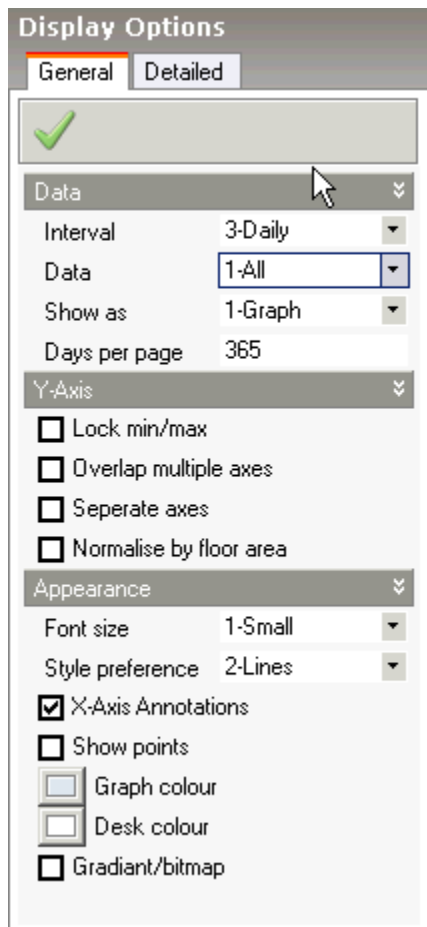

The General tab on the Simulation Display Options Panel provides options for controlling the data displayed in the Simulation data display screen. General Display Options are grouped under three headers:

- Data - control the data displayed.
- Y-axis - for customising the layout of the Y-axis.
- Appearance - for customising the style and appearance of the graphics.

The Detailed tab on the Display Options panel provides controls which allow you to select exactly the data items you wish to display.

DATA OPTIONS

Interval

Select an interval from the list:

- **1-Annual** - show data for the entire simulation.
- **2-Monthly** - show data broken down by month.
- **3-Daily** - show data broken down by day.

- **4-Hourly** - show hourly data. Useful for checking operation of equipment and comfort conditions for particular design periods.
- **5-Sub-hourly** - show data recorded at time step intervals (2 and 6 intervals per hour depending on the 'Time steps per hour' calculation option). Useful for detailed checking of building performance.
- **6-Distribution** - [temperature distribution curves](#) showing 'hours at', 'hours below' and 'hours above' temperature levels in 1°C temperature intervals during the occupied period. Note that 'Data' (below) should be set to **3-Comfort** to get temperature distribution curves.

Note: be aware that requesting Hourly and Sub-hourly results in large buildings and/or long simulation periods can result in very large data sets which take a long time to read in after the simulation.

Data

Select an option to indicate the data you wish to display:

- **1-All** - fabric and ventilation heat gains/losses, internal gains (not Heating Design), temperatures and outside dry-bulb air temperature.
- **2-Site data** - all site data.
- **3-Comfort** - inside air, the radiant and comfort temperatures, relative humidity, ASHRAE 55 and various comfort indices. If you set Interval to **6-Distribution** you get temperature distribution curves.
- **4-Internal gains** - internal gains including equipment, lighting, occupancy, solar and HVAC heating/cooling delivery.
- **5-Fabric and ventilation** - heat gains to the space from the surface element (walls, floors, ceilings etc.) and ventilation. Negative values indicate heat loss from the space.
- **6-Fuel breakdown** - fuel consumption broken down by system category (*building level only*).
- **7-Fuel totals** - fuel consumption broken down by fuel (*building level only*)
- **8-CO2 production** - CO2 production by weight (*building level only*)

[Click here](#) for information on the meaning of the data.

Tip: to update the data using different calculation options, click Update (Ctrl-U).

Show as

You can display the data in one of four ways:

- Graph
- Grid
- Graph and table
- Table

Note: you must select the Grid option to export data in spreadsheet format.

Days per Page (Simulation only)

DesignBuilder displays all simulation results together, but you can select how many days are displayed at any one time using The 'Days displayed per page' option. A value of 365 means you will show all simulation data on the same screen and a value of 1 means you see each day on a separate screen.

Note: you can use the horizontal scroll bar at the bottom of the graph to see simulation results not currently displayed.

Normalise by floor area

Check this option if you wish data to be displayed 'per floor area' i.e. /m² or /ft². You can select the area

to use as the denominator from:

- **1-All areas** - Total area is used,
- **2-Occupied area** - just occupied areas are used.

Note: you can only select **1-All areas** if the building and block data *includes* occupied areas as set in [Include unoccupied zones in block and building totals and averages](#) option in Simulation [Output options](#). Likewise you can only select **2-Occupied area** if the building and block data *excludes* occupied areas.

Y-AXIS OPTIONS

These options give you control over how the Y-axis is displayed.

Lock min/max

Y-Axis	
<input checked="" type="checkbox"/>	Lock min/max
Temperature	
Max Y (°C)	28.08
Min Y (°C)	15.75
Heat Gain	
Max Y (kW)	58.55
Min Y (kW)	-56.84
Fuel	
Max Y (kWh)	62.41
Min Y (kWh)	0
System Energy	
Max Y (kWh)	0
Min Y (kWh)	0
CO2	
Max Y (kg)	42.75
Min Y (kg)	0

This option locks the extent of the Y-axes so that they keep their current maximum and minimum values. This allows consistent comparison with the future results display. The Y-axis keeps its current settings until you unlock it again.

You can achieve the same effect by clicking on the 'Lock Y-axis min/max values' toolbar command. 

When you lock the Y-axis the current settings are stored and displayed for each of the available Y-axes. You can edit any of these to get a more precise setting. Remember to click on the Apply button when you are ready to register a change to any numeric display option data.

Overlap multiple axes

Option allows you to save space on the Y-axis allowing different axes to overlap.

Separate axes

Check this option to add a vertical space between each of the displayed axes.

APPEARANCE

You can control the details of the presentation of the graphical output by making selections on the Display Options panel under the Appearance header.

7.3.3 Detailed Results

It is important to understand when looking at the 'Zone heat balance' data that the values do not necessarily add to zero because:

1. Solar radiation values reported by EnergyPlus are *gross* values and do not account for the radiation re-reflected back out of internal and external windows. EnergyPlus tracks solar radiation in full detail but does not report all of the calculated values. It is not currently possible to generate *net* solar radiation gains from EnergyPlus.
2. Heat transfer gains between the zone and the surfaces cannot be added directly to ventilation gains because they are to different 'points' in the zone heat balance (surface heat transfer is to the 'rad-air' point and ventilation is to the 'air' point).
3. Minor EnergyPlus bug in reporting of conduction through window frames causes a minor error in Glazing heat gain reported values.

The main [Display options](#) are in the bottom left of the screen. They allow you to control the content of the Detailed data and also the Display style.

The 'Analysis' tab has detailed simulation results (displayed as a line graph by default).

For more on how the output is calculated see: [Calculation of DesignBuilder Output from EnergyPlus Report Variables](#).

Environmental/Comfort Output

- **Air Temperature** - the calculated average temperature of the zone air.
- **Radiant Temperature** - the average zone Mean Radiant Temperature (MRT) of the zone, calculated assuming that the person is in the centre of the zone, with no weighting for any particular surface.
- **Operative Temperature** - The mean of the zone air and radiant temperatures.
- **Outside Dry-Bulb Temperature.**
- **Relative Humidity** - the calculated average relative humidity of the air.
- **Fanger PMV** - Fanger Predicted Mean Vote
- **Pierce PMV ET** - the Predicted Mean Vote (PMV) calculated using the effective temperature and the Pierce two-node thermal comfort model.
- **Pierce PMV SET** - the Predicted Mean Vote (PMV) calculated using the 'Standard' effective temperature and the Pierce two-node thermal comfort model.
- **Pierce Discomfort Index (DISC)** - the Discomfort index calculated using the Pierce two-node thermal comfort model.
- **Pierce Thermal Sens. Index (TSENS)** - the Thermal Sensation Index (PMV) calculated using the Pierce two-node thermal comfort model.
- **Kansas Uni TSV** - the Thermal Sensation Vote (TSV) calculated using the KSU two-node thermal comfort model.
- **Discomfort hrs (summer clothing)** - the time when the zone is occupied that the combination of humidity ratio and operative temperature is not in the [ASHRAE 55-2004 summer](#) clothes region.
- **Discomfort hrs (winter clothing)** - the time when the zone is occupied that the combination of

humidity ratio and operative temperature is not in the [ASHRAE 55-2004](#) *winter* clothes region.

- **Discomfort hrs (all clothing)** - the time when the zone is occupied that the combination of humidity ratio and operative temperature is not in the [ASHRAE 55-2004](#) *summer or winter* clothes region.

More on [Comfort Analysis](#)...

Fabric and ventilation

- **Glazing** - the total heat flow to the zone from the glazing, frame and divider of exterior glazing excluding transmitted short-wave solar radiation (which is accounted for in **Solar Gains Exterior Windows** below).

For windows **without an interior shading device** this heat flow is equal to:

- + [Convective heat flow to the zone from the zone side of the glazing]
- + [Net IR heat flow to the zone from zone side of the glazing]
- [Short-wave radiation from zone transmitted back out the window]
- + [Conduction to zone from window frame and divider, if present]

Here, short-wave radiation is that from lights and diffuse interior solar radiation.

For windows **with an interior shading device** this heat flow is equal to:

- [Convective heat flow to the zone from the air flowing through the gap between glazing and shading device]
- + [Convective heat flow to the zone from the zone side of the shading device]
- + [Net IR heat flow to the zone from the zone side of the glazing]
- + [Net IR heat flow to the zone from the zone side of the shading device]
- [Short-wave radiation from zone transmitted back out the window]
- + [Conduction to zone from window frame and divider, if present]

- **Walls** - heat gain due to conduction through all external walls, including the effect of solar radiation and longwave radiation to the sky.
- **Roofs** - heat gain due to conduction through all external roofs, including the effect of solar radiation and longwave radiation to the sky.
- **Ceilings (int)** - heat conduction gain through internal ceilings (e.g. zone above is colder).
- **Floors (int)** - heat conduction gain through internal floors (e.g. zone below is colder).
- **Floors (ext)** - heat conduction gain through external floors (not ground floor, e.g. floor in cantilevered space, roof eaves etc).
- **Ground floors** - heat conduction gain through ground floors.
- **Partitions (int)** - heat conduction gain through all internal partitions (e.g. adjacent zone is colder).
- **Doors and Vents** - conduction heat gain through doors and vents.
- **External Infiltration** - heat gain through air infiltration (non-unintentional air entry through cracks and holes in building fabric) when using [Simple natural ventilation](#) option.
- **External Natural Ventilation** - heat gain due to the entry of outside air through natural ventilation, as defined on the HVAC tab, when using [Simple natural ventilation](#) option.
- **Internal Natural Ventilation** - heat gain from other zones due to air exchange through open internal windows, doors, vents, holes and virtual partitions.
- **External Mechanical Ventilation** - heat gain due to the entry of outside air through the air distribution system. You can exclude mechanical ventilation from the cooling design calculations by unchecking the 'Air Distribution On' Model Data.
- **External Air** - heat gain due to the entry of outside air through external windows, vents, doors, holes and cracks when using [Calculated natural ventilation](#) option.
- **Mixing Air** - heat gain due to the entry of inside mixing air through internal windows, vents, doors and holes when using [Scheduled natural ventilation](#) option.

Airflow

- **Mech Vent + Nat Vent + Infiltration** - The sum of **outside air** (in ac/h) flowing into the zone through:
 - The HVAC air distribution system +
 - Infiltration +
 - Natural ventilation

Internal Gains

- **Task Lighting** - heat gain due to task lighting.
- **General Lighting** - heat gain due to general lighting.
- **Miscellaneous** - heat gain due to miscellaneous equipment.
- **Process** - heat gain due to process equipment.
- **Catering** - heat gain due to cooking.
- **Computer and Equipment** - heat gain due to computer and other IT-related equipment.
- **Occupancy** - sensible gain due to occupants. Please note that this can vary depending on the internal conditions. With very high temperatures the sensible gain can drop to zero with all cooling effects taking place through latent heat transfer.
- **Solar Gains Exterior Windows** - (used to be called 'Transmitted solar gains'). Short-wave solar radiation transmission through all *external* windows. For a bare window, this transmitted radiation consists of solar radiation passing through the glass and diffuse radiation from solar reflected from the outside window reveal, if present. For windows with a shade, this transmitted radiation is totally diffuse (shades are assumed to be perfect diffusers). For windows with a blind, this transmitted radiation consists of beam + diffuse short-wave radiation that passes between the slats and diffuse radiation from beam-to-diffuse reflection from the slats. The heating effect of solar radiation on opaque roofs and walls is accounted for in the Roofs and Walls fabric heat conduction data. *Solar re-reflected back out of the external window and transmitted through interior windows is not subtracted.*
- **Solar Gains Interior Windows** - Total beam + diffuse solar radiation transmission through *interior* windows. Requires the [3-Full interior and exterior](#) solar model option to be set.
- **Zone/Sys Sensible Cooling** - is the sensible cooling effect *on the zone* of any air introduced into the zone through the HVAC system. It includes any 'free cooling' due to introduction of relatively cool outside air and the heating effect of any fans present. Cooling always shows as a negative heat gain in the results. *It is therefore not the same as a cooling coil energy delivery* when mechanical ventilation is involved. ***It is best thought of as the HVAC cooling contribution to the zone heat balance.***
- **Zone/Sys Sensible Heating** - is the sensible heating effect of any air introduced into the zone through the HVAC system including any 'free heating' due to introduction of relatively warm outside air and the heating effects of fans. *It is therefore not the same as a heating coil energy delivery* when mechanical ventilation is involved. ***It is best thought of as the HVAC heating contribution to the zone heat balance.***

Surface heat gain data refers to heat transfer from the inside surface of the building elements to the zone.

Note: taken together the **Internal gains** and the **Fabric and ventilation** data above give an *approximate Zone Heat Balance*, i.e. the data represents all of the heat flows into and out of the zone.

Technical Note

System Heat Flows (Compact HVAC only)

These heat flows are plotted on the same axes as the Internal Gains but they should really have their own graph because they do not play a part in the zone heat balance.

- **Zone Heating** - energy supplied by local room heaters and reheat coils to maintain room internal heating temperature setpoint temperature when using Compact HVAC data.
- **Preheat** - energy supplied by preheat coils to temper the outside air before it enters the outside air mixing box when using Compact HVAC data.
- **AHU Heating** - energy supplied by the AHU heating coil when using Compact HVAC data.
- **Total Cooling** - at *building level*: sensible + latent cooling transfer to the supply air from the AHU cooling coil + any single zone unitary and fan coil units in the building. At *zone level*: sensible + latent cooling transfer to the supply air from a single zone unitary or fan coil unit.
- **Sensible Cooling** - sensible only cooling transfer from the cooling coil to the supply air. Latent coil heat can be calculated as the difference: **Total Cooling - Sensible Cooling**.
- **Heat Recovery Sensible Cooling** - the *sensible* cooling rate of the supply air by the heat exchanger. This rate is determined using the supply air mass flow rate through the heat exchanger unit, the supply air inlet and outlet conditions, and the specific heat of the inlet supply air. A positive value is reported if the supply air is cooled by the heat exchanger, else the rate is set to zero.
- **Heat Recovery Total Cooling** - the *total* cooling rate of the supply air by the heat exchanger. This rate is determined using the supply air mass flow rate through the heat exchanger unit, and the enthalpy of the supply air entering and leaving the unit. A positive value is reported if the enthalpy of the supply air is decreased by the heat exchanger, else the rate is set to zero.
- **Heat Recovery Sensible Heating** - the *sensible* heating rate of the supply air by the heat exchanger. This rate is determined using the supply air mass flow rate through the heat exchanger unit, the supply air inlet and outlet conditions, and the specific heat of the inlet supply air. A positive value is reported if the supply air is heated by the heat exchanger, else the rate is set to zero.
- **Heat Recovery Total Heating** - the *total* heating energy added to the supply air by the heat exchanger.

BUILDING LEVEL ONLY

Fuel breakdown

The data for fuel consumption for building level broken down by end-use:

- **Heat Generation** - total fuel consumption due to operation of heat generators such as boilers and heat pumps.
- **Chiller** - total chiller fuel consumption.
- **Fans** - total electrical energy consumed by HVAC fans.
- **Pumps** - total electrical energy consumed by HVAC pumps.
- **Preheat** - heating energy transferred from main plant preheat coils to HVAC system air when using Compact HVAC data.
- **Lighting** - electricity consumed by [general](#) and [task/display](#) lights.
- **Room Electricity** - electricity consumed by room equipment other than lights (computers, equipment, process etc).
- **Room Gas** - gas consumed by room equipment (miscellaneous, process and catering)
- **Room Oil** - oil consumed by room equipment (miscellaneous, process and catering)
- **Room Solid** - solid fuel (such as coal) consumed by room equipment (miscellaneous, process and catering)
- **Room Bottled gas** - bottled gas (propane) consumed by room equipment (miscellaneous, process and catering)
- **Room Other** - other fuel consumed by room equipment (miscellaneous, process and catering)

Fuel totals

Total fuel consumption for building, data available at building level only:

- **Electricity** - total building electricity consumption.

- **Gas** - fuel consumption total building gas consumption.
- **Oil** - total building or oil consumption.
- **Solid** - total building solid fuel consumption.
- **Bottled gas** - total building gas consumption.
- **Other fuel consumption** - total consumption of all other fuels.

CO2 production

Total carbon dioxide emission for building, data available at building level only:

- **CO2** - total CO2 emissions mass.

Site Weather data

Weather data stored at the site level and derived from the hourly weather file:

- **Outside Dry-Bulb Temperature**
- **Outside Dew-Point Temperature**
- **Direct Normal Solar**
- **Diffuse Horizontal Solar**
- **Wind Speed**
- **Wind Direction**
- **Atmospheric Pressure**
- **Solar Altitude**
- **Solar Azimuth**

Note: although Site weather data is stored at the Site level, it can be displayed at Building, Block and Zone levels too.

7.3.4 Comfort Analysis

DesignBuilder can generate extensive data on environmental conditions within the building and resultant occupant comfort levels. The following comfort-related output is available:

- **Internal air temperature** - the calculated average temperature of the air.
- **Internal radiant temperature** - the average Mean Radiant Temperature (MRT) of the zone, calculated assuming that the person is in the centre of the zone, with no weighting for any particular surface.
- **Internal operative temperature** - The mean of the internal air and radiant temperatures.
- **Outside dry-bulb temperature** - site data.
- **Relative Humidity** - the calculated average relative humidity of the air.
- **Fanger PMV** - Fanger Predicted Mean Vote
- **Pierce PMV ET** - the Predicted Mean Vote (PMV) calculated using the effective temperature and the Pierce two-node thermal comfort model.
- **Pierce PMV SET** - the Predicted Mean Vote (PMV) calculated using the 'Standard' effective temperature and the Pierce two-node thermal comfort model.
- **Pierce Discomfort Index (DISC)** - the Discomfort index calculated using the Pierce two-node thermal comfort model.
- **Pierce Thermal Sens. Index (TSENS)** - the Thermal Sensation Index (PMV) calculated using the Pierce two-node thermal comfort model.
- **Kansas Uni TSV** - the Thermal Sensation Vote (TSV) calculated using the KSU two-node thermal

comfort model.

- **Discomfort hrs (summer clothing)** - the time when the combination of zone humidity ratio and operative temperature is not in the ASHRAE 55-2004 *summer* clothes region.
- **Discomfort hrs (winter clothing)** - the time when the combination of zone humidity ratio and operative temperature is not in the ASHRAE 55-2004 *winter* clothes region.
- **Discomfort hrs (all clothing)** - the time when the combination of zone humidity ratio and operative temperature is not in the ASHRAE 55-2004 *summer or winter* clothes region.
- **Mech Vent + Nat Vent + Infiltration** - The sum of *outside air* (in ac/h) flowing into the zone through:
 - The HVAC air distribution system +
 - Infiltration +
 - Natural ventilation


The **Discomfort hrs** data above is equivalent to ASHRAE 'unmet load hours'.

The above data can be displayed at all time increments. In addition, air, radiant and operative temperatures can be displayed as distribution curves (below).

You can find more detailed information about Fanger, Pierce and Kansas State University [Thermal comfort prediction](#) algorithms in the [EnergyPlus Background](#) Section.

The **Mech Vent + Nat Vent + Infiltration** data is the sum of fresh air delivered through the HVAC system, infiltration and natural ventilation outside airflow in air changes per hour (ac/h). When used together with the other environmental output it can be very useful in checking for occupant discomfort.

Note: It is possible to display comfort data for occupied periods only by selecting **2-Just occupied periods** as **Zone environmental and comfort reports** on the Output tab of the simulation options dialog. This option applies to all data described in this Comfort Analysis help section.

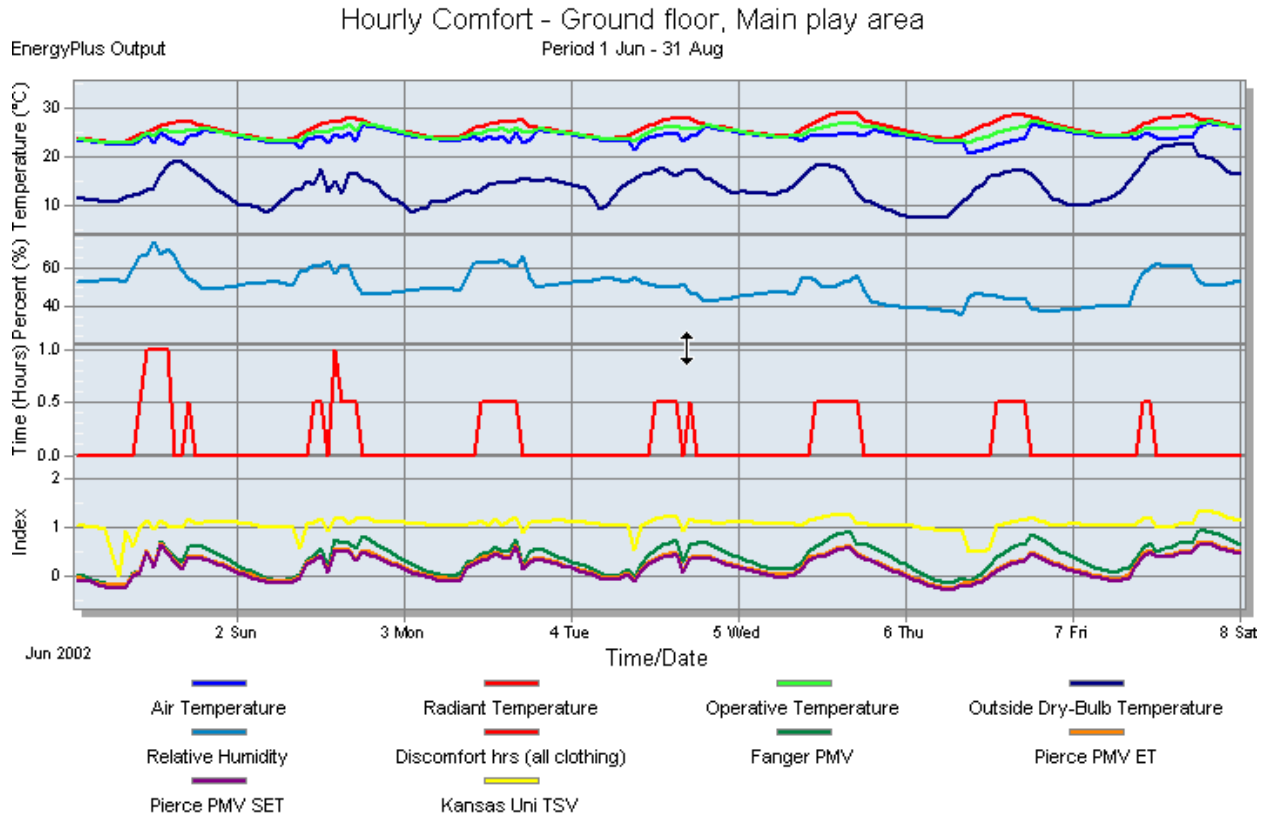

Example Hourly Comfort Data

TEMPERATURE DISTRIBUTION


if you requested [Temperature distribution](#) data prior to the simulation, you can generate temperature distribution curves showing 'hours at', 'hours below' and 'hours above' temperature levels in 1°C temperature intervals during the occupied period. To view temperature distribution data set the Interval in the Display Options panel to "Distribution". This data can be useful for getting an overview of the levels of comfort (or otherwise) provided by the building over time. The results can be compared with benchmark comfort criteria.

For example, CIBSE provides recommended benchmark summertime peak temperatures and overheating criteria as follows:

Offices, schools, dwellings (living areas) should have no more than 1% of the annual occupied hours over operative temperature of 28°C. Bedrooms in dwellings should have no more than 1% of the annual occupied hours over operative temperature of 26°C.

UK DfES Building Bulletin BB87 recommends an allowable overheating criteria of 80 occupied hours in a year over and air temperature of 28°C.

Note: Temperature distribution data is only available at **zone level**.

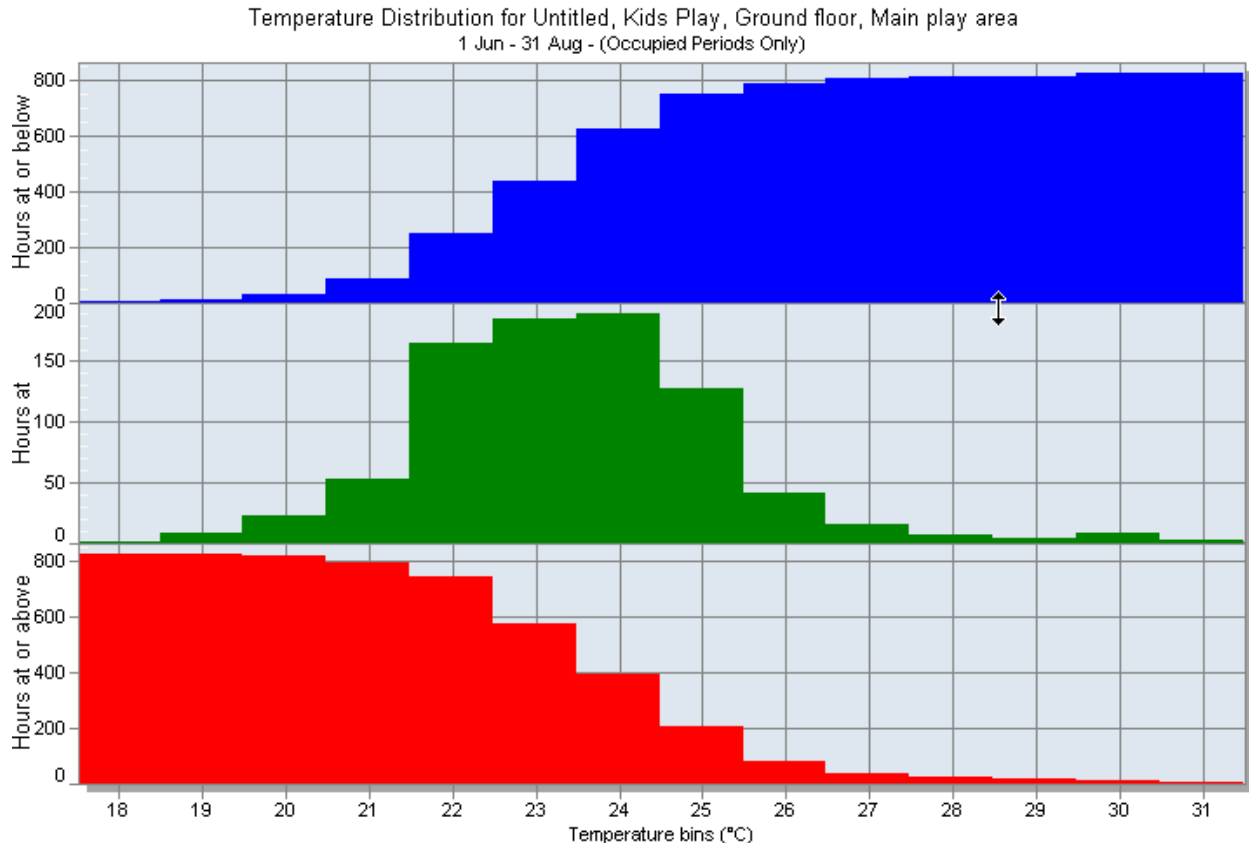

Example Temperature Distribution Output

SIMPLIFIED ASHRAE 55-2004 GRAPH RELATED OUTPUTS


The [Discomfort hours](#) data is based on whether the humidity ratio and the operative temperature is within the region shown in ASHRAE Standard 55-2004 in Figure 5.2.1.1. For these outputs the operative temperature is simplified to be the average of the air temperature and the mean radiant temperature. For summer, the 0.5 Clo level is used and, for winter, the 1.0 Clo level is used. The graphs below are based on the following tables which extend the ASHRAE values to zero humidity ratio.

In some cases you may find a large number of discomfort hours for a particular zone even though the air temperature in the space is within normal ranges. If this happens you should check:

1. Operative temperatures which can be very different in highly glazed spaces in the summer or poorly insulated spaces in the winter.
2. Humidity levels are within range - you may find very high or very low humidity caused by inadequate ventilation. Note that the minimum comfort temperature with winter clothes when the air is very dry is 21.7°C / 71°F which may be lower than some heating temperature setpoints. Likewise in the summer when the air is very humid operative temperatures above 26.8°C / 80.2°F are considered too hot with summer clothes.


Winter Clothes

Air Temp(degC)	Humidity Ratio
19.6	0.012
23.9	0.012
26.3	0.000
21.7	0.000

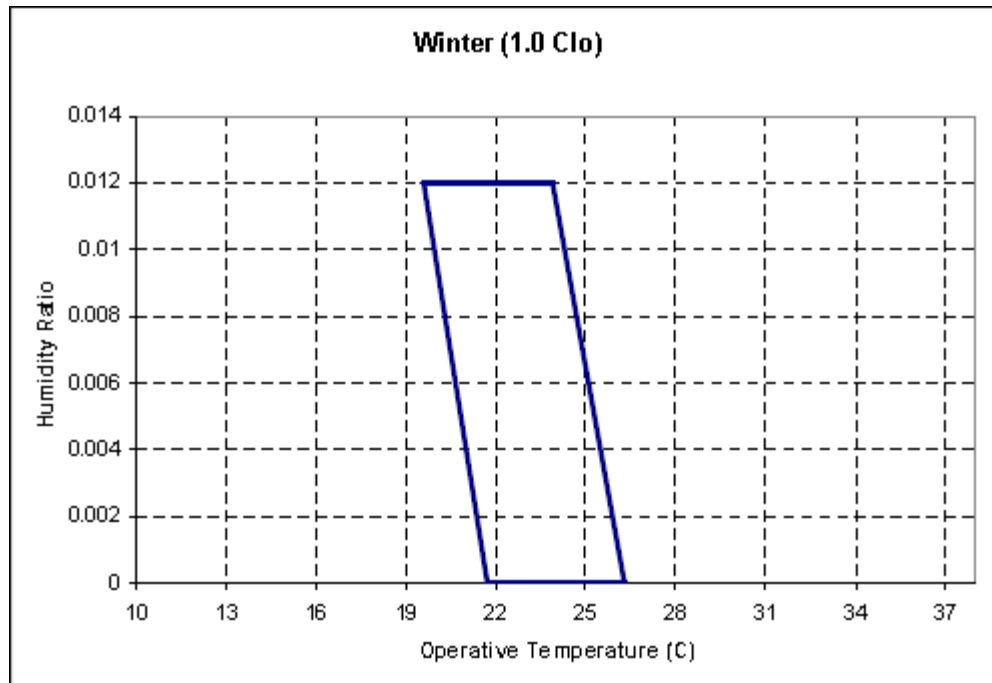


Summer Clothes

Air Temp(degC)	Humidity Ratio
23.6	0.012
26.8	0.012
28.3	0.000
25.1	0.000

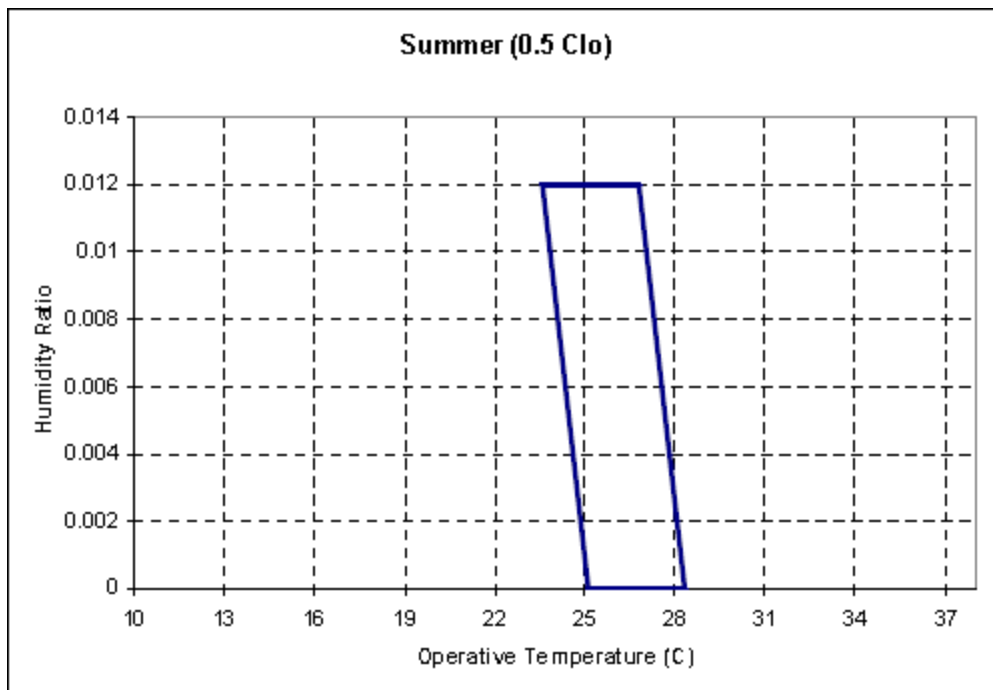

Section

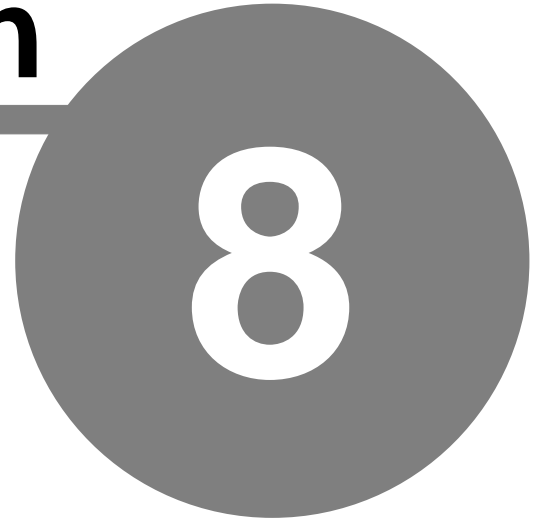


Visualisation


The Visualisation screen allows you to view the model in full 3-D rendered mode. This section describes the process of creating and [controlling rendered images](#).

From the Visualisation screen you can export rendered images in various formats and also generate AVI movies of the scene.

To render a model, click on the Visualisation tab:

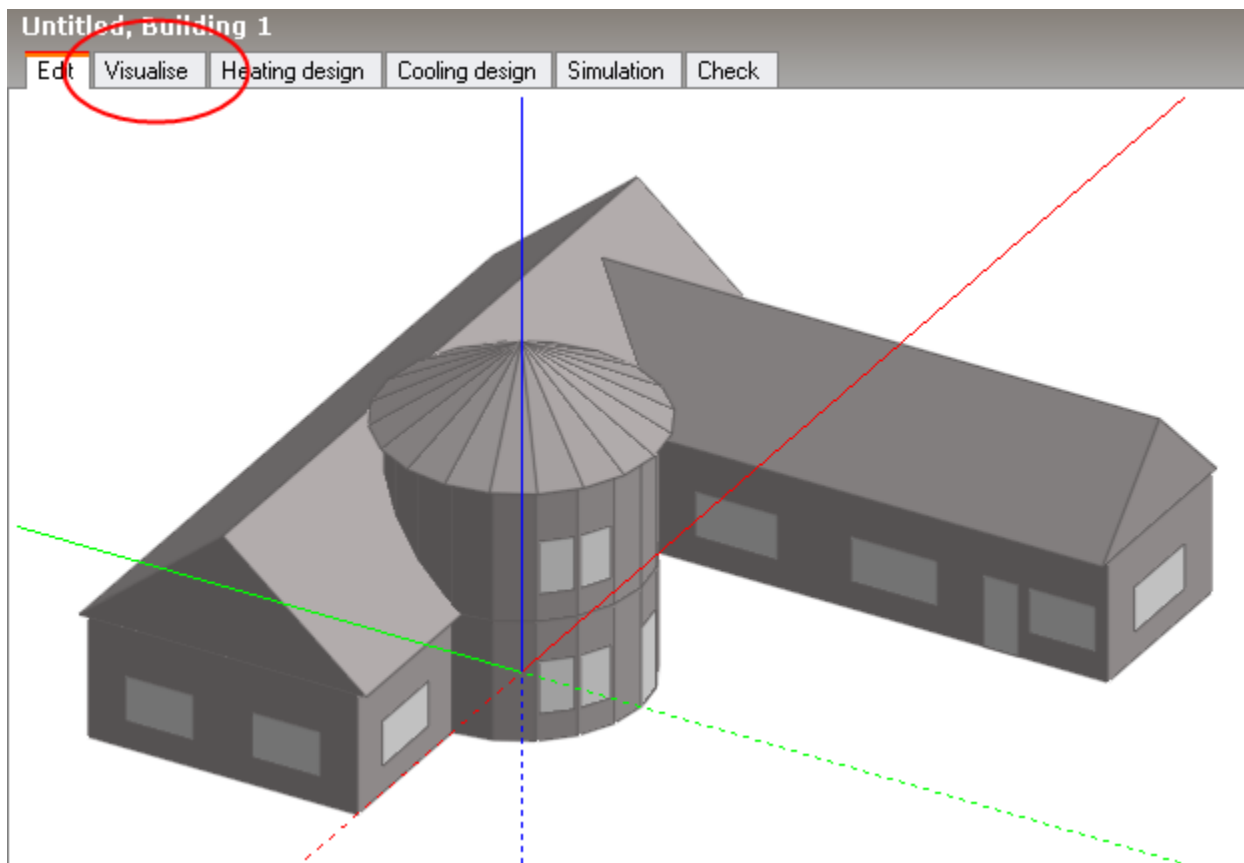

which takes you to the Visualisation screen:

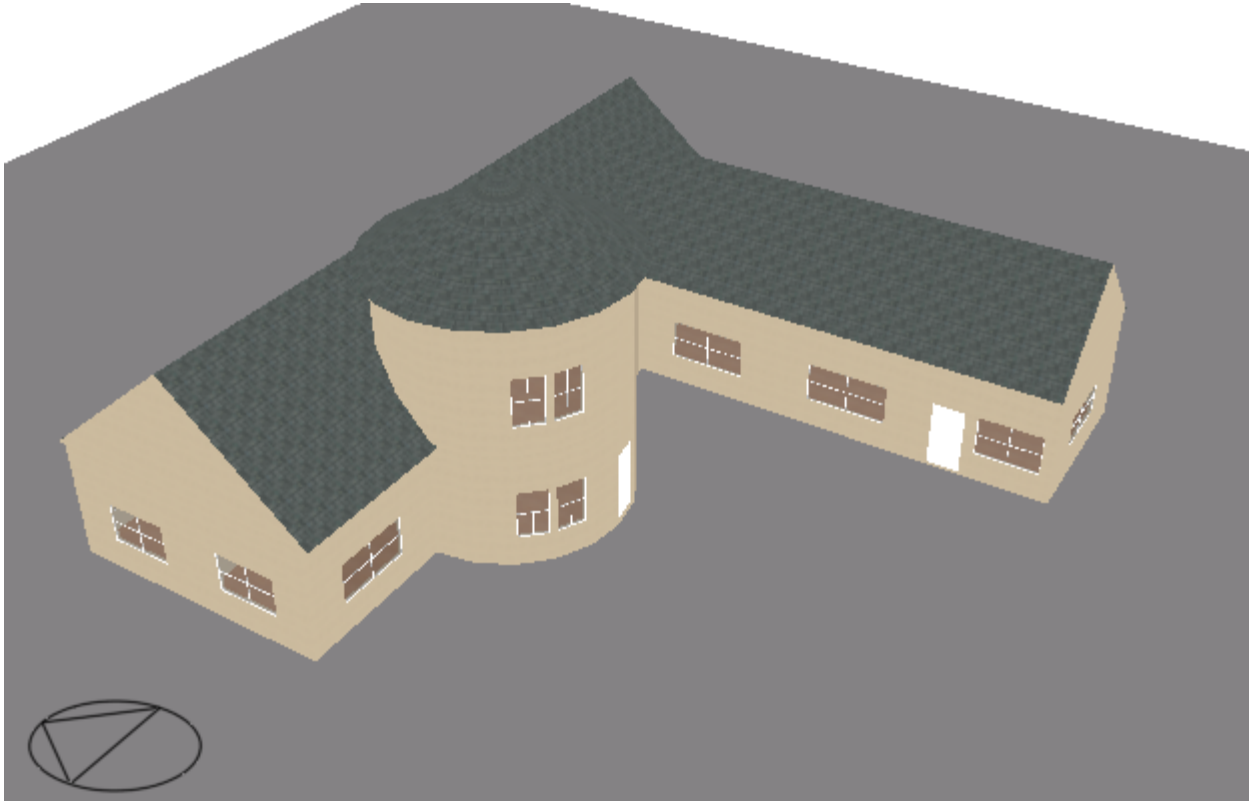

8.1 Controls


The following controls are available to customise the view:

- [View Rotation](#)
- [Orbit](#)
- [Zoom](#)
- [Fit view](#)
- [Pan view](#)
- Zoom window

Controls are also provided to customise the rendered image:

- [Show shadows](#)
- [Antialiasing](#)
- [Show north arrow](#)
- [Dynamics](#)


These controls are accessed from the Display Options panel on the Visualisation screen:

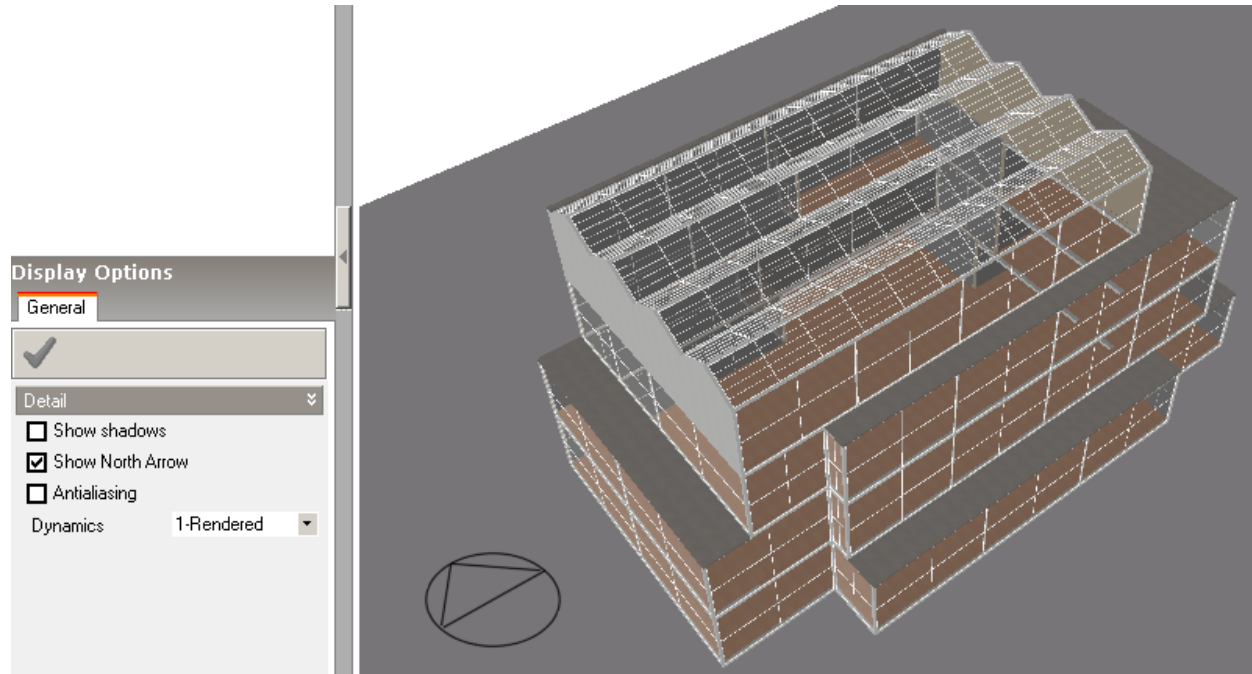


8.1.1 Show Shadows, Time, Day, Month

Display options on [Visualisation](#) screen

You can incorporate solar shading within the rendered model view by switching the 'Show shadows' check box on and then clicking on the 'Apply' button:

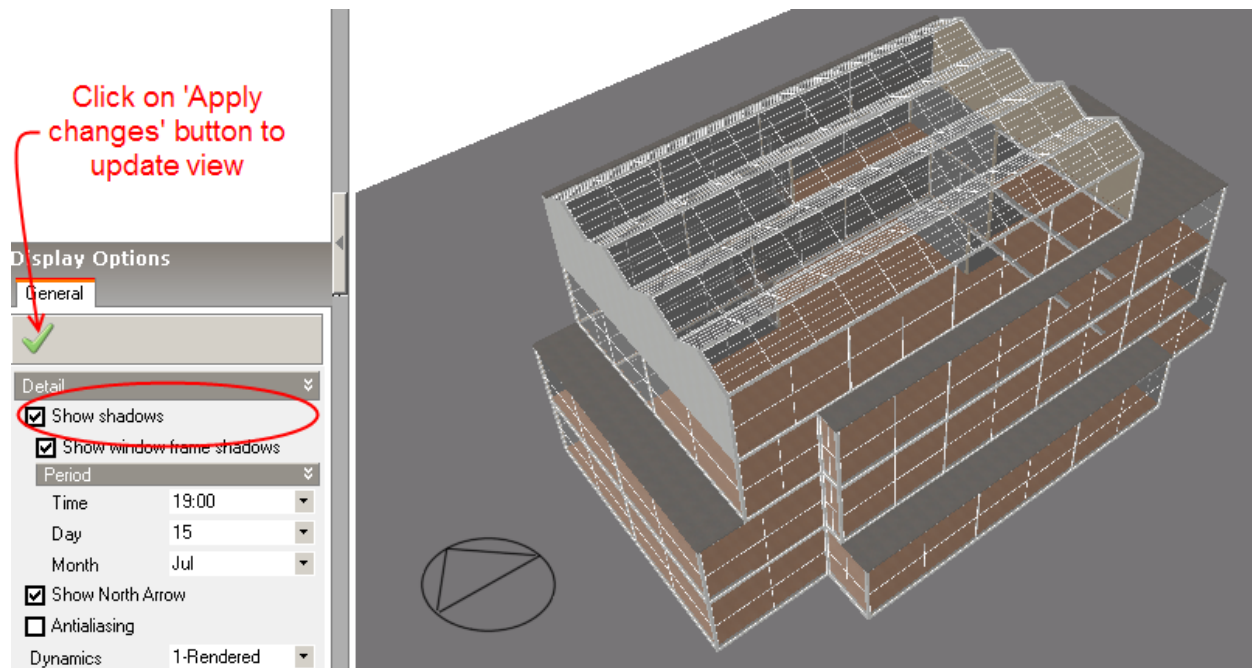

After clicking on the 'Apply' button, a progress control appears to inform of shadow generation and then the view is updated:

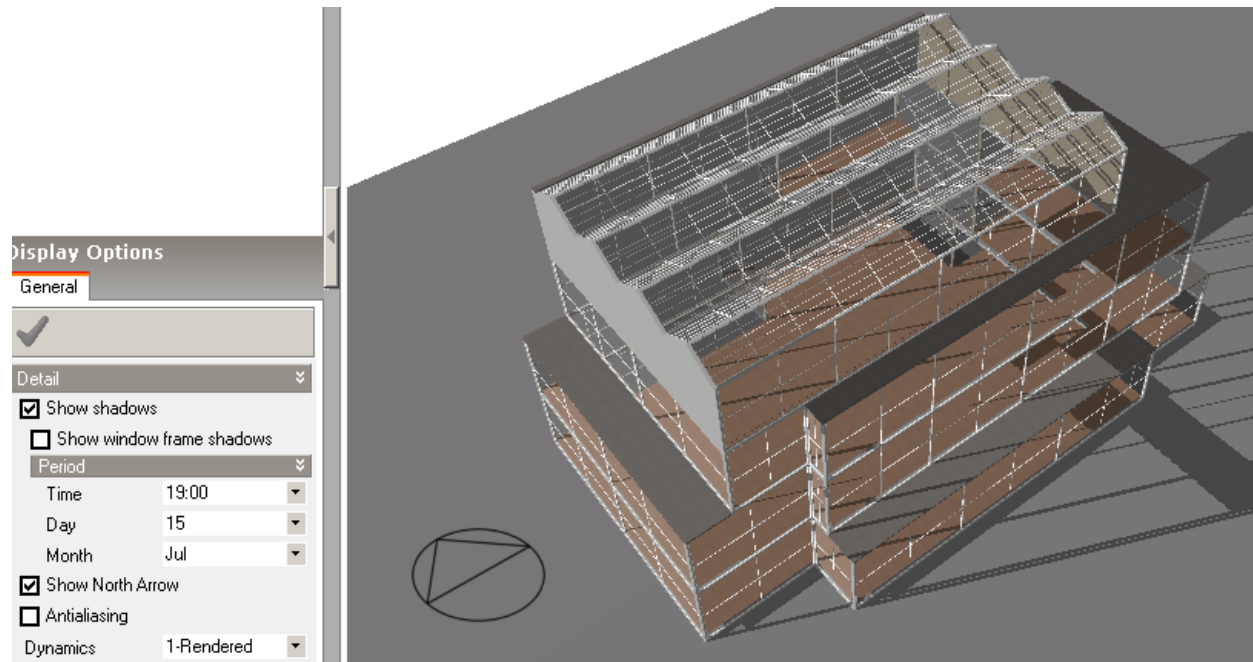

The month, day and time-of-day can be controlled using the 'Period' controls. Note that the time specified here is local mean time excluding any daylight saving. You can account for daylight saving time by adding 1 hour to the local mean time during summer months to see shading for clock time.

Note in versions 1.3.4 and later, time is defined in decimal hours, e.g. '10.5' is the same as 10:30am.

Change 'Period' and click on 'Apply changes' to update view

Display Options

General



Detail

 Show shadows Show window frame shadows

Period


Time 17:00

Day 15

Month Jul

 Show North Arrow Antialiasing

Dynamics 1-Rendered

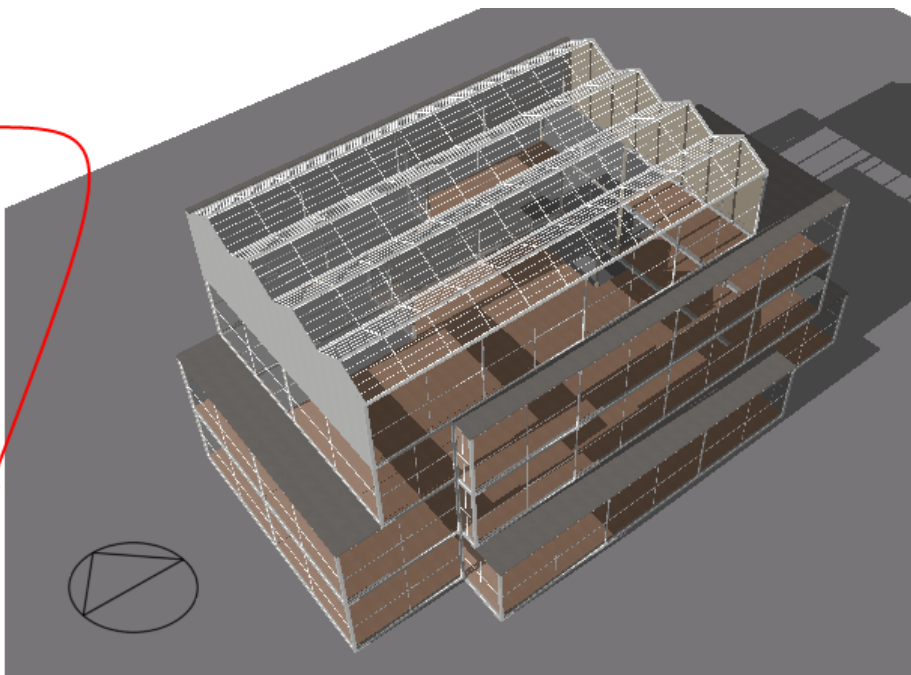

If you want to look at much more detailed shading, you can include the window frame dividers in the shading calculations by switching on the 'Show window frame shadows' check box and clicking the 'Apply' button:

Display Options

General



Detail

 Show shadows Show window frame shadows

Period


Time 19:00

Day 15

Month Jul

 Show North Arrow Antialiasing

Dynamics 1-Rendered

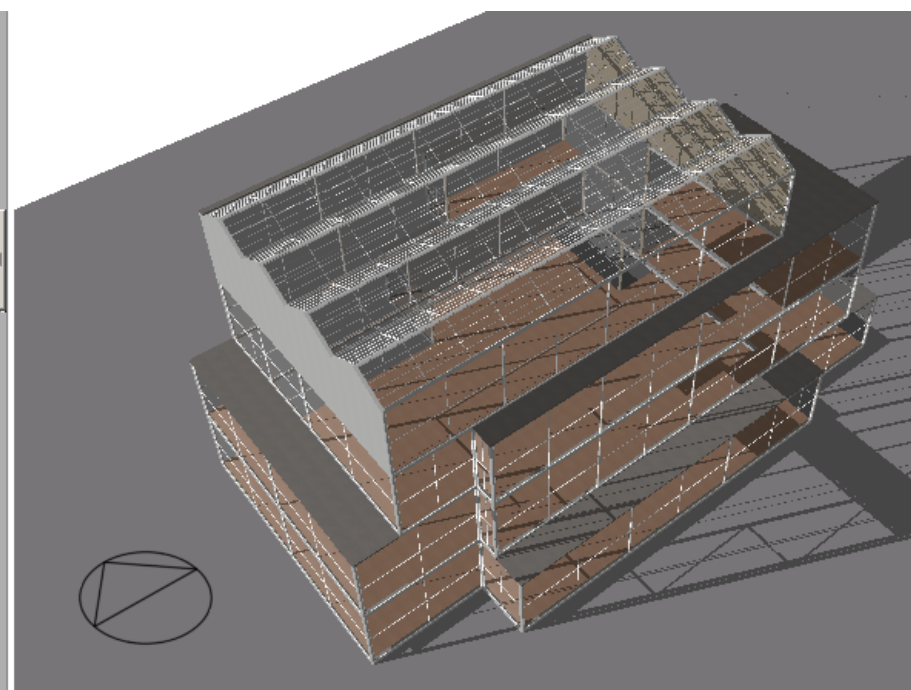

8.1.2 Show North Arrow

Display options on [Visualisation](#) screen

Use this control to switch the display of the North direction arrow on or off.


8.1.3 Antialiasing

Display options on [Visualisation](#) screen


The antialiasing option can be used to improve image quality. You may need to experiment with antialiasing to confirm whether or not the graphics card fitted to your computer will facilitate this feature - with some earlier cards, antialiasing can be very slow.

Tip: more advanced graphics cards can provide [hardware antialiasing](#) and in this case this software antialiasing option may only provide marginal benefit.

To enable antialiasing, switch the **Antialiasing** check box on and click on the **Apply** button:

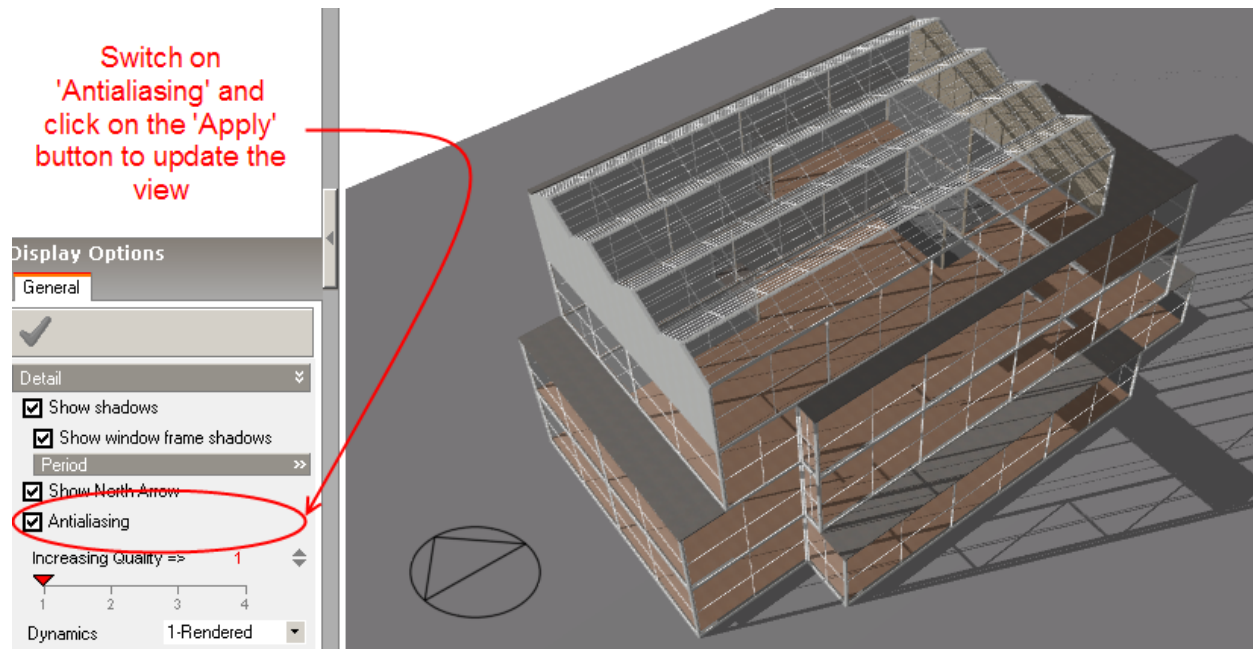

You can improve the quality of the image using the **Increasing Quality** slider control:

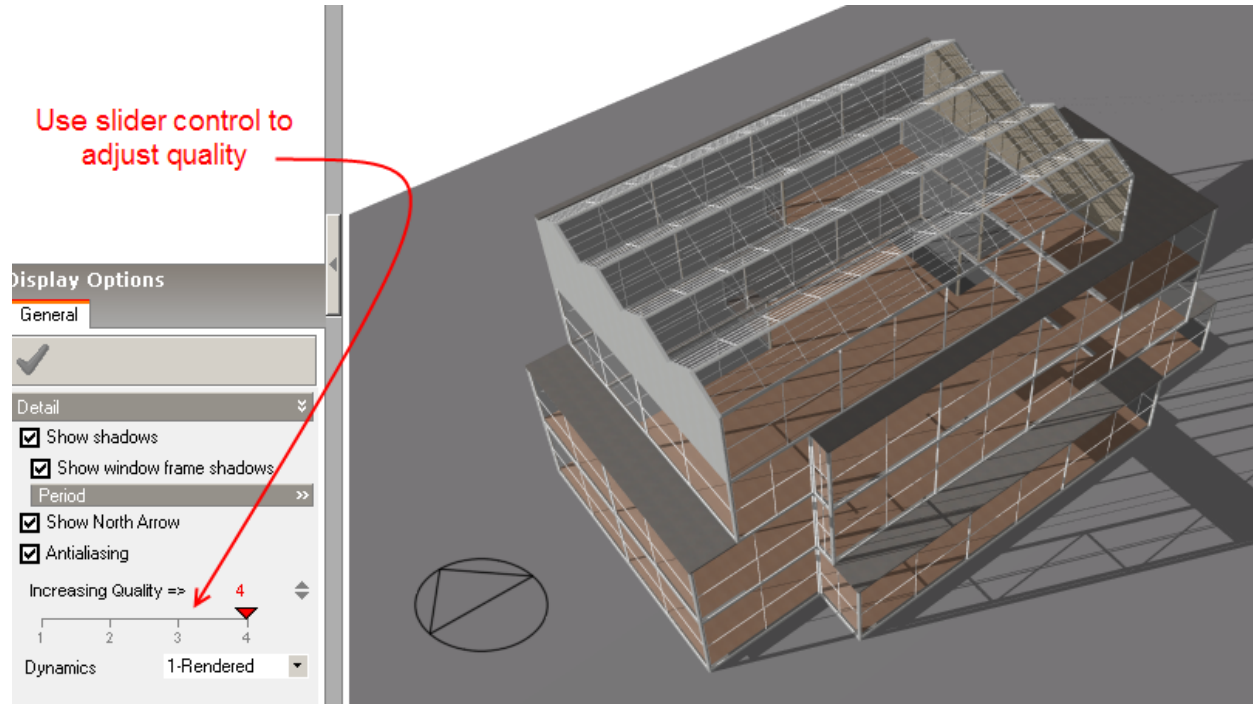

Bear in mind that as you increase image quality, the display speed will decrease.

8.1.4 Dynamics


Display option on [Visualisation](#) screen

With larger and more complex models, orbit and zoom control speed can be increased very significantly by selecting 'Wireframe' from the 'Dynamics' control drop list.

8.2 Creating Movies



You can create AVI movies of your model using this feature. To create a movie, click on the 'Generate AVI movie' tool which opens the 'Movie options data' dialogue box:

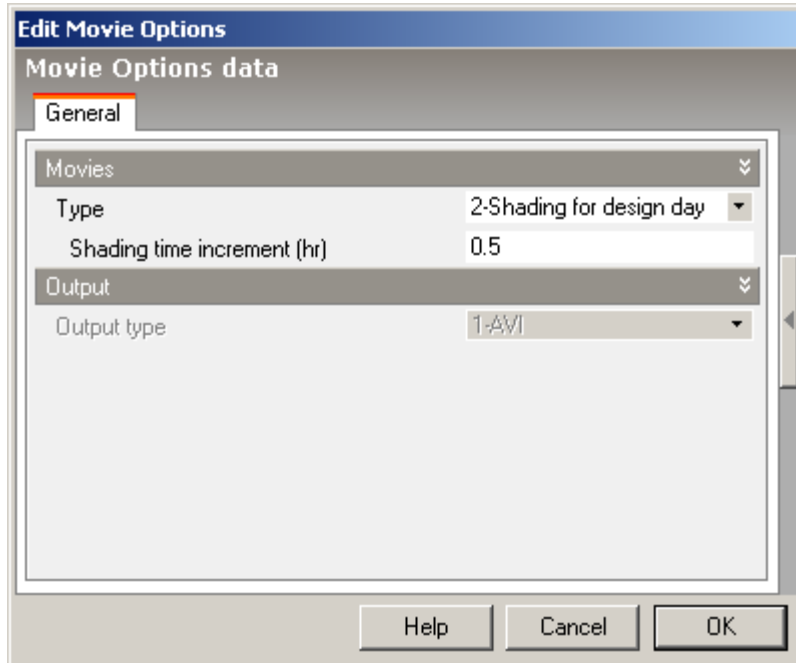

Use the 'Type' drop list to select either:

- **Shading for design day** - fixed camera position, varying the solar position over the design day as specified on the Visualisation Data Options panel.
- **Orbit** - 360° orbit movie.

Click on the OK button to generate the movie. After the movie generation has completed, a file save dialogue will be displayed to allow you to save the movie file to any required location.

Note: smaller 'Shading time increments' and 'Orbit increments' can generate a lot of data and take a long time to complete movie generation, especially when software antialiasing is switched on.

Section



Reporting

You can use DesignBuilder to generate reports using the [Compile Reports](#) and [Report topic](#) mechanism or you can [Export](#) individual report content to file, clipboard (for pasting into word processors) or directly to the printer.

9.1 Export Data



You can export data from DesignBuilder **screens**:

- **Edit Screen** - exports a non-rendered 3-D image of the building. Alternatively a 3-D DXF file can be exported.
- **Visualisation Screen** - exports a rendered 3-D image of the building optionally including shading and antialiasing..
- **Heating and Cooling Design Screens** - exports design data (graphical, tabular, spreadsheet).
- **Simulation Screen** - exports simulation data (graphical, tabular, spreadsheet).

You can export to a range of **destinations** (depending on the nature of the data):

- File - store output in a file which can be imported into your documents/e-mails.
- Printer - sends output directly to the printer.
- Clipboard - for pasting directly into word processors etc.
- [Report topic](#) - for generating reports using the [Compile Reports](#) feature.


Export **format** options depend on the nature of the data. The full range of options is:

- **Bitmap** - best bitmap based output quality but very large file sizes.
- **PNG** - better quality compression than JPEG but sometimes have larger file sizes.
- **TIFF** - best bitmap based output quality but very large file sizes.
- **GIF** - good compression but black and white only.
- **JPEG** - recommended for 3-D images of the model because of its good quality combined with small file sizes.
- **DXF** - generate 3-D DXF data of the model - only available from Edit and Visualisation Screens. The 3-D DXF file generated by DesignBuilder is suitable for reading into other CAD software. Two options are available:
 - **1-Whole model with details** which includes all of the details of the model as seen on the Visualisation tab, and,
 - **2-Zones** which generates the internal surfaces as used in simulations and other energy calculations.
- **Windows metafile** - results graphs only - scalable so graphs can be resized without losing quality.
- **CSV spreadsheet** - grid results and library data only.
- **Text** - reports only.

9.2 Report Topics

Report topics are used to store snapshots of model data including model descriptions, graphic images of the model and results.

You can export to a report topic by selecting 'Report topic' from the 'Export to' option on the [Export Data](#) dialog. When Report topic is selected, a second tab becomes available called Report on which you can enter a title and caption for the topic. You can also choose to include a model description with the topic. This allows a building description to be included alongside the data when the report is compiled using the [Compile Report](#) dialog.

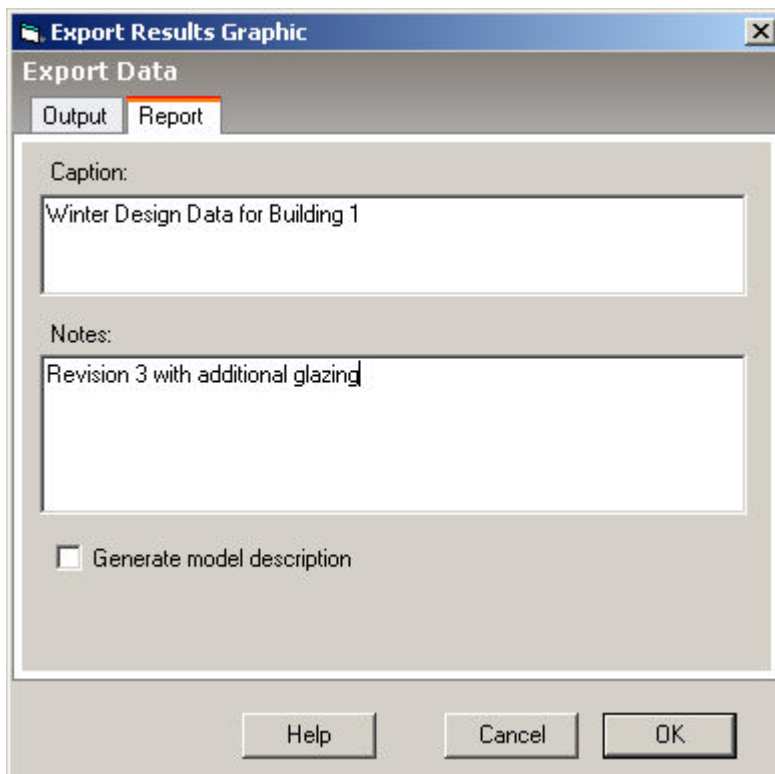

Report topics are retained within the dsb file and are available for compiling into a report if the file is saved and reloaded.

9.3 Compile Reports




The Compile Reports dialog allows you to control the generation of a report based on previously created [Report topics](#). Available report topics are listed and can be previewed by clicking on them.

The Title entered on this dialog is displayed in a table at the top of the report.

Check the checkbox to the left of the report topics to be included in the report and click on OK.

Section

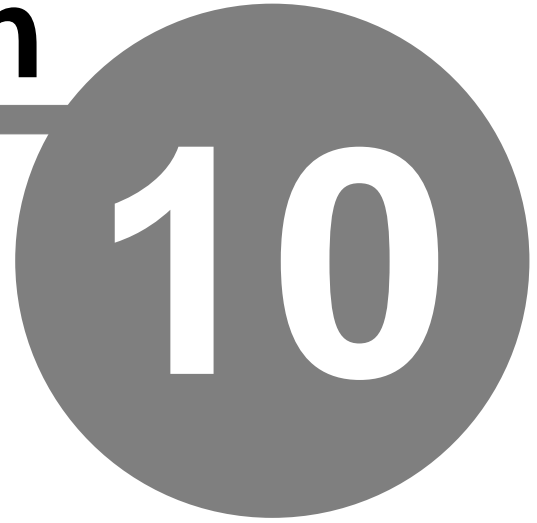

**Program
Options**

The program options apply to the overall application no matter which file is loaded. The program options dialog is accessed from the Tools menu. There are six tabs:

- [User interface](#)
- [Dialogs](#)
- [Files](#)
- [EnergyPlus](#)
- [Limits](#)
- [International](#)

10.1 Dialogs

Calculation dialogs

These options control whether a calculation option dialog appears by default before every calculation. Note that a dialog always appears when you press Update.

New object dialogs

When you create a new site or building, a dialog box appears by default allowing you to enter basic data on the new object. If you prefer not to see these dialogs and just use default data, uncheck these two check boxes.

10.2 Files

Backup

DesignBuilder can automatically make backups of your current working file. Check the 'Automatic backup' option box and select a backup interval to enable this option.

If for any reason DesignBuilder does not close down cleanly and is unable to save, a backup will remain and DesignBuilder will ask whether you want to recover this data the next time you open the file.

Default folders

DesignBuilder stores the most recently used folders for:

- Data file storage
- Picture file export
- AVI file export
- Report file export
- DXF file import/export

You can edit these default folders on this tab.

10.3 User Interface

Learning mode

You should generally select **Learning mode** while you gain experience with DesignBuilder. In Learning mode, the [Info panel](#) is shown to the right of the main screen, providing additional information and commonly used tools relevant to each screen. Model Data is accessed from tabs along to the top of the screen.

With Learning mode switched off, the Info window is not shown and Model data is shown on the right of the screen alongside the Model edit screen. This allows you to see the effects of updates to data as they are made.

Use Slider controls

Some significant data items are (by default) controlled using a 'slider' which allows rapid selection of typical values. If however you need to enter precise values (for example when modelling an existing building) you may prefer to type this data in a text box. In this case uncheck the 'Use slider controls' data.

Note: when using DesignBuilder with IP units, slider controls are always switched off regardless of this setting.

Sort lists

By default DesignBuilder automatically sorts navigator and other data lists alphabetically. This can make it easier to find the data you are looking for but also increases the time taken to generate lists and so slows some program operations requiring lists to be generated. You can request unsorted lists by unchecking this option.

Automatically refresh site navigator lists

By default DesignBuilder automatically refreshes the contents of the site navigator list on the left of the screen as the building is modified. In large models frequent rebuilding of the navigator list can slow progress especially when drawing partitions. Uncheck this option to avoid this problem.

You can manually refresh the navigator lists by clicking on the **refresh list** icon above the Navigator panel (below).



Double-click to navigate site hierarchy

By default you can navigate to an object in the site hierarchy (building, block, zone etc) by single-clicking in the Navigator. You can change this behaviour by checking **Double-click to navigate site hierarchy**. In this case you must double-click to go to objects in the Navigator and a single click highlights the object in the Edit view (if you are already at the level above). For example if you are at block level and you single click on one of the zones in the block the zone is highlighted in red in the Edit view.

Note: disabling this option can be useful for identifying blocks, zones, surfaces by single-clicking in the Navigator.

Show 'Load data from template' dialog when template selected

When you select a new template by clicking on the browse button in the Model data, by default the data in the template is loaded directly to the current object. However if this option the 'Load data from template' dialog is opened giving you the opportunity to select various options and load other templates. This option is switched off by default.

Show model data departures from template in bold


Select this option to show any differences in model data relative to the selected template in bold. This option is switched on by default.

Default surface normal view

When working at [surface level](#) it can be useful to get a normal view of the surface by clicking on the [Normal button](#) in the top right of the screen. By default this will show a normal view of the surface as viewed from **outside**. You can use the **Default surface normal view** program option to instead view from the **inside**.


Double buffer display dynamics

On some displays the screen is incorrectly refreshed when dragging a selection rectangle, resulting in a series of lines left on the screen as the mouse moves (below). This problem does not affect the model but you can avoid it by switching off double buffering on this dialog. On some graphics cards you may instead be able to make a [hardware setting](#) to prevent this display problem.

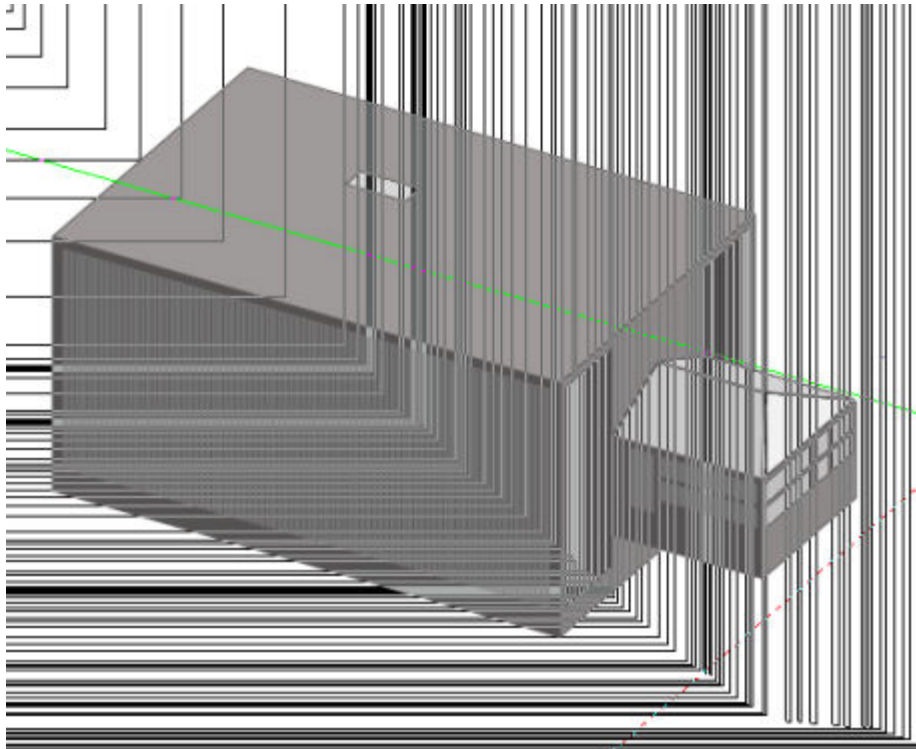


Maximum characters shown in data display lists

You can control the number of characters displayed in data lists on the right hand panel. This provides a workaround to a problem with the list component used in DesignBuilder which always scrolls to the right when an item with a long name is selected. This scrolling can be inconvenient so we have implemented the option to control the amount of text displayed. By default this is set to 35 characters but you can use a larger value if you prefer.

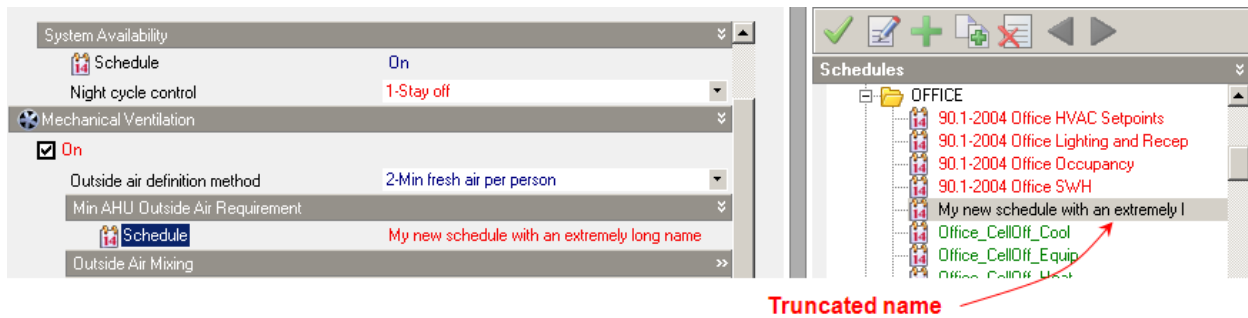


Show tooltips in Model data

 With small window sizes or when Learning mode is switched off there is not always enough space to display the caption for each Model data item so DesignBuilder provides the option for tooltips to appear when the mouse hovers over a truncated caption. See screenshot below.



10.4 EnergyPlus

The screenshot below shows EP-Launch being used to control EnergyPlus simulations from DesignBuilder.

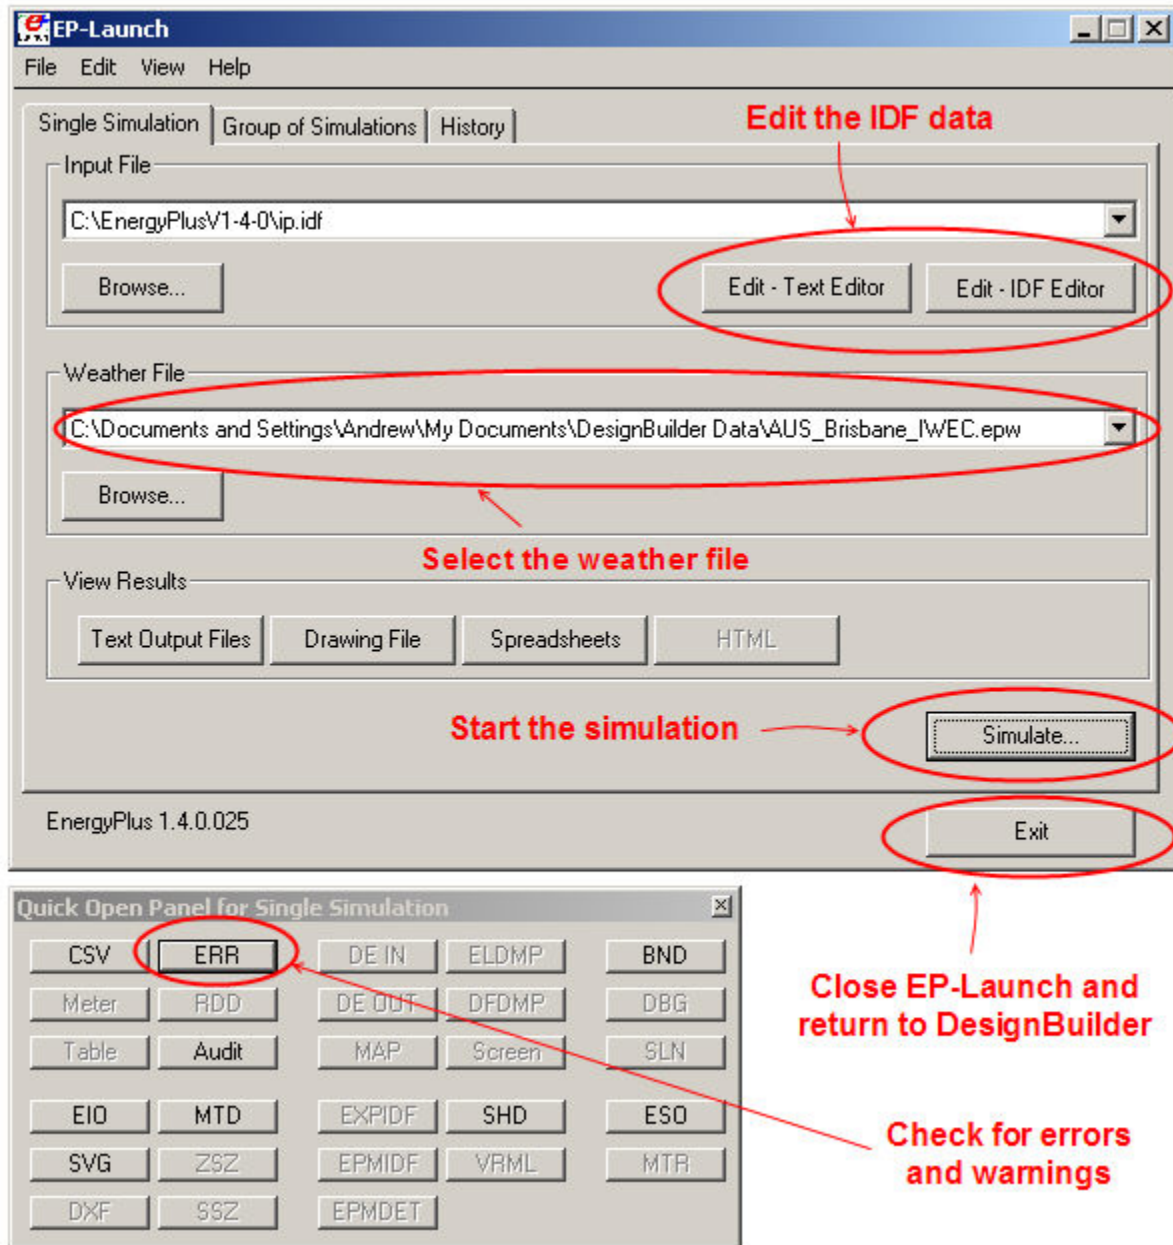

Note 1: If you use this method you must make sure to set the correct weather file manually.

Note 2: Any changes you make to the IDF data, either in the IDF Editor or using a text editor, will be saved in a file called ip.inp in the EnergyPlus folder. This file will be overwritten the next time a simulation is requested so if you wish to save the any changes you make to IDF data you should use the File > Export option and edit the data and make simulations outside DesignBuilder.

EnergyPlus

You can select the version of EnergyPlus to use in your simulations. This can be useful to target a specific DOE version you may wish to use or when a new version becomes available which might provide new functionality or address previous problems.

You should generally select the recommended DLL option as it is more tightly integrated within DesignBuilder and provides progress feedback.

DesignBuilder comes with 2 internal versions of EnergyPlus:

- DLL - the default option, runs the internal version of EnergyPlus supplied with the program asynchronously giving visual feedback of progress and allowing interaction with the computer during the simulation.
- Executable - an executable version of the program running in a command window.

...or you can select an executable version of EnergyPlus supplied by DOE. If you are [exporting IDF data](#) for use outside DesignBuilder you should select the appropriate DOE version to avoid [incompatibilities](#).

Note: the EnergyPlus version selected here is used for simulations within DesignBuilder but also as the target version when exporting IDF data for use outside DesignBuilder.

Mode

If you select an executable version (internal or DOE) there are four options available to control the way EnergyPlus is executed when simulating within DesignBuilder:

- **1-Executable (minimised)** - runs the executable invisibly - you will just see a minimised window on the Task bar but not the EnergyPlus command window.
- **2-Executable (visible)** - runs the executable showing EnergyPlus screen output in a command window.
- **3-Executable (debug)** - runs the executable showing EnergyPlus screen output in a command window and pauses after simulation - intended for advanced EnergyPlus users who may want to see the stack dump following a crash.
- **4-Executable (EP-Launch)** - runs the DOE-supplied EP-Launch program, waiting until this is closed before loading results. This option is only possible if you have selected a DOE-supplied version of the EnergyPlus executable. This option can be useful for making quick minor changes to the IDF data prior to simulation. Any changes made to the IDF data from within EP-Launch will be included in the simulation but will not be retained for future simulations. **Info on the EP-Launch option.**



EnergyPlus export folder

When using a DOE EnergyPlus executable version you must also select the folder where the selected version is installed. You can scan the disk for DOE installations by clicking on the link in the Info help panel..

When you select any option other than the default DLL option, the necessary EnergyPlus files are downloaded seamlessly prior to the first simulation following the change.

Note: If you wish to install a different DLL version of EnergyPlus to that which is recommended, you must have administrative rights on the computer.

DesignBuilder are licensed distributors of EnergyPlus. All versions of EnergyPlus supplied by DesignBuilder have been compiled by the DOE.

ESO Output

You can generate ESO output files containing Heating design, Cooling design and Simulation results. The files can be loaded later using the File > [Load results file](#) menu option, provided the model hasn't changed too much.

Rules:

1. The DesignBuilder model must still have same zones and surfaces it had at the time the simulation data was generated
2. If you have modified these files and carried out further simulations in EnergyPlus you should find that the results will read in OK provided you haven't changed zone or surface names in the IDF data.
3. You cannot read in ESO files generated from IDF data which was entered by hand (or by other software) because the zone and surface references will be different.
4. Results must be loaded to the correct screen - you can't for example read Heating design results into the Simulation screen.
5. *Simulation only*: the results to be read in must have been generated using the same [simulation period](#) and number of [timesteps](#) currently set in the [Simulation options](#).

If you choose to **Save ESO simulation output** then you can also select options to **Prompt for filename** and **Auto load ESO** described below.

Prompt for filename

Tell DesignBuilder whether you wish to be prompted for a filename after each simulation. If you choose not to be prompted then DesignBuilder will automatically generate output filenames based on the name of the dsb file, the calculation type, the [calculation description](#) and the date. It places the file in the [EnergyPlus folder](#). If you choose to be prompted the file can be stored anywhere on your computer system.

Auto load ESO

Check this option to automatically load the ESO results file after simulations. If you have been warned that there will be a lot of data and the program may crash on reading results you may wish to switch this option off and reload the results later. It is often possible to read in very large ESO files after DesignBuilder has restarted following a simulation and this can be a useful for avoiding a crash due to too much data. You may also wish to switch the option off to avoid waiting for the results to read in when carrying out parametric simulations.

This option only refers to Simulation results no Heating/Cooling Design results.

IDF OPTIONS

Display extra warnings

Requesting Display extra warnings causes the statement:

```
Diagnostics,DisplayExtraWarnings;
```

to be included in the IDF data. This option is for experienced EnergyPlus users who understand the significance of the extra warning messages generated.

IDF Formatting

The IDF data can be formatted using the options:

- **1-Full** - indentation and comments are included in the IDF data
- **2-Basic** - just indentation and comments required to reference the IDF objects with data in the DesignBuilder model.
- **3-Compressed** - the IDF data is fully compressed. Choose this option if your model is very large and you wish to reduce the amount of IDF text being processed. When the IDF data uses more than about 10MB of disk space DesignBuilder is unable to process the quantity of text involved and if this happens when the **1-Full** or **2-Basic** options are set it will attempt to regenerate the IDF data using the **3-Compressed** option to reduce the memory requirement. If IDF data is being generated twice before your simulations you can speed the process by selecting this option from the start ensuring that IDF data is only generated once.

Options will be made available in future versions to ease reading of IDF data generated by DesignBuilder.

10.5 Limits

You can enter the maximum number of arc and circle segments if you have a special requirement.

10.6 International

Language

DesignBuilder currently supports 4 languages:

- English (native language)
- Italian (available from Evolvente only)
- French
- Spanish (still under development)

When you change the language you must restart DesignBuilder to see the full effect.

Units

DesignBuilder can be used either with SI units (metric) or IP units. Because the program uses SI units internally, and because the databases which come with the program have been built up assuming SI units, US users may find some limitations with the data supplied and with some aspects of the user interface. These will be addressed in due course.

Region filter

The region filter allows you to see only the data relevant to your particular region. Note that if you have a file loaded then DesignBuilder will use the region associated with the location of the site. The region in this dialogue is only used when no file is loaded. Data tables which can be filtered in this way are:

- Constructions
- Glazing
- Materials
- Metabolic rates
- Schedules
- Holidays
- Activity templates

- Construction templates
- Glazing templates
- Lighting templates
- HVAC templates
- DHW templates
- Sectors

Show other region data

Use this option to display/hide component and template data from other regions.

Show 'General' data

Use this option to display/hide component and template data from the 'General' region. Options are:

1-Never - Never show General data

2-Always - always show General data

3-When no region specific data - only show General data when there is no region specific data available.

Show program 'Early' data

Use this option to display/hide special 'Early' and other 'broad-brush' typical system component and template data. Options are:

1-Never - Never show 'Early' data

2-Always - always show 'Early' data

3-When no region specific data - only show 'Early' data when there is no region specific data available.

 
Note when categories of data are hidden this does not mean they are deleted from the database - the data is still there but it does not appear on lists.

Section



Menu

The DesignBuilder menu is located at the top of the screen and provides a full reference of all the currently available commands.



The following sub-menus are available:

- [File](#) - access file operations
- [Edit](#) - options for editing the model
- [Go](#) - options for navigating and obtaining data
- [View](#) - options for adjusting the view of the model
- [Tools](#) - miscellaneous tools
- [Help](#) - documentation and other support resources on use of the program.

11.1 File Menu

The File menu can be accessed from the horizontal [top bar menu](#) at the top of the screen. The following options are available when a file is open:

General

- **New project** (Ctrl+N) - create a new DesignBuilder dsb file.
- **Open project** (Ctrl+O) - Open an existing DesignBuilder dsb file.
- **Close** (Ctrl+F4) - close the currently open DesignBuilder dsb file and returned to the opening screen.
- **Print** - Print current view
- **Load results file** - load a [previously generated ESO file](#).

Save

- **Save** (Ctrl+S) - Save currently open DesignBuilder dsb file. If no file is currently loaded then this command saves the libraries.
- **Save without output results** - save the current DesignBuilder dsb file without output results reducing the file size. Use this option if you plan to send the dsb file by e-mail or to the support forums.
- **Save as** (F12) - save the DesignBuilder dsb file using a different name/location.
- **Save as template** - save the DesignBuilder dsb file as a template so it can be used as a starting point for subsequent new projects.

Import

- [Import 2-D DXF floorplan](#) - import a 2-D DXF floorplan into the model for tracing over.
- [Import detailed survey data](#) - import a survey data file into the model (advanced option - contact DesignBuilder support for more information on this)
- [Import building from external file](#) - import a building into the current model from an external file. The option assumes that there is only one building in the external file.
- [Import library data](#) - import library data from an existing DDF file.

Export

- [Export EnergyPlus Heating design IDF file](#) - export an IDF file using options for heating design

- calculations.
- [Export EnergyPlus Cooling design IDF file](#) - export an IDF file using options for cooling design calculations.
- [Export EnergyPlus Simulation design IDF file](#) - export an IDF file using options for simulation using hourly weather data.
- [Export model image](#) - export the currently displayed image of the model.
- [Export 3-D DXF model](#) - export the model in 3-D DXF format.
- [Export library data](#) - export library data in DDF format.

11.2 Edit Menu

The Edit menu can be accessed from the horizontal [top bar menu](#) at the top of the screen.

General

- **Undo** (Ctrl+Z) - undo last operation
- **Redo** (Ctrl+R) - redo last operation
- [End stream](#) (Enter) - end the partition stream creating a floating partition
- **Cancel current operation** (Escape) - cancel the current operation returning to select mode
- **Undo last point** (Escape) - undo the last point drawn when creating a block or when drawing partitions
- [Clear to default](#) - clear model data to defaults
- [Load data from template](#) (Ctrl+L) - loads data from template
- [Reload non-default templates](#) - loads data from template throughout model where template is non-default
- [Transfer blocks](#) - transfers blocks from one building to another
- [Convert selected outlines to blocks](#) - convert any selected outlines to component or building blocks
- [Drag block face](#) - start the drag face operation on the currently selected block
- [Divide block](#) - divide the currently selected block using the cutting tool
- [Measure](#) (Ctrl+M) - measure length, angles or areas in the model

Draw

- [Draw block](#) – add a new block (building level only)
- [Draw internal perimeter](#) - draw a void/courtyard (block level only)
- [Draw partition](#) - draw partition streams (block level only)
- [Draw window](#) - draw windows (surface level only)
- [Draw sub-surface](#) - draw sub-surface (surface level only)
- [Draw door](#) - draw doors (surface level only)
- [Draw hole](#) - draw holes (surface level only)
- [Draw vent](#) - draw vents (surface level only)
- [Draw construction line](#) - draw one or more construction lines

Remove

- [Remove DXF data](#) - remove all current DXF data
- [Remove all construction lines](#) - remove all construction lines
- [Remove all outlines](#) - remove all outline blocks

General

- [Select](#) - returned to select mode

- **Select all** - select all objects in current view

Equipment (zone level, Equipment tab when Detailed gains model option selected)

- **Add** - at an item of equipment
- **Edit** - edit currently selected equipment
- **Delete** - delete currently selected equipment

Opening screen component and template edit

- **Add** - add a new component/template as per currently selected item
- **Edit** - edit currently selected component/template
- **Delete** - delete currently selected component/template

Edit currently selected model objects

- **Move** (Ctrl+V) - move selected objects
- **Clone** (Ctrl+C) - clone (copy) selected objects
- **Rotate** (Ctrl+T) - rotate selected objects
- **Stretch** (Ctrl+J) - stretch selected objects
- **Delete** (DEL) - delete selected objects

General

- **Building model options** (F11) - open Model options dialog
- **Add building** (Ctrl+A) - add a new building (site level only)

11.3 Go Menu

The Go menu can be accessed from the horizontal [top bar menu](#) at the top of the screen.

11.4 View Menu

The View menu can be accessed from the horizontal [top bar menu](#) at the top of the screen.

11.5 Tools Menu

The Tools menu can be accessed from the horizontal [top bar menu](#) at the top of the screen.

General

- **Program options** - open program options dialog.
- **Rebuild** - recalculate the zone, surface and adjacency geometry from the base building elements.
- **Rezone block** - refresh the zoning in the current block.
- **Import library components to model** - import current component and template libraries to the

model replacing existing ones.

- [Export data](#) - export results/graphics results from the current screen.
- [Compile report](#) - generation of a report based on previously created [Report topics](#).
- [Hourly weather data](#) - open the hourly weather data dialog.
- [Show log file](#) - show a log file containing information on your computer and all significant actions taken during the current DesignBuilder session.

Results screens

- [Update calculated data](#) - refreshes the results first opening the Calculation options dialog allowing you to enter new options.
- [Lock Y-axis min/max values](#) - locks the extent of the Y-axes so that they keep their current maximum and minimum values allowing consistent comparison with the future results display.

Libraries (opening screen)

- [Backup libraries](#) - backup component and template libraries
- [Restore libraries](#) - restore previous component and template library backups

11.6 Help Menu

The Help menu can be accessed from the horizontal [top bar menu](#) at the top of the screen.

- [Index](#) - access program help using the Index.
- [Search](#) - access program help using the Search facility.
- [Contents](#) - access program help using the hierarchical Contents.
- [Licence](#) - enter serial number and licence keys
- [Tutorials](#) - access DesignBuilder web tutorials
- [About](#) - DesignBuilder version number

Section

12

**Modelling
Advice**

Modeling advice topics:

- [Working with large models](#)
- [Natural ventilation modelling](#)
- [Ground modelling](#)
- [Adjacent Buildings](#)
- [Defining setpoint temperature schedules](#)
- [Electrochromic Glazing](#)
- [Trombe Walls](#)
- [Autosizing Heating and Cooling Equipment](#)
- [Daylight Saving and Local Time](#)
- [Mixed mode](#)
- [Double Facades](#)
- [Solar Radiation Distribution](#)
- Solar Technology Solutions

12.1 Natural Ventilation Modelling

Natural ventilation

There are two general approaches to natural ventilation and infiltration modelling in DesignBuilder depending on the setting of the [Natural ventilation model option](#):

- **Scheduled** in which the natural ventilation change rate is explicitly defined for each zone in terms of a maximum ACH value and a schedule and infiltration air change rate is defined by a constant ACH value.
- **Calculated** where natural ventilation and infiltration are calculated based on window openings, cracks, buoyancy and wind driven pressure differences crack dimensions etc.

You should generally choose [Scheduled natural ventilation](#) if you are able to make a reasonable estimate of the [natural ventilation rates](#) and [infiltration rates](#) in the building. Some airflow scenarios are more difficult to estimate and it may be necessary to calculate airflows.

SCHEDULED NATURAL VENTILATION AND INFILTRATION

Scheduled [Natural Ventilation](#) flow rate and schedule data is accessed on the HVAC tab. The flow is switched off if the zone air temperature falls below the [Ventilation setpoint temperature](#) set under [Environmental Control](#) on the [Activity](#) tab.

Infiltration is defined by a constant ACH value under [Airtightness](#) on the [Construction](#) tab.

Airflow through *Exterior* Windows, Vents and Doors is considered to be included in the Natural ventilation outside air ac/h value set on the HVAC tab.

Airflow through *Interior* Windows, Vents and Doors is modelled using the concept of mixing where equal amounts of air are transferred from one zone to another and vice-versa. The flow rate is directly proportional to the opening area using [Airflow rate per opening area](#) data accessed from the [Model Options](#) dialog. There is no way in v.1 to set airflows between zones using Scheduled Natural ventilation.

CALCULATED NATURAL VENTILATION AND INFILTRATION

By default [Calculated natural ventilation](#) is controlled by timer (window and vent data on the [Operation header](#) on the Openings tab) and by [Ventilation setpoint temperature](#) on the Activity tab.

The [Crack data](#) under [Airtightness](#) on the Constructions tab is used in EnergyPlus/AIRNET to calculate infiltration.

Note 1: Using the **Calculated** option increases the complexity of the model and slows simulations down. You should aim to [simplify the model](#) as appropriate to the requirements of the calculations. For example if you are carrying out a summertime simulation of a naturally ventilated building you could consider [switching off infiltration](#) modelling if infiltration heat flow is only a very small part of summertime heat balance.

Note 2: In Version 1 the calculated airflows through external windows, vents, doors, holes and cracks are all lumped into '[External air](#)' data on the Simulation results screen.

Calculations

The ventilation rate (q) through each opening and crack in the model is calculated based on the pressure difference using wind and stack pressure effects:

$$q = C.(DP)^n$$

Where:

q is the volumetric flow through the opening.

DP is the pressure difference across the opening/crack.

n is the flow exponent varying between 0.5 for fully turbulent flow and 1.0 for fully laminar flow..

C is the flow coefficient, related to the size of the opening/crack.

Wind-Driven Ventilation

When wind impinges on the surface of a rectangular building, a positive pressure is induced on the upwind face. The flow separates at the corners resulting in negative pressure regions on the side of the building and a negative pressure distribution on the leeward facade. The pressure distribution on the roof varies according to pitch - the pressure on the upwind face being negative for roof pitches of 30° and positive for steeper pitches.

The pressure on any point on the surface of a building facade can be represented by:

$$P_w = 0.5 \cdot \rho \cdot C_p \cdot v_z^2$$

Where:

P_w is the surface pressure due to wind,

ρ is the density of air,

C_p is the wind pressure coefficient at a given position on the surface and

v_z is the mean wind velocity at height z .

The wind pressure coefficient, C_p , is a function of wind direction, position on the building surface and side exposure. Some typical approximate values for buildings subjected to varying degrees of shelter and wind directions is given in an AIVC publication A guide to energy-efficient ventilation. This data is also

quoted in the CIBSE A Guide. DesignBuilder uses this data to populate the [Pressure Coefficients templates](#) and provide default pressure coefficients suitable for use in basic design calculations for buildings having no more than three stories.

For more detailed analysis, or for buildings having 4 or more stories you should obtain specific pressure coefficient data from CFD analysis of from wind tunnel measurements and enter it for each surface under the [Pressure Coefficients](#) header on the [Openings tab](#).

Excluding Wind-Effects

When carrying out conservative design calculations you may prefer to exclude (or reduce) the effects of wind from Calculated natural ventilation. To exclude wind-driven airflow from the analysis altogether set the [Wind factor](#) on the [Advanced tab](#) of the [Model Options dialog](#) to 0. For full treatment of wind effects set it to 1 and for intermediate treatment of wind set to a number between 0 and 1.

Limitations

DesignBuilder uses the EnergyPlus AIRNET method to calculate air flow rates. You should be aware of some restrictions:

- **Large horizontal openings** are only modelled very approximately. The opening algorithm in AIRNET assumes that openings are vertical or near vertical. Horizontal openings have no 'opening height' and so 'cross-mixing' (i.e. simultaneous inflow and outflow) does not occur.
- EnergyPlus AIRNET simulations [take considerably longer](#) than the equivalent simulations with Scheduled natural ventilation.

Modulation

You can modulate the opening sizes to reduce the large temperature swings that can occur if the windows/doors are too far open when they are venting, especially when there is a large inside-outside temperature difference. Use the [Modulation settings](#) on the [Advanced tab](#) of the [Model Options dialog](#) to control this. *By default modulation is on* and opening sizes are reduced to 5% of full values when the outside is 15°C or more colder than inside. This models the fact that occupants are unlikely to throw the windows wide open when it is very cold outside (for manual control systems).

Modelling Infiltration

Normally when [Calculated](#) natural ventilation is set DesignBuilder includes a single crack in each surface in the simulation to account for infiltration. The size and properties of this crack depend on the setting of the Airtightness slider.

Tip: The effects of infiltration in some areas of the building and in some calculation types can be minor and in these cases infiltration can be switched off. This can be done by unchecking the Model infiltration checkbox on the Construction model data tab for the areas of the building where infiltration is not to be modelled. For example you may wish to switch off infiltration in roof blocks (and include the roofspace ventilation using a smaller number of vents or holes instead) or you could switch it off in the whole building for Summertime simulations where the effects of infiltration would be minimal relative to the much larger flow rates due to open windows, vents, holes and doors.

Airtightness slider

The setting of the Airtightness slider indicates the Crack template applied when setting crack properties:

- Very poor
- Poor
- Medium
- Good

- Excellent

See also [Mixed mode](#).

12.2 Operative Temperature Control

12.3 Working with Large Models

It is possible to create very large complex building models using DesignBuilder but you should consider what you're trying to achieve by your modelling exercise before diving in and including every detail of the building design. Otherwise you may find you have created a beautiful model which is impractical to simulate because it takes too long or causes the simulation engine to fail. You can should consider the following points.

EnergyPlus simulations are slowed down by:

1. Lots of windows
2. Lots of zones
3. Lots of windows per zone
4. Lots of surfaces
5. [VAV Compact HVAC](#) descriptions
6. [Radiant heating systems](#) (Simple HVAC)
7. Calculated natural ventilation using AIRNET
8. Calculating [solar reflections](#)
9. Reading hourly or sub-hourly results for extended simulation periods
10. Not enough [computer memory](#) (RAM)
11. Lots of output

You can speed up simulations by using these techniques:

1. Reduce the number of windows in the model by increasing the [Window spacing](#). Shading issues aside, modelling a small number of large Windows has the same effect as a large number of small Windows provided you get the frame area right.
2. Use the [Lump similar windows on surface](#) option to speed up simulations with many similar windows per surface.
3. Only create zones to model areas of the building with specific environmental conditions, and HVAC systems or internal gains schedules. A common mistake made by the 'beginners' is to model each room as a separate zone. This is generally not necessary because most rooms will have very similar operating conditions. In this case you may want to use one of the DesignBuilder [Merging](#) features to reduce the number of zones.
4. When you first create a building model you may want to carry out simulations before partitioning the blocks into zones. If your unpartitioned blocks are very large there could be an enormous number of windows in the single zone making up a block and this can slow down EnergyPlus simulations especially if carrying out daylighting analysis. In this case you should try to reduce the number of windows in the model as recommended above.
5. Try to use the smallest number of blocks possible to keep the number of surfaces down.
6. [Exclude](#) semi-exterior unconditioned zones from the model and replace them with an R-Value.

7. Use [Simple](#) HVAC descriptions.
8. Use the [Scheduled](#) Natural ventilation option.
9. If you need to use [Calculated](#) natural ventilation in your simulations then you should aim to minimise the number of cracks and openings involved in the airflow calculations. One way to do this is to switch off infiltration calculations. Normally DesignBuilder includes a single crack in each surface in the simulation to simulate infiltration. If you have other openings such as vents, windows, doors etc in a particular block/zone you can switch off infiltration. This approach can be used in roof blocks or calculations such as cooling design where infiltration is relatively insignificant. Switch off [infiltration](#) and create 2 vents or holes somewhere in the zone to allow the calculations to take place. If you have multiple zones merged into a single merged zone you should make sure that you have two flow paths in total across all of the zones making up the single merged zone.
10. Switching off calculation of [solar reflections](#) in the Model options dialog
11. Restricting hourly and sub hourly results to short simulations for investigation of detailed building operation. You should not attempt to generate hourly or sub-hourly results for a whole year unless your model is very simple.
12. If you are interested in analysing a single zone within a much larger model, you could consider using the [single zone option](#) to carry out simulations just on the zone, excluding consideration of the rest of the building.
13. Fit as much memory (RAM) to your computer as possible (1-2 GB ideally). Paging memory to disk during simulations of large models can cause EnergyPlus to grind to a halt.
14. Only request the output you really need. This will speed up simulation initialisation and reading of output (especially hourly and sub-hourly) at the end. If you don't need surface data (Walls, Windows etc. heat transfer) switch this off in the [Output Options](#) tab of Simulation options dialog. If you are only looking at hourly results switch off monthly and daily. You will get noticeably faster initialisation.

12.4 Ground Modelling

How it works

In EnergyPlus, heat is transferred between zones and the ground through one-dimensional ground floor surface elements. The 2-D and 3-D effects in the ground heat conduction that occur in reality are not treated by default. EnergyPlus uses ground construction data to model the storage of heat in the ground and it can accurately model heat transfer processes over several days (so it can model the effect of say a warm week followed by a cool week) but it cannot directly model long-term ground thermal storage effects (periods measured in months). For more on advanced ground modelling see bottom of this topic.

EnergyPlus applies a constant temperature boundary condition for each month on the lower surfaces of ground adjacent elements.

There are 3 ways to create an adjacency to ground in DesignBuilder:

1. Using DesignBuilder's [Auto adjacency detection](#) where ground adjacency is set for all surfaces at or below ground level. By default, all external surfaces which are at or below ground level are considered to be [adjacent to ground](#). Surfaces that are partly above ground ($z=0$) and partly below, are modelled as entirely adjacent to outside (if the Adjacency setting is **1-Auto** - see below).
2. Using [Ground component blocks](#) - any surfaces (or part of surfaces) touching a ground component block are considered to be adjacent to ground.
3. Using the [Adjacency](#) model data on the Construction tab at block, zone and surface levels where external surfaces can be defined as being adjacent to ground by changing the Adjacency model data on the [Construction tab](#) from **1-Auto** to **3-Adjacent to Ground**. If a surface is below ground level but is not adjacent to ground you can select **2-Not adjacent to ground**.

When using [Separate](#) constructions, and when the [Add ground construction layers to surfaces in contact with ground](#) option is selected, DesignBuilder automatically combines the [site ground construction](#) (0.5m of earth by default) with the main construction (typically ground floor or wall) set on the [Constructions](#) tab.

With [Combined](#) constructions the earth layers must be explicitly included in the ground floor/wall constructions if you wish to define ground temperatures within the earth.

Ground temperatures

Monthly [ground temperatures](#) are defined at the site level under [Site details](#).

Note: You should not use the ground temperatures in the EnergyPlus weather file header because these are for undisturbed sites. The temperature beneath buildings is significantly affected by the building itself - the EnergyPlus documentation recommends using ground temperatures of 2°C below average internal temperatures for large commercial buildings (where perimeter heat loss is relatively less important). *Note that this temperature should be applied directly below the slab* and should not include ground material - so if you use this approach to ground temperature definition, you should switch off use of the [ground construction](#) at the site level.

EnergyPlus cannot model very thick constructions so it is necessary to use less thick constructions (2m or smaller) combined with some assumptions about temperatures at about half a metre below the floor.

Many modellers prefer to define the ground temperature just below the slab and exclude the earth layers from the model. This has the advantage of simplicity and clarity and the approach recommended by EnergyPlus developers.


Note: the default ground temperatures provided in DesignBuilder assume that an earth layer is included in the constructions adjacent to ground. If an earth layer is not included then you should increase the default site ground temperatures to values closer to those typically found just below the ground slab (as described in note above).

Example Application - Basement or Cellar under inclined ground slope

This example illustrates how to create a simple 3 storey rectangular building model with:

- Basement which is fully below ground and
- Ground floor is partially buried under an inclined ground plane.


Step 1

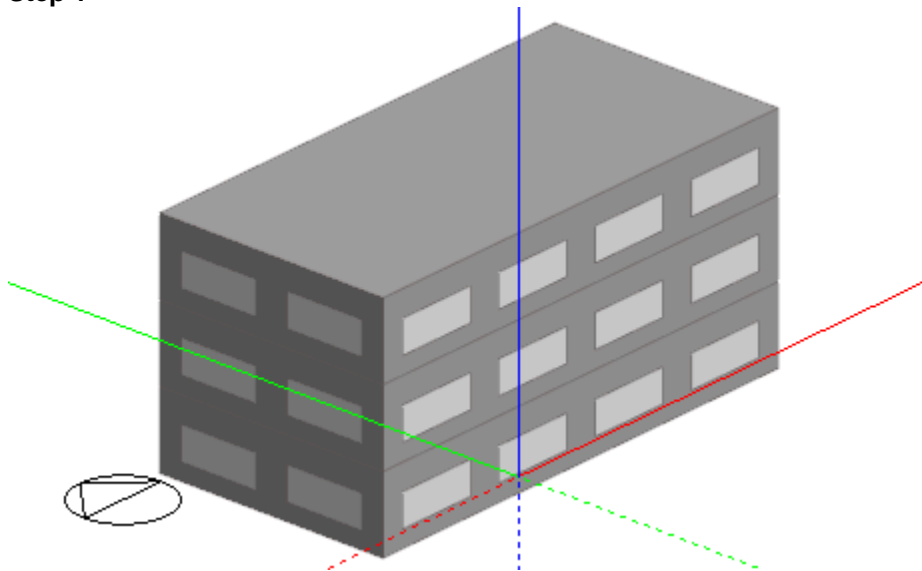

Draw 3 blocks on the $z=0$ ground plane. The lowest block will be the basement (completely buried), the middle block will be the ground level block, partially

buried and the top block will be the second level. So far only the bottom surface is adjacent to ground because it sits on the $z=0$ plane.


Step 2

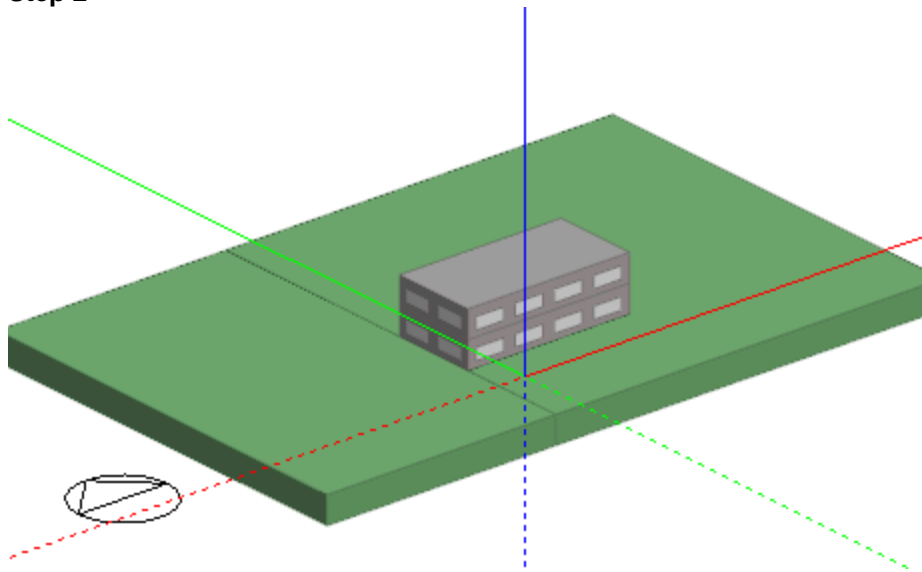

Draw 2 ground component blocks around the basement building block to give it's surfaces ground adjacency.


Note this step could be avoided by moving the whole building down so that the basement is fully below ground. To do this go to building level, select all the blocks, select the move command, click on one of the bottom corners of the middle block to create a reference point then click on a blank part of the screen to move the reference point down to $z=0$.

Step 3

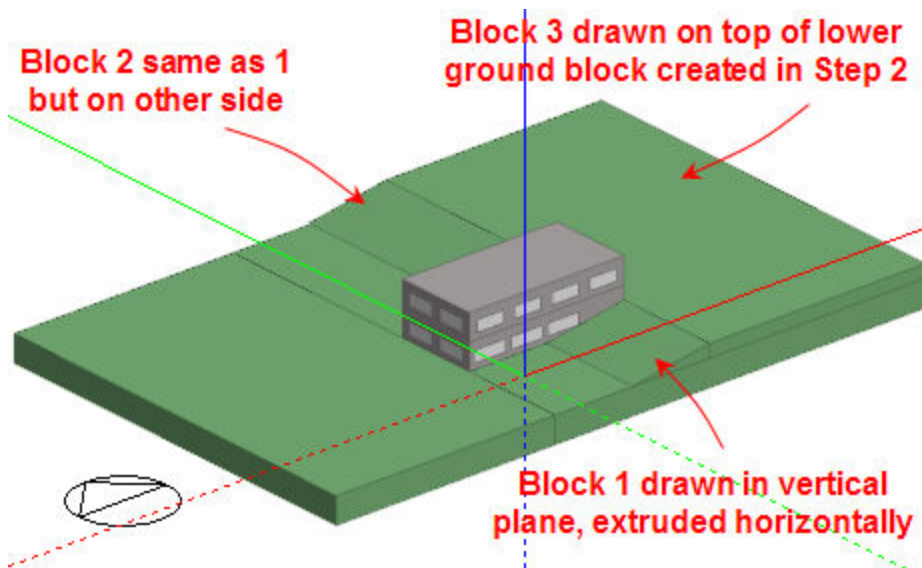

Draw three new [ground component blocks](#) to create the sloping ground and the upper ground levels.

Step 4

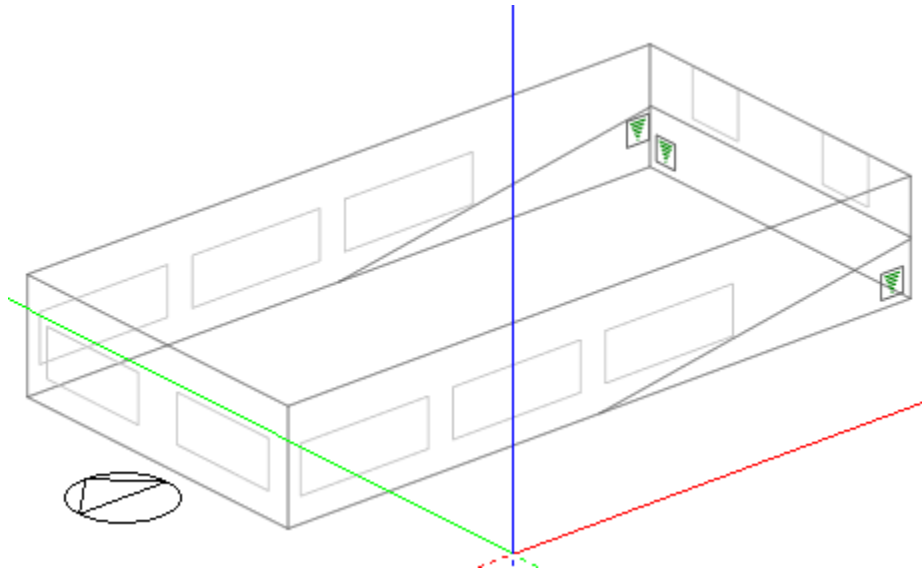


The zone of the middle block is shown above. Notice how 3 of the surfaces have been split into external and ground adjacencies (ground adjacencies are flagged by green ground symbols). Note also that the portions of the surfaces touching the ground component block cannot have windows but DesignBuilder attempts to set up the correct % glazing for the remaining external parts of the surface.

Step 5

The ground component blocks probably do not need to shade this model as they are mainly below all surfaces that can receive solar radiation/light, but if you are modelling reflections you will probably need to include the reflection of solar radiation and light from the ground blocks during simulations. In other cases you may prefer to switch off the generation of the component blocks shading/reflection surfaces to speed simulations. Do this on the Constructions model data tab under [Component Block](#).

Step 6

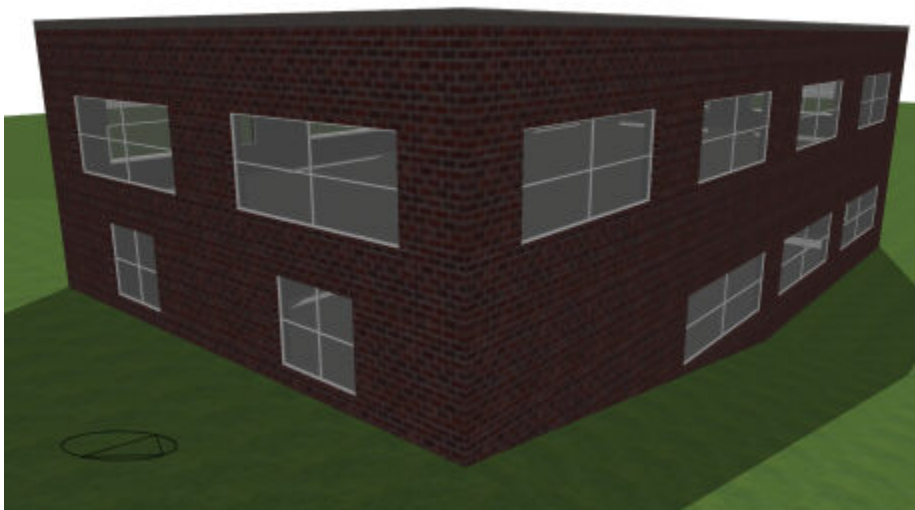

The finished model. The texture of Ground component blocks is defined by the [material](#) set under Component blocks on the Constructions tab.

3-D Modelling Using the EnergyPlus Slab Preprocessor (Advanced)

To accurately model long-term ground thermal storage you may wish to consider using an external 2 or 3-D conduction tool such as the 'Slab' utility supplied with EnergyPlus. This can be used to calculate the temperatures applied to the underside of the ground floor surface elements.

The EnergyPlus slab program produces temperature profiles for the outside surface at the core and at the perimeter of the slab. It also produces the average based on the perimeter and core areas used in the calculation. EnergyPlus has a single GroundTemperatures object that is used for twelve monthly average ground temperature values - see the Input Output Reference document. Because of this, there are two options for dealing with the ground temperatures:

1. Use the average temperatures produced by the slab program for the GroundTemperatures object. This will provide an average ground temperature at the outside face of any heat transfer surface whose OutsideFaceEnvironment field is 'ground'.
2. If two or more ground temperature conditions are desired, it is necessary to utilize the ground temperature modification feature of other side coefficients (OtherSideCoef field in OutsideFaceEnvironment). Then, for example, if core and perimeter temperatures are wanted, the perimeter temperatures from the slab program should be specified in the GroundTemperatures object, and the surface associated with that condition is treated as in Option 1 above. The surface that is to be exposed to the core temperature should be given the OtherSideCoef designation, and the OtherSideCoefficients object should be used to specify the temperatures. To do this, all of the numerical fields in this object should be zero except field N5. This field should contain the ratio of the average annual core temperatures and average annual perimeter temperatures. In other words, the resulting core profile values will be N5 times the perimeter values. This same procedure can be used to generate as many profiles as needed. However, it should be noted that they will all have the same profile as the GroundTemperatures object values.

Detailed ground modelling may only give a marginal difference in results and you might want to carry out a sensitivity study to check the influence of ground temperatures on simulation results before deciding on the most appropriate level of detail.

DesignBuilder version 1 does not account for 2-D and 3-D thermal bridging effects but future versions will.

12.5 Adjacent Buildings

Adjacent buildings (i.e. other buildings that are touching the modelled building) usually modify the boundary conditions relative to external and also provide shade.

There is no explicit way in DesignBuilder 1.2 to model temperatures and heat flows in 2 buildings simultaneously and account for energy transfer between them. Future versions may allow this, but in the meantime there are two options:

1. Model the adjacent building using [component blocks](#) (for shading/reflection) and [adiabatic surfaces](#) between the buildings. This is the usual way to treat an adjacent building not requiring full simulation and is accurate if the temperature of the adjacent and actual buildings are similar or if there is insulation between the two buildings.
2. If the adjacent building does require simulation then model it as part of the actual building and separate simulation results at the end.

You can set [adiabatic adjacent condition](#) data under Constructions on the Constructions tab at surface

level.

Merging buildings

Where two separate buildings have been created inadvertently, the blocks of one building can be transferred to the other building using the [Transfer blocks](#) command from the Edit menu.

Airflow

If there is airflow between the two buildings and the adjacent building is at the same temperature as the modelled building then you could probably ignore its effect. To model the effect of the airflow through an opening between buildings in detail you should model both buildings as one DB building using the [Calculated](#) natural ventilation model option. If you do it this way and the adjacent building uses energy you must separate results for the two buildings at the end. You can use different boiler and chiller fuels to differentiate fuel consumption between the two buildings.

If you use the [Simple](#) natural ventilation instead of Calculated, DesignBuilder uses an assumed mixing of air between the two buildings based on 'flow per opening area' as set on the Model options dialog on the Advanced tab under [Natural Ventilation](#).

12.6 Electrochromic Glazing


Electrochromic windows are part of a new generation of technologies called switchable glazing-or 'smart' windows. Switchable glazing can change the light transmittance, transparency, or shading of windows in response to an environmental signal such as sunlight, temperature or an electrical control. Electrochromic windows change from transparent to tinted by applying an electrical current. Potential uses for electrochromic technology include daylighting control, glare control, solar heat control, and fading protection in windows and skylights. By automatically controlling the amount of light and solar energy that can pass through the window, electrochromic windows can help save energy in buildings.

A variety of electrochromic technologies and media have been developed. One type is darkened by applying a small electrical voltage to the windows and lightened by reversing the voltage. Light transmittance during operation varies from five to 80 percent. Once the change in tint has been initiated, the electrochromic glazing has 'memory' and does not need constant voltage to maintain the tinting. Further, the film can be tuned to block certain wavelengths, such as infrared (heat) energy.

Another switchable technology, the liquid crystal suspended particle device (SPD), contains molecular particles suspended in a solution between plates of glass. In their natural state, the particles move randomly and collide, blocking the direct passage of light. When energized, the particles align rapidly and the glazing becomes transparent. This type of switchable glazing can block up to about 90 percent of light.

You can easily model electrochromic glazing in DesignBuilder using the Window shading data and defining the properties of the outer Window Pane to be used when the shading is active. The procedure is:

1. Specify the glazing type to be used when the electrochromic glazing system is clear (bleached) in the standard way on the Openings tab under External glazing.
2. Under External Glazing and Shading headers, check the 'Window shading' option.
3. Select the Type as 'Electrochromic absorptive 6mm' (for example).
4. Select the Position as 4-Switchable.
5. The Shading Type defines the properties of the pane which is to be used in place of the standard outer glazing pane according to the control data in the Control type.
6. Set the Control type together with any supplementary setpoint data.

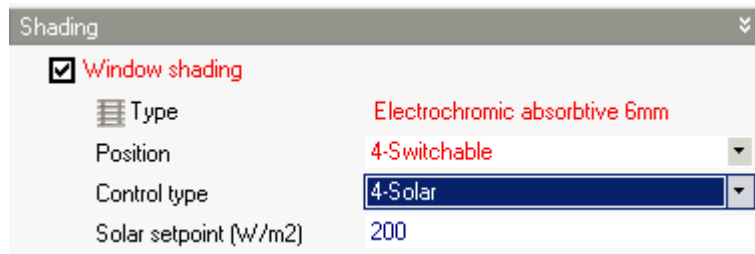

A model using the data in the above screenshot would enter its' darkened state whenever the solar radiation incident on the outside of the window is greater than 200 W/m2..

12.7 Trombe Walls

Trombe walls are passive solar devices designed for thermal storage and delivery. A Trombe wall consists of a thick wall (150mm to 300mm) [8" to 16"] faced with a selective surface solar absorber, air gap, and high transmissivity glass pane. Trombe walls are usually South facing (in the Northern Hemisphere) for maximum sun exposure. An overhang above the wall is used to decrease exposure in the summer when the sun is high in the sky and heating is not required, yet still allows for full exposure in the winter when the sun is low in the sky and heating is desirable. In DesignBuilder, there is no Trombe wall object per se; rather, it is composed of other standard building components. This approach provides flexibility in specifying the various wall parameters and allows the freedom to explore unusual configurations.

To simulate the Trombe wall, a very narrow zone is coupled to the desired surface via an interzone partition. The depth of the zone corresponds to the size of the air space usually 18mm to 150mm ($\frac{3}{4}$ " to 6"). In most cases the Trombe zone will be a sealed zone with no ventilation. The exterior wall of the Trombe zone contains a single or double-pane window. Optimally, the window covers nearly all of the wall area and has a very high transmissivity to allow the maximum amount of solar flux into the Trombe zone. Frames and dividers can be defined as usual for the window. The interior wall is usually constructed of very thick masonry materials with a solar absorber surface as the innermost layer of the wall. The absorber is a selective surface material with very high absorptivity and very low emissivity, e.g. copper with a special black surface treatment. It is important to make sure the [Solar Distribution](#) is set to **3-Full Interior and Exterior** so that the majority of the solar flux is directed on the absorber surface and not just on the very small area of the Trombe zone floor.

The [Zone type](#) on the [Activity tab](#) should be set to **3-Cavity** and this causes the following changes to be made to the model:

- The zone is set as unoccupied by loading **<None>** Activity, HVAC and Lighting template data.
- Suspended floors and ceilings are switched off when using [Separate](#) constructions.
- The **5-Cavity** [Internal convection algorithm](#) is set for Cooling design, Heating design and simulation calculations to correctly model the air space.
- The **3-Full interior and exterior** [Solar distribution algorithm](#) is set for Cooling design and simulation calculations because it allows solar radiation to be accurately distributed onto zone internal surfaces. The default option **2-Full exterior** assumes all solar radiation falls on floor which is not good for modelling solar absorption by a Trombe wall.

Finally, an [overhang](#) should be attached to the Trombe zone to control the amount of seasonal sun exposure. There is considerable freedom to experiment with different materials, sizes, and configurations.

Passive Trombe wall

Passive Trombe walls perform without the assistance of any additional mechanical equipment. Most

Trombe walls are passive Trombe walls. They can be either sealed or naturally ventilated. For a sealed or unvented Trombe wall, the Zone Inside Convection Algorithm should be set to **5-Cavity**. This algorithm correctly calculates the convection coefficients for a narrow sealed vertical cavity based on the ISO 15099 standard.

The EnergyPlus modeling approach for the sealed passive Trombe wall has been validated with experimental data (Ellis 2003). For a naturally ventilated Trombe wall, there is no built-in algorithm for calculating the correct convection coefficients on the inside of the cavity walls. One option is to use the **1-Detailed Inside convection algorithm**. This algorithm takes into account some natural convection effects but is intended for a normal sized room.

You can define holes and vents through the Trombe wall by [drawing them on at surface level](#). Vent openings can be [scheduled](#) and controlled by [internal temperature](#).

Mechanically ventilated Trombe wall

You can also model mechanically ventilated Trombe walls by using Compact HVAC and specifying the Trombe wall cavity zone as a plenum zone.

12.8 Autosizing Heating and Cooling Equipment

The [Heating Capacity](#) and [Cooling Capacity](#) Model Data is found on the [HVAC tab](#) at zone level.

If the [Plant sizing](#) building model option is set to **4-Autosize when not set** these heating and cooling capacities can be automatically calculated by the software.

Note: if you change heating or cooling capacities by hand you should be aware that the data will be overwritten if [Model Options](#) change.

To keep the heating and cooling capacities fixed, change the [Plant sizing](#) model option to **2-Manual**. You may choose to use this option if you are already satisfied with the autosized capacities and wish to keep them as they are regardless of future changes to the model.

COMPACT HVAC AUTOSIZING

Winter and summer design day simulations are automatically carried out as required for autosizing heating and cooling equipment prior to a Compact HVAC simulation. There are some considerations you should be aware of regarding autosizing.

1. Internal gains should normally be excluded from Winter design day calculations.
2. You therefore shouldn't use the same schedule for equipment, occupancy and HVAC operation because equipment and occupancy should be off for heating autosizing and HVAC should be on.
3. [Typical workday](#) gives the easiest route to defining autosizing operation - the appropriate Winter Design Day schedule data settings are used.
4. Summer design day schedules are normally the same as the general ones so are easier to deal with.
5. If you are using [Compact schedules](#) then you should ensure that a specific line of WinterDesignDay data is included for all schedule periods.
6. If you are using [7/12 Schedules](#) then there are 2 options: **End-use defaults** and **Profiles**.
7. You can include intermittent operation by using a time-varying Heating demand or HVAC schedule. This would normally provide heating equipment sizes with higher capacity than a steady-state calculation where the heating is on all day.

12.9 Daylight Saving and Local Time

DesignBuilder allows you to model the effect of daylight saving time where the clocks are moved forward one hour in the summer months in most non-equatorial countries. The timing of this is handled automatically using DesignBuilders' time zones database when you load data from one of the [Location templates](#) supplied with the program.

You can set the Time zone at the Site level on the [Location tab](#):



There are however some factors you should be aware of:

- [Simulation results](#) are displayed in 'local mean time'. This means that during the summer, occupancy will appear to start 1 hour earlier in the day than it does in the winter. To help you pinpoint this, DesignBuilder prints the times when daylight saving starts and ends on the graph.
- [Visualisations](#) use local mean time when setting the position of the sun for site shading analysis. Again you should add 1 hour to the time to see shading for local time.

12.10 Mixed mode

In mixed mode buildings natural ventilation is used as the primary means of providing cooling and, when this is inadequate to provide comfort conditions, active cooling is introduced. A concise definition of a mixed mode building is:

It is a building in which occupants can open windows, and which is designed with effective passive strategies for limiting the effects of the external climate. The passively designed building is utilised to provide acceptable conditions for the majority of the year, and is supplemented by a mechanical system, either on an 'as and when required' basis, or on a seasonal basis.

Source: Cooper, V.A., "Occupancy Comfort and Energy Consumption in Naturally Ventilated and Mixed Mode Office Buildings", PhD thesis, UMIST, 1998

"Mixed-mode" refers to a hybrid approach to space conditioning that uses a combination of natural ventilation from operable windows (either manually or automatically controlled), and mechanical systems that include air distribution equipment and refrigeration equipment for cooling. A well-designed mixed-mode building begins with intelligent facade design to minimize cooling loads. It then integrates the use of air-conditioning when and where it is necessary, with the use of natural ventilation whenever it is feasible or desirable, to maximize comfort while avoiding the significant energy use and operating costs of year-round air conditioning.

Source: [Mixed mode page](#) on Center for Built Environment website, contains background, case studies and a database of 150 mixed buildings.

Some useful background documents on mixed mode design and simulation:

1. www.cbe.berkeley.edu/mixedmode
2. www.ibpsa.org/proceedings/BS1999/BS99_D-07.pdf

When modelling mixed mode systems in DesignBuilder you should ideally use [Compact HVAC](#) to avoid the limitations explained below of Simple HVAC. You may also want to use [Calculated](#) natural ventilation to calculate natural ventilation air and heat flows based on window opening, stack and wind driven flows etc.

The steps to setting up a mixed mode model are:

1. Include active cooling and natural ventilation by switching on the '[Natural ventilation on](#)' and '[Cooling on](#)' options on the HVAC tab.
2. Also, include mechanical ventilation if there is outside air introduced through the HVAC system.
3. Ensure that the [setpoints](#) for natural ventilation and cooling operation are correct. Generally the natural ventilation (window/vent opening) setpoint should be lower than the cooling setpoint to ensure maximum use of natural ventilation and to avoid the active cooling system being used unnecessarily. There is currently no way to link the natural ventilation and cooling systems (see limitations below).

Limitations

DesignBuilder uses the EnergyPlus zone ventilation object for modelling natural ventilation (when using [Scheduled](#) natural ventilation) and mechanical ventilation (when using [Simple](#) HVAC). Only one ventilation object can be included per zone in EnergyPlus so if your model uses Scheduled natural ventilation and Simple HVAC you will get an error message like:

Building 1 - Mechanical ventilation and Natural ventilation in same zone not allowed with Simple HVAC + Scheduled natural ventilation

This message will also be generated for Cooling design calculations when mechanical and natural ventilation are selected even if you have selected Calculated natural ventilation or Compact HVAC because Scheduled natural ventilation and Simple HVAC are used by default in Design calculations.

There are various workarounds:

1. If the problem is occurring in Cooling design calculations, it is possible to select one of the [Compact HVAC cooling design](#) sizing methods to use detailed modelling of mechanical ventilation instead of the simple Ventilation object. This allows mechanical ventilation in combination with [Scheduled](#) natural ventilation.
2. Again for Cooling design calculations you can put all of the ventilation in either natural or mechanical category to avoid having both switched on at the same time. Once you have sized your system switch the [HVAC sizing option](#) to **Manual** to avoid carrying sizing calculations before every simulation.
3. Use [Calculated](#) natural ventilation or [Compact](#) HVAC for simulations.

Note 1: The problem does not arise in Heating design calculations because natural ventilation is not included in Heating Design calculations.

Note 2: In current versions of DesignBuilder it is not possible to couple the natural ventilation and cooling systems so that windows shut when the cooling switches on but this should be possible in the future.

12.11 Double Facades

Background

A ventilated double facade can be defined as a traditional single facade doubled inside or outside by a

second, essentially glazed facade. Each of these two facades is commonly called a skin . A ventilated cavity - having a width which can range from several centimetres at the narrowest to several metres for the widest accessible cavities - is located between these two skins. There exist facade concepts where the ventilation of the cavity is controllable, by fans and/or openings, and other facade concepts where this ventilation is not controllable . The indoor and outdoor skins are not necessarily airtight (see, for example, the "louvre" type facades). Automated equipment, such as shading devices, motorised openings or fans, are most often integrated into the facade. The main difference between a ventilated double facade and an airtight multiple glazing, whether or not integrating a shading device in the cavity separating the panes, lies in the intentional and possibly controlled ventilation of the cavity of the double facade.

The standard prEN 13119, specifies the terminology associated with curtain walls and of a double-skin facade. These are defined as:

Curtain walling	External building facade produced with framing made mainly of metal, timber or PVC-U, usually consisting of vertical and horizontal structural members, connected together and anchored to the supporting structure of the building, which provides, by itself or in conjunction with the building construction, all the normal functions of an external wall, but does not contribute to the load bearing characteristics of the building structure.
Double-Skin Facade	A curtain wall construction comprising an outer skin of glass and an inner wall constructed as a curtain wall that together with the outer skin provide the full function of a wall.

This definition includes only references to the constructive and structural aspects of the facade. No reference is made to the ventilation of the cavity. Thus formally, the term "double-skin facade" does not designate a ventilated double facade. It is for this reason that the term 'Ventilated Double-Skin Facade' is proposed as the generic term to designate these facades.

Double facades can be categorised according to the type of ventilation.

Type of ventilation	Name of the facade concept
Natural	Passive facade
Mechanical	Active facade
Hybrid	Interactive facade

This table contains the commonly used names referring (only) to the type of ventilation and thus giving no indication about the partitioning of the facade or the ventilation modes. In the literature, the double facades adopting the *air supply* ventilation mode are called *airflow window* or also *ventilated window*. The facades adopting the air exhaust ventilation mode are also called *extract air* or *exhaust airflow*.

Modelling Considerations

There are some important considerations when using DesignBuilder to model double facades.

1. If you are using a zone to model the cavity in the double facade then the inner glazing is 'interior' and so requires the [Full interior and exterior](#) solar distribution option to get solar radiation to pass through exterior and then through interior windows. You should read the information about the restrictions associated with this option before using it.
2. Take care when comparing the exterior solar radiation transmitted into the double facade zone with the interior solar radiation transmitted into the occupied zone. These do not include the re-reflection of solar back out of the external windows. Read the [definitions](#) for the output data.

3. It is possible to set the double facade zone as a return plenum.

To be extended...

Source of background information:

http://www.bbri.be/activefacades/new/content/1_home/en.html

12.12 Solar Radiation Distribution

This topic summarises the methods used in calculation of solar radiation in EnergyPlus.

Sky Radiance Model

In EnergyPlus the calculation of diffuse solar radiation from the sky incident on an exterior surface takes into account the anisotropic (non-uniform) radiance distribution of the sky. For this distribution, the diffuse sky irradiance on a surface is given by:


$$AnisoSkyMult * DifSolarRad$$

where:

DifSolarRad is the diffuse solar irradiance from the sky on the ground and *AnisoSkyMult* is determined by surface orientation and sky radiance distribution, and accounts for the effects of shading of sky diffuse radiation by shadowing surfaces such as overhangs. It does not account for reflection of sky diffuse radiation from shadowing surfaces.

The sky radiance distribution is based on an empirical model based on radiance measurements of real skies, as described in Perez et al., 1990. In this model the radiance of the sky is determined by three distributions that are superimposed (see Figure 33)

1. An isotropic distribution that covers the entire sky dome;
2. A circumsolar brightening centered at the position of the sun;
3. A horizon brightening.

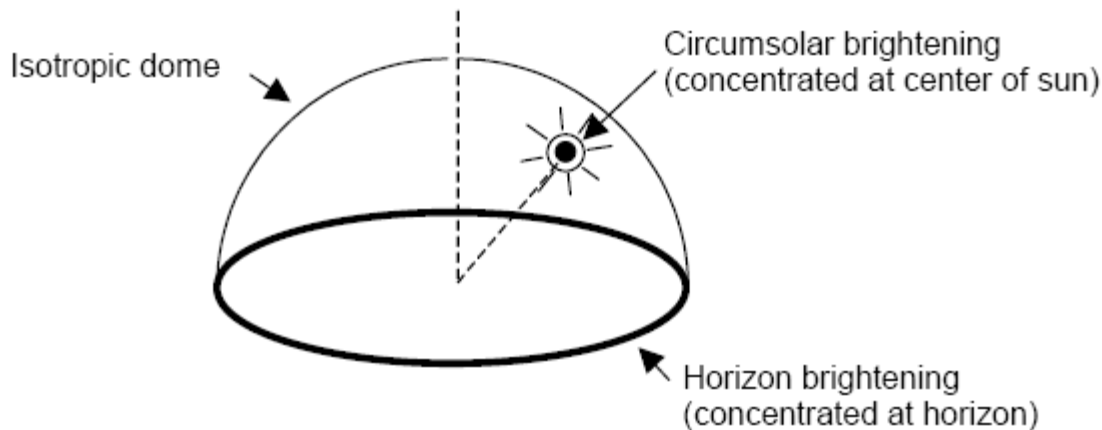

Schematic view of sky showing solar radiance distribution as a superposition of three components: dome with isotropic radiance, circumsolar brightening represented as a point source at the sun, and horizon brightening represented as a line source at the horizon.

The proportions of these distributions depend on the sky condition, which is characterized by two quantities, clearness factor and brightness factor, defined below, which are determined from sun position and solar quantities from the weather file.

The **circumsolar brightening** is assumed to be concentrated at a point source at the center of the sun although this region actually begins at the periphery of the solar disk and falls off in intensity with increasing angular distance from the periphery.

The **horizon brightening** is assumed to be a linear source at the horizon and to be independent of azimuth. In reality, for clear skies, the horizon brightening is highest at the horizon and decreases in intensity away from the horizon. For overcast skies the horizon brightening has a negative value since for such skies the sky radiance increases rather than decreases away from the horizon.

Shadowing of Sky Long-Wave Radiation

EnergyPlus calculates the sky long-wave radiation incident on exterior surfaces assuming that the sky long-wave radiance distribution is isotropic. If obstructions such as overhangs are present the sky long-wave incident on a surface is multiplied by an isotropic shading factor. The long-wave radiation from these obstructions is added to the long-wave radiation from the ground; in this calculation both obstructions and ground are assumed to be at the outside air temperature and to have an emissivity of 0.9.

Solar Gains

The total solar gain on any exterior surface is a combination of the absorption of direct and diffuse solar radiation given by

$$Q_{so} = \alpha \cdot \left(I_b \cdot \cos \theta \cdot \frac{S_s}{S} + I_s \cdot F_{ss} + I_g \cdot F_{sg} \right)$$

where:

α = solar absorptance of the surface

A = angle of incidence of the sun's rays

S = area of the surface

S_s = sunlit area

I_b = intensity of beam (direct) radiation

I_s = intensity of sky diffuse radiation

I_g = intensity of ground reflected diffuse radiation

F_{ss} = angle factor between the surface and the sky

F_{sg} = angle factor between the surface and the ground

If the surface is shaded the program modifies F_{ss} by a correction factor that takes into account the radiance distribution of the sky (see "Shadowing of Sky Diffuse Solar Radiation"). Shading of ground diffuse solar radiation is not calculated by the program. It is up to the user to estimate the effect of this shading and modify the input value of F_{sg} accordingly.

SOLAR DISTRIBUTION

As discussed in the Solar Model options section, the [Solar Distribution](#) determines how EnergyPlus will treat beam solar radiation entering a zone through exterior windows. The three choices: **1-Minimal shadowing**, **2-Full exterior** and **3-Full Interior and exterior** are discussed in the [Solar options](#) topic.

EnergyPlus calculates the distribution of short-wave radiation in the interior of each thermal zone. This radiation consists of beam solar radiation, diffuse solar radiation, and short-wave radiation from electric lights. The program determines the amount of this radiation that is (1) absorbed on the inside face of opaque surfaces, (2) absorbed in the glass and shading device layers of the zone's exterior and interior windows, (3) transmitted through the zone's interior windows to adjacent zones, and (4) transmitted back out of the exterior windows. The effects of movable shading devices on the exterior windows are taken into account.

Initial Distribution of Diffuse Solar Transmitted through Exterior and Interior Windows

As of Version 2.1 the treatment of diffuse solar transmitted first through exterior windows and subsequently through interior windows has been improved. Diffuse solar (from sky and ground sources) transmitted through exterior windows is first distributed to the interior heat transfer surfaces in the zone containing the exterior windows. This initial distribution apportions the transmitted diffuse solar to interior surfaces using the approximate view factors described above in "LW Radiation Exchange Among Zone Surfaces." The amount of this initially distributed diffuse solar absorbed by each interior surface, and each window material layer, is calculated and later added to the "short-wave radiation absorbed" values described below. The amount of this initially distributed diffuse solar that is reflected is accumulated for each zone and redistributed uniformly to the other surfaces. The amount of this initially distributed diffuse solar that is transmitted by interior windows to adjacent zones is initially distributed to the interior heat transfer surfaces in the adjacent zone in the same manner as just described.

This new treatment of diffuse solar is intended to more accurately account for the initial absorption, transmittance, and reflection of short-wave radiation prior to the uniform distribution described below.

Interior Solar Radiation Absorbed by Opaque Surfaces

The short-wave radiation absorbed on the inside face of an opaque surface (floor, wall or ceiling) is given by:

Ground surface reflectance

[Ground reflectance](#) values are used to calculate the ground reflected solar amount. This fractional amount (entered monthly) is used in the following equation:

$$\text{GroundReflectedSolar} = (\text{BeamSolar} \times \text{COS}(\text{SunZenithAngle}) + \text{DiffuseSolar}) \times \text{GroundReflectance}$$

The Ground Reflected Solar is never allowed to be negative. The Snow Ground Reflectance Modifier can further modify the ground reflectance when snow is on the ground. If the user enters 0.0 for each month, no ground reflected solar is used.

Ground Reflectances (Snow)

When [snow](#) is on the ground, ground reflectances may change. The user can specify two values, [Snow reflected solar modifier](#) and [Snow reflected daylight modifier](#).

Snow reflected solar modifier

A number between 0.0 and 10.0 which is used to modify the basic ground surface reflectance when snow is on the ground. Note that the value of $\text{GroundReflectance}_{\text{Used}}$ (below) must be ≤ 1 .

$$\text{GroundReflectance}_{\text{Used}} = \text{GroundReflectance} \times \text{Modifier}_{\text{Snow}}$$

During simulations, the ground is considered to be snow-covered when the SnowDepth data in the hourly weather file is > 0 .

Snow reflected daylight modifier

A number between 0.0 and 10.0 which is used to modify the basic ground surface reflectance when snow is on the ground. Note that the value of $\text{DaylightingGroundReflectance}_{\text{Used}}$ (below) must be ≤ 1 .

$$\text{DaylightingGroundReflectance}_{\text{Used}} = \text{GroundReflectance} \times \text{Modifier}_{\text{Snow}}$$


During simulations, the ground is considered to be snow-covered when the SnowDepth data in the hourly weather file is > 0 .

Beam distribution

If the Solar Distribution option is **Minimal shadowing** or **Full exterior**, it is assumed that all beam solar from exterior windows falls on the floor. If Solar Distribution is **Full Interior and Exterior** the program tracks where beam solar from exterior windows falls inside the zone, and wall as well as floor surfaces can receive beam radiation.

Diffuse distribution

Diffuse solar transmitted through exterior and interior windows is distributed according to the approximate view factors between the transmitting window and all other heat transfer surfaces in the zone. This variable is the amount of transmitted diffuse solar that is initially absorbed on the inside of each heat transfer surface. The portion of this diffuse solar that is reflected by all surfaces in the zone is subsequently redistributed uniformly to all heat transfer surfaces in the zone, along with interior reflected beam solar and shortwave radiation from lights. The total absorbed shortwave radiation is given by the next variable.

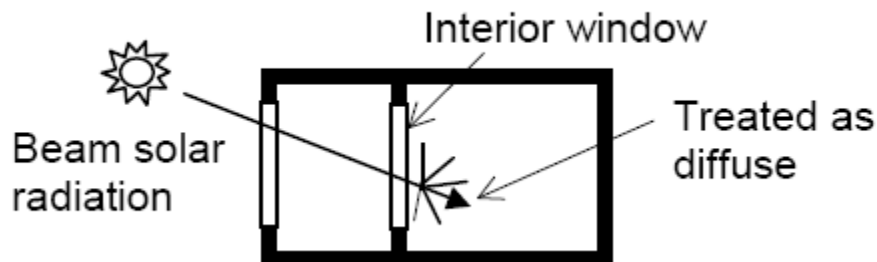

Solar radiation reflected from exterior surfaces

EnergyPlus has an [option](#) to calculate beam and sky solar radiation that is reflected from exterior surfaces and then strikes the building. For zones with detailed daylighting, these reflections are also considered in the daylight illuminance calculations. The reflecting surfaces fall into three categories:

1. **Shadowing surfaces.** These are surfaces like overhangs, component blocks or surfaces of the building. Examples are shown in [Solar Options](#). These surfaces can have diffuse and/or specular (beam-to-beam) reflectance values that are specified with the based on the [material surface properties](#).
2. **Exterior building surfaces.** In this case one section of the building reflects solar radiation onto another section (and vice-versa). See Figure 47. Opaque building surfaces (walls, for example) are assumed to be diffusely reflecting. Windows and glass doors are assumed to be specularly reflecting. The reflectance values for opaque surfaces are calculated by the program from the Absorptance:Solar and Absorptance:Visible values of the outer material layer of the surface's construction. The reflectance values for windows and glass doors are calculated by the program from the reflectance properties of the individual glass layers that make up surface's construction assuming no shading device is present and taking into account interreflections among the layers.

3. **The ground surface.** Beam solar and sky solar reflection from the ground is calculated even if the Reflections option is not used (the default). But in this case the ground plane is considered unobstructed, i.e., the shadowing of the ground by the building itself or by obstructions such as component blocks is ignored. This shadowing is taken into account only if the Reflections option is used. In this case the ground view factor calculated by DesignBuilder is not used.


See [Solar Options](#).

Diffuse reflection of beam solar and sky solar radiation

A ray-tracing method is used to calculate beam solar and sky solar radiation that is diffusely reflected onto each of a building's exterior surfaces (walls, roofs, windows and doors), called here "receiving surfaces". The calculation begins by generating a set of rays proceeding into the outward hemisphere at each receiving point on a receiving surface. Then it determines whether each ray hits the sky, ground or an obstruction. The radiance at the hit point from reflection of incident beam or sky solar is determined and the contribution of this radiance to the receiving surface is calculated, added to the contribution from other hit points, and averaged over the receiving points. Separate calculations are done for beam-to-diffuse and sky solar reflection from all obstructions and beam-to-diffuse and sky solar reflection from the ground. (For beam-to-beam reflection see [Beam solar radiation specularly reflected from obstructions](#) below.)

Rays


A total of 90 rays are sent out into the exterior hemisphere surrounding each receiving point. An upgoing ray may hit an obstruction or the sky. A downgoing ray may hit an obstruction or the ground. See diagram below.

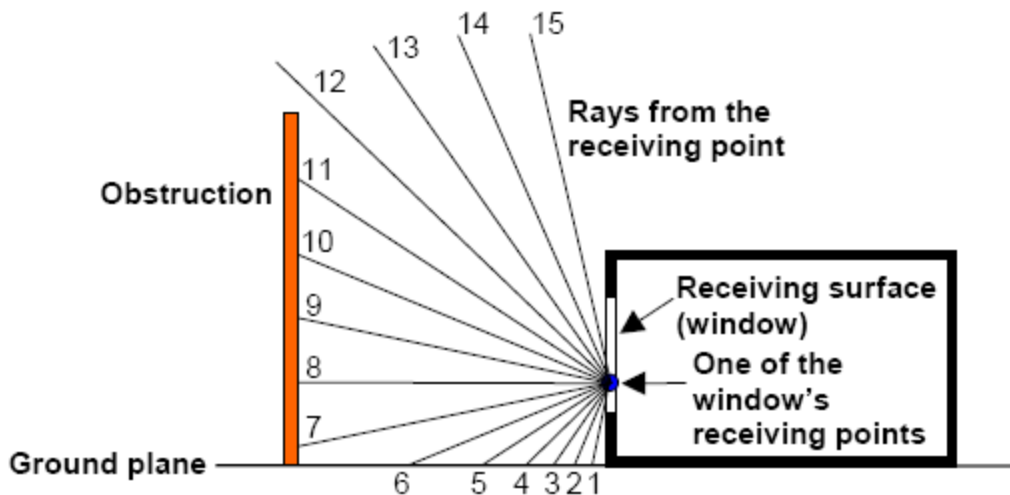

Two-dimensional schematic showing rays going outward from a point on a receiving surface. Rays 1-6 hit the ground, rays 7-11 hit an obstruction, and rays 12-15 hit the sky.

Sky Solar Radiation Diffusely Reflected from the Ground


If a downgoing ray from a receiving point hits the ground (for example, rays 1-6 in diagram below), the program calculates the radiance at the ground hit point due to sky diffuse solar reaching that point. To do this, rays are sent upward from the ground hit point and it is determined which of these rays are unobstructed and so go to the sky (for example, rays 6-10 below). For this calculation it is assumed that the radiance of the sky is uniform.

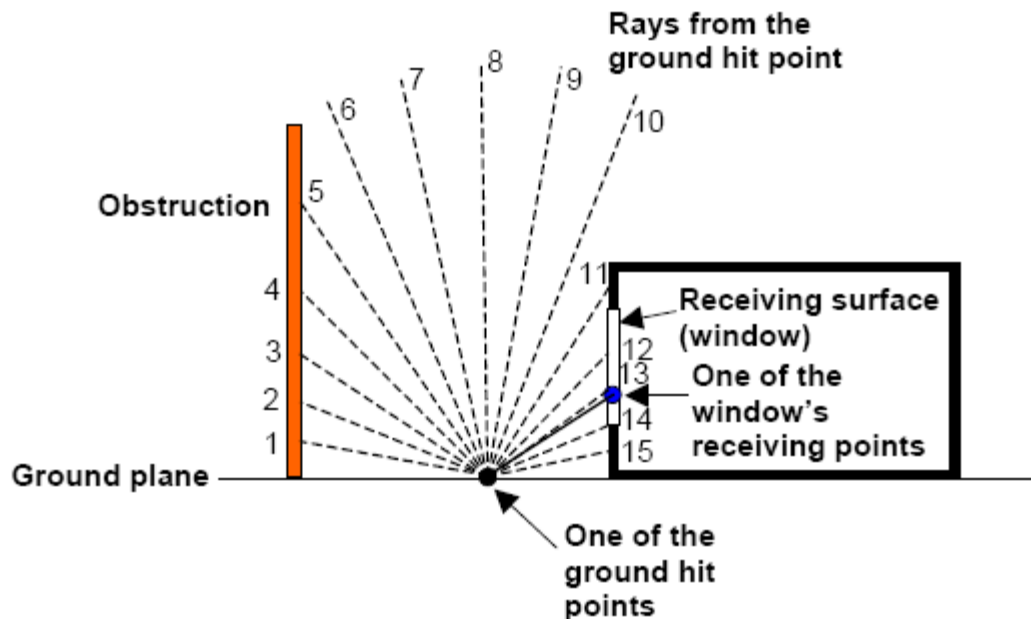

Two-dimensional schematic showing rays going upward from a ground hit point.

Beam Solar Radiation Specularly Reflected from Obstructions

The diagram below shows schematically how specular (beam-to-beam) reflection from an obstruction is calculated.

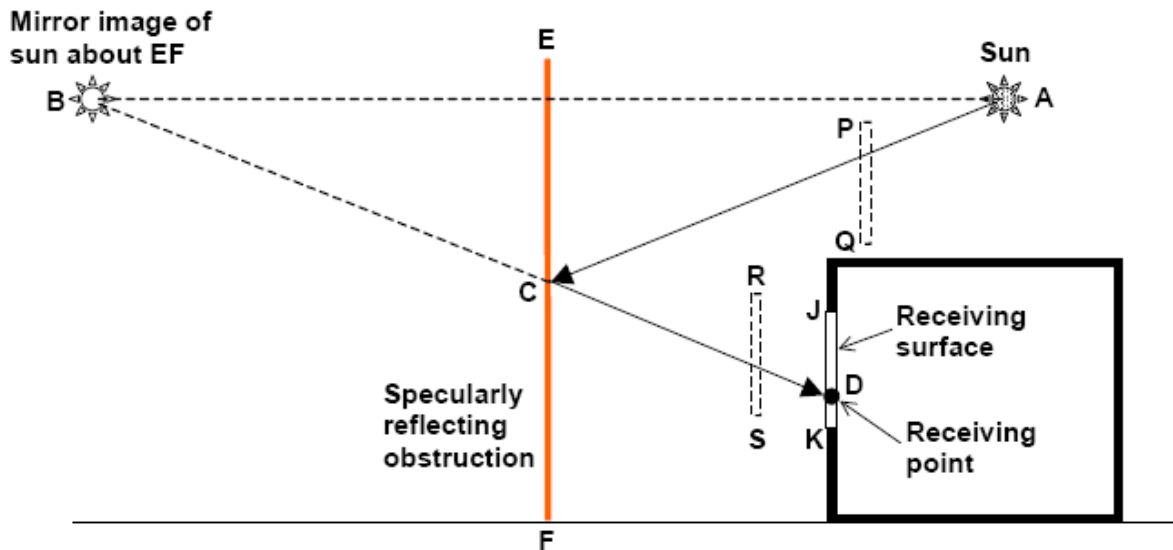

Two-dimensional schematic showing specular reflection from an obstruction such as the glazed façade of a neighboring building. The receiving point receives specularly reflected beam solar radiation if (1) DB passes through specularly reflecting surface EF, (2) CD does not hit any obstructions (such as RS), and (3) AC does not hit any obstructions (such as PQ).

More detailed information on can be found in the EnergyPlus [EngineeringReference.pdf](#) document.

Section

13

**Simulation
Hourly
Weather Data**

DesignBuilder uses EnergyPlus format hourly weather data to define external conditions during simulations. Each location has a separate file describing the external temperature, solar radiation, atmospheric conditions etc. for every hour of the year at that location.

These hourly weather data sets are often 'typical' data derived from hourly observations at a specific location by the National weather service or methodological office. Examples of these typical data include TMY2 and WYEC2 in the United States and Canada and TRY (CEC 1985) in Europe.

Because hourly weather data is not always available for every location, it is often necessary to use weather data for a nearby location which represents the weather of the actual site.

The DesignBuilder hourly weather data has been obtained from the [Weather section of the EnergyPlus website](#) and processed using the [DesignBuilder weather data translator](#), but you can use [any weather data](#) provided it is in the correct format.

EnergyPlus format hourly weather data has extension '[epw](#)' by convention.

Downloading Hourly Weather Data

DesignBuilder comes with a database of hourly weather data but the EnergyPlus epw files are not loaded onto your computer until you actually need them. This keeps the size of the DesignBuilder setup program small. The first time you require an hourly weather data file it is automatically downloaded from the DesignBuilder Website into the [Weather data folder](#) on your computer where it can be accessed by EnergyPlus for any subsequent simulations. You must be connected to the Internet to download weather data in this way.

See also:

- [Add new hourly weather data](#)
- [Edit/Translate hourly weather data](#)

13.1 Add new hourly weather data

To add your own hourly weather data follow the steps below:

1. Copy the EnergyPlus format hourly weather data epw file to the [weather data folder](#) (File > Folders > Weather data).
2. From the Opening screen click on the Templates tab
3. Click on the + to the left of Hourly weather data to open up the list of countries.
4. Select the country of the location (or the location within the country).
5. Add a new Hourly weather data set by clicking on the green + in the Toolbar.
6. Enter information on the Hourly weather data and select the file. Note that the hourly weather data details are automatically loaded from the [.stat and .epw files](#) when you select the file.

Tip: steps 2-5 above can be accomplished in one step if you have [Learning mode](#) switched on. Go to the Locations tab at site level and look for the **Add hourly weather data** link under the **Hourly weather data** header. You can also find a link to show the weather data folder in Windows Explorer.


You will now be able to select this hourly weather data set from the Location tab at site level.

[Starting with version 1.3, any custom hourly weather epw file you select in your model will be saved with](#)


the model so that it can be used on other computers.

Although DesignBuilder can be used with any valid epw data sets, you are strongly advised to [process the data](#) first to ensure that each hourly record has year 2002. This ensures that daily, hourly and sub-hourly data generated by EnergyPlus is correctly synchronised with the DesignBuilder graphics display. If you do not set the year to 2002 it will not affect the results but it will affect the day of the week display in DesignBuilder.

Note: If you do not set the year to 2002, daily, hourly and sub-hourly data will not necessarily show the correct day of the week in the results display graphics.

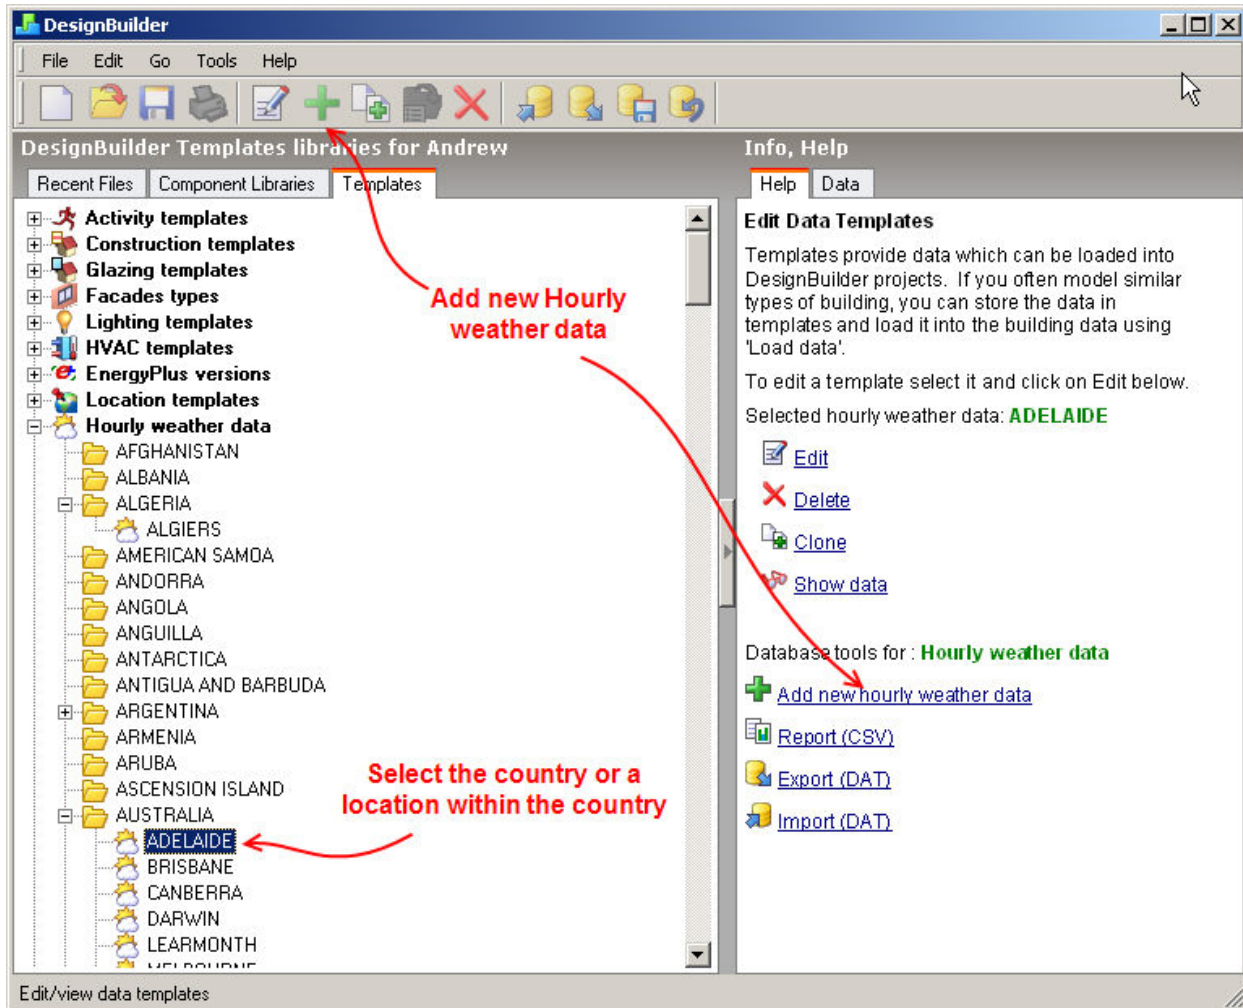

In the Hourly weather data, enter the details of the location and select the EnergyPlus [epw](#) filename as shown below.

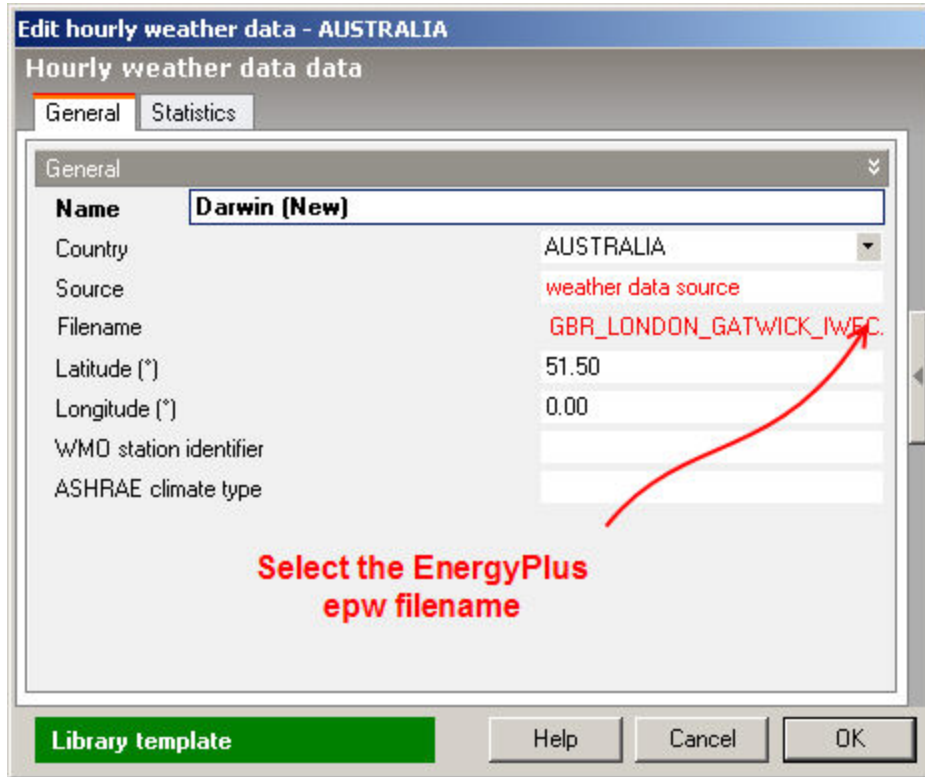

Selecting the epw file automatically loads all other required location and general weather statistics to the Hourly weather data dialog if a corresponding [stat](#) file exists in the same folder as the [epw](#) file. The [stat](#) file is automatically generated by the [Hourly weather data translation](#) process.

When you press enter you will be able to select this new Hourly weather data set from the [Location tab](#) at site level.

Data format

The epw weather data format is described on the [Weather data section](#) of the EnergyPlus website.

13.2 Edit/Translate hourly weather data

You can use the Edit/Translate Hourly Weather Data dialog to process [hourly weather data](#). You may wish to do this for various reasons:

- Convert EnergyPlus epw data to be compatible with DesignBuilder day of week results for daily, hourly and sub-hourly output (set the year to 2002).
- Translate weather data in other formats to the EnergyPlus format so that it can be used in DesignBuilder.
- Generating modified weather data sets for investigating climate change scenarios.

Translating

Use this dialog to convert weather data to and from a range of file formats. Supported formats are:

EnergyPlus data files (.epw)

EnergyPlus 'comma separated values' files (.csv)
TMY2 data files (.tmy2 or tm2)
TMY data files (.tmy)
IWECC data files (.iwecc or iwc)
Samson data files (.samson or dat)
WYEC2 data files (.wyec2 or wy2)
DOE-2 formatted data files (.fmt or txt)
ESP-r formatted data files (.esp-r or clm)
BLAST ASCII formatted data files (.blast or asc)

Required extensions are shown in brackets. To edit/convert a file or files:

1. Select the folder containing the file(s) using the browse box at the top of the left-hand side of the screen. All relevant weather data files are then loaded into the table on the left.
2. Check the files to be converted.
3. Ensure that the correct options have been set on the Options tab.
4. Press the Convert button to start the process.

Converted files are stored in the [Weather data folder](#). You can access these files by clicking on the 'Edit/Review' tab.

Section

14

Reference

Reference help:

- [DesignBuilder files, locations and extensions](#)
- [Licensing and activation](#)
- [Hardware requirements](#)
- [Surface Types](#)
- [Calculation of Air Density](#)
- [Pitched Roof Geometry - Technical Description](#)
- [Triangulation](#)
- [Calculation of HVAC Energy Consumption](#)

14.1 DesignBuilder Files, Location and Extensions

Filename/ Extension	Folder	Description
.dsb	DesignBuilder Data folder (default)	DesignBuilder model description file. Note that dsb files are already compressed so don't need to be 'zipped' before sending in emails.
.ddf		DesignBuilder exported component/template data
.dat	Library folder	Construction and Template exported files.
.idf	EnergyPlus folder	EnergyPlus input script file .
.stat	Weather data folder	EnergyPlus hourly weather data statistics file used by DesignBuilder to automatically load location and weather statistics to the Hourly weather data dialog when the epw file is selected. stat files are supplied with DesignBuilder and are automatically generated by the Hourly weather data translation process when creating custom weather data.
.epw	Weather data folder	EnergyPlus hourly weather data . a database of hourly weather data is supplied by automatic download or you can create your own hourly weather data .
Energy+. idd	EnergyPlus folder	EnergyPlus data definition dictionary (see EnergyPlus documentation for information on this).
Eplusout. err	EnergyPlus folder	EnergyPlus error message file .
Eplusout. eso	EnergyPlus folder	Standard eso Output File - contains detailed results to be read in by DesignBuilder.
Eplusout. eio	EnergyPlus folder	EnergyPlus model summary configuration output file. Note there is a free utility called xESOVView that can be used to quickly view EnergyPlus eso output files. Download it from: http://sourceforge.net/projects/xesoview .
Eplusout. rdd	EnergyPlus folder	Report Variable Data Dictionary - list all possible EnergyPlus output reports for a particular idf input file.
Eplusout. bnd	EnergyPlus folder	HVAC layout summary file - shows details about the branches, nodes, and other elements of the flow connections. It is intended for use in

Eplusout.dxf	EnergyPlus folder	debugging potential problems and supports the EnergyPlus diagramming tool. DXF file (from Report,Surfaces,DXF;)
Eplusout.mtr	EnergyPlus folder	Similar to .eso but only has Report Meter outputs.
Eplusout.end	EnergyPlus folder	A one line summary of success or failure used by DesignBuilder to indicate whether the simulation was successful or not.
Eplusout.dbg	EnergyPlus folder	From Debug Output object – may be useful to support to help track down problems.
Eplusout.csv	EnergyPlus folder	Not directly from EnergyPlus - produced by EnergyPlus utility program that reads the .eso file and produces output files for spreadsheet programs.

Folders


Folder	Typical Location*	Use
DesignBuilder Data	My Documents\DesignBuilder Data	Storing DesignBuilder dsb data files.
EnergyPlus	C:\Documents and Settings\ User \LocalSettings\Application Data\DesignBuilder\EnergyPlus	Storing files related to EnergyPlus simulations.
Library data	C:\Documents and Settings\ User \LocalSettings\Application Data\DesignBuilder\Data	Library data and .dat files currently being used by DesignBuilder
Library data	C:\Documents and Settings\ User \LocalSettings\Application Data\DesignBuilder\Data	Library data including backups and .dat files.
Template projects	C:\Documents and Settings\All Users\Application Data\DesignBuilder\Templates	DesignBuilder dsb files stored in this folder can be used as templates for future models. Click on the Templates tab on the Create New Site dialog for a list of available template files.
Weather data	C:\Documents and Settings\ User \LocalSettings\Application Data\DesignBuilder\Weather Data	EnergyPlus hourly weather data is stored in this folder. The data may have been automatically downloaded from the DesignBuilder website or it can be added manually .

* The actual names of the folders will depend on the language used on your computer and on your Windows user name. The above locations assume English as the language and Windows user name ' **User**'.

Tip: the above folders can be accessed from the **File | Folders** menu commands.

14.2 Licensing & Activation


DesignBuilder consists of a modelling Graphical User Interface (GUI) connected to a number of calculation/rendering modules. The DesignBuilder GUI can be used without a licence but you need a license for each of the modules you intend to use.

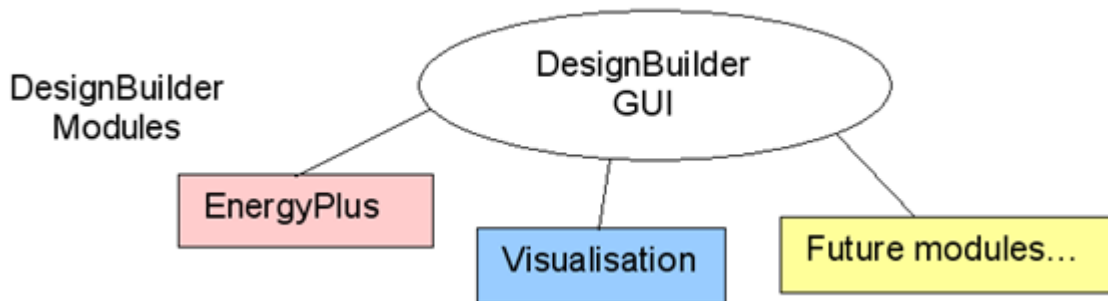

When you install DesignBuilder an evaluation license key is generated for each module. These evaluation licences are valid for 30 days from the date of installation and allow you to try out a fully functional version of the software to check that it meets your needs and is compatible with your computer. The only restriction with evaluation licences is that a 'nag screen' is displayed prior to each simulation or visualisation session.

When you buy licences to use DesignBuilder, you are sent an e-mail containing a serial number, license keys and information on when the licences expire (if ever).

You should copy (Ctrl-C) the Serial number and License keys from the e-mail you received when you bought the software and paste (Ctrl-V) directly into the License dialog (accessed from the Help menu). When you paste the license keys (one for each module) the software attempts to activate the license over the Internet, and if successful, validates the license keys and unlocks the modules.

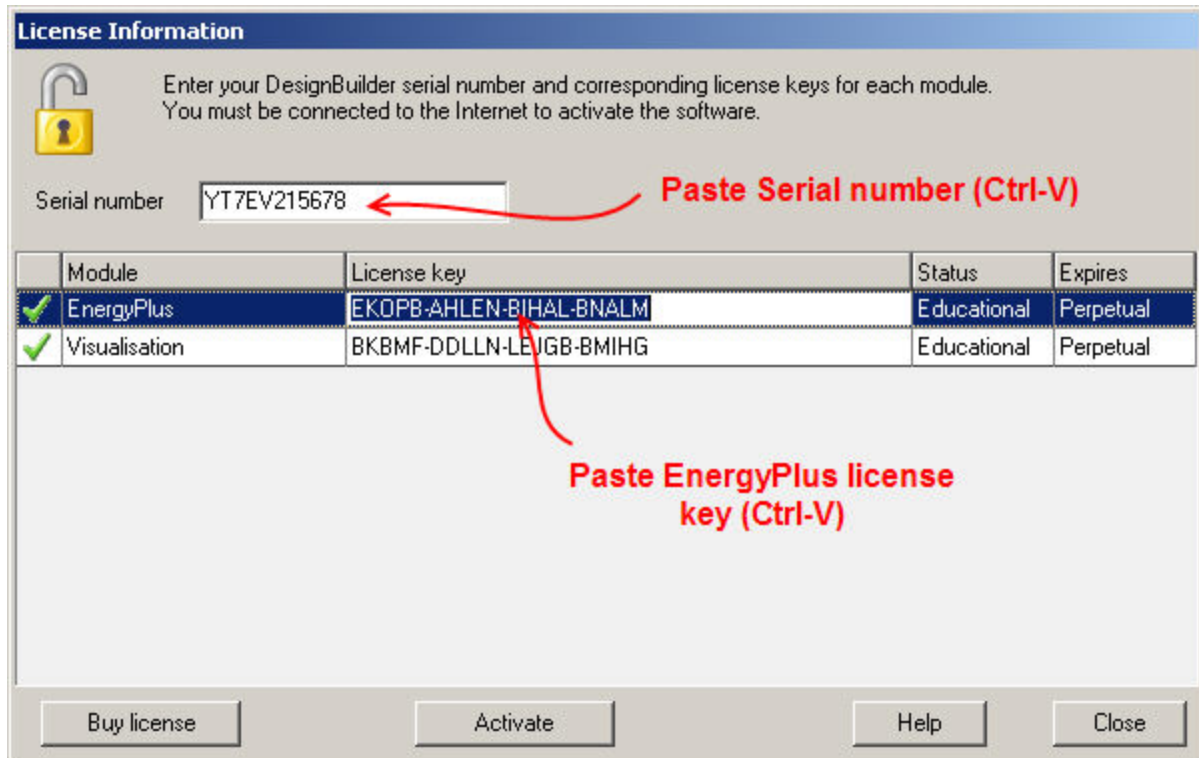

Note: You must be connected to the Internet to activate DesignBuilder license keys.



You need an EnergyPlus license to generate IDF files even if you want to simulate using an external version of EnergyPlus.

14.3 Hardware Requirements

DesignBuilder is a professional graphics application and requires a high standard of computer hardware for successful use. This page contains information on the minimum system requirements and also the recommended specification. The main areas you should pay attention to if you are buying or upgrading your computer system to run DesignBuilder are:

- **Graphics adapter** - a good 100% OpenGL compatible graphics adapter is required to run DesignBuilder. Most of the cards based on the Radeon chipset seem to work very well (provided they have the latest drivers installed) and we have had no problem with the mid-range and better NVIDIA cards. Some graphics adapters integrated with the motherboard we have tested are unable to run DesignBuilder. See also note below on Windows Vista.
- **Memory** - DesignBuilder will use all the memory you can throw at it - at least 2 GB is recommended for serious modelling or more if you are running under Windows Vista which itself uses 1 GB.
- **CPU speed** - get as fast as you can afford.
- **Cores** - having more than one processor core does not necessarily speed up simulations in

DesignBuilder version 1 but it does allow you to continue using your computer while simulations are running. Dual core processors also make the software more responsive in use.

Minimum Requirements

- Windows 2000 or XP SP2 running on
- 1000MHz processor (or faster)
- 800x600 pixel screen
- 256MB RAM
- 200MB free disk space
- Pointing device
- 100% OpenGL compatible 3D graphics adapter with hardware acceleration running in 32-bit color mode

The above specification will allow you to successfully model small buildings using DesignBuilder but we recommend a more powerful computer for best results especially when working with larger building models.

Recommended


- Windows XP SP2
- 2.4 dual core processor or faster.
- 2GB (or more) RAM
- 5GB free disk space
- Pointing device
- 100% OpenGL compatible 3D graphics adapter with hardware acceleration running in 32-bit color mode
- 1280x1024 pixels or larger screens for efficiency during the modelling process and for displaying high-quality visualisation images and walk-throughs of DesignBuilder models and CFD results. DesignBuilder works well with wide screens.

Windows Vista

DesignBuilder works under Windows Vista, but we do not currently (June 07) recommend it because a) many of the early graphics adapter drivers written for Vista have bugs and b) we have not tested it extensively ourselves. If you do plan to purchase a computer with Windows Vista installed we recommend choosing an NVIDIA graphics adapter as these, in our experience, have more reliable drivers where new operating systems are released. This is possibly because NVIDIA take OpenGL more seriously than ATI.

Graphics Card Settings

Many graphics cards allow you to customise driver settings. The example screenshot below is for an NVIDIA card showing recommended settings. Note [antialiasing](#), anisotropic filtering and unified back/depth buffer have been changed from default settings to provide **hardware accelerated** optimal visualisations. The [antialiasing](#) option provides sharp lines without slowing program operation and unified back/depth buffer gives best results for dragging selection rectangles on some graphics cards allowing [double buffering](#) to be used for cursor dynamics.

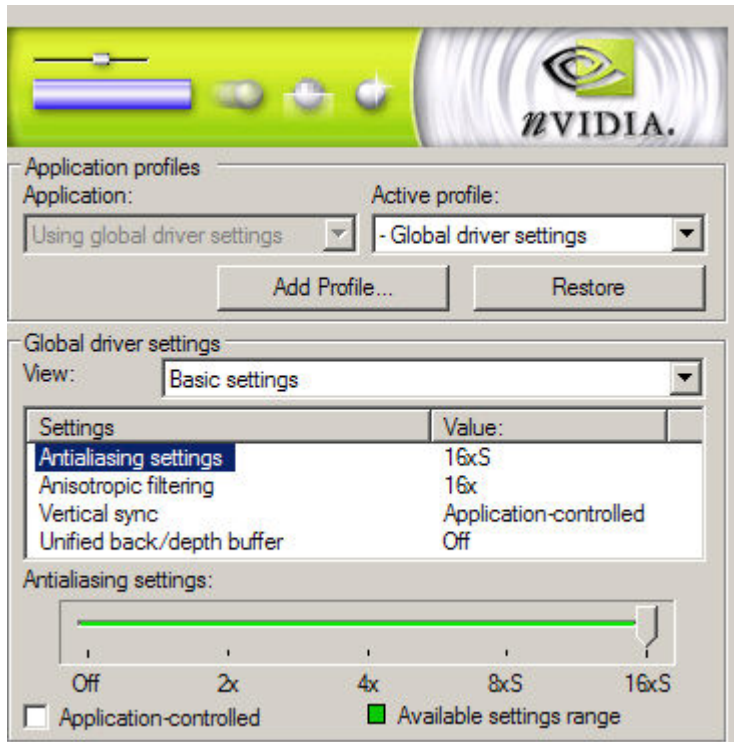

14.4 Surface Types



The meaning of most surface types listed in the Navigator should be obvious. This section provides further information on the meaning of 3 less obvious surface types:


- Inter-block partition
- Wall (with hole)
- Block link surfaces (*not generated by default*)

These special surfaces are required because DesignBuilder uses 3-D surface slabs to represent building fabric. Using 3-D surface slabs allows accurate calculation of zone volumes, definition of blocks using external dimensions and realistic rendered images. Zones for EnergyPlus simulations and other calculations provided by DesignBuilder are generated from the interior faces of the block geometry.

Cutaway of DesignBuilder Zone showing 3D-slabs


Inter-block partition

An Inter-block partition surface is the shared partition wall between 2 zones in different blocks. Inter-block partition surfaces are generated whenever 2 blocks touch along a plane. They are listed in the Navigator twice, once in each of the 2 zones in which they appear. They are however a single partition object within DesignBuilder and in the thermal calculations. So if, for example, you change the Partition construction model data for an inter-block partition (or draw windows) the change will also be reflected in the equivalent inter-block partition surface in the adjacent zone.

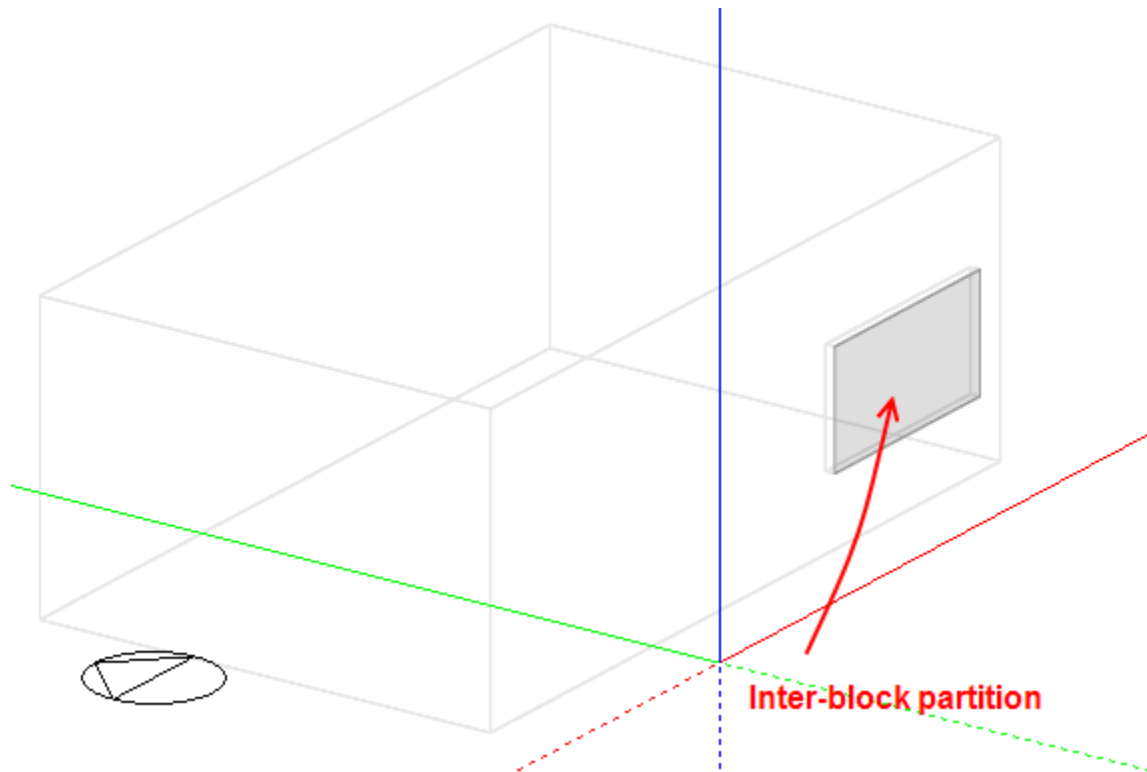


Wall (with hole)

Surfaces marked **Wall (with hole)** in the navigator are external surfaces on the same block face as an inter-block partition surface (see above). The 'hole' is where the inter-block partition goes. So 'Wall (with hole)' is the part of the block face that is adjacent to outside. The partition with the adjacent block is in a separate surface called **inter-block partition** (it is separated from the rest of the wall because it has a different adjacency). So the sum of the inter-block partition(s) and the wall with the hole make up the actual surface. The figures below illustrate.

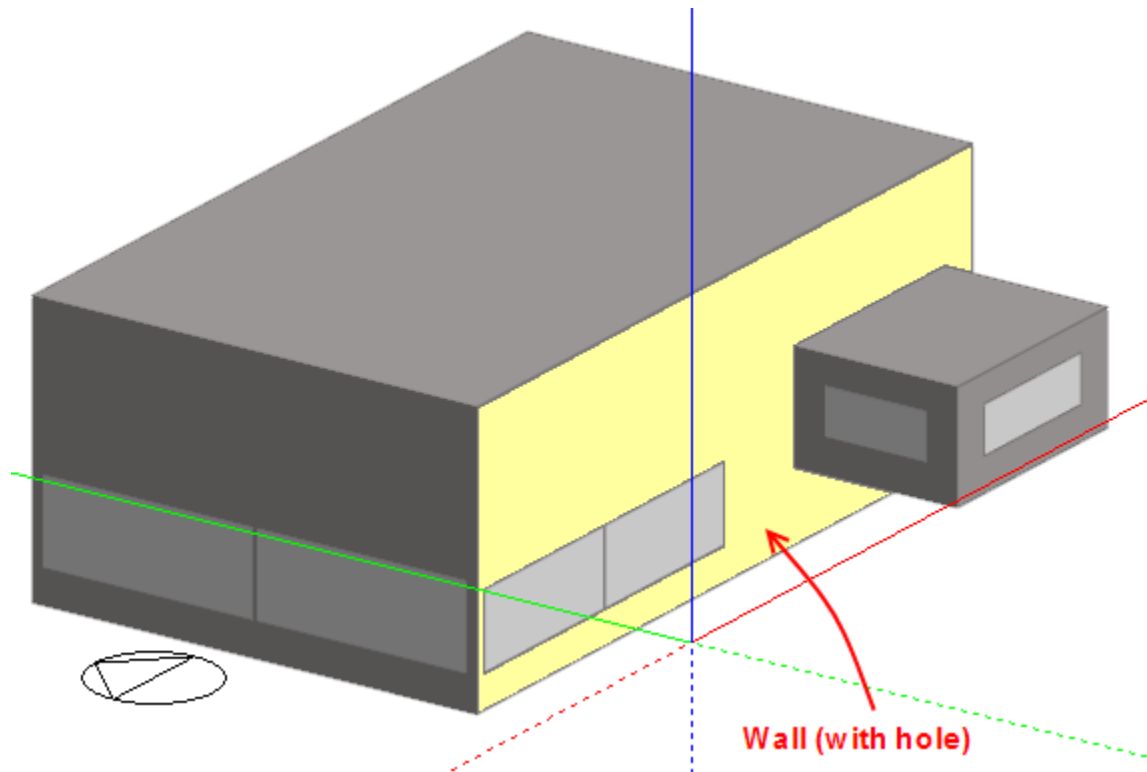

At building level

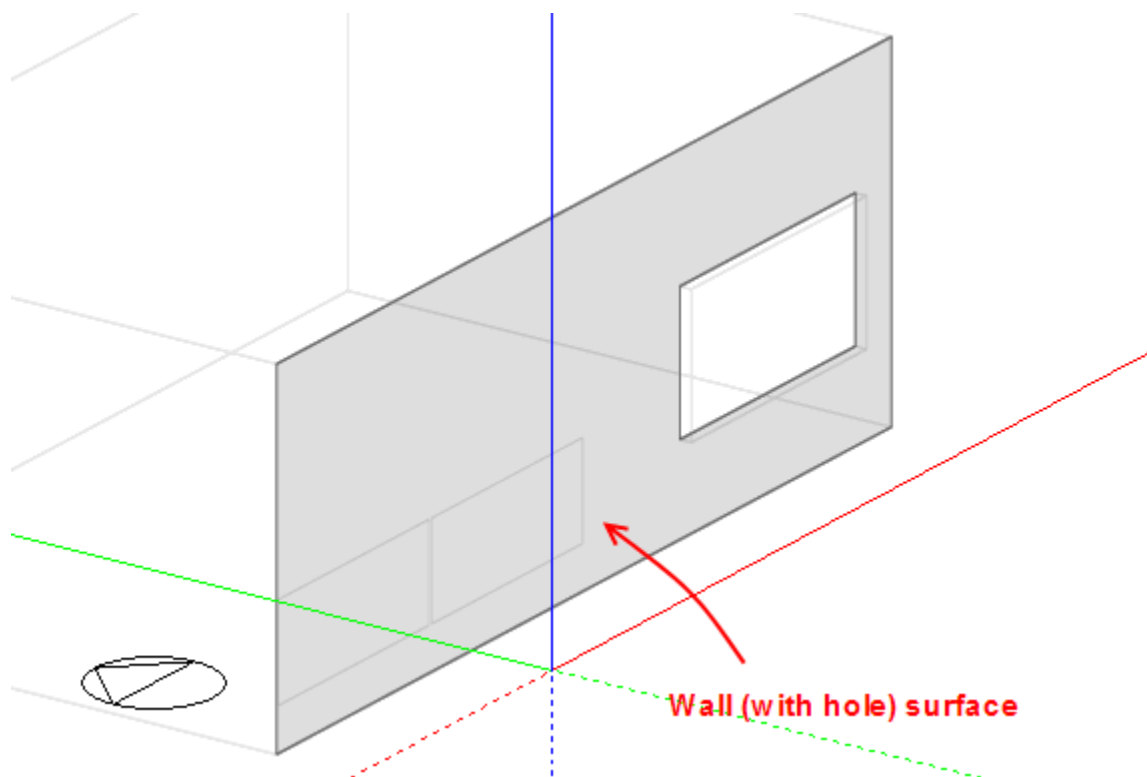

At surface level


Note that at surface level you can only [draw openings](#) on the grey areas of the surface. The white 'hole' is

actually the inter-block partition (above).

Wall (with hole) representation in EnergyPlus

Because EnergyPlus does not allow surfaces to be defined with holes (i.e. surfaces are defined using a single set of vertices) DesignBuilder generates 2 or more valid sub-polygons to represent the surface in EnergyPlus. The diagram below illustrates the procedure used for a typical Wall (with hole) surface.


The Wall (with hole) surface is the sum of the blue and green polygons

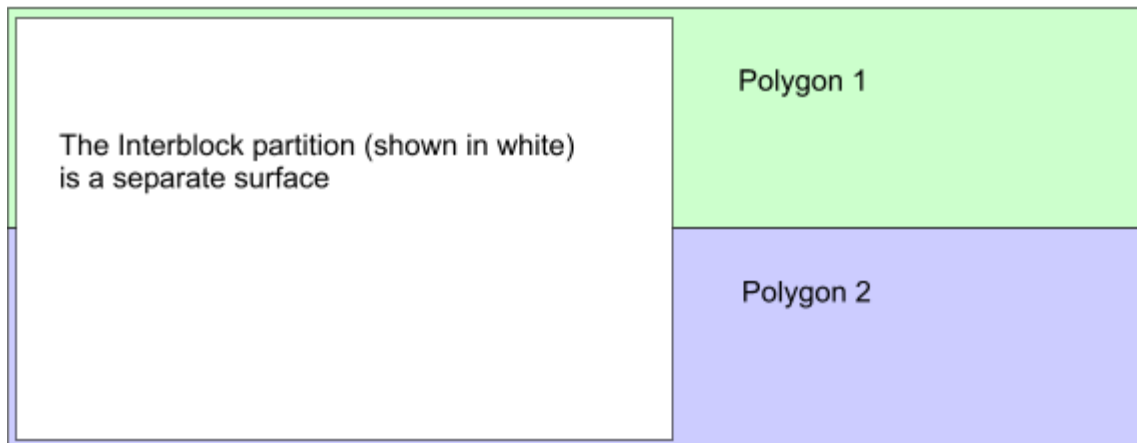

The surface is split into 2 (often equal area) polygons that, together, enclose the 'hole' left by the interblock partition. You should bear this in mind when looking at EnergyPlus IDF data.

Block link surfaces


Block link surfaces are used to connect the Wall (with hole) and the Inter-block partition surfaces to ensure that zones are fully enclosed. They are required because zones in adjacent blocks are separated from each other due to the thickness of the walls of the 2 blocks. The link surfaces bridge the gap between the (internal) zone shell and the (external) block shell.

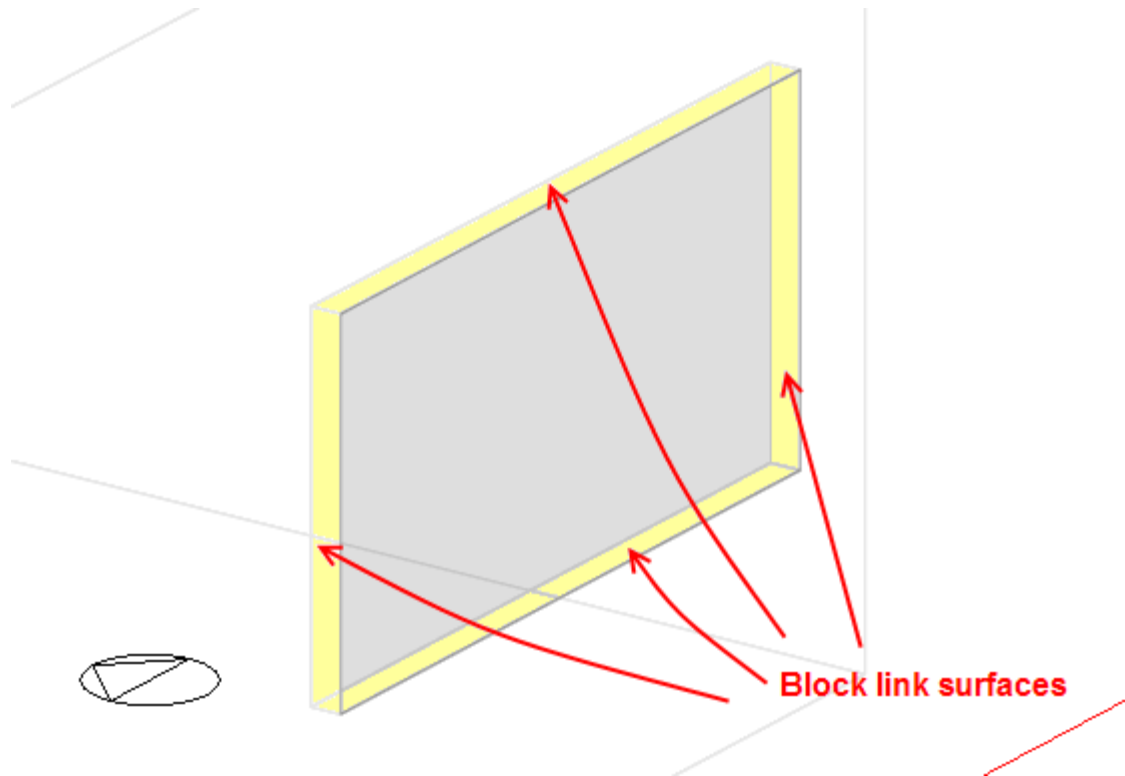


Block link surfaces are excluded from the calculations by default to keep the size of models down but you can change the setting under [Miscellaneous Edit](#) on the Advanced tab of the Model options dialog to include them. When included, link surfaces are modelled using very high resistance zero mass elements and their contribution is to:

- Allow EnergyPlus to calculate zone volumes avoiding warning messages about volume mismatches. This does not actually affect the results because EnergyPlus uses the accurately calculated zone volumes supplied by DesignBuilder.
- Provide a slightly more accurate picture of the actual internal zone surface area and so potentially provide a more accurate convective/radiant calculation.

The pictures below show how the Block link surfaces are used to connect the 2 blocks and ensure that zones are enclosed.

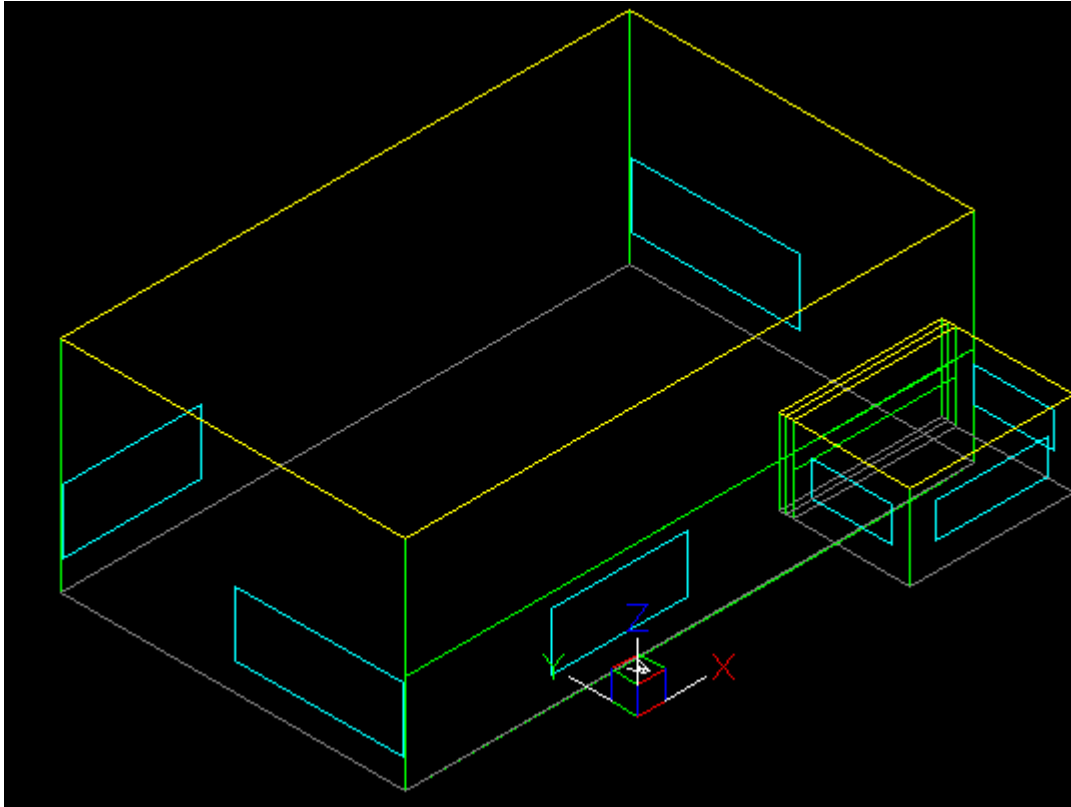

EnergyPlus Model with Block link surfaces - zones are enclosed and the zone volume includes the volume enclosed by the link surfaces and the inter-block partition. This volume is the thickness of the block wall x inter-block partition area).

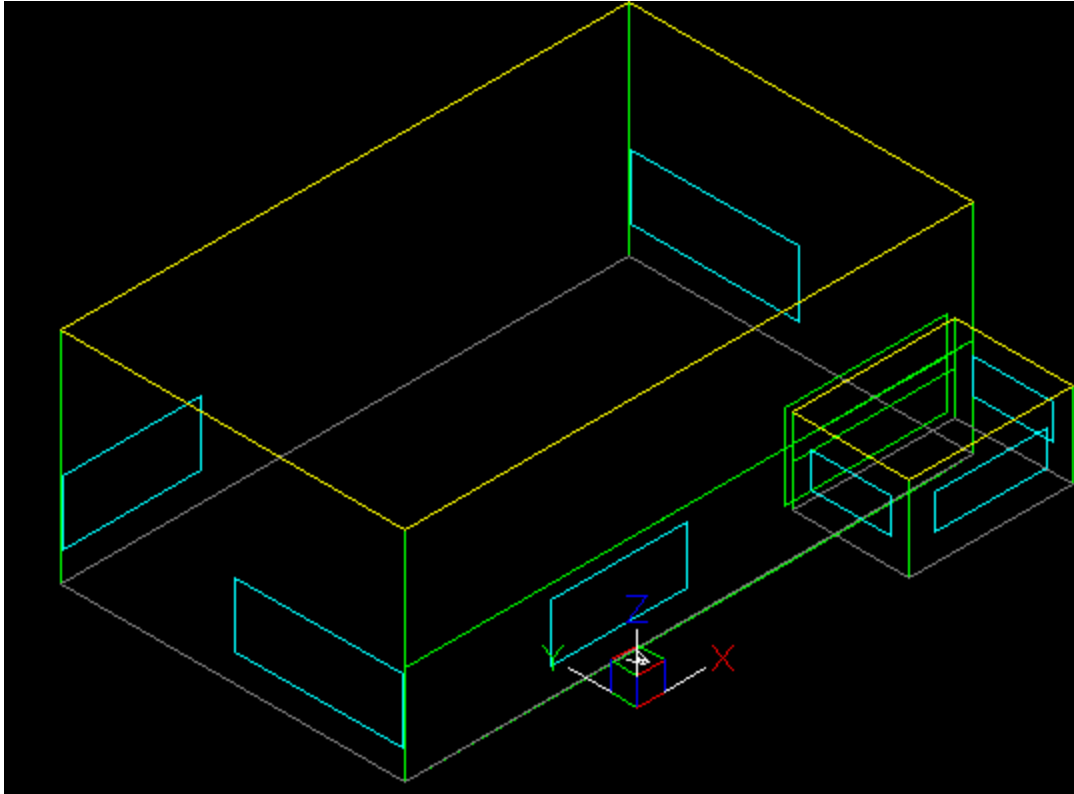

Equivalent EnergyPlus Model *without* Block link surfaces - zones are *not* enclosed and the zone volume excludes the volume enclosed by the link surfaces and the inter-block partition.

14.5 Calculation of Air Density

The air density is used for calculating the air volumetric flow rate from air mass flows as part of the [loads](#) calculation procedure.

The method used in DesignBuilder is the same as that in EnergyPlus for consistency. Air is assumed to be dry and at 20°C. The site elevation is used to calculate standard atmospheric pressure using the equation for 'standard atmospheric' pressure on p 6.1 of the ASHRAE 1997 HOF.

$$\text{Density} = P / (R * T)$$

Where:

R is the Gas constant = 287.05 J/kg-K

T is the temperature in K. Air is assumed to be at 20°C so, T = (20 + 273.15)

P is standard pressure:


$$P = 101325 \times (1.0 - Z \times 0.0000225577)^{5.2559}$$

where:


Z = [Elevation](#) above sea level (m)

14.6 Pitched Roof Geometry - Technical Description


This page describes DesignBuilder pitched roof geometry generation with reference an example roof created by drawing a rectangular perimeter with an offset of 0.3m and an external wall thickness of 0.25m:

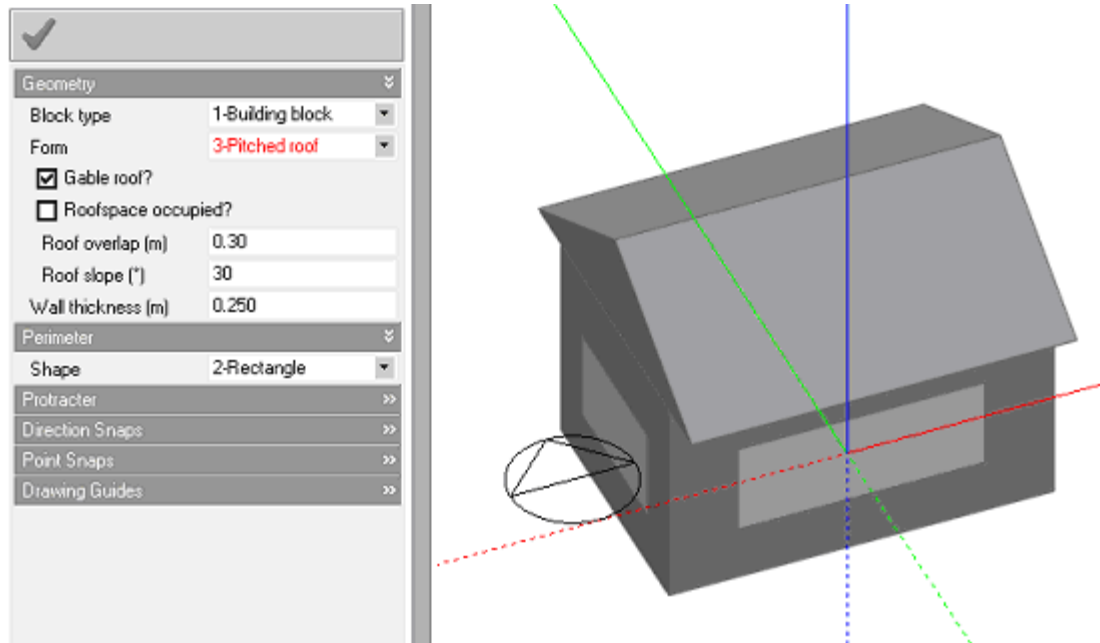



Roof perimeter blocks are created behind the scenes by first generating a conventional plan extrusion using the current external wall thickness and then generating the roof inner profile topology from the resulting block outer perimeter:

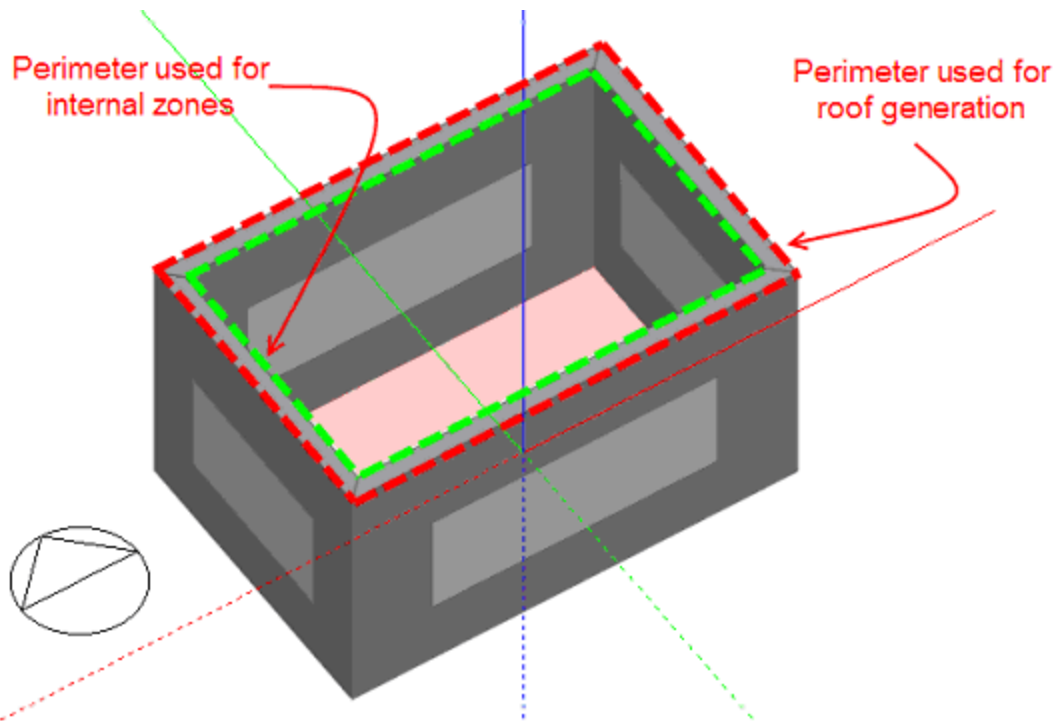

The roof geometry is created as if a stub wall existed from the original extrusion, cut to fit within the roof space and on top of which the roof assembly sits:

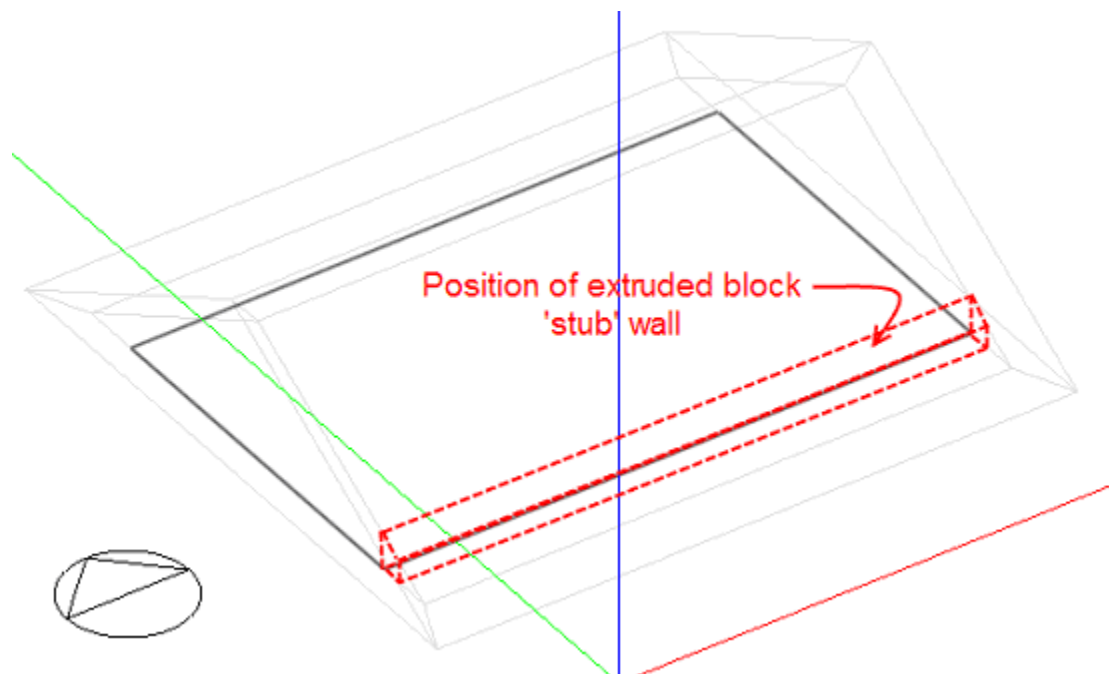


The resulting roof block is composed of a polyhedron representing the inner zone, which is created from the original inner block perimeter and is cut to fit within the roof space and a number of slabs that represent the actual roof construction. The roof slabs are generated from the inner roof profile and an outer profile created using the roof construction thickness.

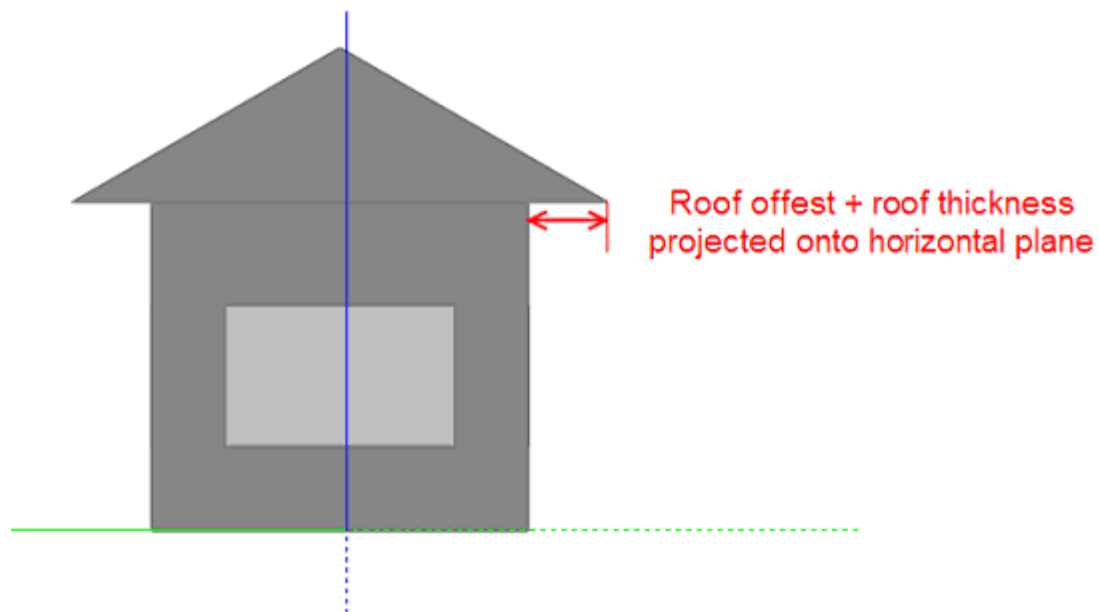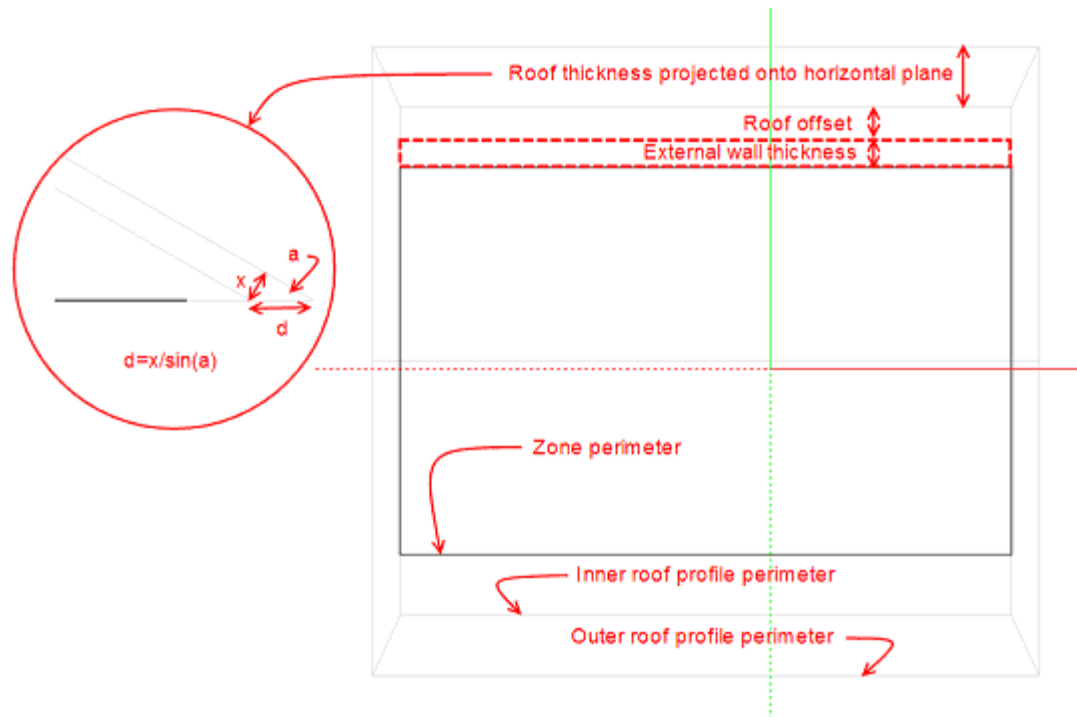

EnergyPlus model

DesignBuilder automatically generates overhangs for Pitched roof block types using EnergyPlus shading devices. The diagram below shows EnergyPlus DXF output of the building model generated using the above data. It shows the overhangs in grey.

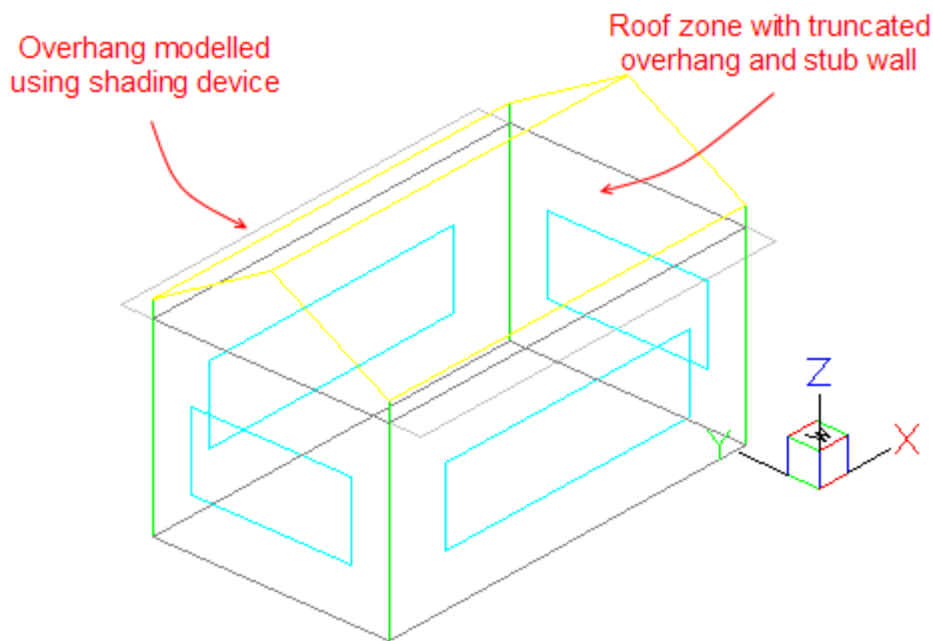

14.7 Triangulation

***** STARTING WITH VERSION 1.2 DESIGNBUILDER OPTIMISES FOR TRIANGULATION SO THE ADVICE BELOW SHOULD NOT APPLY IN MOST CASES *****

Triangulation is the process of breaking up polygons of complex shape into simple triangles which can be easily be manipulated by computers. This is routinely done behind the scenes in DesignBuilder for generating optimal surfaces in the OpenGL display routines, but is also sometimes necessary when generating EnergyPlus surfaces.

There is an option on the [Advanced tab](#) of the [Model Options](#) dialog which allows triangulation to be switched on/off explicitly. You should leave this switched off as it is intended for developer testing, but if you do switch it on all surface polygons (apart from triangular and rectangular ones) are triangulated.

You should however be aware of some situations requiring EnergyPlus surfaces to be triangulated even when this option is switched off:

1. When two blocks are adjacent and one of the adjacent faces is larger than the other and has glazing (see EnergyPlus DXF output below). This situation requires triangulation because EnergyPlus cannot handle surfaces with holes. You should try to avoid this situation wherever possible, especially if the surface involved is large or has a large number of windows because the large number of triangulated surfaces can slow simulations significantly


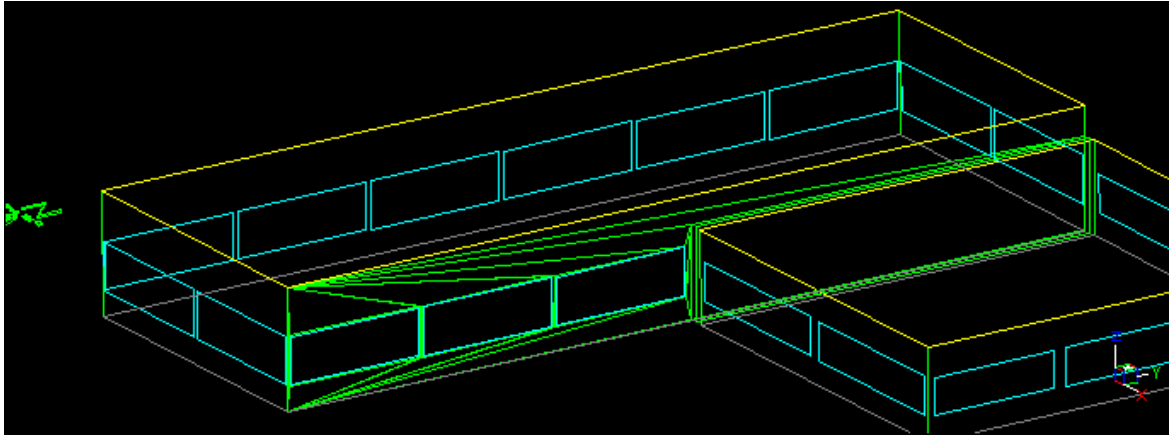


Illustration of triangulation in inter-block connection surfaces

- Windows which are neither triangular nor rectangular must be triangulated to fit with EnergyPlus requirements.
- If a surface, shading surface or opening has more vertices than is allowed from the [IDD definition](#) then it must be triangulated.

TIP TO REDUCE NUMBER OF TRIANGLES WHEN TRIANGULATION IS REQUIRED

You can reduce the number of triangles required when a smaller block is placed adjacent to a large one and the larger block has Windows by drawing a partitions stub to separate the block connection area from the window area as shown the diagram below.

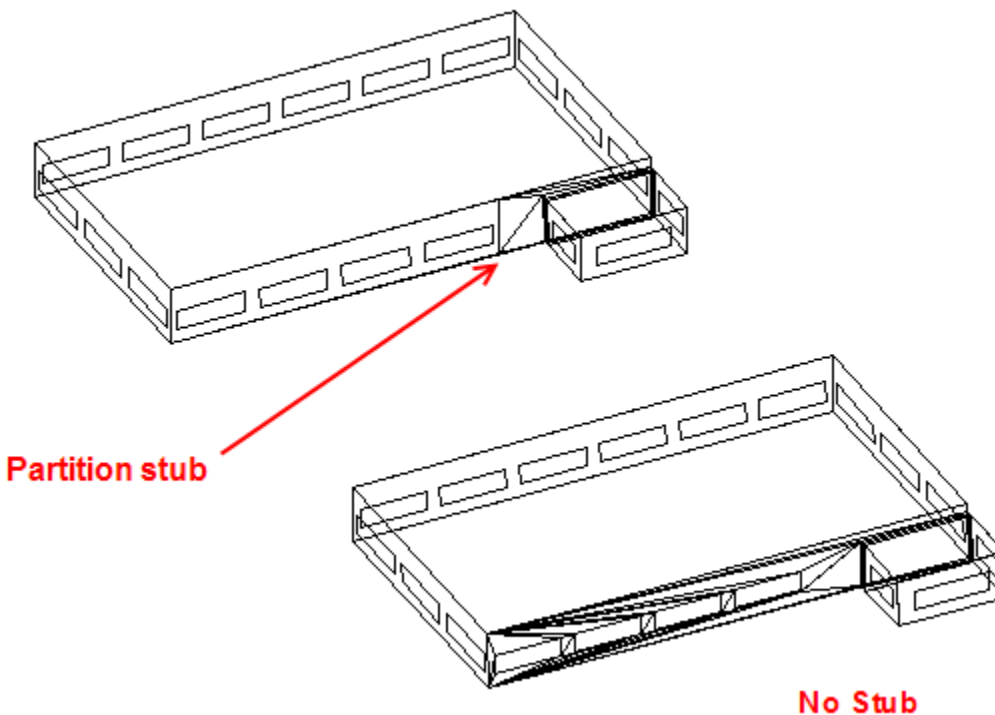

14.8 Calculation of HVAC Energy Consumption

DesignBuilder calculates boiler, chiller, DHW fuel consumption from the loads calculated by EnergyPlus using the CoP data at the building level on the HVAC tab as follows:

Simple HVAC

Boiler energy = *EnergyPlus heating loads* / **Heating system CoP**

Chiller energy = *EnergyPlus cooling loads* / **Cooling system CoP**

Compact HVAC

Boiler energy = (*EnergyPlus heating loads* x Heating distribution loss factor) / **Boiler CoP**

Chiller energy = (*EnergyPlus cooling loads* x Cooling distribution loss factor) / **Chiller CoP**

Where:

Heating distribution loss factor = 1 + (**Heating Distribution Loss**) / 100

Cooling distribution loss factor = 1 + (**Cooling Distribution Loss**) / 100

DHW (Simple and Compact HVAC)

DHW energy (kWh) = **DHW CoP** x 1000 (kg/m³) x 4.187 (KJ/kg-K) x (*EnergyPlus DHW m3 loads*) x (**Delivery water temperature - Mains water temperature**)

Where:

DHW CoP is **Heating system CoP** when using '1-Central heating boiler' DHW type

Data shown in **blue** is HVAC model data.

Data shown in *italics* is read from the [EnergyPlus results eso file](#) .

Section

15

**EnergyPlus
Background
Information**

EnergyPlus is the U.S. DOE building energy simulation program for modelling building heating, cooling, lighting, ventilating, and other energy flows. It builds on the most popular features and capabilities of BLAST and DOE-2 but also includes many innovative simulation capabilities such as time steps of less than an hour, modular systems and plant integrated with heat balance-based zone simulation, multizone air flow, thermal comfort, and photovoltaic systems.

EnergyPlus is a stand-alone simulation program without a 'user friendly' graphical interface – which is where DesignBuilder comes in. We have integrated EnergyPlus tightly within the DesignBuilder environment to allow you to carry out simulations without any fuss – just define your building model, request data and let the EnergyPlus simulation engine take care of the details.

DesignBuilder has been specifically developed around EnergyPlus allowing most of the EnergyPlus fabric and glazing data to be input. Databases of building materials, constructions, window panes, window gas, glazing units and blinds are provided.

HVAC is modelled using the Compact HVAC descriptions. A range of commonly used HVAC system types can be defined parametrically without the need for complex system layouts. These compact descriptions are automatically expanded behind-the-scenes into full HVAC simulation data sets prior to simulation.

You can use DesignBuilder to [generate IDF files](#) and work with these outside DesignBuilder to access system functionality not provided by DesignBuilder.

There is a range of EnergyPlus simulators to choose from including the current DOE executable release, the current DLL release and any interim releases made available by DOE. You can carry out DesignBuilder simulations via [EP-Launch](#).

See also:

- [EnergyPlus Program options](#)
- [Exporting EnergyPlus IDF Files](#)
- [EnergyPlus Version Compatibility](#)
- [EnergyPlus IDF Window Dimensions](#)
- [Calculation of DesignBuilder Output from EnergyPlus Report Variables](#)
- [EnergyPlus Errors and Warnings](#)
- [EnergyPlus Daylight Calculations](#)
- [EnergyPlus Thermal Comfort](#)
- [EnergyPlus Date Definition](#)
- [DOE EnergyPlus website](#)
- [Simulation Hourly Weather Data](#)
- [DesignBuilder Files, Location and Extensions](#)
- [Licensing & Activation](#)
- [EnergyPlus Documentation](#)

15.1 Exporting EnergyPlus IDF Files

You can use DesignBuilder to generate [EnergyPlus idf files](#) for use in external simulation environments such as EP-Launch. There are 4 alternative procedures for doing this:

1. From the File | Export menu option (*preferred method*).
2. By copying the intermediate in.idf file in the EnergyPlus folder.

3. Tools | Display simulation input script from Simulation or Heating/Cooling design screens.
4. Using the DOE executable EnergyPlus simulation option to open the EP-launch application before simulation.

Note that DesignBuilder will automatically generate [compatible IDF files](#) with the target version of EnergyPlus as set on the [Program options dialog](#).

[It is important to set the version you intend to use before exporting the IDF data.](#)

1. File > Export menu option

1. Open your DesignBuilder dsb model file.
2. Make sure you are at building level or below.
3. Click on **File > Export > EnergyPlus IDF file > Simulation**. DesignBuilder will warn you if the currently selected version of EnergyPlus is not a DOE one and give you an opportunity to change it.

2. Copy in.idf in the EnergyPlus folder

An alternative way to generate IDF files is to use the intermediate file [in.idf](#) in the [EnergyPlus folder](#) which is generated prior to each DesignBuilder EnergyPlus simulation. You should copy this file to a different filename/location before using it.

Important: You should not make any changes to [in.idf](#) itself because this file will get overwritten before the next DesignBuilder EnergyPlus simulation.

3. Tools > Display menu option

You can view the input data script used to calculate these results by selecting the Tools > Display simulation input script menu option. If you do not have the EnergyPlus IDF editor installed, then you should associate the [.idf file extension](#) with a text editor to make this option work.

Note: this shows the script stored with the model just before the simulation *not* the [in.idf](#) file stored in the [EnergyPlus folder](#).

4. DOE executable EnergyPlus simulation option

In the Program options dialog you can select an [executable EnergyPlus](#) option and set the execution mode to **4-Executable (EP-Launch)**. This gives you some control over the IDF data before the simulation. Any changes made to the IDF data from within EP-Launch will be included in the simulation but will not be retained for future simulations. See Program options > [EnergyPlus](#) for more info on this.

Reading ESO results files back into DesignBuilder

Provided you haven't changed the zone and surface names in the IDF data you can read [ESO](#) results files generated from your modified data back into DesignBuilder for display and analysis.

15.2 EnergyPlus Version Compatibility

You should ensure that you have the correct version of EnergyPlus set before [exporting IDF](#) data for use outside DesignBuilder.

DesignBuilder will automatically generate compatible IDF files with the target version of EnergyPlus as set on the EnergyPlus tab [Program options dialog](#). If you are [generating IDF files](#) for simulation outside DesignBuilder you should note that, by default, DesignBuilder targets an internal version of EnergyPlus which has an extended IDD data definition file to allow:

1. Surfaces of up to 330 vertices.
2. Shading surfaces of up to 33 vertices.
3. Up to 400 zones in compact HVAC systems.

So if you attempt to use IDF files generated for internal versions of EnergyPlus in a version of EnergyPlus supplied by DOE, you may find some surface or HVAC data errors related to the above changes. To avoid this situation you should either:

1. Explicitly target your DOE EnergyPlus installation by making the appropriate setting on the [Program options dialog](#) (preferred option), or
2. Carry the DesignBuilder IDD extensions over to your standalone version of EnergyPlus by copying Energy+.idd from the DesignBuilder EnergyPlus folder (use the File > Folder > EnergyPlus folder menu command) to your standalone EnergyPlus folder (e.g. C:\EnergyPlusV2-0-0).

15.3 EnergyPlus IDF Window Dimensions

The window dimensions supplied to EnergyPlus are the total opening size (window size including the frame), but deflated by an amount equal to the width of the window frame. The deflation is required because EnergyPlus expects window dimensions *excluding* the frame whereas DesignBuilder openings *include* the frame. DesignBuilder takes this approach because it is usually more convenient to enter the size of the opening in the fabric.

The default window areas generated by DB should correspond with the [Window to wall % \(WWR\)](#) setting on the Openings tab, provided you are using either **Continuous horizontal** or **Preferred height** facade types.

Tip: switching off frames on the Openings tab causes EnergyPlus windows of the expected dimensions to be generated given the simplistic 'window area divided by total wall area' calculation.

15.4 Calculation of DesignBuilder Output from EnergyPlus Report Variables

At the end of an EnergyPlus simulation DesignBuilder reads the EnergyPlus output file [eplusout.eso](#). The format of this file is described in EnergyPlus documentation. The table below explains how the raw EnergyPlus output is processed to create DesignBuilder output. The **Environmental/Comfort Output** column refers to the data shown in [DesignBuilder output](#) screens. EnergyPlus Report variable column data shows report variable names with the units in square brackets. The units should be omitted when using the report variables in IDF data. The **Area** column indicates the zone, surface, component etc.

innocuous

Environmental/	EnergyPlus Report	Area	Notes*
----------------	-------------------	------	--------

Comfort Output	Variable		
Internal air temperature	Zone Mean Air Temperature [C]	Zoneld	
Internal radiant temperature	Zone Mean Radiant Temperature [C]	Zoneld	
Internal operative temperature		Zoneld	0.5 x (Zone Mean Air Temperature + Zone Mean Radiant Temperature)
Relative Humidity	Zone Air Relative Humidity [%]	Zoneld	
Fanger PMV	FangerPMV	PEOPLE Zoneld	
Pierce PMV ET	PiercePMVET	PEOPLE Zoneld	
Pierce PMV SET	PiercePMVSET	PEOPLE Zoneld	
Pierce Discomfort Index (DISC)	PierceDISC	PEOPLE Zoneld	
Pierce Thermal Sens. Index (TSENS)	PierceTSENS	PEOPLE Zoneld	
Kansas Uni TSV	KsuTSV	PEOPLE Zoneld	
Discomfort hrs (summer clothing)	Time Not Comfortable Summer Clothes [hr]	PEOPLE Zoneld	
Discomfort hrs (winter clothing)	Time Not Comfortable Winter Clothes [hr]	PEOPLE Zoneld	
Discomfort hrs (all clothing)	Time Not Comfortable Summer or Winter Clothes [hr]	PEOPLE Zoneld	
Fabric and ventilation			
Glazing heat gain	Window Heat Gain [W] - Window Heat Loss [W] - Window Transmitted Solar [W]	Surfaceld	Window Transmitted Solar is subtracted so that Glazing heat gain represents the transfer of all heat through the window <i>excluding beam and diffuse short-wave solar heat effects</i> .
Walls, Roofs, Ceilings (int), Floors (int), Floors (ext), Ground floors, Partitions (int), Doors and vents	Opaque Surface Inside Face Conduction [W]	Surfaceld	
External infiltration	Zone Infiltration Sensible Heat Loss [J] + Zone Infiltration Sensible Heat Gain [J]	Zoneld	Scheduled Natural ventilation only
External natural ventilation	Zone Ventilation Sensible Heat Gain [J] + Zone Ventilation Sensible Heat Loss [J]	Zoneld	Scheduled Natural ventilation only
External mechanical ventilation	Zone Ventilation Sensible Heat Gain [J] + Zone Ventilation Sensible Heat Loss [J]	Zoneld	Scheduled Natural ventilation only

Internal Air	AirflowNetwork Mixing Sensible Loss Rate [W] + AirflowNetwork Mixing Sensible Gain Rate [W]	Zoneld	Calculated Natural ventilation only
External Air	AirflowNetwork Infiltration Sensible Loss Rate [W]+ AirflowNetwork Infiltration Sensible Gain Rate [W]	Zoneld	Calculated Natural ventilation only
Airflow			
Mech Vent + Nat Vent + Infiltration	Zone Mechanical Ventilation Air Change Rate [ach]	Zoneld	Summed across blocks and building using volume-weighted average
Mech Vent + Nat Vent + Infiltration	Zone Ventilation Air Change Rate [ach]	Zoneld	Summed across blocks and building using volume-weighted average
Mech Vent + Nat Vent + Infiltration	Zone Infiltration Air Change Rate [ach]	Zoneld	Summed across blocks and building using volume-weighted average
Internal Gains			
Task lighting gains	ELECTRIC EQUIPMENT#Zoneld#TaskLights* [J]	-	
General lighting gains	ELECTRIC EQUIPMENT#Zoneld#General Lights* [J]	-	The 'GeneralLights' ELECTRIC EQUIPMENT EnergyPlus output is a lighting <i>fuel</i> consumption and is summed to give the Lighting fuel consumption (below). The gain to the zone is calculated from this in each zone by multiplying by (1 - Return air fraction).
Miscellaneous gains	ELECTRIC EQUIPMENT#Zoneld#02: InteriorEquipment* [J]	-	The '02' ELECTRIC EQUIPMENT EnergyPlus output is the miscellaneous internal gains fuel consumption and is summed to give the Room fuel consumption (below). The gain to the zone is calculated from this in each zone by multiplying by (1 - Fraction lost).
Process gains	ELECTRIC EQUIPMENT#Zoneld#03: InteriorEquipment* [J]	-	The '03' ELECTRIC EQUIPMENT EnergyPlus output is the process internal gains fuel consumption and is

Catering gains	ELECTRIC EQUIPMENT#Zoneld#04: InteriorEquipment* [J]	-	summed to give the Room fuel consumption (below). The gain to the zone is calculated from this in each zone by multiplying by (1 - Fraction lost). The '04' ELECTRIC EQUIPMENT EnergyPlus output is the catering internal gains fuel consumption and is summed to give the Room fuel consumption (below). The gain to the zone is calculated from this in each zone by multiplying by (1 - Fraction lost).
Computer and equipment gains	ELECTRIC EQUIPMENT#Zoneld#05: InteriorEquipment* [J]	-	
Occupancy gains	Zone People Sensible Heat Gain [J]	Zoneld	
Solar Gains Exterior Windows	Zone Transmitted Solar [W]	Zoneld	
Solar Gains Interior Windows	Zone Diff Solar from Interior Windows [W] + Zone Beam Solar from Interior Windows [W]	Zoneld	
Zone/Sys sensible cooling	Zone/Sys Sensible Cooling Rate [W]	Zoneld	
Zone/Sys sensible heating	Zone/Sys Sensible Heating Rate [W]	Zoneld	
System Heat Flows (Compact HVAC only)			
Zone Heating	Total Water Heating Coil Rate [W]	Zoneld REHEAT COIL	VAV/CAV Hot water reheat coils
Zone Heating	Heating Coil Rate [W]	Zoneld REHEAT COIL	VAV/CAV Electric reheat coils
Zone Heating	Heating Coil Rate [W]	Zoneld AHU HEATING COIL	Unitary single zone
Zone Heating	Total Water Heating Coil Rate [W]	Zoneld HEATING COIL	Fan coil
Preheat	Heating Coil Rate [W]	AHU PREHEAT COIL	VAV/CAV Gas/Electric preheat coils
AHU Heating	Total Water Heating Coil Rate [W]	AHU HEATING COIL	VAV/CAV Hot water coils
AHU Heating	Heating Coil Rate [W]	AHU HEATING COIL	VAV/CAV with Gas/Electric AHU heating coils and Unitary multizone
Total Cooling	Total Water Cooling Coil Rate	AHU COOLING	VAV/CAV with Chilled

Total Cooling	[W]	COIL	water coils
Total Cooling	DX Coil Total Cooling Rate [W]	AHU COOLING COIL	Unitary Multizone
Total Cooling	DX Coil Total Cooling Rate [W]	Zoned AHU COOLING COIL	Unitary single zone
Total Cooling	Total Water Cooling Coil Rate [W]	Zoned COOLING COIL	Fan coil
Sensible Cooling	Sensible Water Cooling Coil Rate [W]	AHU COOLING COIL	VAV/CAV with Chiller water
Sensible Cooling	DX Coil Sensible Cooling Rate [W]	AHU COOLING COIL	Unitary multizone
Sensible Cooling	DX Coil Sensible Cooling Rate [W]	Zoned AHU COOLING COIL	Unitary single zone
Sensible Cooling	Sensible Water Cooling Coil Rate [W]	Zoned COOLING COIL	Fan coil

Fuel breakdown (building level)			
--	--	--	--

Heat generator		Compact HVAC	<p>The fuel consumption for each heating load is calculated based on the efficiency of the heat generation and distribution loss:</p> $\text{Heat generator fuel} = (\text{Heating Load} \times \text{Heating distribution loss factor}) / \text{Heat generator CoP}$ <p>Where:</p> $\text{Heating distribution loss factor} = 1 + (\text{Heating Distribution Loss}) / 100$ <p>Note 1: distribution loss is 0 for direct electric and gas heating coils.</p> <p>Note 2: CoP for direct gas coils is assumed to be 0.8 and direct electric coils 1.0.</p>
Heat generator		Simple HVAC	$\text{Heat generator fuel} = \text{Heating load} / \text{Heating system CoP}$ <p>Note: the Heating system CoP is defined separately for each zone.</p>

Chiller		Compact HVAC	<p>The fuel consumption for each cooling load is calculated based on the efficiency of the chiller and distribution loss:</p> <p>Chiller fuel = (Cooling Load x Cooling distribution loss factor) / Chiller CoP</p> <p>Where:</p> <p>Cooling distribution loss factor = $1 + (\text{Cooling Distribution Loss}) / 100$</p>
Chiller		Simple HVAC	<p>Chiller fuel = Cooling load / Cooling system CoP</p> <p>Note: the Cooling system CoP is defined separately for each zone.</p>
System fan	Fan Electric Consumption [J]	AHU SUPPLY FAN	VAV/CAV with Chiller water, Unitary multizone
System fan	Fan Electric Consumption [J]	ZoneId AHU SUPPLY FAN	Unitary single zone
System fan	Fan Electric Consumption [J]	ZoneId SUPPLY FAN	Fan coil
System pumps	Pump Electric Consumption [J]	HOT WATER LOOP HW SUPPLY PUMP + CHILLED WATER LOOP CHW SUPPLY PUMP + CHILLED WATER LOOP CNDW SUPPLY PUMP	
DHW	Domestic Hot Water Consumption [m3]	ZoneId DHW 1	<p>DHW energy (kWh) = DHW CoP x 1000 (kg/m3) x 4.187 (KJ/kg-K) x (Domestic Hot Water Consumption [m3]) x (Delivery water temperature - Mains water temperature)</p> <p>Where:</p> <p>DHW CoP is Heat generator CoP when using 1-Central heating boiler DHW type.</p>
Preheat energy			(Preheat Heating Coil Rate + Distr loss if appropriate) / Preheat CoP
Lighting			

Room electricity
 Room gas
 Room oil
 Room solid
 Room bottled gas
 Room other

Fuel totals (building level)

Electricity			1-Electricity from grid
Gas			2-Natural gas
Oil			3-Oil
Solid			4-Coal + 7-Anthracite + 8-Smokeless fuel (including coke)
Bottled gas			5-LPG + 6-Biogas
Other fuel consumption			9-Dual fuel appliances (mineral + wood) + 10-Biomass + 11-Waste heat

CO2 production (building level)

CO2			Calculated from Fuel totals above using locally published CO2 emission factors from the Emissions tab on the Legislative regions dialog accessed from the Site level on the Regions model data tab.
-----	--	--	---

Site Weather data

Outside dry-bulb temperature	Outdoor Dry Bulb
Outside dew-point temperature	Outdoor Dew Point
Direct normal solar	Direct Solar
Diffuse horizontal solar	Diffuse Solar
Wind speed	Wind Speed
Wind direction	Wind Direction
Atmospheric pressure	Outdoor Barometric Pressure
Solar altitude	Solar Altitude Angle
Solar azimuth	Solar Azimuth Angle

* Variables shown in green represent EnergyPlus output.

15.5 EnergyPlus Errors and Warnings

A file [eplusout.err](#) is generated following each EnergyPlus simulation in the [EnergyPlus folder](#). It may contain three levels of errors (Warning, Severe, Fatal) as well as the possibility of just message lines. These errors may be duplicated in other files (such as the standard output file) and are described more completely in the [EnergyPlus Output Details](#) and [Examples](#) documents.

ERRORS

```
1 ** Severe ** Did not find "Until: 22:00" in list of Objects
```

You may have entered a semi-colon character (;) at the end of one of the lines in a [Compact schedule](#) when you meant to enter a comma (,).

```
2 ** Severe ** Problem in interior solar distribution calculation (CHKBKS)
** ~~~ ** Solar Distribution = FullInteriorExterior will not work
in Zone=78474
** ~~~ ** because vertex 3 of back surface=W_73536_2_0_0 is in
front of receiving surface=W_78474_3_0_0
** ~~~ ** (Dot Product indicator=1.4966)
** ~~~ ** Check surface geometry; if OK, use Solar Distribution =
FullExterior instead.
```

The [3-Full interior and exterior](#) solar distribution option is selected but one or more zone in the model is non-convex. Note that DesignBuilder is [configured](#) by default to check for this condition and provides more friendly error messages.

```
3 ** Severe ** For Purchased Air ZONE 21438 PURCHASED AIR serving Zone 21438
** ~~~ ** ..the supply air temperature for cooling [10.00] is greater than
the zone cooling setpoint [8.99].
```

This severe error can occur when using Simple HVAC, or Cooling design calculations with [Operative](#) control in zones with strong radiant heat gains causing high radiant temperatures (e.g. un-insulated roof or zone is highly glazed). The supply air temperature is fixed (to 10°C in the above example) but the zone air temperature must be cooled lower than this (8.99°C in the above example) to give the required operative setpoint (e.g. 24 °C). Operative temperature, T_{op} , is calculated as:

$$T_{op} = 0.5 \times (T_a + T_r)$$

where:

T_{op} is the operative temperature.

T_s is the air supply temperature.

T_a is the zone air temperature (T_a must be $> T_s$).

T_r is the zone radiant temperature.

So there is a requirement:

$$T_{r \max} \leq 2 T_{op} - T_s$$

If the zone radiant temperature is higher than $T_{r \max}$ and Operative temperature control is used then this severe error will occur.

The solution may be to use Air temperature control and to reduce the radiant temperatures using solar shading/insulation as appropriate.

```
4 ** Severe ** Problem in interior solar distribution calculation (CHKBKS)
**   ~~~   **   Solar Distribution = FullInteriorExterior will not
work in Zone=42272
**   ~~~   **   because vertex 6 of back surface=F_42272_10106_0_10277
is in front of receiving surface=W_42272_9_0_0
**   ~~~   **   (Dot Product indicator=7.3314)
**   ~~~   **   Check surface geometry; if OK, use Solar Distribution
= FullExterior instead.
```

One or more zones is [non-convex](#) which makes the model incompatible with the [3-Full interior and exterior](#) solar distribution algorithm. This error can also lead to temperature out of bounds errors.

```
5 ** Severe ** Temperature out of bounds (637.89) for surface=W_43311_4_0_0
**   ~~~   **   in Zone=43276
**   ~~~   **   Occurrence info=BRUSSELS - BEL IWEC DATA WMO#=064510,
01/04 13:30 - 13:32
**   ~~~   **   A temperature out of bounds problem can be caused by
several things. The user
**   ~~~   **   should check the weather environment, the level of
internal gains with respect
**   ~~~   **   to the zone, and the thermal properties of their
materials among other things.
**   ~~~   **   A common cause is a building with no thermal mass -- all
materials with
**   ~~~   **   Regular-R definitions.
```

A temperature of a surface has become too high, during the simulation. Possible causes are:

1. Some form of geometric error in the simulation, sometimes related to unrealistic amounts of solar radiation falling on small surfaces.
2. Use of the [finite-difference](#) solution method.

WARNINGS

```
1  ** Warning ** GetHTSubSurfaceData: A Multiplier > 1.0 for window/glass
   door W_67_4_0_0_0_0
   **   ~~~   ** in conjunction with SolarDistribution = FullExterior or
   FullInteriorExterior
   **   ~~~   ** can cause inaccurate shadowing on the window and/or
   **   ~~~   ** inaccurate interior solar distribution from the window.
```

The [Lump similar windows on surface](#) model option has been selected which causes DesignBuilder to use the EnergyPlus Window Multiplier option to speed up simulations. The message is warning that the Window Multiplier option, when used in conjunction with the [Full exterior](#) or [Full interior and exterior](#) calculation options can lead to inaccurate distributions of solar radiation around the room.

```
2  ** Warning ** GetSurfaceData:The total number of floors, walls, roofs and
   internal mass surfaces in Zone 59
   **   ~~~   ** is < 6. This may cause an inaccurate zone heat balance
   calculation.
```

This warning is often generated for pitched roofs and for interior zones separated by virtual partitions and can safely be ignored.

```
3  ** Warning ** GetGroundTemps: Some values for "GroundTemperatures" fall
   outside the range of 15-25C.
   **   ~~~   ** These values may be inappropriate. Please consult the Input
   Output Reference for more details.
```

The default ground temperatures used in DesignBuilder is 14degC. This may be inappropriate in some cases and EnergyPlus is warning about this. You should take care to enter realistic ground temperatures bearing in mind the advice given in the [Ground Modelling](#) section.

```
4  ** Warning ** DXFOut: Could not triangulate surface="W_7469_0_0_1",
   type="Wall", check surface vertex order(entry)
```

Caused by a minor bug in EnergyPlus when creating a DXF representation of the model - it is not always able to fully triangulate all surfaces and generate a full set of surfaces. You can ignore the message for the purposes of simulation results.

```
5  ** Warning ** Base surface does not surround subsurface (CHKSBS), Overlap
   Status=No-Overlap
   **   ~~~   ** The base surround errors occurred 3 times.
   **   ~~~   ** Surface "W_7376_3_0_0" misses SubSurface "W_7376_3_0_0_0_0"
```

These warnings are usually a reporting bug in EnergyPlus v.2.0 and earlier.

```
6  ** Warning ** Calculated design cooling/heating load for zone=78474 is
   zero.
   **   ~~~   ** Check ZONE SIZING and ZONE CONTROL:THERMOSTATIC inputs.
```

Cooling/heating may have been switched off in this zone or there is no cooling/heating load (i.e. the zone does not require any cooling/heating).

For a zone sizing run, there must be at least 1 Zone Sizing object input.

7

Can usually be ignored.

15.6 EnergyPlus Daylight Calculations

The EnergyPlus daylighting model, in conjunction with the thermal analysis, determines the energy impact of daylighting strategies based on analysis of daylight availability, site conditions, window management in response to solar gain and glare, and various lighting control strategies.

The daylighting calculations are carried out during the simulation in 3 main steps:

1. Daylight factors, which are ratios of interior illuminance or luminance to exterior horizontal illuminance, are calculated and stored. The user specifies the coordinates of one or two reference points in each daylit zone. EnergyPlus then integrates over the area of each exterior window in the zone to obtain the contribution of direct light from the window to the illuminance at the reference points, and the contribution of light that reflects from the walls, floor and ceiling before reaching the reference points. Window luminance and window background luminance, which are used to determine glare, are also calculated. Taken into account are such factors as sky luminance distribution, window size and orientation, glazing transmittance, inside surface reflectances, sun control devices such as movable window shades, and external obstructions. Dividing daylight illuminance or luminance by exterior illuminance yields daylight factors. These factors are calculated for the hourly sun positions on sun-paths for representative days of the run period.
2. A daylighting calculation is performed each heat-balance time step when the sun is up. In this calculation the illuminance at the reference points in each zone is found by interpolating the stored daylight factors using the current time step's sun position and sky condition, then multiplying by the exterior horizontal illuminance. If glare control has been specified, the program will automatically deploy window shading, if available, to decrease glare below a specified comfort level. A similar option uses window shades to automatically control solar gain.
3. The electric lighting control system is simulated to determine the lighting energy needed to make up the difference between the daylighting illuminance level and the design illuminance. Finally, the zone lighting electric reduction factor is passed to the thermal calculation, which uses this factor to reduce the heat gain from lights. The EnergyPlus daylighting calculation is derived from the daylighting calculation in DOE-2.1E, which is described in [Winkelmann, 1983] and [Winkelmann and Selkowitz, 1985]. There are two major differences between the two implementations: (1) In EnergyPlus daylight factors are calculated for four different sky types—clear, clear turbid, intermediate, and overcast; in DOE-2 only two sky types are used—clear and overcast. (2) In EnergyPlus the clear-sky daylight factors are calculated for hourly sun-path sun positions several times a year whereas in DOE-2 these daylight factors are calculated for a set of 20 sun positions that span the annual range of sun positions for a given geographical location.

15.7 EnergyPlus Thermal Comfort

The integration of a sophisticated building thermal analysis tool with thermal comfort models will allow us to perform an energy analysis on a zone and simultaneously determine if the environmental control strategy will be sufficient for the occupants to be thermally comfortable. This chapter is intended to provide background on thermal comfort, present an overview of state of the art thermal comfort models and present the mathematical models that have been incorporated into Energy Plus.

Background on Thermal Comfort Models

Throughout the last few decades, researchers have been exploring the thermal, physiological and psychological response of people in their environment in order to develop mathematical models to predict these responses. Researchers have empirically debated building occupants' thermal responses to the combined thermal effect of the personal, environmental and physiological variables that influence the condition of thermal comfort.

There are two personal variables that influence the condition of thermal comfort: the thermal resistance of the clothing (I_{cl}), and the metabolic rate (H/ADu). The thermal resistance of the clothing (I_{cl}) is measured in units of "clo." The 1985 ASHRAE Handbook of Fundamentals (3) suggests multiplying the summation of the individual clothing items clo value by a factor of 0.82 for clothing ensembles.

The environmental variables that influence the conditions of thermal comfort include:

1. Air Temperature (T_a),
2. Mean Radiant Temperature (T_r),
3. Relative air velocity (v),
4. Water vapor pressure in ambient air (P_a)

The Air Temperature (T_a), a direct environmental index, is the dry-bulb temperature of the environment. The Mean Radiant Temperature (T_r) is a rationally derived environmental index defined as the uniform black-body temperature that would result in the same radiant energy exchange as in the actual environment. The Relative air velocity (v) a direct environmental index is a measure of the air motion obtainable via a hot wire or vane anemometers. The Water vapor pressure in ambient air (P_a) is a direct environmental index.

The physiological variables that influence the conditions of thermal comfort include:

1. Skin Temperature (T_{sk}),
2. Core or Internal Temperature (T_{cr}),
3. Sweat Rate,
4. Skin Wettedness (w),
5. Thermal Conductance (K) between the core and skin.

Where the Skin Temperature (T_{sk}), the Core Temperature (T_{cr}) and the Sweat Rate are physiological indices. The Skin Wettedness (w) is a rationally derived physiological index defined as the ratio of the actual sweating rate to the maximum rate of sweating that would occur if the skin were completely wet. One more consideration is important in dealing with thermal comfort - the effect of asymmetrical heating or cooling. This could occur when there is a draft or when there is a radiant flux incident on a person (which is what is of primary interest to us here). Fanger (5) noted that the human regulatory system is quite tolerant of asymmetrical radiant flux. A reasonable upper limit on the difference in mean radiant temperature (T_r) from one direction to the opposing direction is 15_ (1). This limit is lower if there is a high air velocity in the zone.

Mathematical Models for Predicting Thermal Comfort

Many researchers have been exploring ways to predict the thermal sensation of people in their environment based on the personal, environmental and physiological variables that influence thermal comfort. From the research done, some mathematical models that simulate occupants' thermal response to their environment have been developed. Most thermal comfort prediction models use a seven or nine point thermal sensation scale, as in the following tables.

Seven point Thermal Sensation Scale:

3 hot
2 warm
1 slightly warm
0 neutral
-1 slightly cool
-2 cool
-3 cold

Nine point Thermal Sensation Scale:

4 very hot
3 hot
2 warm
1 slightly warm
0 neutral
-1 slightly cool
-2 cool
-3 cold
-4 very cold

The most notable models have been developed by P.O. Fanger (the Fanger Comfort Model), the J. B. Pierce Foundation (the Pierce Two-Node Model), and researchers at Kansas State University (the KSU Two-Node Model). Berglund (6) presents a detailed description of the theory behind these three models.

Note: for all Thermal Comfort reporting: Though the published values for thermal comfort “vote” have a discrete scale (e.g. –3 to +3 or –4 to +4), the calculations in EnergyPlus are carried out on a continuous scale and, thus, reporting may be “off the scale” with specific conditions encountered in the space. This is not necessarily an error in EnergyPlus – rather a different approach that does not take the “limits” of the discrete scale values into account.

The main similarity of the three models is that all three apply an energy balance to a person and use the energy exchange mechanisms along with experimentally derived physiological parameters to predict the thermal sensation and the physiological response of a person due to their environment. The models differ somewhat in the physiological models that represent the human passive system (heat transfer through and from the body) and the human control system (the neural control of shivering, sweating and skin blood flow). The models also differ in the criteria used to predict thermal sensation.

FANGER COMFORT MODEL

Fanger's Comfort model was the first one developed. It was published first in 1967 (7) and then in 1972 (2), and helped set the stage for the other two models. The mathematical model developed by P.O. Fanger is probably the most well known of the three models and is the easiest to use because it has been put in both chart and graph form.

Description of the model and algorithm

Fanger developed the model based on the research he performed at Kansas State University and the

Technical University of Denmark. Fanger used the seven-point form of a thermal sensation scale along with numerous experiments involving human subjects in various environments. He related the subjects in response to the variables, which influence the condition of thermal comfort. Fanger's model is based upon an energy analysis that takes into account all the modes of energy loss (L) from the body, including: the convection and radiant heat loss from the outer surface of the clothing, the heat loss by water vapor diffusion through the skin, the heat loss by evaporation of sweat from the skin surface, the latent and dry respiration heat loss and the heat transfer from the skin to the outer surface of the clothing. The model assumes that the person is thermally at steady state with his environment.

By determining the skin temperature and evaporative sweat rate that a thermally comfortable person would have in a given set of conditions, the model calculates the energy loss (L). Then, using the thermal sensation votes from subjects at KSU and Denmark, a Predicted Mean Vote (PMV) thermal sensation scale is based on how the energy loss (L) deviates from the metabolic rate (M) in the following form:

PIERCE TWO-NODE MODEL

The Pierce Two-Node model was developed at the John B. Pierce Foundation at Yale University. The model has been continually expanding since its first publication in 1970 (8). The most recent version on the model appears in the 1986 ASHRAE Transactions (9).

The Pierce model thermally lumps the human body as two isothermal, concentric compartments, one representing the internal section or core (where all the metabolic heat is assumed to be generated and the skin comprising the other compartment). This allows the passive heat conduction from the core compartment to the skin to be accounted for. The boundary line between two compartments changes with respect to skin blood flow rate per unit skin surface area (SKBF in L/h•m²) and is described by alpha – the fraction of total body mass attributed to the skin compartment (13).

Furthermore, the model takes into account the deviations of the core, skin, and mean body temperature weighted by alpha from their respective set points. Thermoregulatory effector mechanisms (Regulatory sweating, skin blood flow, and shivering) are defined in terms of thermal signals from the core, skin and body (13).

The latest version of the Pierce model (15) discusses the concepts of SET* and ET*. The Pierce model converts the actual environment into a "standard environment" at a Standard Effective Temperature, SET*. SET* is the dry-bulb temperature of a hypothetical environment at 50% relative humidity for subjects wearing clothing that would be standard for the given activity in the real environment. Furthermore, in this standard environment, the same physiological strain, i.e. the same skin temperature and skin wettedness and heat loss to the environment, would exist as in the real environment. The Pierce model also converts the actual environment into a environment at an Effective Temperature, ET*, that is the dry-bulb temperature of a hypothetical environment at 50% relative humidity and uniform temperature (Ta = MRT) where the subjects would experience the same physiological strain as in the real environment.

In the latest version of the model it is suggested that the classical Fanged PMV be modified by using ET* or SET* instead of the operative temperature. This gives a new index PMV* which is proposed for dry or humid environments. It is also suggested that PMV* is very responsive to the changes in vapor permeation efficiency of the occupants clothing.

Besides PMV*, the Pierce Two Node Model uses the indices TSENS and DISC as predictors of thermal comfort. Where TSENS is the classical index used by the Pierce foundation, and is a function of the mean body temperature. DISC is defined as the relative thermoregulatory strain that is needed to bring about a state of comfort and thermal equilibrium. DISC is a function of the heat stress and heat strain in hot environments and equal to TSENS in cold environments. In summary, the Pierce Model, for our purposes, uses four thermal comfort indices; PMVET- a function of ET*, PMVSET- a function of SET*, TSENS and DISC.

KSU TWO-NODE MODEL

The KSU two-node model, developed at Kansas State University, was published in 1977 (10). The KSU model is quite similar to that of the Pierce Foundation. The main difference between the two models is that the KSU model predicts thermal sensation (TSV) differently for warm and cold environment.

The KSU two-node model is based on the changes that occur in the thermal conductance between the core and the skin temperature in cold environments, and in warm environments it is based on changes in the skin wettedness. In this model metabolic heat production is generated in the core which exchanges energy with the environment by respiration and the skin exchanges energy by convection and radiation. In addition, body heat is dissipated through evaporation of sweat and/or water vapor diffusion through the skin. These principles are used in following passive system equations.

Here, control signals, based on set point temperatures in the skin and core, are introduced into passive system equations and these equations are integrated numerically for small time increments or small increments in core and skin temperature. The control signals modulate the thermoregulatory mechanism and regulate the peripheral blood flow, the sweat rate, and the increase of metabolic heat by active muscle shivering. The development of the controlling functions of skin conductance (KS), sweat rate (Esw), and shivering (Mshiv) is based on their correlation with the deviations in skin and core temperatures from their set points.

The KSU model's TSV was developed from experimental conditions in all temperature ranges and from clo levels between .05 clo to 0.7 clo and from activities levels of 1 to 6 mets (6).

References

1. ASHRAE, "High Intensity Infrared Radiant Heating", 1984 system Handbook, American Society of Heating, Refrigerating and Air Conditioning Engineers, Atlanta, GA, Chapter 18, 1984.
2. Fanger, P.O., Thermal Comfort-Analysis and Applications in Environmental Engineering, Danish Technical Press, Copenhagen, 1970.
3. ASHRAE, "Physiological Principles for Comfort and Health," 1985 Fundamental Handbook, American Society of Heating, Refrigerating and Air Conditioning Engineers, Atlanta, GA, Chapter 8, 1985.
4. Du Bois, D. and E.F., "A Formula to Estimate Approximate Surface Area, if Height and Weight are Known", Archives of internal Medicine, Vol.17, 1916.
5. Fanger, P.O., "Radiation and Discomfort", ASHRAE Journal. February 1986.
6. Berglund, Larry, "Mathematical Models for Predicting the Thermal Comfort Response of Building Occupants", ASHRAE Trans., Vol.84, 1978.
7. Fanger P.O., "Calculation of Thermal Comfort: Introduction of a Basic Comfort Equation", ASHRE Trans., Vol.73, Pt 2, 1967.
8. Gagge, A.P., Stolwijk, J. A. J., Nishi, Y., "An Effective Temperature Scale Based on a Simple Model of Human Physiological Regulatory Response", ASHRAE Trans., Vol.70, Pt 1, 1970.
9. Gagge, A.P., Fobelets, A.P., Berglund, L. G., "A Standard Predictive Index of Human Response to the Thermal Environment", ASHRAE Trans., Vol.92, Pt 2, 1986.
10. Azer, N.Z., Hsu, S., "The prediction of Thermal Sensation from Simple model of Human Physiological Regulatory Response", ASHRAE Trans., Vol.83, Pt 1, 1977.
11. Hsu, S., "A Thermoregulatory Model for Heat Acclimation and Some of its Application", Ph. D. Dissertation, Kansas State University, 1977.
12. ISO., "Determination of the PMV and PPD Indices and Specification of the Conditions for Thermal Comfort", DIS 7730, Moderate Thermal Environment, 1983.
13. Doherty, T.J., Arens, E., "Evaluation of the Physiological Bases of Thermal Comfort Models", ASHRAE Trans., Vol.94, Pt 1, 1988.
14. ASHRAE, "Physiological Principles and Thermal Comfort", 1993 ASHRAE Handbook-Fundamentals, American Society of Heating, Refrigerating and Air Conditioning Engineers, Atlanta, GA, Chapter 8, 1993.
15. Fountain, Marc.E., Huizenga, Charlie, "A Thermal Sensation Prediction Tool for Use by the Profession", ASHRAE Trans., Vol.103, Pt 2, 1997.
16. Int-Hout, D., "Thermal Comfort Calculation / A Computer Model", ASHRAE Trans., Vol.96, Pt

15.8 EnergyPlus Date Definition

Field Contents	Interpretation	Example
<Number> / <Number>	Month / Day	12 / 31
<Number> / Month	Day and Month	31 Dec
Month / <Number>	Day and Month	Dec 31
<Number> Weekday in Month	Numbered weekday of month	1st Saturday in April
Last Weekday in Month	Last weekday of month	Last Sunday in October

Notes

Month can be one of:

- January,
- February,
- March,
- April,
- May,
- June,
- July,
- August,
- September,
- October,
- November,
- December.

Abbreviations of the first three characters are also valid.

Weekday can be one of:

- Sunday,
- Monday,
- Tuesday,
- Wednesday,
- Thursday,
- Friday,
- Saturday.

Abbreviations of the first three characters are also valid.

15.9 EnergyPlus Documentation

You can get the EnergyPlus user guides:

- Getting Started and Overview
- Input/Output Reference
- Output Details and Examples

- Engineering Reference
- Auxiliary Programs

Free from the EnergyPlus website:

<http://www.eere.energy.gov/buildings/energyplus/documentation.html>

Section

16

**Support -
Getting Help**

If you need information that you could not find in this help file you should **first check the FAQ and Support Forum** on the Website:

<http://www.designbuilder.co.uk/support>

If this does not give you the information you need you can send us a support request using a [Support Request Form](#) and DesignBuilder team will endeavour to answer your question by email.

16.1 Frequently Asked Questions

An up-to-date [FAQ list](#) is maintained from the [Support section](#) of the DesignBuilder web site.

Index

- 2 -

2-D 79
2-D layouts 79

- 3 -

32-bit 492
3-D 79, 104, 464, 465, 492
3-D hardware 492
3-D shape 104
3GHz 492
3TC 345
3TC simulations 345

- A -

Absorptance 307, 320
Ach 273, 296, 302, 313
Activation 491
Activity 17, 184, 189, 239, 240, 242, 273, 326, 369, 374, 375, 376, 384, 401
Activity data 184, 384
Activity Templates 184, 326, 374
Add New Component 332
Add New Template 334
Adding 41, 89, 97, 122, 484
Adding Blocks 41
Advanced 282, 289, 418, 504
Advanced concepts 289
Air 246, 253, 276, 388, 407, 411, 423
Air Distribution On 407, 411, 423
Air Temperature Distribution 246, 276, 388
Airflow 369
AirTemperature Distribution 246, 253, 276
Airtightness 198, 213, 379
 value 394
Airtightness Calculated 213
Airtightness Scheduled 213
AIVC 400

All 21, 30, 35, 61, 72, 104, 166, 176, 178, 184, 198, 199, 214, 215, 216, 223, 224, 228, 229, 239, 280, 281, 282, 285, 286, 287, 296, 302, 307, 313, 320, 329, 351, 356, 361, 372, 375, 399, 407, 411, 418, 423, 492, 504
All Gains 375
Allow 15, 21, 23, 27, 28, 31, 36, 41, 45, 46, 55, 57, 59, 87, 89, 120, 140, 159, 176, 178, 183, 184, 188, 223, 227, 235, 276, 280, 281, 289, 294, 296, 298, 301, 304, 307, 312, 320, 326, 327, 329, 334, 335, 338, 346, 367, 388, 397, 403, 446, 447, 449, 453, 491, 492, 504, 508
Allow antialiasing 327
Alternative 350, 508
Alternative Specification 350
Analysis 15, 87, 284, 411, 415, 420, 423
And/or 186, 398
Antialiasing 327, 435, 439
Apply 41, 59, 175, 177, 178, 184, 199, 215, 216, 223, 224, 228, 229, 236, 238, 289, 296, 302, 307, 313, 320, 327, 345, 356, 361, 367, 368, 381, 389, 390, 397, 436, 439, 465
Apply button 436, 439
Arc 36, 38, 453
ASHRAE 187, 296, 302, 313, 345, 389, 401, 403, 410
Asynchronously 449
Auto-Complete Block 89, 97, 119, 120, 324
Automatic 446
Autosize 287
Autosizing 287
Auto-Update 418
AuxiliaryPrograms.pdf 525
Average 178, 183, 187, 236, 350, 375, 397, 399, 407, 411, 423, 465
Average Mean Radiant Temperature 407, 411, 423
AVI file 446
Axis Snap 41, 89
Axonometric 33

- B -

Back 27, 75, 122, 140, 159, 183, 281, 307, 320, 332, 335, 337, 338, 411, 423
Back face 122
Backup 332, 334, 337, 338, 446, 489
Backup Component/Template Libraries 337
Backup toolbar icon 337
Backup/Manual 337
Beam-to-diffuse 307, 320
Behind-the-scenes 508

- Blank 30
 - BLAST 296, 302, 313, 508
 - Blinds 15, 219, 220, 232, 340, 366, 367, 368, 508
 - Blinds Components 220, 232
 - Block 15, 21, 27, 30, 31, 35, 36, 38, 40, 41, 45, 46, 55, 57, 59, 64, 67, 72, 75, 77, 79, 88, 97, 100, 115, 116, 118, 119, 120, 122, 140, 141, 144, 146, 147, 158, 159, 160, 183, 199, 280, 282, 294, 320, 324, 326, 328, 329, 356, 375, 387, 464, 504
 - Adding 89
 - Building 100
 - set 104
 - Block comprises a set 100
 - Block Creation options 97, 320, 324
 - Block edge 45, 55, 59, 64
 - help 46
 - Block Forms 115, 119
 - Block Geometry 67, 88, 100, 140, 159, 328
 - Block having 329
 - Block Level 15, 21, 75, 140, 146, 159, 160, 282, 294
 - Block Model Options
 - access 282
 - Block partition 41
 - endpoint 55
 - Block Types 97, 100, 104, 122
 - BRE-3TC 342
 - Briging 341
 - BS EN IOS 6946 341
 - Btu/h-ft2 345
 - Btu/h-ft2-F 345
 - Building 86, 87, 140, 159, 184, 246
 - Block 100
 - Geometry 30
 - Level 88
 - Model Data 183
 - Models 30
 - Building Level 15, 21, 41, 67, 72, 75, 77, 79, 88, 146, 184, 248, 282, 369, 423, 508
 - Building Model 21, 30, 87, 140, 159, 176, 183, 189, 280, 346, 381, 464, 508
 - Buoyancy-driven 287
 - Calculating building energy 14
 - Calculating heating 14
 - Calculation Options 296, 302, 312, 313, 418, 446
 - Calculation/rendering
 - number 491
 - Calculations 147, 178, 181, 182, 284, 287, 294, 296, 301, 302, 307, 312, 313, 320, 342, 345, 346, 390, 391, 397, 401, 403, 404, 407, 410, 411, 415, 418, 420, 423, 436, 446, 464
 - Canada 484
 - Cancel Cut 122
 - Cancel Pan 31
 - Capabilities 15, 327, 403, 508
 - Categorise 399
 - Category 183, 198, 220, 232, 285, 307, 320, 332, 334, 361, 366, 367, 369, 372, 375, 378, 380, 382, 383, 387, 394, 395, 396, 401
 - Holiday Schedule 370
 - Catering 184
 - gains 195
 - CEC 1985 484
 - Ceilings 199, 296, 302, 313, 378, 407, 411, 423
 - Centre 31, 36, 38, 64, 162
 - Centred 34
 - Centre-point
 - place 36
 - CFD 400
 - Change rate 287, 296, 302, 313, 394
 - Changes 15, 21, 28, 31, 36, 41, 45, 86, 89, 115, 140, 159, 166, 176, 183, 214, 215, 223, 228, 248, 273, 282, 284, 287, 296, 302, 313, 328, 332, 340, 356, 376, 380, 394, 403, 447
 - in.idf 508
 - Model Data 175
 - Chapter 187, 401
 - Characterised 394
 - Characteristics 178, 341, 403, 410, 418
 - Enter 395
 - Check 30, 41, 45, 46, 61, 184, 199, 220, 222, 232, 235, 236, 237, 238, 242, 273, 280, 285, 287, 294, 296, 302, 313, 341, 384, 398, 403, 418, 436, 439, 446, 465, 491
 - FAQ 528
 - Checkbox 199, 220, 222, 232, 242, 273, 294
 - Checks requiring 341
 - CheckWarmupConvergence 296, 302, 313
 - Choosing
 - Metabolic 401
 - CIBSE 296, 302, 313, 342, 403, 410
 - Circle 36, 116, 118, 453
 - Clear 171, 183, 199, 280, 281, 294, 418
- C -
- CAD 59
 - Calculated data 342
 - Glazing 345
 - Calculates heating 14, 403

- Clear 171, 183, 199, 280, 281, 294, 418
 - default 15
- Clear data 171, 183, 280
 - default 281
 - Default dialog 281
- Clear Down 281
- Clear Model Data 281
- Clone 72, 75, 163, 171, 332, 334
- CO2 15, 397, 423
- Codes 177, 182, 372, 389, 390, 398
- Codes/building 15, 396
- Codes/insulation 183
- Coefficient 178, 296, 302, 313, 341, 342, 346, 350, 368, 369, 372, 387, 394, 400
- Colour 41, 45, 77, 89, 122, 346, 375, 387
- Coloured 55
- Comfort temperature 417
 - mean 407, 411, 423
- COMIS 400, 464
- Comma-separated 335
- Compact HVAC 248, 387, 508
- Compiling
 - reports 444
- Component 14, 16, 17, 21, 23, 33, 87, 198, 220, 222, 232, 332, 334, 335, 337, 340, 341, 344, 346, 349, 361, 368, 372, 398, 399, 407
- Component data 222, 332, 340, 361
- Component gives the copy 332
- Component Library 332, 372
 - manage 340
- Component/Template 337, 338
- Components/Template Library 335
- Components/templates 335
- Computer gains 193
- Computers 23, 184, 193, 285, 376, 391, 411, 423, 439, 449, 484, 489, 491, 492, 504
- Concepts 21, 289
- Construction 15, 17, 21, 23, 41, 46, 67, 72, 87, 100, 140, 141, 159, 178, 183, 184, 198, 199, 214, 216, 224, 229, 280, 283, 285, 296, 302, 307, 313, 320, 329, 340, 341, 342, 345, 346, 372, 377, 378, 379, 380, 381, 394, 453, 465, 489, 508
- Construction calculated data 342
- Construction Components 341
- Construction Data 198, 214, 377, 380
- Construction image 342
- Construction layer data 341
- Construction Lines 46, 67
 - Drawing 67
 - Removing 72
- Construction Location 199
- Construction Templates 15, 87, 198, 285, 372, 377, 378, 379
- Construction types 23, 199, 378
- Continuous Control 242, 384
- Continuous/Off Control 242, 384
- Control-R 175
- Controls 14, 15, 31, 35, 36, 38, 59, 79, 87, 97, 118, 140, 159, 182, 186, 189, 199, 215, 223, 228, 235, 236, 237, 238, 239, 273, 280, 281, 284, 285, 287, 289, 296, 301, 307, 312, 320, 325, 368, 370, 384, 387, 396, 418, 435, 436, 439, 440, 446, 447
 - Lighting 242
 - Use 341
- Control-Z 175
- Converge 296, 302, 313, 403, 410, 418
- Conversion 350
- Convert 104, 120, 122, 140, 144, 159, 166, 181, 350
- Convert Outline Block 104, 120, 144
- Cooling 246, 282, 387, 411, 417, 423
 - Design Calculation Options 301, 410
 - design simulation 410
 - setpoint 189
 - system 304
- Cooling Design 181, 182, 273, 282, 287, 301, 403, 410, 411, 415, 417, 423
- Cooling Design Calculation Options 301, 410
- Cooling Design Calculations 301, 410
- Cooling Design Output
 - Reviewing 415
- Cooling Screen 410
- CoP 387
- Copy 30, 72, 75, 86, 100, 104, 163, 171, 491, 508
 - component gives 332
 - EnergyPlus 484
 - Model Component 340
 - template gives 334
- Core 21
- Core concepts 21
- COS 178
- CPU 492
- Crack Templates 379, 394, 395
- Cracks 213, 287, 289, 372, 379, 394, 395, 407, 411, 423
- Create 15, 16, 28, 30, 34, 35, 38, 61, 64, 67, 86, 87, 89, 100, 104, 115, 116, 118, 119, 122, 146, 147, 163, 214, 222, 236, 238, 285, 332, 334, 337, 340, 341, 380, 446, 464, 489
 - DesignBuilder 88
- Voids 158

- Create building geometry 30
 - Create drawing 104
 - Create new 30, 86, 87, 489
 - Create New Building 30, 86, 87
 - Create New Site 30, 489
 - Creation 15, 59, 67, 88, 97, 100, 104, 115, 320, 324
 - points during 67
 - Csv-spreadsheet 335
 - CTRL key
 - press 72
 - Ctrl-C 491
 - Ctrl-U 404, 415, 420
 - Ctrl-V 491
 - Custom hourly weather data 484
 - Customise 407, 411, 423
 - Model Data Options 283
 - Customised 28
 - Customising 21, 28
 - Customising Model Options 28
 - Cut block 122
 - Cutting 122
 - Cutting method' 104, 122
- D -**
- Dat 332, 335, 489
 - Data 14, 15, 17, 21, 23, 28, 30, 35, 41, 45, 46, 59, 64, 79, 86, 87, 89, 97, 104, 115, 116, 118, 122, 140, 158, 159, 166, 176, 177, 178, 181, 182, 183, 184, 187, 188, 198, 214, 215, 220, 223, 227, 228, 232, 235, 236, 238, 240, 242, 246, 253, 273, 280, 281, 282, 285, 287, 289, 296, 301, 302, 312, 313, 332, 334, 335, 337, 341, 342, 344, 345, 346, 349, 351, 360, 361, 366, 367, 368, 369, 372, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 386, 387, 388, 389, 390, 391, 392, 394, 396, 397, 398, 399, 400, 401, 403, 404, 407, 410, 411, 415, 418, 420, 423, 446, 447, 453, 465, 484, 489, 508
 - Exporting 443
 - Lighting 239
 - open 199
 - Data inheritance 21, 280
 - Data Map Mode 280
 - Daylight 14, 15, 177, 181, 242, 346, 384, 389
 - Daylight saving 177, 181
 - Days 182, 188, 286, 296, 302, 307, 313, 320, 351, 356, 369, 403, 410, 418, 436, 465, 484, 491
 - DBSim 342, 345
 - Debug Output 489
 - Default 16, 21, 30, 33, 36, 38, 87, 141, 147, 162, 166, 171, 178, 181, 183, 216, 224, 229, 248, 253, 276, 280, 287, 294, 296, 302, 313, 326, 372, 374, 376, 378, 379, 380, 384, 388, 403, 407, 410, 411, 423, 446, 447, 449, 465, 489
 - Clear 15
 - Clear data 281
 - Default allowing 446
 - Default Data 15, 21, 30, 87, 183, 248, 281, 294, 372, 446
 - Default dialog
 - Clear Data 281
 - Default glazing 380
 - Default lighting 87
 - Delete 72, 79, 86, 104, 122, 163, 166, 171, 332, 334, 341, 370, 372
 - Depending
 - Natural 213
 - Deselect 351
 - Design 14, 15, 16, 28, 30, 33, 59, 87, 181, 182, 273, 282, 287, 296, 302, 313, 374, 389, 390, 391, 400, 403, 407, 410, 411, 417, 418, 423, 464
 - Heating 296, 404
 - Design Calculation options
 - Cooling 301, 410
 - Heating 296, 404
 - Design cooling 410, 417
 - Design Days 296, 302, 313
 - Design heating 407, 417
 - Design simulation 282, 403
 - Cooling 410
 - Heating 403
 - DesignBuilder 14, 15, 16, 17, 21, 23, 27, 28, 30, 33, 36, 38, 79, 181, 182, 187, 198, 199, 214, 222, 235, 236, 237, 238, 242, 248, 280, 282, 286, 287, 332, 335, 338, 372, 390, 391, 395, 396, 398, 400, 401, 403, 410, 446, 447, 449, 453, 464, 465, 484, 489, 491, 492, 504, 508, 528
 - create 88
 - DesignBuilder Component/Template 335
 - DesignBuilder Data 187, 401, 489
 - DesignBuilder dsb file 282
 - DesignBuilder Edit Screen 17
 - DesignBuilder EnergyPlus 508
 - DesignBuilder file 30, 489
 - DesignBuilder GUI 491
 - DesignBuilder Location Templates 390
 - DesignBuilder Merging 464
 - DesignBuilder Templates 372
 - DesignBuilder tips 15
 - DesignBuilder Version 1.0 199

- DesignBuilder Website 484, 489
 - Detailed building 418
 - Detailed building operation 464
 - Detailed heating design 407
 - Detailed Results 407, 411, 423
 - Detailed shading 436
 - Dialogs 16, 115, 181, 199, 282, 283, 332, 334, 342, 349, 418, 446, 464, 489, 504
 - DiffuseSolar 178
 - Dimensions 72, 215, 223, 228, 341
 - Direction 38, 40, 41, 45, 46, 57, 59, 61, 67, 72, 122, 178, 182, 320, 324, 341, 390, 423, 439
 - Direction snaps 41, 59, 61, 72, 324
 - Discontinuities 296, 302, 313
 - Display 15, 16, 30, 41, 45, 46, 55, 57, 64, 72, 75, 77, 79, 97, 100, 122, 162, 166, 220, 232, 282, 287, 289, 325, 392, 403, 404, 407, 411, 415, 420, 423, 435, 439, 484, 491, 492, 504
 - North Arrow 327
 - option affects 326
 - Distance 34, 57, 59, 67, 115, 120, 166, 367
 - Distribution 246, 253, 276, 388, 407, 411, 423
 - Divide block 104, 120, 122
 - Dividing 122, 239, 240, 242
 - DLL 449, 508
 - Document 178, 296, 302, 313, 489, 517
 - Documentation 187, 242, 296, 302, 313, 350, 401, 403, 465, 489
 - DOE 449, 508
 - DOE building 508
 - DOE EnergyPlus 449, 508
 - DOE-2 296, 302, 313, 508
 - DOE-supplied EPLaunch 449
 - Dome 115, 119
 - Don't show 418
 - Door opening 236
 - Door Operation 235, 236
 - Door Placement 236
 - Door replacing 235
 - Doors 30, 100, 163, 199, 214, 215, 223, 228, 235, 236, 238, 273, 307, 320, 395
 - Downloading
 - hourly weather data 484
 - Drag 34, 59, 64, 72, 89, 100, 104, 120, 122, 140, 147, 159, 356
 - Drag block face 120
 - Draw Block 41, 59, 115, 320, 324
 - Draw Door 170, 235
 - Draw Hole 170
 - Draw Sub-Surface 170, 199
 - Draw Vent 171, 237
 - Draw void 158
 - Draw window 35, 61, 100, 166, 170, 171
 - Draw window' tool 40
 - Drawing 35, 41, 45, 46, 115, 122, 147, 158, 170, 171, 324, 325
 - Construction Lines 67
 - guides 61, 324
 - tools 320
 - Drawing block partitions 59
 - Drawing Options 35, 41, 45, 46, 115, 122, 158
 - Drawing Options data 115
 - Drawing partitions 147
 - Drawing Tools 31, 320
 - Dsb file 30, 332
 - existing 16
 - DXF 55, 59, 79, 307, 320, 446, 489
 - Importing 79
 - Move 79
 - DXF file 79, 446, 489
 - DXF file import/export 446
 - DXF Snap 55, 59
 - Dynamics 14, 326, 403, 410, 435, 440
- E -**
- Early 59, 87, 239, 285, 375, 376
 - Edge Snap 55, 57, 59, 64, 122
 - Edit 15, 16, 17, 27, 28, 30, 31, 34, 59, 72, 75, 88, 104, 120, 122, 140, 146, 158, 159, 160, 163, 166, 171, 175, 176, 177, 181, 199, 280, 282, 283, 284, 294, 325, 326, 328, 332, 334, 351, 370, 372, 446, 486
 - Edit block Options 140, 159, 328
 - Edit blocks 120, 140, 159, 294, 328
 - Edit building models 280
 - Edit menu 28, 72, 104, 175, 280, 282
 - Edit Mode 31
 - Edit model data 294
 - Edit on Visualisation Screens 326
 - Edit Screen 16, 17, 27, 75, 88, 146, 158, 160, 163, 176, 326
 - Edit surfaces 171
 - Edit toolbar button 332, 334
 - Edit View 16, 325, 326
 - Electrochromic 220, 232, 366, 368
 - Email 528
 - E-mail 491
 - Emission factors 182

- Emissions 182, 396, 397, 401, 423
- Emissivity 346, 351
- End 57, 59, 67, 118, 122, 147, 166, 199, 286, 313, 356, 418
- End face 122
- Endeavour 528
- Endpoint 36, 38, 55, 56, 57, 59, 61, 64, 67, 72, 79, 122, 147
 - block partition 55
- Endpoint Snap 36, 55, 56, 64, 72
- Energy 14, 15, 177, 182, 183, 198, 253, 287, 341, 372, 387, 389, 390, 396, 397, 398, 399, 403, 411, 418, 420, 423, 508
- Energy Code Templates 398, 399
- Energy Codes 15, 183, 198, 341, 372, 397, 398, 399
- Energy codes/insulation standards 183
- Energy Performance Indicator simulations 403
- Energy+.idd 489
- EnergyPlus 14, 15, 147, 178, 181, 187, 199, 236, 238, 242, 248, 276, 287, 296, 302, 307, 313, 320, 341, 342, 344, 345, 349, 350, 369, 372, 384, 388, 392, 400, 401, 403, 404, 410, 415, 418, 420, 446, 464, 484, 489, 508, 517
 - Copy 484
 - defines 387
 - generating 504
 - let 508
 - need 491
 - requiring 504
 - showing 449
 - use 465
- EnergyPlus 2-D 464
- EnergyPlus Auxiliary 178
- EnergyPlus background information 508
- EnergyPlus DAYLIGHTING 242
- EnergyPlus DXF 504
- EnergyPlus Engineering Reference Document 296, 302, 313
- EnergyPlus epw 181, 484
- EnergyPlus Errors 489, 517
- EnergyPlus glazing data 344, 349
- EnergyPlus IDF 404, 415, 420, 508
- EnergyPlus Output Details 517
- EnergyPlus Script 404, 415, 420
- EnergyPlus Support 248
- EnergyPlus website 484
- English 489
- Envelope 198, 398, 399
- Environmental comfort 184, 189, 273
- Environmental/Comfort 376
- EPLaunch 449
- EP-Launch 508
- Eplusout.csv 489
- Eplusout.dbg 489
- Eplusout.dxf 307, 320, 489
- Eplusout.dxf file
 - viewing 307, 320
- Eplusout.eio 489
- Eplusout.end 489
- Eplusout.err 489, 517
- Eplusout.eso 489
- Eplusout.mtr 489
- Eplusout.rdd 489
- Epw 484
- Epw file 484
- Errors 307, 320, 492, 517
- ESC key 89
 - press 36, 67, 122, 147
 - pressing 31
- Eso file 489
- Europe 389, 390, 396, 484
- Evaluating
 - façade 14
- Examples 15, 21, 31, 35, 55, 57, 59, 61, 64, 67, 104, 122, 147, 184, 198, 199, 223, 227, 235, 307, 320, 329, 341, 356, 372, 447, 484, 517
 - energy code requires 398
- EXE 449
- Existing
 - dsb file 16
- Export 508
- Export Components/Templates 335
- Export toolbar icon
 - clicking 335
- Exporting 335
 - Data 443
 - IDF 508
 - IDF Files 508
- Exporting IDF 508
- Exposed 296, 302, 313
 - entering 199
- Extensions 404, 415, 420, 484, 489
- External 15, 21, 59, 100, 141, 147, 158, 198, 199, 214, 215, 219, 228, 236, 238, 287, 307, 320, 361, 377, 381, 395, 403, 407, 410, 411, 423, 465, 484, 491, 508
- External Glazing 214, 215, 361, 381
- Extruded 41, 59, 67, 88, 89, 104, 115, 119, 120, 140, 147, 159

- F -

F11
 Pressing 282
F3 27
F4 27
F5 27
Facade 87, 100, 199, 215, 223, 228, 236, 238, 280, 281, 372, 381, 382, 447
Façade 307, 320
 Evaluating 14
Facade Templates 381, 382
Familiarise 15
Fan 253, 387, 423
FAQ 528
 check 528
Farea-flow 236, 238
Fatal 307, 320, 517
Figure 27, 296, 302, 313, 356
File describing 484
Filename 79, 392, 484
Filename/Extension 489
Filename/location 508
Files 15, 16, 30, 59, 79, 178, 332, 334, 335, 340, 359, 372, 380, 391, 403, 404, 415, 418, 420, 446, 453, 465, 484, 489, 491, 508, 517, 528
Finish 67, 79, 88, 100, 104, 122
Finished building block 88
Fit 31, 34, 122, 184, 199, 235, 236, 237, 238, 362, 363, 364, 387, 439, 504
 automatically cut 147
Fit flush 122
Fit view 31, 34
Fixed 215, 223, 228, 382, 387
Floor shading 325, 326
Floors 75, 88, 100, 104, 160, 162, 178, 184, 186, 193, 194, 195, 196, 198, 199, 238, 296, 302, 307, 313, 320, 325, 326, 375, 377, 378, 387, 395, 403, 407, 411, 423, 465
Floors/Ceilings 395
Folders 30, 332, 334, 337, 404, 415, 420, 446, 449, 484, 489, 508, 517
Folders menu 489
Form 67, 87, 88, 89, 97, 115, 116, 118, 140, 147, 159, 492, 528
 2D 79
Forums 15
Frame 77, 215, 223, 228, 326, 345, 372, 380, 381, 436, 464

Has 216, 224, 229, 382
Frequently 528
Frequently Asked Questions 528
Full 147, 284, 307, 320, 508
Full building simulation 284
Full Exterior 147, 307, 320
Full Interior 307, 320
Fundamentals
 ASHRAE Handbook 187, 296, 302, 313, 401

- G -

Gable Roof 118
Gains 184, 186, 187, 193, 194, 196, 239, 240, 242, 283, 285, 286, 307, 320, 375, 376, 384, 401, 403, 410, 411, 418, 423, 447, 464
 Catering 195
Gains and/or 186
Gains data model detail 285
Gains including 285
Gains including occupancy 285
Gas 340, 344, 345, 360, 423, 508
General 33, 72, 115, 198, 239, 240, 285, 296, 302, 313, 325, 328, 349, 366, 367, 369, 370, 375, 378, 380, 382, 383, 384, 387, 392, 395, 396, 399, 411, 418, 423
General Extrusion 115
General Lighting 239, 240, 384, 411, 423
General lighting gains 411, 423
General operations 72
General+Local 399
General-purpose
 Recommended 87
Generate EnergyPlus IDF 15
Generating
 EnergyPlus 504
Geometric Data
 Importing 79
Geometry 30, 36, 38, 59, 67, 104, 115, 120, 122, 147
 Building 30
Getting 14
Getting Help 528
Getting Started
 Watch 14
Glass 307, 320, 350
Glass Optical Properties
 Alternative Specification 350
Glazing 214, 215, 223, 227, 228, 235, 283, 360

- Glazing 214, 215, 223, 227, 228, 235, 283, 360
 - calculated data 345
 - Components 344
 - layer data 344
 - Model 183
 - model detail 285
 - Templates 380, 381
 - Glazing area 223, 227, 235
 - Glazing Component 344
 - Glazing Components 344
 - Glazing Template 87, 214, 380
 - Go to...' menu 27
 - Go up.' menu 27
 - Graphical User Interface
 - modelling 491
 - Green 41, 55, 122, 332, 334, 372, 484
 - Grid 16, 59
 - Ground 55, 67, 72, 89, 122, 176, 178, 199, 296, 302, 307, 313, 320, 407, 411, 423, 461, 465
 - Ground Modelling 465
 - Ground plane 55, 67, 72, 89, 122, 307, 320
 - GroundReflectance 178
 - GroundReflectedSolar 178
 - GUI 491
 - Guides 40, 45, 46, 67, 75, 122, 147, 166, 320, 324, 325
 - Drawing 61, 324
- H -**
- Hardware 327, 492
 - Hardware Requirements 492
 - Has 15, 16, 27, 30, 46, 59, 72, 86, 89, 104, 115, 119, 120, 182, 183, 240, 242, 296, 302, 313, 332, 334, 345, 356, 372, 394, 396, 403, 407, 410, 411, 418, 423, 464, 484, 489, 492, 504, 508
 - frame 216, 224, 229, 382
 - Has become 72
 - Has glazing 464, 504
 - Heat Balance 296, 302, 307, 313, 320, 345, 415, 420
 - Heating 246, 282, 287, 407, 417
 - Design 296, 404
 - Design Calculation options 296, 404
 - design simulation 403
 - setpoint 189
 - start 404
 - System Sizing 298
 - Heating Design 182, 282, 287, 296, 302, 313, 403, 404, 407, 423
 - Heating Design output 404
 - Heating Screen 403
 - Heating/cooling 287, 387
 - Heating/cooling system 287, 387
 - Heavyweight 15, 372
 - Height 61, 79, 89, 97, 119, 120, 122, 199, 215, 223, 228, 238, 359, 382
 - Help 15, 17, 36, 57, 67, 88, 89, 100, 120, 166, 176, 280, 340, 384, 418, 461, 489, 491, 528
 - block edge 46
 - Help menu 491
 - Holiday Schedule 188, 369, 370, 399
 - Category 370
 - Holidays 87, 184, 188, 340, 369, 370, 399, 453
 - Hourly 15, 30, 178, 181, 296, 302, 313, 372, 391, 392, 418, 464, 484, 489
 - Hourly results 464
 - Hourly weather data 181, 372, 391, 392, 418, 484, 489
 - Downloading 484
 - Hourly weather data follow 484
 - HVAC 14, 17, 87, 183, 186, 223, 227, 235, 236, 238, 246, 248, 273, 280, 283, 286, 287, 296, 302, 313, 326, 372, 386, 387, 388, 403, 410, 411, 417, 418, 423, 464, 508
 - HVAC data 246
 - HVAC model detail 287
 - HVAC portion 296, 302, 313
 - HVAC System Type 248
 - HVAC Templates 87, 246, 372, 386, 387, 388
 - according 326

- I -

 - ID 335
 - IDD 248, 504
 - IDD file 248
 - Idf 404, 415, 420, 489, 491, 508
 - Exporting 508
 - IDF Files 491, 508
 - Exporting 508
 - Illuminance 87, 189, 239, 240, 242, 374, 376, 384
 - Image 326, 359, 435, 439
 - Import Components/Templates 335
 - Import DXF 79
 - Import DXF drawing file 79
 - Import toolbar icon 335
 - Importing

Importing

- DXF 79
- Geometric Data 79
- In.idf 404, 415, 420
 - changes 508
- Increasing Quality 439
- Increment Snap 55, 57, 59, 72, 77, 89, 166
- Increment snap acting 59
- Increment snap applies 59
- Increments 55, 57, 64, 72, 77, 89, 166
 - 0.5m 59
- Indicator 55, 57, 403
- Info 16, 17, 332, 341, 344, 349, 351, 370, 418, 447
 - access 334
- Info Pane 370
- Info Panel 16, 17, 332, 334, 341, 344, 349, 351, 418, 447
 - Toolbar 16
- Info window 447
- Inner 342, 367
- Inside/Outside 342
- Inside/site 420
- Insulation 182, 183, 184, 198, 199, 220, 232, 285, 341, 366, 372, 378, 397
- Insulation Standards 182
- Integrated Solution Manager 296, 302, 313
- Intel 492
- Interface 447, 508
- Internal 15, 184, 186, 187, 193, 194, 195, 196, 198, 199, 214, 223, 236, 238, 240, 242, 285, 286, 296, 302, 307, 313, 320, 361, 374, 381, 395, 403, 417, 449, 464, 465
 - comfort temperature - The mean 407, 411, 423
- Internal Doors 199, 236
- Internal Glazing 214, 223, 361, 381
- Internal Vents 238
- International 446, 453
- Internet 491
- Inter-reflections 307, 320
- Introducing
 - Templates 372
- IP 453
- Issues 464
 - Modelling 461
- IT 193
- IT-related 411, 423

- J -

- Jaggy 327

- K -

- Keep 14, 21, 28, 34, 72, 89, 166, 464, 484
 - SHIFT key 55
 - Templates 332

- L -

- Large 15, 178, 189, 284, 285, 287, 296, 302, 307, 313, 320, 326, 332, 367, 395, 418, 447, 461, 464, 465, 504
- Large building 285
- Large building models 15, 287
- Large Models 464
- Large/complex DesignBuilder
 - creating 15
- Latitude/longitude
 - set 178
- Layer 79, 341, 342, 344, 345, 346, 360
 - surface's 307, 320
- Layer data
 - Glazing 344
- Layer having 341
- Layout 14, 79, 199, 214, 215, 223, 228, 235, 236, 237, 238, 329, 381, 447, 508
- Learning 16, 447
 - Mode Off 17
 - Mode On 17
- Learning Mode 16, 17, 447, 484
- Learning Mode Off 16, 17
- Learning Mode On 17
- LEFT 356
- Left/right 356
- Legislative 176, 182, 372, 380, 389, 390, 396, 397, 399
- Legislative Region 176, 182, 380, 389, 390, 396, 397, 399
- Legislative Region Templates 396, 397
- Let
 - EnergyPlus 508
- Level 15, 21, 27, 28, 30, 86, 87, 175, 176, 178, 183, 199, 239, 240, 242, 246, 280, 282, 285, 374, 375, 376, 378, 379, 384, 387, 397, 465, 484, 517
 - Building 88

- Level 15, 21, 27, 28, 30, 86, 87, 175, 176, 178, 183, 199, 239, 240, 242, 246, 280, 282, 285, 374, 375, 376, 378, 379, 384, 387, 397, 465, 484, 517
 - rate according 187, 375
 - Library 16, 23, 280, 332, 334, 335, 337, 338, 340, 489
 - Library Components 332, 340
 - Library Management 332
 - License 491
 - License dialog 491
 - Light Sensors
 - Placing 162
 - Lighting 17, 162, 240, 242, 372
 - Areas 242
 - control 242
 - data 239
 - Sensors 242
 - Templates 383, 384
 - Lighting Control 14, 15, 87, 162, 239, 242, 384
 - Lighting Control On 162, 242
 - Lighting data 239, 240, 242
 - Lighting Template 87, 239, 372, 383
 - Lightweight 199, 372
 - Limits 296, 302, 313, 399, 446, 453
 - Line passing 307, 320
 - Line Type 36, 38
 - Lines 36, 38, 40, 41, 45, 46, 55, 57, 59, 61, 64, 67, 72, 104, 122, 177, 184, 198, 214, 239, 246, 307, 320, 327, 411, 423, 489, 517
 - Z-axis 41, 67, 89
 - Load Data 15, 30, 176, 177, 184, 198, 280, 372
 - Access 280
 - Load Data From Template tool 177, 184, 198
 - use 372
 - Load lighting data 239, 240, 242
 - Loads 15, 23, 28, 30, 176, 177, 183, 184, 198, 214, 239, 240, 242, 246, 276, 280, 285, 287, 296, 302, 313, 332, 340, 377, 381, 383, 384, 386, 388, 410, 449, 453, 484
 - Model Data 372
 - model objects 280
 - Loads Convergence 296, 302, 313
 - Loads Initialization 296, 302, 313
 - Local 15, 122, 182, 219, 340, 361, 362, 363, 364, 396
 - axis snap applies 41
 - shows 222
 - Local Shading 219, 222, 340, 361, 362, 363, 364
 - Local shading component 222, 361
 - Local Shading Components 361
 - Local shading data 361
 - Location 30, 59, 67, 72, 75, 86, 162, 176, 177, 178, 181, 296, 302, 313, 372, 389, 390, 391, 392, 403, 410, 453, 484, 489
 - Location Model Data 30
 - Location Templates 176, 177, 389, 390, 391
 - Select 30
 - Long-wave 351
 - Louvres 15, 219, 361
 - number 362
 - L-shaped 87, 307, 320
 - Luminaire 240
 - Enter 384
 - Luminaire Type 240, 384
 - Lumped 285, 289, 375
- M -**
- M/s 345
 - M2 236, 238
 - M3/s 236, 238
 - Manage 280, 332
 - Component Library 340
 - Templates 372
 - Manufacturing/industrial 196
 - Material bridging 341
 - Material Properties 346
 - Materials 23, 307, 320, 340, 341, 342, 344, 346, 359, 361, 368, 508
 - Max 189, 273, 417
 - Max Cooling 417
 - Max ventilation 189, 273
 - Maximum 14, 176, 182, 189, 242, 265, 268, 273, 287, 296, 302, 304, 313, 362, 384, 387, 390, 397, 399, 403, 410, 417, 418, 453
 - Maximum cooling 304, 417
 - Maximum cooling load 410
 - Maximum cooling requirement 304
 - Maximum heating 268, 296, 302, 313
 - Maximum warmup 296, 302, 313
 - MB 492
 - MB RAM 492
 - Mean 178, 359, 387, 417
 - comfort temperature 407, 411, 423
 - Mediumweight 198, 372
 - Memory - DesignBuilder 492
 - Merging 464
 - Metabolic 87, 184, 187, 372, 375
 - choosing 401

- Metabolic Rates Templates 401
 - Metre 465
 - Metres 57
 - MHz 492
 - Midpoint 55, 56, 61, 64, 122
 - Midpoint drawing guide 122
 - Midpoint Snap 55, 56, 122
 - Min 387
 - Minimal 307, 320
 - Minimal shadowing 307, 320
 - Minimised 449
 - Minimum Requirements 492
 - Miscellaneous 15, 184, 194, 285, 289, 294, 325, 326, 376, 411, 423
 - Miscellaneous Display 326
 - Miscellaneous Edit 289, 294
 - Miscellaneous gains 194
 - Mixing 236, 238
 - Mode On
 - Learning 17
 - Model Components
 - copy 340
 - set 332, 340
 - Model data 17, 21, 23, 28, 30, 86, 87, 100, 141, 176, 178, 198, 199, 235, 236, 237, 238, 276, 280, 283, 285, 287, 294, 361, 368, 369, 394, 403, 407, 410, 411, 417, 423, 447
 - access 16
 - Activity 401
 - Building 183
 - changes 175
 - Loading 372
 - Model data affects 178
 - Model Data depending
 - setting 403, 410
 - Model Data depending on the setting 403, 410
 - Model Data following 287
 - Model data hierarchy 21
 - Model Data including 86
 - Model Data management 280
 - Model Data Options
 - customise 283
 - Model detail 21, 283, 285, 351, 378
 - glazing 285
 - Timing 286
 - Model Levels 33
 - Model objects 280, 281
 - Model Options 28, 87, 140, 147, 159, 183, 193, 194, 195, 196, 198, 213, 223, 227, 235, 236, 238, 248, 273, 282, 285, 286, 287, 379, 387, 403, 410, 417
 - Model Options dialog 282, 504
 - Model point 34
 - Model scope 283, 284
 - Model view 436
 - Modelling building 508
 - Models lighting 14, 15
 - Most Regions 389
 - Move 27, 34, 36, 41, 45, 46, 55, 57, 59, 61, 64, 67, 72, 75, 77, 89, 100, 104, 120, 122, 162, 163, 166, 171, 326
 - DXF 79
 - Movie Options 440
 - Movies 440
 - MoWiTT 296, 302, 313
 - MRT 407, 411, 423
 - Multizone 508
- ## - N -
- National 484
 - Natural Ventilation 15, 178, 213, 223, 227, 235, 236, 238, 246, 273, 283, 287, 369, 394, 400, 403, 410, 411, 423, 461, 464
 - Natural Ventilation model detail 287, 379
 - Natural Ventilation Operation 189
 - Natural/mechanical 387
 - Navigation 27, 175
 - Navigator 21, 27, 88, 104, 146, 158, 160, 163, 294, 334, 372, 447, 484
 - Navigator Panel 27, 294, 334, 372, 484
 - NB Any component 340
 - NB If 294
 - New 332, 334
 - New button
 - clicking 222
 - Next 27, 61, 67, 79, 280, 332, 334, 398, 446, 508
 - Next Navigation 332, 334
 - Non-HVAC 296, 302, 313
 - Non-unintentional 407, 411, 423
 - Normal 35, 41, 46, 59, 67, 77, 89, 120, 163, 345, 350, 351, 367, 423
 - Normal Snap 41, 46, 67
 - Normal View 35, 163
 - Normalised 395
 - North 178, 327, 439
 - North Arrow 178

- North Arrow 178
 - display 327
 - NOT 307, 320, 341
 - Number 31, 36, 38, 40, 88, 100, 115, 147, 162, 178, 186, 188, 189, 215, 216, 223, 224, 228, 229, 242, 284, 287, 296, 302, 307, 313, 320, 341, 344, 356, 382, 384, 395, 401, 403, 410, 418, 453, 504, 508
 - calculation/rendering 491
 - louvres 362
 - Windows 464
 - NVIDIA 492
- O -**
- Object Rotation 320, 325
 - Occupancy 87, 184, 186, 187, 193, 194, 195, 196, 240, 242, 285, 286, 287, 356, 374, 375, 403, 411, 423
 - starting point 401
 - Occuring 182
 - Off 17, 89, 120, 122, 189, 242, 273, 294, 296, 302, 313, 326, 351, 356, 384, 439, 447, 464, 504
 - Office 21, 184, 194, 285, 376, 484
 - Office Equipment 184, 194, 285, 376
 - Office equipment gains 194
 - OK 332, 334, 404, 410, 418
 - On/off 504
 - One-dimensional 465
 - Open 16, 140, 159, 223, 227, 235, 340, 367, 381, 504
 - Open existing 16
 - OpenGL 327, 492, 504
 - Opening 15, 16, 17, 21, 30, 61, 79, 100, 115, 140, 159, 163, 176, 184, 198, 214, 223, 227, 235, 236, 237, 238, 239, 246, 273, 287, 332, 334, 335, 372, 395, 446, 484, 508
 - Data 199
 - Environmental Comfort 189
 - Model Options dialog 282
 - Screen 16, 332
 - Opening data 214
 - Opening Screen 16, 17, 30, 332, 334, 335, 340, 372
 - Openings 15, 17, 30, 35, 41, 72, 75, 100, 104, 163, 166, 171, 183, 199, 214, 223, 227, 235, 236, 237, 238, 273, 281, 289, 361, 367, 368, 369, 382, 395
 - surface containing 21
 - Openings data 214, 367
 - Openings Model Data 368
 - Operation 15, 31, 45, 46, 59, 61, 72, 77, 88, 146, 160, 163, 175, 193, 194, 195, 196, 214, 215, 223, 227, 228, 235, 236, 238, 240, 242, 273, 285, 286, 287, 325, 326, 356, 464
 - Optical 350
 - Option affects
 - display 326
 - Option affects the display 326
 - Options 14, 15, 16, 27, 28, 35, 36, 41, 45, 46, 86, 87, 97, 115, 119, 120, 122, 140, 147, 158, 159, 166, 178, 183, 184, 186, 189, 198, 214, 215, 223, 228, 235, 236, 237, 238, 239, 240, 242, 246, 273, 280, 282, 283, 284, 285, 287, 289, 296, 301, 302, 307, 312, 313, 320, 324, 325, 326, 327, 328, 329, 338, 340, 342, 346, 375, 376, 382, 384, 390, 394, 398, 399, 400, 403, 404, 407, 410, 411, 415, 418, 420, 423, 435, 439, 440, 446, 447, 449, 453, 464, 504
 - Options dialog 16, 28, 87, 115, 282, 404, 410, 418, 464, 504
 - Options Panel 407, 411, 423, 435
 - Orbit 31, 34, 122, 326, 435, 440
 - Organised 21
 - OS 492
 - Other 16, 30, 31, 57, 67, 86, 104, 122, 147, 166, 193, 195, 199, 216, 224, 229, 282, 296, 302, 307, 313, 320, 335, 344, 351, 376, 387, 397, 411, 423, 464, 504, 508, 517
 - Other building surfaces 307, 320
 - Other catering 195
 - Other catering activities 195
 - Other Gains 376
 - Outdoor Dry Bulb Temperature 296, 302, 313
 - Outdoor Wet Bulb Temperature 296, 302, 313
 - Outer Surface 342
 - Outline 77, 88, 100, 104, 120, 122, 144
 - Outline Block 104, 122, 144
 - Output 242, 287, 296, 302, 313, 384, 401, 418, 449, 489, 504, 517
 - Overhang
 - louvre 361
 - Overhangs 15, 118, 219, 222, 307, 320, 361, 364
 - louvres 219, 361
- P -**
- Pan 31, 34
 - Pan view 31, 34
 - Pane Components 349
 - Panel 27, 35, 41, 45, 46, 64, 97, 104, 115, 116, 118, 122, 141, 158, 199, 332, 334, 403

- Panes 15, 23, 104, 340, 344, 345, 349, 350, 351, 367, 368, 508
 Parallel Snap 41, 45, 59
 Partition building 30
 Partitions 15, 30, 40, 41, 55, 59, 64, 72, 75, 79, 88, 100, 146, 147, 184, 199, 223, 377, 403, 407, 411, 423, 464
 Percentage 87, 215, 223, 227, 228, 235
 Percentage glazing 87, 215, 223, 228
 Performance 398
 Perimeter drawing 166
 Perimeter Drawing Options 35
 Perimeters 15, 31, 35, 36, 38, 40, 41, 45, 46, 55, 57, 59, 61, 64, 67, 88, 89, 104, 115, 116, 118, 119, 120, 122, 158, 162, 395, 465
 refer 166
 Period 30, 296, 301, 302, 313, 356, 387, 418, 436, 464, 465
 Photovoltaic 508
 Pitched Roof 115, 118, 122, 140, 159, 199, 328, 329
 Pitched Roof/Wall Construction Transition 140, 159
 Place 15, 38, 46, 59, 61, 67, 72, 75, 89, 122, 147, 160, 166, 189, 236, 242, 368, 411, 423
 centre-point 36
 Light Sensors 162
 Template 334
 Placing Light Sensors 162
 Plan 119, 120, 122, 178
 Plant 15, 287, 298, 304, 403, 410, 417, 508
 Plant Sizing 287, 403, 410, 417
 Point 15, 28, 31, 34, 35, 36, 40, 55, 57, 59, 61, 64, 67, 72, 75, 89, 122, 147, 213, 242, 320, 324, 384, 403, 410, 464, 492
 Point Snaps 55, 324
 Polygon 36, 38, 61, 89, 115, 116, 118, 122, 504
 Position 45, 46, 55, 59, 72, 75, 86, 100, 147, 162, 213, 220, 232, 235, 236, 237, 238, 242, 362, 368, 370
 Pre-design 183, 198, 285
 Pressing
 CTRL key 72
 ESC key 31, 36, 67, 122, 147
 F11 282
 SHIFT key 45, 46, 64, 72, 89, 104, 122, 166
 Update button 296, 301
 Pressure 178, 223, 227, 235, 236, 238, 253, 287, 372, 400, 423
 Pressure Coefficient Templates 400
 Pressure-related 178
 Previous 16, 296, 302, 313, 338
 use 332, 334
 Prioritises 215, 223, 228, 382
 Prioritises Percentage 215, 223, 228
 Prioritises Percentage glazing 215, 223, 228
 Prioritises window 215, 223, 228, 382
 Prioritises Window Width 215, 223, 228, 382
 Process 30, 31, 36, 38, 41, 59, 104, 122, 147, 184, 196, 285, 327, 376, 411, 418, 423, 484, 504
 Process gains 196
 Profiles 182, 273, 286, 340, 351, 356, 375
 Program 14, 16, 178, 296, 302, 307, 313, 320, 332, 334, 399, 446, 447, 449, 453, 465, 484, 489
 Program compares 296, 302, 313
 Program Options 399, 446, 447, 449, 453
 Program Options setting 399
 Properties 198, 307, 320, 341, 342, 346, 349, 350, 351, 368
 Proportional 387
 Protractor 36, 40, 59, 61, 64, 67, 72, 75, 89, 104, 122, 147, 320, 324, 325
 Protractor tool 64, 325
- Q -**
- Questions 528
- R -**
- Radeon chipset 492
 Rate according
 level 187, 375
 Rate according to the level 187, 375
 Rate called 187, 401
 Rates 87, 184, 187, 213, 223, 227, 235, 236, 238, 273, 287, 296, 302, 313, 372, 374, 375, 376, 379, 387, 394, 399, 401
 Read Important 14
 Recent 16, 182
 Recent Files 16
 Recent Files Opening Screen 16
 Recommended 298, 304, 403, 449, 464, 465, 492
 general-purpose 87
 Rectangle 36, 72, 116, 118, 162
 Redo 175
 Refer 56, 75, 89, 170, 171, 403
 Perimeters 166
 Reference 183, 296, 302, 313, 332, 335, 340, 341, 372, 384, 489

- Reference - Heavyweight 372
 - Reference - Lightweight 372
 - Reference - Mediumweight 372
 - Refresh Navigator Toolbar 447
 - Region 176, 182, 183, 370, 372, 375, 380, 383, 387, 389, 390, 396, 397, 399, 453
 - Region containing
 - sector 399
 - Region containing the sector 399
 - Remembered' 89
 - Remove 72, 104, 166
 - Removing 104, 166, 281, 327
 - Construction Lines 72
 - Report Meter 489
 - Report topics 403, 443, 444
 - Report Variable 296, 302, 313, 489
 - Report Variable Data Dictionary 489
 - Report,Surfaces,DXF 489
 - Reports 296, 302, 313, 403, 443, 444, 446, 489
 - Compiling 444
 - Requirements 28, 87, 189, 304, 376, 453, 492, 504
 - Requiring
 - EnergyPlus 504
 - U-values 341
 - Reselect 335
 - Restore 140, 159, 332, 334, 338
 - Restore Component/Template Libraries 338
 - Restore Data dialog
 - see 338
 - Restore icon 338
 - Results 36, 38, 122, 147, 296, 302, 313, 326, 403, 404, 407, 411, 415, 418, 420, 423, 449, 464, 465, 484, 489, 492
 - Reviewing
 - Cooling Design Output 415
 - Simulation Output 420
 - RIGHT 356
 - Roof 15, 64, 88, 100, 104, 118, 122, 140, 159, 198, 199, 214, 219, 228, 307, 320, 361, 377, 378, 381, 395, 399, 403
 - wall becomes 329
 - Roof Glazing 214, 228, 381
 - Roof overlap' 118
 - Roof slope' 118
 - Roofspace 184, 199
 - Roofspaces 184, 199
 - Roof-wall 140, 159, 199, 328, 329
 - Roof-Wall Transition 140, 159, 199, 328, 329
 - Rotate 34, 35, 41, 72, 75, 100, 163, 171
 - R-value 346
- S -**
- Safety 298, 304, 403, 407, 410, 417
 - Safety factor 298, 304, 403, 407, 410, 417
 - Save toolbar icon
 - clicking 332, 334
 - Scheduled 186, 189, 193, 194, 195, 196, 213, 223, 227, 235, 236, 238, 240, 242, 273, 285, 286, 287, 340, 351, 356, 375, 410, 464
 - Screen 15, 16, 34, 100, 115, 177, 178, 325, 326, 327, 334, 335, 403, 407, 410, 417, 418, 423, 447, 449, 484
 - Opening 16, 332
 - Screen' 491
 - Screenshot 184, 198, 338
 - Second 36, 64, 67, 89, 122, 162, 296, 302, 313, 367
 - Second cutting 122
 - Second Lighting 162
 - Second Lighting Area 162
 - Sector 184, 372, 375, 387, 453
 - region containing 399
 - Sector Templates 399
 - Segments 36, 38, 453
 - Selection dialog 222
 - Selection/deselection 351
 - Semi-exposed 199
 - use 184
 - Semi-exterior 184, 199
 - Sensible/latent 187
 - Sensible/latent split 187
 - Sensors 160, 162
 - Lighting 242
 - Serial 491
 - Setpoint 273, 287
 - cooling 189
 - Heating 189
 - Setpoints 87
 - Severe 517
 - Shade data 368
 - Shading 361, 381
 - calcs 307, 320
 - Shadows 307, 320, 327, 435, 436
 - Shape 36, 38, 61, 89, 104, 115, 116, 118, 119, 122, 147, 158, 166, 216, 224, 229, 504
 - SHGC 345
 - SHIFT 45, 46, 55, 64, 67, 72, 89, 104, 122, 166

- SHIFT key
 - Keep 55
 - Press 46, 64, 89, 104, 122, 166
 - pressing 45, 72
- Show North Arrow 327, 435, 439
- Show shadows 436
- SI
 - assuming 453
- Sidefin 361
- Sidedefs 15, 219, 222, 361, 363
- Sidedefs and/or louvres 222
- Sill 215, 223, 228, 382
- Simple 67, 104, 147, 287, 296, 302, 307, 313, 320, 346, 361, 378, 379, 381, 387, 400, 464, 504
- Simulation 14, 15, 30, 177, 178, 181, 184, 188, 198, 214, 239, 246, 273, 282, 284, 287, 294, 296, 302, 307, 312, 313, 320, 342, 345, 369, 391, 400, 403, 404, 410, 415, 418, 420, 423, 464, 465, 484, 489, 491, 504, 508, 517
 - computer during 449
- Simulation Calculation Options 312, 418
- Simulation continues 403, 410, 418
- Simulation hourly weather data 484
- Simulation Output 423
 - Reviewing 420
- Simulation Period 312, 313, 418
- Simulation program
 - modelling 508
- Simulation using real weather data 418
- Simulation Weather 177, 181, 391
- Simulation weather data 181
- Single 16, 27, 87, 235, 236, 237, 238, 282, 284, 285, 356, 395, 464
- Single clicking 27
- Site 16, 21, 30, 86, 88, 176, 177, 178, 181, 182, 183, 199, 282, 296, 301, 312, 320, 325, 403, 410, 423, 446, 453, 465, 484, 528
 - Visualisation 14
- Site including 176
- Sites save 30
- Sizing 287, 298
- Slab 465
- Slat data 367
- Slope 116
- Sloping 140, 159
- Sloping Walls 115, 116, 140, 159
- Smooth 346
- Snaps 36, 40, 41, 45, 46, 55, 56, 57, 59, 61, 64, 72, 75, 79, 89, 122, 147, 166, 320, 324, 325
 - X-axis 41
 - Y-axis 41
 - Z-axis 67
- Solar 14, 100, 147, 178, 182, 285, 296, 301, 302, 307, 312, 313, 320, 345, 346, 349, 350, 403, 410, 411, 418, 423, 435, 436, 464, 484
- Solar Absorptance 307, 320, 346
- Solar data 350
- Solar Heat Gain Coefficient 345
- Solar index 350
- Solar Options 307, 320
- Solar Options allow 307, 320
- Solar shading 14, 100, 435, 436
- SP2
 - upgrade 492
- Spacing 215, 223, 228
- SpecialDayPeriods 369
- Specification 350, 492
- Specular 307, 320
- Specularly 307, 320
- Specularly reflecting if 307, 320
- Standard 28, 33, 87, 182, 183, 184, 215, 223, 228, 345, 368, 378, 382, 397, 489, 492, 517
- Standard Insulation 397
- Standard Output File 489, 517
- Start 14, 15, 36, 55, 57, 67, 89, 120, 146, 147, 286, 356, 401, 403, 410, 418
 - Heating 404
- Start drawing 36, 67, 147
- Start drawing partitions 147
- Starting point 36, 55, 89
 - occupancy 401
- State-of-the-art 397
- State-of-the-art building 397
- States 15, 171, 182, 183, 281, 338, 396, 484
- Statistics 392
- Steady 404, 407, 417
- Steady State 404, 407, 417
- Steady-state 403, 407, 410
- Stepped Control 242, 384
- Stick 41, 64
- Stock 183, 397
- Straight 36, 38, 307, 320
- Stretch 59, 72, 77, 100
- Sub-hourly 15, 296, 302, 313, 418, 423, 464, 484
- Sub-surfaces 163, 199, 214
- Summary 283, 345, 404, 407, 415, 417, 489
- Summary Table 404, 407, 415
- Summer Design Weather 177, 182, 390, 410
- Summer design weather data 182

- Sunspaces 184
 - SunZenithAngle 178
 - Superinsulated 372
 - Support 15, 489, 528
 - Support Forum
 - Website 528
 - Support Request Form 528
 - Surface 15, 21, 27, 30, 35, 40, 41, 59, 61, 64, 72, 75, 89, 100, 104, 120, 122, 163, 166, 171, 175, 178, 183, 187, 198, 199, 214, 215, 223, 228, 235, 236, 237, 238, 280, 281, 294, 307, 320, 329, 346, 361, 367, 382, 394, 395, 400, 401, 464, 465, 504
 - coefficients depending 296, 302, 313
 - U-values include 342
 - Surface containing
 - openings 21
 - Surface containing the openings 21
 - Surface during simulations 400
 - Surface fill 35
 - Surface having 329
 - Surface Level 21, 30, 35, 100, 163, 198, 214, 215, 223, 228, 235, 237, 281
 - Suspended 199, 465
 - Switch 16, 17, 45, 46, 55, 57, 61, 72, 77, 89, 119, 120, 122, 162, 163, 166, 189, 220, 232, 242, 253, 284, 294, 326, 366, 368, 384, 436, 439, 447, 464, 484, 504
 - Z-axis 67
 - Switchable 220, 232, 368
 - Synchronised 240, 242, 484
 - System 14, 15, 21, 30, 41, 183, 186, 198, 213, 242, 248, 253, 265, 268, 286, 287, 296, 298, 301, 302, 313, 326, 332, 345, 378, 380, 383, 384, 386, 387, 407, 411, 423, 464, 492, 508
 - Cooling 304
 - System Heating/Cooling 387
 - System Sizing
 - Heating 298
 - System types 387, 508
- T -**
- Table 187, 401, 404, 407, 415, 417, 453
 - Target 280
 - Target Object
 - select 280
 - Target objects to select 280
 - TARP 296, 302, 313
 - Task 239, 242, 296, 302, 313, 384, 411, 423, 461
 - Task Lighting 239, 242, 411, 423
 - Task lighting gains 411, 423
 - Temperature 14, 15, 87, 178, 182, 187, 189, 246, 273, 276, 287, 296, 302, 313, 345, 356, 374, 376, 388, 390, 403, 407, 410, 411, 417, 418, 423, 465, 484
 - Template Library 334, 372
 - Templates 15, 16, 17, 21, 23, 30, 87, 176, 177, 183, 184, 213, 240, 242, 280, 285, 326, 332, 335, 337, 374, 375, 376, 377, 378, 379, 381, 382, 386, 387, 388, 389, 390, 391, 394, 395, 396, 397, 398, 399, 400, 401, 453, 484, 489
 - clicking 184, 198, 214, 239, 246
 - Glazing 380, 381
 - Introducing 372
 - Keeping 332
 - Lighting 383, 384
 - Managing 372
 - place 334
 - Templates Library Management 334
 - Textures 178, 340, 342, 346, 359, 368, 369
 - Thermal 14, 30, 147, 193, 194, 195, 196, 198, 199, 285, 296, 302, 313, 341, 346, 349, 369, 378, 403, 410, 418, 465, 508
 - Thermal Mass 199
 - Thermophysical 198, 346
 - Time 14, 15, 21, 31, 36, 38, 67, 72, 75, 77, 79, 87, 177, 182, 186, 223, 227, 235, 236, 238, 273, 283, 285, 287, 296, 302, 313, 327, 332, 335, 340, 356, 372, 375, 380, 390, 396, 417, 446, 447, 464, 484, 508
 - model detail 286
 - Select 181
 - Time during 31
 - Tin - Tout 273
 - Tips 14, 15
 - TM2 484
 - Toolbar 280, 282, 332, 334, 484
 - Info Panel 16
 - Tools 14, 16, 31, 34, 35, 40, 61, 64, 67, 72, 75, 77, 79, 89, 104, 120, 122, 144, 147, 158, 166, 170, 171, 177, 184, 198, 280, 351, 404, 415, 420, 446, 447, 465
 - Drawing 320
 - Tools menu 16, 446
 - Tooltips 492
 - Topics 15, 17, 176, 440, 443, 444, 461, 489
 - Total 199, 223, 227, 235, 236, 238, 345, 387, 403, 423
 - Total building 423
 - Total building gas 423
 - Translate hourly weather data 486
 - Triangulation 464, 504

Trombe 296, 302, 313

TRY 484

Tutorials 14

Type 21, 59, 87, 89, 100, 141, 163, 199, 214, 215, 219, 220, 223, 228, 232, 242, 248, 332, 334, 356, 366, 372, 381, 382, 384, 387, 394, 397, 398, 403, 440, 443, 444, 447, 489, 508

Typical 14, 23, 87, 178, 187, 248, 273, 286, 372, 375, 381, 394, 397, 401, 418, 447, 484, 489

Typical Location 489

- U -

U.S. 508

Undisturbed 178

Undo 36, 67, 89, 147, 175

Undo - Go 175

Undo/Redo 175

Uninstalled 332

Uninsulated 183, 372, 397

Unitary 248, 250, 387

Unitary multizone 248, 250, 387

Unitary single zone 248, 387

United States 484

Units 79, 186, 193, 194, 195, 196, 387, 397, 453, 484, 508

Unwound' 89

Up/down 356

Update 183, 296, 301, 404, 415, 418, 420, 436, 446, 447

Update button

press 296, 301

Upgrade 332

SP2 492

Visit www.designbuilder.co.uk 14

US 453

Usage 36, 38, 184, 189, 356, 374, 375

User 16, 21, 23, 176, 183, 281, 296, 302, 313, 335, 435, 491, 446, 447, 449, 453, 489, 508

User Interface 16, 176, 446, 447, 453

U-value 341, 342, 345, 399

U-values 176, 178, 342, 399

Defines 397

requiring 341

U-values include

surface 342

- V -

VAV 248, 251, 387, 464

Vent Components 368, 369

Vent opening 238, 273

Vent Operation 237, 238

Vent Placement 238

Vent spacing 237, 238

Ventilation 15, 189, 213, 223, 227, 235, 236, 238, 253, 273, 287, 374, 376, 386, 387, 407, 411, 423

Ventilation cooling 189, 273

Vents 100, 163, 214, 215, 223, 228, 237, 238, 273, 340, 368, 369, 395

Version 1.0 21, 335, 403

VeryRough 346

VerySmooth 346

View 17, 31, 33, 34, 35, 119, 120, 122, 178, 307, 320, 332, 334, 335, 368, 369, 403, 404, 407, 410, 415, 418, 420, 435, 436

View Component 17, 332

View Controls 31

View panel 332, 334

View Rotation 31, 33, 119, 120, 122

View Template 334

View/edit 199

Viewing 332, 334

eplusout.dxf file 307, 320

Visible 17, 34, 61, 122, 307, 320, 346, 349, 350, 449

Visible Absorptance 307, 320

Visible band 346

Visible data 350

Visible index 350

Visit www.designbuilder.co.uk

upgrades 14

Visualisation 16, 100, 178, 325, 326, 327, 359,

site 14

Visualisation Display 327

Visualisation Screen 16, 100, 327, 359, 435

Voids 100, 199

Creating 158

- W -

W/m2 345, 384

W/m2/100 lux

dividing 239, 240, 242

- W/m2-K 345
- Wall 15, 21, 67, 88, 97, 100, 104, 116, 140, 141, 147, 158, 159, 184, 198, 199, 215, 219, 223, 228, 296, 302, 307, 313, 320, 328, 329, 372, 377, 378, 395, 399, 403, 407, 411, 423
- Wall Thickness 97, 141, 158
- Wall/windows 307, 320
- Warmup 296, 302, 313, 418
- Water Vapor Transmission Data 296, 302, 313
- Weather 15, 30, 86, 176, 177, 178, 181, 182, 296, 302, 313, 389, 390, 391, 392, 403, 410, 418, 423, 465, 484, 489
- Weather Data Hourly Interpolation 296, 302, 313
- Weather Data Translator 418, 484
- Web 528
- Website 391, 508
 - Support Forum 528
- Window opening 223, 227, 235
- Window shading 219, 220, 232, 307, 320
- Window spacing 215, 223, 228, 237, 238, 464
- Windows 15, 23, 30, 34, 61, 72, 87, 100, 104, 163, 166, 199, 214, 215, 216, 219, 220, 223, 224, 227, 228, 229, 232, 235, 236, 237, 238, 273, 289, 307, 320, 326, 340, 344, 345, 349, 360, 361, 362, 366, 367, 368, 382, 387, 395, 399, 410, 411, 418, 423, 436, 449, 484, 489, 492, 504, 508
 - number 464
- Windows Explorer 484
- Windows XP SP1 492
- Windows XP SP2 492
- Windspeed 296, 302, 313
- Winter Design 177, 182, 296, 390, 403, 418
- Winter Design Calculations 296
- Winter Design Weather 177, 182, 390, 403
- Winter design weather data 182
- Wireframe 440
- Wire-frame 326
- Within 30, 36, 38, 55, 57, 140, 147, 158, 159, 162, 182, 187, 276, 284, 296, 302, 313, 332, 334, 342, 375, 388, 389, 390, 396, 398, 399, 436, 449, 484, 508
 - Working 146, 160
- Within Blocks 158
 - Working 146
- Within Zones
 - Working 160
- Workday 273, 286, 375
- Working 15
 - within 146, 160
 - within Blocks 146
 - within Zones 160
- WYEC2 484
- X -
- X-axis 122
 - snapped 41
- XP SP2 492
- Y -
- Y-axis 41
- Z -
- Z-axis 77
 - line 67, 89
 - lines 41
 - snapped 67
 - switch 67
- Zip 15
- Zone 15, 21, 27, 30, 40, 87, 88, 100, 146, 147, 160, 162, 163, 181, 183, 184, 189, 199, 223, 227, 235, 236, 238, 239, 242, 246, 248, 253, 273, 276, 280, 284, 285, 287, 289, 294, 296, 298, 302, 304, 307, 313, 320, 325, 326, 345, 372, 375, 387, 388, 401, 403, 404, 407, 410, 411, 415, 417, 418, 423, 447, 464, 465, 508
- Zone Block 147
- Zone including 184
- Zone Level 21, 160, 163, 184, 239, 248, 280
- Zone making 464
- Zone Time Step 296, 302, 313
- Zone Type 184
- Zone/Sys Air Temp 296, 302, 313
- Zone's 307, 320
- Zone's surfaces 307, 320
- Zoom 34, 35, 79, 326, 435, 440
 - Zoom Dynamic 34
 - Zoom Window 31, 34